



GENEQ inc.

iSXBlue/SXBlue II GNSS Series



Technical Reference Manual

Release Date: September 2014 (rev 1)

Copyright Notice

© Copyright 2012 Geneq inc. All rights reserved. No part of this manual may be stored in a retrieval system, transmitted, or reproduced by any means, including, but not limited to photocopy, photograph, digitizing, or otherwise, without the prior written permission from Geneq inc.

Trademarks

The Geneq logo, SXBlue II GNSS™, iSXBlue II GNSS™ are trademarks of Geneq inc. The Bluetooth™ trademarks are owned by Bluetooth SIG Inc., USA. All other trademarks are the property of their respective owners.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Geneq inc.

10700, Secant Street

Montreal, Quebec, Canada H1J 1S5

Telephone number: +1-514-354-2511

Toll Free: +1-800-463-4363 (North America)

Fax number: +1-514-354-6948

E-mail address: info@geneq.com

Web Sites: www.sxbluegps.com , www.geneq.com

Geneq Limited Warranty

Geneq inc. hereby warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth herein below, that the Products sold to such end purchaser shall be free, under normal use and maintenance, from defects in material and workmanship for a period of 24 months from delivery date to such end purchaser. Repairs and replacement components are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship for 90 days from performance or delivery, or for the balance of the original warranty period, whichever is greater. Battery packs are warranted for a period of 90 days.

Purchaser's Exclusive Remedy

The end purchaser's exclusive remedy under this warranty shall be limited to the repair or replacement, at the option of Geneq, of any defective Products or components thereof. The end user shall notify Geneq or a Geneq approved service center immediately of any claimed defect. Repairs shall be made through a Geneq approved service center only.

Exclusions

Geneq does not warrant damage occurring in transit or due to misuse, abuse, improper installation, neglect, lightning (or other electrical discharge) or fresh/salt water immersion of Products. Repair, modification or service of Geneq Products by any party other than a Geneq approved service center shall render this warranty null and void. Geneq does not warrant claims asserted after the end of the warranty period. Geneq does not warrant or guarantee the precision or accuracy of positions obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Geneq literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on:

- Specifications provided by the US Department of Defense for GPS Positioning,
- GPS OEM Receiver specifications of the appropriate manufacturer (if applicable), and
- DGPS service provider performance specifications.

Geneq reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

No Other Warranties

THE FOREGOING WARRANTY IS EXCLUSIVE OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, IMPLIED OR ARISING BY STATUTE, COURSE OF DEALING OR TRADE USAGE, IN CONNECTION WITH THE DESIGN, SALE, INSTALLATION, SERVICE OR USE OF ANY PRODUCTS OR ANY COMPONENTS THEREOF, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation of Liability

THE EXTENT OF GENEQ'S LIABILITY FOR DAMAGES OF ANY NATURE TO THE END PURCHASER OR ANY OTHER PERSON OR ENTITY WHETHER IN CONTRACT OR TORT AND WHETHER TO PERSONS OR PROPERTY SHALL IN NO CASE EXCEED, IN THE AGGREGATE, THE COST OF CORRECTING THE DEFECT IN THE PRODUCT OR, AT GENEQ'S OPTION, THE COST OF REPLACING THE DEFECTIVE ITEM. IN NO EVENT WILL GENEQ BE LIABLE FOR ANY LOSS OF PRODUCTION, LOSS OF PROFITS, LOSS OF USE OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES, EVEN IF GENEQ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE FOREGOING, GENEQ SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM INSTALLATION, USE, QUALITY, PERFORMANCE OR ACCURACY OF ANY PRODUCTS.

Governing Legislation

To the greatest extent possible, this warranty shall be governed by the laws of the Province of Quebec (Canada). In the event that any provision hereof is held to be invalid by a court of competent jurisdiction, such provision shall be severed from this warranty and the remaining provisions shall remain in full force and effect.

Obtaining Warranty Service

In order to obtain warranty service, the end purchaser must bring the Product to a Geneq approved dealer, along with the end purchaser's proof of purchase. For any questions regarding warranty service or to obtain information regarding the location of any of Geneq's dealers, contact Geneq at the following address:

Geneq inc.
10700, Secant Street
Montreal, Quebec, H1J 1S5
Canada

Telephone number: +1-514-354-2411
Toll Free: +1-800-463-4363 (North America)
Fax number: +1-514-354-6948
E-mail address: support@sxbluegps.com

Table of Contents

List of Figures.....	x
List of Tables.....	xi
Organization.....	xiii
Customer Service.....	xiv
World Wide Web Site.....	xiv
Document Conventions.....	xiv
Notes, Cautions, and Warnings.....	xv
1. Getting Started.....	1
1.1 Unpacking your iSXBlue/SXBlue II GNSS Receiver.....	1
Standard Package Content.....	1
1.2 Getting Familiar with your iSXBlue/SXBlue II GNSS.....	2
1.2.1 System Overview.....	2
1.2.2 Battery Pack.....	4
1.2.3 Precision and Survey Antennae.....	5
1.3 Getting Ready for the Field.....	5
1.3.1 Default Parameters.....	6
1.3.2 Configuring Bluetooth Communication.....	8
1.3.2.1 Windows Mobile 5.0 and 6.x with Microsoft drivers.....	9
1.3.2.2 Windows Mobile with Socket Communication driver.....	14
1.3.2.3 Windows Mobile with WidComm driver.....	16
1.3.2.4 Microsoft Windows with IVT Corporation’s BlueSoleil driver.....	18
1.3.2.5 Microsoft Windows with Widcomm’s My Bluetooth Places driver.....	19
1.3.2.6 iOS Apple Bluetooth communication.....	21
1.3.2.7 Android Bluetooth communication.....	24
1.3.3 Installing the USB Drivers for Microsoft Windows.....	25
1.4 In the Field.....	27
1.4.1 Setting up for Submeter Work.....	28
1.4.1.1 Using the Nylon Carrying Case.....	28
1.4.1.2 Using the Softhat.....	28
1.4.1.3 Rangepole Setup.....	29
1.4.3 Antenna Phase Center.....	31
1.4.3.1 GNSS Precision Antenna (all models).....	32
1.4.4 Definition of the LED Indicators.....	33
1.4.5 GIS Field Data Collection and Datum Considerations.....	34
1.4.5.1 Generic Field Data Collection Software Configuration.....	34
1.4.5.2 General Guidelines for Submeter GIS Field Data Collection.....	34
1.4.6 Available Software and Utilities.....	35
1.4.6.1 SXBlue Config.....	35
1.4.6.2 SXBlue RTN.....	35
1.4.6.4 SXBlue Server.....	35
1.4.6.5 SXBlue Mirror.....	36
1.4.6.6 RINEX Converter.....	36
1.4.6.7 Geneq EZSurv.....	36
1.4.6.8 Geneq iSXBLue View on iOS devices.....	36
1.4.6.9 Bluetooth GPS Utility on Android devices.....	36
2. Features and Performance.....	37
2.1 GPS.....	37

2.1.1	Satellite Tracking	37
2.1.2	Positioning Accuracy	37
2.1.3	Update Rates	38
2.2	SBAS.....	38
2.2.1	Automatic Tracking and Ranging	38
2.2.2	SBAS Performance	38
2.3	GLONASS	40
2.3.1	Satellite tracking.....	40
2.3.2	GLONASS Performance	40
2.4	COAST™, G-Dif™ and SureTrack™ Technologies	41
2.5	Real-Time Differential Options.....	41
2.5.1	The “MFA” Application.....	42
2.5.2	Auto-Dif – Autonomous Differential / RTCM Base Station Option	42
2.6	Post Processing.....	44
2.7	Evaluating the iSXBlue/SXBlue GNSS II Performance.....	44
2.8	Communication	46
2.8.1	Interface	46
2.8.2	Bluetooth, USB and Serial Ports	46
2.8.3	Event Marker, 1 Pulse per Second and 5Vdc Power	47
2.8.3.1	One Pulse per Second (1PPS).....	47
2.8.3.2	Event Marker Input (EM)	48
2.8.3.3	5Volt DC Output (PWR)	48
2.9	Environmental Requirements	48
3.	Advanced Operations	49
3.1	Communicating with the iSXBlue/SXBlue II Receiver	49
3.1.1	NMEA 0183 Interface	49
3.1.2	Binary Messages	50
3.1.3	RTCM SC-104 Protocol.....	50
3.2	Configuring the iSXBlue/SXBlue II Receiver.....	51
3.2.1	Using HyperTerminal.....	51
3.2.1.1	HyperTerminal Setup	51
3.2.1.2	Sending Individual Commands.....	53
3.2.1.3	Sending Configuration Files to the Receiver	54
3.2.2	Using SXBlue Config.....	55
3.2.2.1	Quick Config Mode.....	55
3.2.2.2	Advanced Mode	56
3.3	Firmware Architecture	57
3.3.1	Available Applications.....	57
3.3.2	Activating an Application or Option	58
3.3.3	Interpreting Subscription Date Codes.....	60
4.	Differential Correction Operations	61
4.1	Automatic Differential of the MFA Application	61
4.1.1	Principle of Operation	61
4.1.2	Datum Considerations	62
4.2	RTK Operations	62
4.2.1	Guideline for Base Station Operation.....	62
4.2.1.1	Automatic and Manual Reference Points	62
4.2.1.2	Base Station Configuration.....	63
4.2.1.3	SXBlue Config Base Menu	64
4.2.2	Guideline for RTK Rover Operation	65
4.2.2.1	Using RTK Networks	66
4.2.2.2	Using Local Corrections.....	66

4.3	Auto-Dif (Autonomous and Base Station Modes).....	67
4.3.1	Start-up.....	67
4.3.2	Calibration.....	67
4.3.3	Auto-Dif Performance.....	67
4.4	Recording Raw data and converting to RINEX.....	68
4.4.1	Using SXBlue Config to Log Raw Data	68
4.4.2	Converting to RINEX Format	69
5.	Complete NMEA Interface	70
5.1	NMEA Message Elements	70
5.2	General Commands	70
5.2.1	\$JASC,D1	71
5.2.2	\$JAIR	72
5.2.3	\$JASC,VIRTUAL.....	72
5.2.4	\$JALT	73
5.2.5	\$JLIMIT	74
5.2.6	\$JAPP.....	74
5.2.7	\$JBAUD.....	75
5.2.8	\$JCONN.....	76
5.2.9	\$JDIFF	76
5.2.10	\$JK	77
5.2.11	\$JPOS.....	77
5.2.12	\$JQUERY, GUIDE.....	78
5.2.13	\$JRESET.....	78
5.2.14	\$JSAVE.....	79
5.2.15	\$JSHOW	80
5.2.16	\$JT	81
5.2.17	\$JBIN.....	82
5.2.18	\$JI.....	82
5.2.19	\$JBOOT	83
5.2.20	\$JFORCEAPP.....	83
5.2.21	\$JMODE	84
5.2.22	\$JNMEA, GGALLGNSS	84
5.2.23	\$JNMEA, PRECISION	85
5.2.24	\$JPRN, EXCLUDE.....	85
5.2.25	\$JRELAY	85
	GPS Commands.....	85
5.2.26	\$JASC	86
5.2.27	\$JAGE.....	87
5.2.28	\$JOFF.....	87
5.2.29	\$JMASK.....	87
5.2.30	\$JNP.....	88
5.2.31	\$J4STRING.....	88
5.2.32	\$JSMOOTH	88
5.2.33	\$JTAU.....	89
5.3	SBAS Commands.....	90
5.3.1	\$JWAASPRN.....	91
5.3.2	\$JGEO.....	92
5.3.3	\$JRD1	92
5.3.4	\$JASC,RTCM	93
5.4	DGPS Beacon Commands (SXBlue II-B GPS).....	93
5.4.1	\$GPMSK.....	94
5.4.2	\$PCSI,1 and \$PCSI,2	95

5.4.3	\$PCSI,3,2	96
5.4.4	\$PCSI,3,3	96
5.4.5	\$PCSI,0	97
5.4.6	\$PCSI,8,NITRAM.....	97
5.4.7	\$GPCRQ,MSK (\$CRMASK)	98
5.4.8	\$GPCRQ,MSS (\$CRMSS).....	98
5.5	Omnistar Commands (SXBlue II-L GPS).....	99
5.5.1	\$JLBEAM	99
5.5.2	\$JLXBEAM	100
5.5.3	\$JFREQ.....	101
5.5.4	\$JOMS	102
5.5.5	\$JHP	102
5.6	Auto-Dif Commands in Autonomous Mode	103
5.6.1	\$JRAD,1.....	103
5.6.2	\$JRAD,1,P	104
5.6.3	\$JRAD,1,lat,lon,alt.....	104
5.6.4	\$JRAD,2.....	105
5.6.5	\$JRAD,3.....	105
5.7	Auto-Dif Commands in Base Station Mode	105
5.7.1	\$JRAD,1.....	106
5.7.2	\$JRAD,1,P	106
5.7.3	\$JRAD,1,lat,lon,alt.....	106
5.7.4	\$JRAD,2.....	107
5.7.5	\$JRAD,3.....	107
5.7.6	\$JRAD,9.....	108
5.8	Local Differential Commands	108
5.8.1	\$JRTK,1	110
5.8.2	\$JRTK,1,P.....	110
5.8.3	\$JRTK,1,R	110
5.8.4	\$JRTK,1,lat,lon,alt	110
5.8.5	\$JRTK,5	111
5.8.6	\$JRTK,6	111
5.8.7	\$JRTK,9	112
5.8.8	\$JRTK,17	112
5.8.9	\$JASC,DFX	112
5.8.10	\$JASC,CMR	113
5.8.11	\$JRTK,12	113
5.8.12	\$JRTK,18	114
5.8.13	\$JQUERY,RTKPROG.....	114
5.8.14	\$JQUERY,RTKSTAT.....	114
5.8.15	\$JRTCM3,EXCLUDE	115
5.8.16	\$JRTCM3,INCLUDE	115
5.8.17	\$JRTCM3,NULLANT	115
5.8.18	\$JRTCM3,ANTNAME	116
5.9	Output Data Messages	117
5.9.1	GNS Data Message	117
5.9.2	GGA Data Message.....	118
5.9.3	GLL Data Message.....	119
5.9.4	GSA Data Message	119
5.9.5	GST Data Message.....	120
5.9.6	GSV Data Message	120
5.9.7	RMC Data Message	121

5.9.8	RRE Data Message.....	121
5.9.9	VTG Data Message.....	122
5.9.10	ZDA Data Message.....	122
5.9.11	GRS Data Message.....	122
5.9.12	RD1 Data Message.....	123
5.10	RAIM Command and Message.....	124
5.10.1	\$JRAIM Command.....	124
5.10.2	\$PSAT,GBS Data Message.....	125
6.	Binary Data	126
6.1	Binary Message Structure.....	126
6.1.1	Bin 1.....	127
6.1.2	Bin 2.....	128
6.1.3	Bin 80.....	129
6.1.4	Bin 93.....	129
6.1.5	Bin 94.....	130
6.1.6	Bin 95.....	130
6.1.7	Bin 96.....	131
6.1.8	Bin 97.....	132
6.1.9	Bin 98.....	132
6.1.10	Bin 99.....	133
7.	Frequently Asked Questions	136
7.1	General.....	136
7.2	Support and Repairs.....	137
7.3	Troubleshooting.....	137
7.4	Power, Communication, and Configuration.....	140
7.5	GPS Reception and Performance.....	142
7.6	SBAS Reception and Performance.....	142
7.7	Auto-Dif.....	143
7.8	External Corrections.....	143
7.9	Installation.....	144
8.	Troubleshooting	145
8.1	Troubleshooting Checklist.....	145
8.2	Using the LEDs to Troubleshoot.....	145
 Appendix A - Specifications		148
Appendix B - Interface		149
Appendix C - Introduction to GPS and DGPS Services		152
Appendix D - Resources		163
Index		167

List of Figures

Figure 1-2 Package Contents	1
Figure 1-3 iSXBlue/SXBlue II GNSS Main Components	3
Figure 1-4 Battery contacts	4
Figure 1-5 Precision and Survey Antennae.....	5
Figure 1-6 Carrying Case.....	28
Figure 1-7 Removing the Magnet Adaptor	29
Figure 1-8 Using the Softhat	29
Figure 1-10 Using the L-Shaped Bracket.....	30
Figure 1-11 Mounting on a Rangepole	31
Figure 1-14 Phase Center – Precision GNSS Antenna (GESXB3GLANT).....	32
Figure 1-16 iSXBlue/SXBlue II GNSS Front Panel	33
Figure 2-1 Sample Extrapolated Ionospheric Grids	40
Figure 2-2 Auto-Dif Error Drift	43
Figure 2-3 RS-232 Connector Pin-out	47
Figure 3-1 Sample Config. File	54
Figure B-1 Serial Interface.....	149
Figure B-2 RTCM Data Output From Serial Port.....	150
Figure B-3 RTCM Data Input to Serial Port.....	151
Figure C-1 WAAS Ground Segment (end of 2007)	159
Figure C-2 EGNOS Ground Segment (end of 2007)	160
Figure C-3 Worldwide SBAS Coverage	161
Figure C-4 Worldwide SBAS Ionospheric Coverage	161
Figure C-5 Broadcast and Extrapolated Ionospheric Correction Map.....	163

List of Tables

Table 1-1 Default Applications	6
Table 1-2 Default Port Settings.....	7
Table 1-2 Default Port Settings.....	7
Table 1-3 Default GNSS NMEA Message Output.....	7
Table 1-4 Default Parameters	7
Table 1-5 LED Indicators Definitions	33
Table 2-1 Differential and Global Options	42
Table 2-2 Horizontal Accuracy Probability Statistics.....	44
Table 2-3 Horizontal Accuracy Statistic Conversions	45
Table 2-4 Serial Port Pin-out, RS-232C Interface Level.....	47
Table 5-1 NMEA Message Elements	70
Table 5-2 General Commands	71
Table 5-3 GPS Commands	86
Table 5-4 SBAS Commands.....	91
Table 5-5 SBAS Commands.....	94
Table 5-6 SBAS Commands.....	99
Table 5-7 Auto-Dif Commands in Autonomous Mode	103
Table 5-8 Auto-Dif Commands for Base Station Operation.....	106
Table 5-10 Local Differential Commands.....	109
Table 5-11 Output Data Messages	117
Table 5-12 GNS Data Message Defined	118
Table 5-13 GGA Data Message Defined.....	118
Table 5-14 GLL Data Message Defined	119
Table 5-15 GSA Data Message Defined	119
Table 5-16 GST Data Message Defined.....	120
Table 5-17 GSV Data Message Defined	120
Table 5-18 RMC Data Message Defined	121
Table 5-19 RRE Data Message Defined	121
Table 5-20 VTG Data Message Defined	122
Table 5-21 ZDA Data Message Defined	122
Table 5-22 GRS Data Message Defined	123
Table 5-23 RD1 Data Message Defined.....	123
Table 5-24 \$PSAT,GBS Data Message Defined.....	125
Table 6-1 Binary Message Structure	126
Table 6-2 Bin 1 Message.....	127
Table 6-3 Bin 2 Message.....	128
Table 6-4 Bin 80 Message.....	129
Table 6-5 Bin 93 Message.....	129
Table 6-6 Bin 94 Message.....	130
Table 6-7 Bin 95 Message.....	131
Table 6-8 Bin 96 Message.....	131
Table 6-9 Bin 97 Message.....	132
Table 6-10 Bin 98 Message.....	133
Table 6-11 Bin 99 Message.....	134
Table 8-1 Troubleshooting	145
Table 8-2 LED Functions	146
Table A-1 SXBlue II GPS Receiver Specifications.....	148
Table C-1 Worldwide SBAS Constellation (end of 2007)	162

Preface

Welcome to the iSXBlue/SXBLue II GNSS Series Manual and congratulations on purchasing this high-performance receiver.

The iSXBlue/SXBLue II GNSS Series provides a high level of performance, delivering either sub-meter positioning using the built-in SBAS demodulator, submeter positioning using RTK, at up to a 20Hz optional output. The iSXBlue/SXBLue II GNSS Series features raw measurement output and delivers excellent phase measurement quality for mono-frequency post-processing and RTK applications. It also offers independent Bluetooth, USB and serial communication ports.

This document is meant to assist a customer in becoming familiar with the iSXBlue/SXBLue II GNSS receiver functionality and system operation, but also with GPS / SBAS / OmniSTAR® / RTK concepts.

The chapters that follow provide detailed information on the receivers, including the hardware and software interface, in addition to various descriptions of technologies and features that they support.

iSXBlue/SXBlue II GNSS Series

		
Model	iSXBlue II GNSS	SXBlue II GNSS
GPS	•	•
GLONASS	•	•
SBAS	•	•
OmniSTAR®	X	X
iOS Compatible	•	X
External Differential	•	•
RTK Base/Rover Option	•	•
10Hz Output Option	•	•
20Hz Output Option	•	•
Battery Autonomy (Approximate)	8 hours	8 hours

Some notable features of the iSXBlue/ II GNSS Series are:

- Tracks L1, GPS and GLONASS (GNSS models only)
- L5 ready
- 3 channels dedicated to SBAS tracking
- Sub-meter (2dRMS) horizontal accuracy with SBAS
- Raw measurement output (via documented binary messages) or RINEX converter
- Position and raw measurement update rates of up to 1Hz (standard) 10Hz and 20Hz (optional)
- COAST™ technology provides consistent performance with old correction data and guarantees an all-day DGPS solution even in forestry applications (with suitable SBAS)
- GDif and SureTrack technologies (GNSS models only) enable the use of GLONASS satellites in the code DGNSS and phase RTK solution respectively, without receiving GLONASS correctors from the differential source (SBAS, RTK, GPS-only base station, etc).
- Optional Auto-Dif: A base station-free way of differentially positioning for submeter applications
- Optional Sub-20cm Local-Dif or Sub-5cm RTK with Base-Rover configuration
- SBAS (WAAS/EGNOS/MSAS/GAGAN/etc.) and external differential sources depending on model
- Quick time to first fix
- One internal Serial Port Profile (SPP) Bluetooth module allows a modular GPS system configuration with the use of any up-to-date handheld/tablet/computer and software combination
- One USB 2.0 compliant port and One full-duplex Serial Port, can be used for configuration, or to output/receive RTCM corrections and/or NMEA messages
- Internal, field-replaceable Li-Ion battery for full day operation

Organization

This manual contains the following chapters:

Chapter 1: Getting Started - provides information to help you get your system running quickly.

Chapter 2: Features and Performance - introduces you to the iSXBlue/SXBLue II GNSS Series and some of its main features.

Chapter 3: Advanced Operations - provides details on the fundamental operating modes of the iSXBlue/SXBLue II GNSS receivers and describes how to configure and operate them.

Chapter 4: Differential Correction Operations – presents the steps involved in setting up the receiver for differential correction applications (realtime and post-processing)

Chapter 5: Complete NMEA Interface - describes the subset of NMEA 0183 commands and messages supported by the iSXBlue/SXBLue II GNSS Series.

Chapter 6: Binary Data - describes the Binary messages supported by the iSXBlue/SXBLue II GNSS receivers.

Chapter 7: Frequently Asked Questions - this chapter provides answers to frequently asked questions about your receiver.

Chapter 8: Troubleshooting - provides you with diagnostic information to aid in determining a source of difficulty for a particular installation.

Appendix A – Specifications - details the technical characteristics of the iSXBlue/SXBLue II GNSS models.

Appendix B – Interface - provides instructions to interface the iSXBlue/SXBLue II GNSS receivers with external devices.

Appendix C – Introduction to GNSS, DGNSS and RTK Services - provides both general and specific information relating to GPS, GLONASS, SBAS and RTK Networks.

Appendix D – Resources - This appendix lists a number of different resources that may be useful for the advanced user.

The **Index** provides a listing of the locations of various subjects within this manual.

Customer Service

If you encounter problems during the installation or operation of this product, or cannot find the information you need, please contact your dealer, or Geneq Customer Service. The contact numbers and e-mail address for Geneq Customer Service are:

Telephone number: +1-514-354-2511
Toll Free: +1-800-463-4363 (North America)
Fax number: +1-514-354-6948
E-mail address: support@sxbluegps.com

Technical Support is available from 8:30 AM to 5:00 PM Eastern Time, Monday to Friday.

To expedite the support process, please have the product model and serial number available when contacting Geneq Customer Service.

In the event that your equipment requires service, we recommend that you contact your dealer directly. However, if this is not possible, you must contact Geneq Customer Service to obtain a Return Merchandise form before returning any product to Geneq. If you are returning a product for repair, you must also provide a fault description.

World Wide Web Site

Geneq maintains World Wide Web home pages at the following addresses:

www.sxbluegps.com and www.geneq.com

A corporate profile and product information are available at these sites under the Geomatics section.

Document Conventions

Bold is used to emphasize certain points.

Notes, Cautions, and Warnings

Notes, Cautions, and Warnings stress important information regarding the installation, configuration, and operation of the iSXBlue/SXBLue II GNSS receiver.

Note - Notes outline important information of a general nature.

Cautions - Cautions inform of possible sources of difficulty or situations that may cause damage to the product.

Warning - Warnings inform of situations that may cause harm to you.

1. Getting Started

The purpose of this chapter is to help you get your iSXBlue/SXBlue II GNSS receiver running quickly. This chapter is not intended to replace the balance of this reference manual and it assumes that you have a reasonable amount of knowledge with installation and operation of GNSS navigation systems.

If you are new to GPS/GNSS, SBAS, RTK or OmniSTAR[®] Services, we recommend that you consult Appendix C for further information on these services and technologies.

1.1 Unpacking your iSXBlue/SXBlue II GNSS Receiver

If you find that any of these items listed below are damaged due to shipment, please contact the freight carrier immediately for assistance. When you unpack your iSXBlue/SXBlue II GNSS receiver, please ensure that it is complete by comparing the parts received against the packing slip.

Standard Package Content

1. **iSXBlue/SXBlue II GNSS receiver with battery pack**
2. **Antenna** L1, G1 L-Band
3. Two-section **Antenna Cable**
4. **Spare Antenna Cable**
5. **Soft hat** for Antenna
6. **Nylon Carrying Case** with belt clip and shoulder strap
7. Li-Ion **Battery Charger** with international adapters
8. **USB Data Cable**
9. **Serial Data Cable**



Figure 1-2 Package Contents

Note - If, for some reason, you find a discrepancy between your packing slip and the contents of your shipment, please contact immediately the authorized reseller with whom you have placed your order.

1.2 Getting Familiar with your iSXBlue/SXBlue II GNSS

The iSXBlue/SXBlue II GNSS is composed of three main parts:

- The receiver with user interface (LED's, Communication ports, Antenna connector)
- The battery pack with Battery Fuel Gauge
- The external Antenna with Cable

1.2.1 System Overview

Figure 1-2 shows the various components of the receiver and battery pack.

The connections required by the iSXBlue/SXBlue II GNSS are very straightforward. All cables necessary for complete operation are provided.

- The RS-232 port is a D-Sub 9-pin female connector
- The USB port is a Type-B female connector
- The Bluetooth port is a Class 1 type.

The iSXBlue/SXBlue II GNSS offers three communication options: Serial RS-232, USB and Bluetooth. In order to use the USB port, a driver (supplied on CD-ROM with the unit, downloadable from the www.sxbluegps.com web site or from Microsoft Updates) must be installed on your computer. Refer to section 1.3 for instructions on how to install the drivers. In order to use the Bluetooth (wireless) communication of the iSXBlue/SXBlue II GNSS, you must use a Bluetooth-enabled handheld/tablet/computer. If you have a handheld/tablet/computer that does not support Bluetooth natively, you can supplement your computing device with a Bluetooth card (CF, PCMCIA, SD) or USB dongle. When configuring your Bluetooth device for communication with the iSXBlue/SXBlue II GNSS, make sure that pairing (or bonding) with password (or passkey) is not activated. A miniature DIP switch (see Figure 1-3) allows powering off of the Bluetooth radio when the receiver is operated in places where the use of wireless communication is prohibited. Refer to section 1.3 for some sample Bluetooth setups.

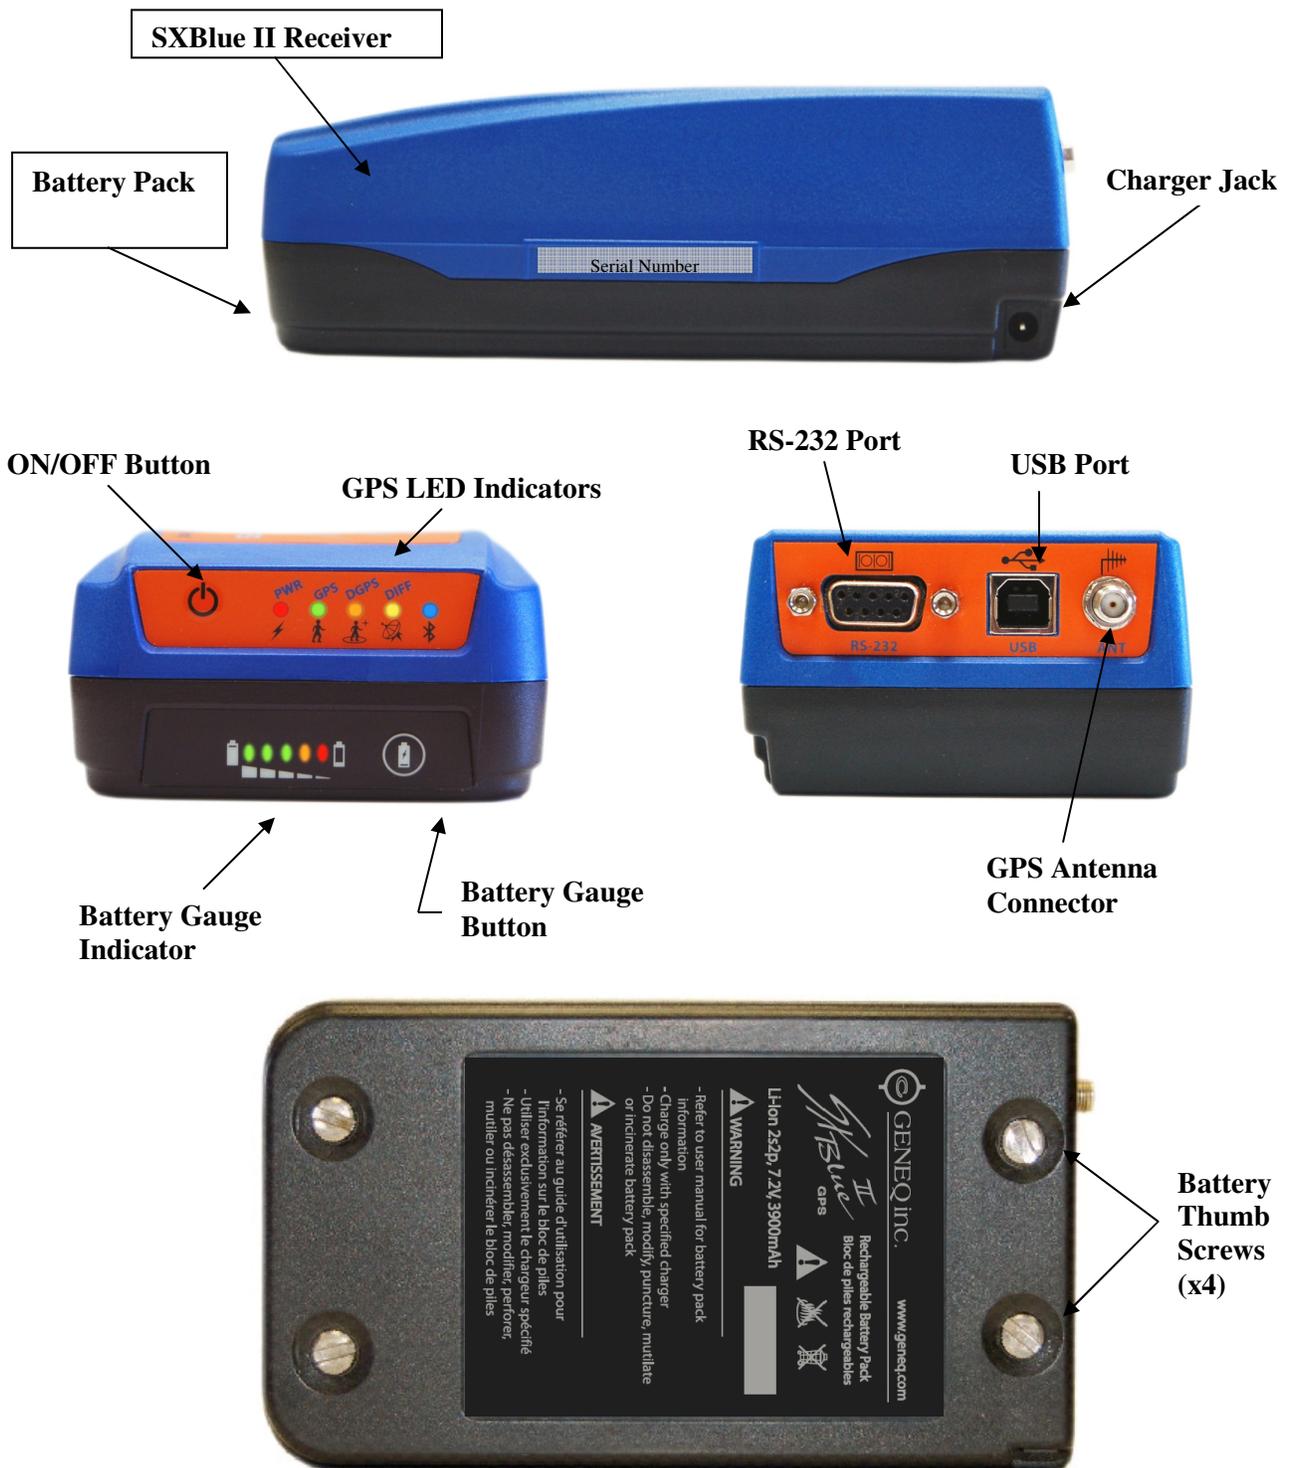


Figure 1-3 iSXBlue/SXBlue II GNSS Main Components

1.2.2 Battery Pack

The Lithium-Ion battery pack attaches to the receiver with four thumb screws. Modular contacts are used to supply power to the receiver. Even though the Li-Ion battery pack has a built-in protection circuitry, care must be taken not to short-circuit the contacts on the battery pack. Membrane vents are used on both the receiver and battery pack. These small holes should not be punctured, obstructed or covered by labels or stickers.

The battery pack features an intelligent battery “fuel gauge” that shows the level of charge (see Figure 1-2). On initial usage, it might take one or two charge/discharge cycles for the gauge to reflect the proper charge level. When unit is not used for an extended period of time, it is normal that the battery pack discharges. The field autonomy of the pack is roughly 7 to 10 hours depending on the model and after 500 cycles, battery capacity starts decreasing to about 80%.

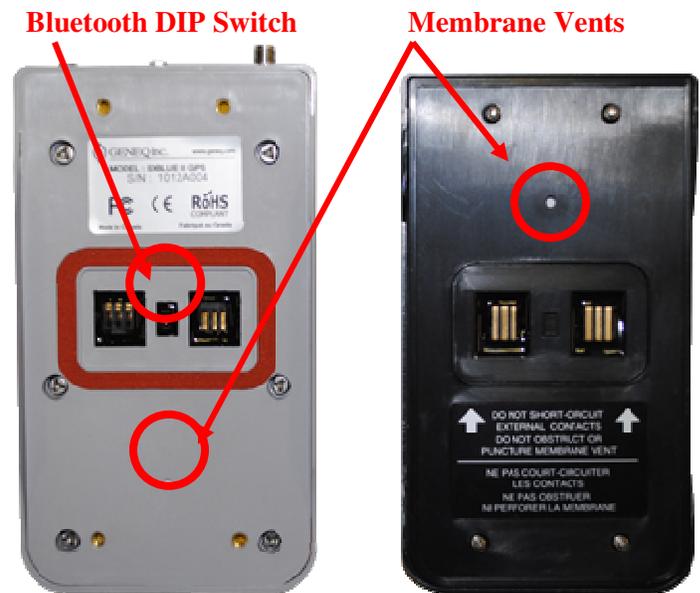


Figure 1-4 Battery contacts

Since the iSXBlue/SXBlue II GNSS uses Li-Ion battery chemistry, there is no memory effect as with NiMH or NiCad batteries; therefore it is not necessary to discharge the pack before recharging it. **Only the Geneq-supplied Li-Ion battery charger must be used with the iSXBlue/SXBlue II GNSS battery.** Using any other type of charger might result in explosion and injuries. The iSXBlue/SXBlue II GNSS battery pack specification is: 2s2p, 7.2V, 3,900mAh Li-Ion. If using a different charger than the supplied charger, the following specifications must be followed: 2-cell Li-Ion charger, maximum current of 2A, charger plug to fit a 1.7mm positive center-pin jack with 5mm OD.

Charge time with supplied charger is about 4 to 5 hours when battery is empty. The charger is equipped with a charge indicator LED that will switch to a steady Green when battery is fully charged. The charger supports input voltages of up to 240VAC.

Warning – Use only supplied charger with the iSXBlue/SXBlue II GNSS battery pack.

Do not disassemble, modify, puncture, mutilate or incinerate or heat battery pack.

Do not store the battery inside vehicles in direct sunlight and in hot weather.

Do not short-circuit battery contacts.

Do not puncture or obstruct membrane vents.

Battery should be stored at room temperature, charged to about 30-50% capacity.

Charge battery once every 3 months to prevent overdischarge.

Battery must be charged only when its temperature has settled between 0°C and 45°C.

Temperature range over which battery can be discharged is between -20°C and 60°C. Use of the battery outside of the specified range reduces performance and life expectancy.

When battery reaches end-of-life, insulate terminals with adhesive tape or similar material before disposal.

1.2.3 Precision and Survey Antennae

The Precision GPS (SXBlue II GPS), GPS/L-Band (SXBlue II-L GPS), GNSS (iSXBlue/SXBlue) and Survey Antennae (all models) supplied with the SXBlue II Series have been designed to provide reliable, stable and consistent sub-meter and centimeter positioning. All antenna models are capable of providing reliable cm-level accuracy, but for surveying work, permanent base station, RTK rover used in long baselines (more than 20km), RTK Network with VRS corrections, the use of the Survey antenna is highly recommended and might increase performance during the phase ambiguity resolution process.

The Precision antennae feature a female SMA connector, whereas the Survey antenna features a TNC female connector. The bottom part of the Precision Antenna is magnetic and can be detached by removing the 3 or 4 screws (except for the GPS/L-Band antenna). For better performance the use of the supplied 4" external magnet (as opposed to the removable magnetic adapter) is suggested for vehicle applications. Magnetic mount is optional for the Survey antenna.

Using different antennae than the ones supplied, might degrade the performance of the iSXBlue/SXBlue II GNSS Series. Shall a different antenna be used, a maximum of 30dB gain is recommended. When using longer antenna cable, it is important to take into account the cable loss (dB/m) to allow at least 21dB at the RF input of the receiver. The voltage supplied by the receiver to the antenna is 5Vdc.



Figure 1-5 Precision and Survey Antennae

Caution – By default, the iSXBlue/SXBlue II GNSS receiver supplies 5.0 VDC across its RF connector to power an active GPS antenna’s low noise amplifier (LNA). Connection to a GNSS antenna that doesn’t support a 5 VDC input could damage the antenna.

1.3 Getting Ready for the Field

The iSXBlue/SXBlue II GNSS is one component of a modular system that normally includes two other parts: a computer and a data collection software. A modular approach has huge advantages:

- Allows the use of any PDA, Tablet, PC, iPad/iPhone, laptop or computer technology to suit the application
- Allows the use of any off-the-shelf software
- Allows for keeping up-to-date with the very fast evolving computer/software technology
- Allows greater flexibility/versatility for installation in all sorts of applications.

This section and the following cover the normal steps that one would normally follow to get the system up and running for a data collection session: by understanding the factory default settings of the communication ports and output messages, setting up a Bluetooth connection with a handheld/tablet/computer, installing the USB drivers on a computer, configuring the data collection software for proper operation with the iSXBlue/SXBlue II GNSS.

Chapters 2 and 3 present advanced features and configurations of the iSXBlue/SXBlue II GNSS for other types of applications: high output rates, carrier-phase post-processing, base station and rover configuration for RTK centimeter-level accuracies, etc.

1.3.1 Default Parameters

Although specified in the following chapters, this section provides tables that detail the default parameters of the iSXBlue/SXBlue II GNSS Series as delivered.

Table 1-1 Default Applications

Memory Location	SXBlue II GNSS
Application 1	MFA (RTK Base & Rover activated)
Application 2	Auto-Dif (Installed but not activated)

Different applications can be installed on any of the two application memory locations of the iSXBlue/SXBlue II GNSS internal memory. The basic application installed on all models is called MFA (Multi-Function Application). MFA will search for the best source of differential correction available and use it in the following order of preference: RTK (automatic detection of RTCM3, ROX, CMR/CMR+ on any of the COM ports), L-Band (OmniSTAR[®] G2/HP/XP/VBS) for III-L models only, external DGPS (RTCM2.x), SBAS (WAAS, EGNOS, MSAS and GAGAN), NONE. (Special commands, described in sections 3 and 4, can be used to include or exclude the various differential correction types from this automatic detection process). The Auto-Dif on Application 2 is pre-installed but requires a subscription for activation. SBAS/LBand/RTKBase, RTK Rover, already available in the MFA are also available as discrete applications.

Table 1-2 Default Port Settings SXBlue II GNSS

Port	Baud Rate	Data Bits	Parity	Stop Bit	Interface Level
Bluetooth	N/A	8	None	1	Serial Port Profile (SPP)
Serial	19200	8	None	1	RS-232C
USB	19200	8	None	1	Serial Port Emulation

Table 1-3 Default Port Settings iSXBlue II GNSS

Port	Baud Rate	Data Bits	Parity	Stop Bit	Interface Level
Bluetooth	N/A	8	None	1	Serial Port Profile (SPP) & IAP supported
Serial	57600	8	None	1	RS-232C
USB	57600	8	None	1	Serial Port Emulation

Unless specified differently at time of purchase, the Bluetooth port is fixed at 115200 baud for iSXBlue II GNSS model and at 230400 baud for SXBlue II GNSS model. When setting up COM port parameters in software for Bluetooth communication, any baud rate can be specified, but in order to avoid communication overflow, care must be taken in properly selecting the number of sentences output on a port at a particular baud rate. The Serial and USB ports can be configured from 2,400 to 230,400 baud but most UART's (serial ports) on a PC will allow a maximum of 57,600 baud.

Table 1-4 Default GNSS NMEA Message Output

Port	NMEA Messages	Update Rate
Bluetooth	GGA, GSA, GST, GSV, VTG, ZDA	1 Hz
Serial	GGA, GSA, GST, GSV, VTG, ZDA	1 Hz
USB	GGA, GSA, GST, GSV, VTG, ZDA	1 Hz

The iSXBlue/SXBlue II GNSS receivers output six (6) standard NMEA messages by default: GGA, GSA, GST, GSV, VTG and ZDA. All ports are fully independent from one another and can be set to input or output different messages at different rates (NMEA, Binary, Differential correction). Also, only the GPGSV sentence, containing GPS satellite information is activated by default. The GLGSV sentence containing GLONASS satellite information (along with other GLONASS specific NMEA sentences) can be activated but one must verify that the data collection software used will accept these newer GNSS sentences in order to avoid malfunctions. Refer to Chapter 4 for more details on GLONASS messages.

Table 1-4 Default Parameters

Max DGPS Age	From 3D to 2D	Elevation Mask	Modes	SBAS Tracking	Decimal
3600 seconds	When PDOP > 10.5	10°	SBASR, Mixed, Forest, Base, Fixloc, Glofix, Suretrack	Automatic	7 decimal digits

Because of the unique technology used on-board the iSXBlue/SXBlue II GNSS, the maximum DGPS age can be set to 3600 seconds. Once the iSXBlue/SXBlue II GNSS receiver loses its differential correction

source, the output will remain submeter for the next 30-40 minutes. See chapter 2 for more information. For RTK operation, the receiver will maintain a fixed solution for 60 seconds after losing the RTK source; then it will “float” for an extra 2 minutes and finally will default to the next available source of differential correction available (L-Band, SBAS, None, etc).

The receiver is set to switch from 3D mode to 2D mode when there are less than 4 satellites or when the PDOP value exceeds 10.5. It is usually up to the user software to allow or restrict 2D mode operation, but this setting can be changed on the receiver (\$JALT command).

The satellite elevation mask is set to 10 degrees by default. All satellites below this value will not be used in the solution.

For the various Modes listed in the table, please refer to Chapter 4 for more information.

SBAS tracking is set to Automatic (see the \$JWAASPRN command in chapter 4) and the number of decimal digits used (in the coordinates of the GGA sentence for example) is set to 7 (see the \$JNP sentence)

1.3.2 Configuring Bluetooth Communication

There are many Bluetooth drivers available on the market today for PDA’s (using Pocket PC, Windows Mobile, iPad/iPhone or Android operating systems), and for regular computers (laptop, tablet PC’s, etc.) with standard Microsoft Windows, Apple iOS and Android operating systems.

Even though the setup procedure will be slightly different for each of them especially for the Bluetooth communication on Apple iOS devices, the basics remain the same on Windows or Android. The two major steps are: discovering a Bluetooth device and assigning a communication port number to the discovered device. The data collection software will then call the assigned port number to receive the data from the iSXBlue/SXBlue II GNSS.

In this section, we will give some examples of setting up Bluetooth communication with various PDA and computer drivers. One key element to remember is that the iSXblue/SXBlue II GNSS does not require any password (often called pairing, secure connection, authentication, passkey, passcode, etc). This feature must be disabled in the options of the driver you are using. Should a passkey be mandatory with the Bluetooth stack on your device, please use the following:


Bluetooth Passkey: “12345678”

Note – The iSXBlue/SXBlue II Series does not require any password/passkey for secure connection. This feature can be disabled in the driver configuration of your PDA/Computer. A passkey of “12345678” has been programmed in the receivers in case a Bluetooth driver absolutely requires a secure connection.

Also please note that Apple iOS devices DO NOT support standard Serial Port Profile (SPP) commonly used by all GPS receivers but only support iAP profile. Please contact Geneq for alternatives (or updates) on how to connect to an iOS device.

1.3.2.1 Windows Mobile 5.0 and 6.x with Microsoft drivers

Microsoft Bluetooth drivers for Windows Mobile 5.0 and 6.x are similar with just a few minor differences. There is currently a “bug” in these drivers for non-secure connections and it has not yet been addressed by Microsoft. Fortunately the iSXBlue/SXBlue II GNSS Series offers a passkey to overcome this issue.

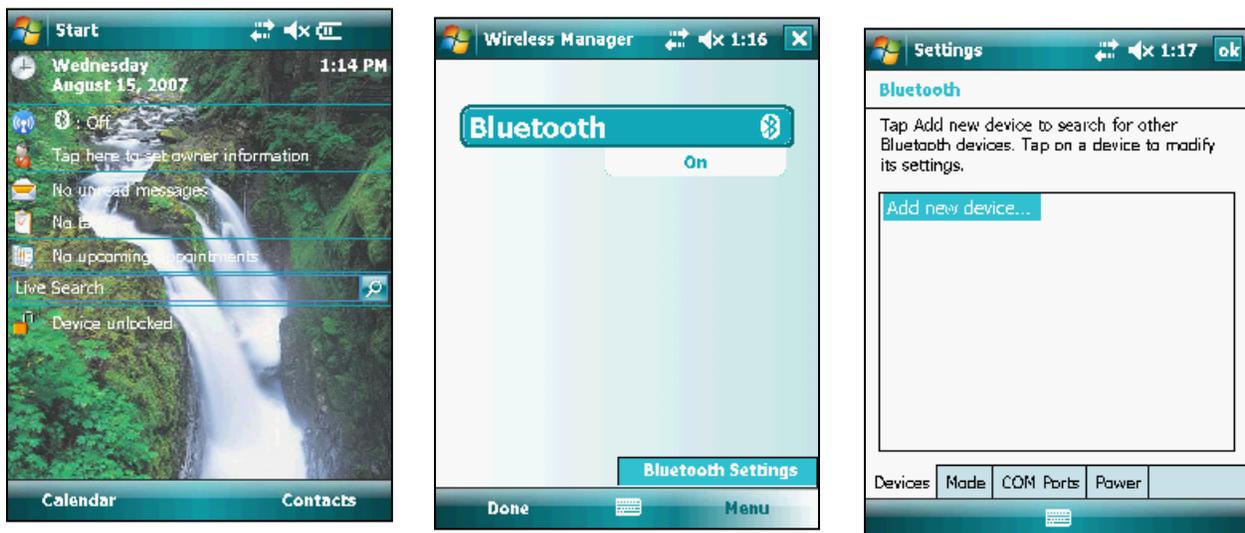


View of Window Mobile 6.0




View of Window Mobile 6.5

From the desktop, tap the Bluetooth Icon and select “Menu/Bluetooth Settings”. In the “Devices” tab, tap “Add new device...”.

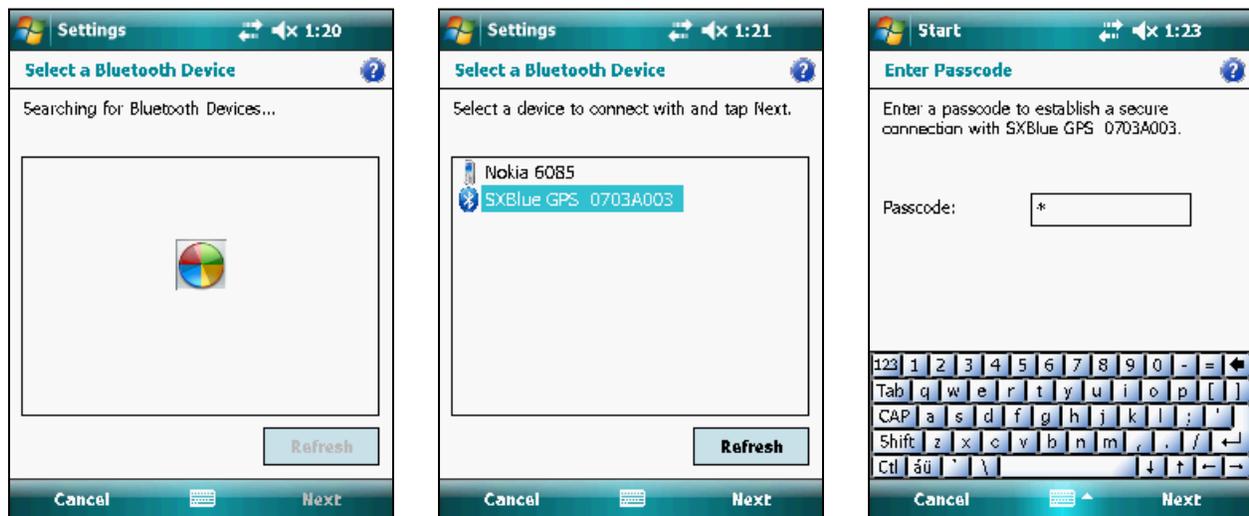


View of Window Mobile 6.0

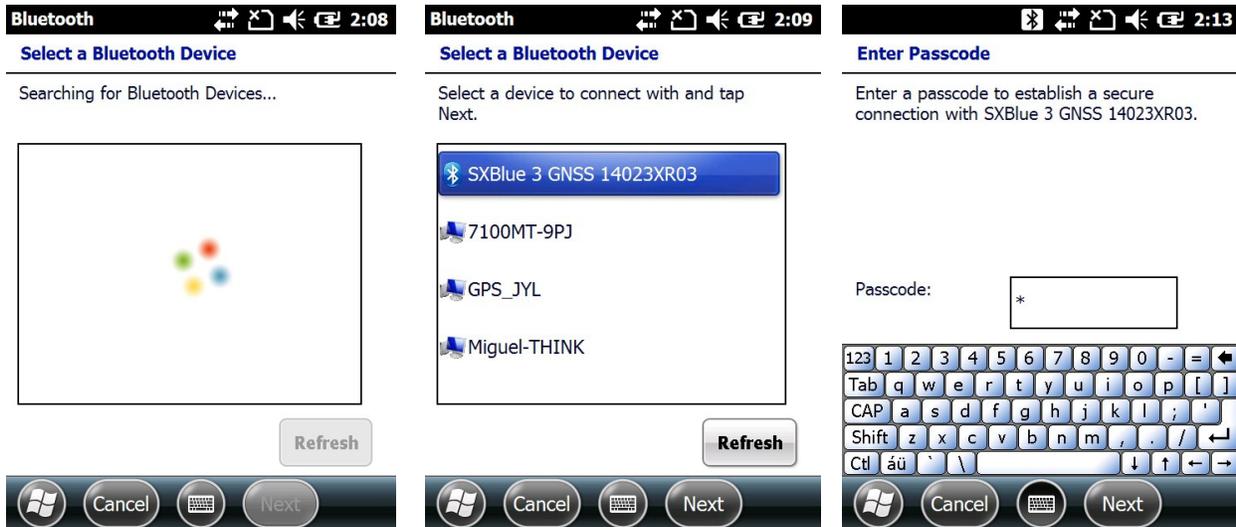

View of Window Mobile 6.5

Once the iSXBlue/SXBlue II has been found, select it then tap “Next”. The driver will ask for a “Passcode”; at this point enter **12345678** and hit “Next”.

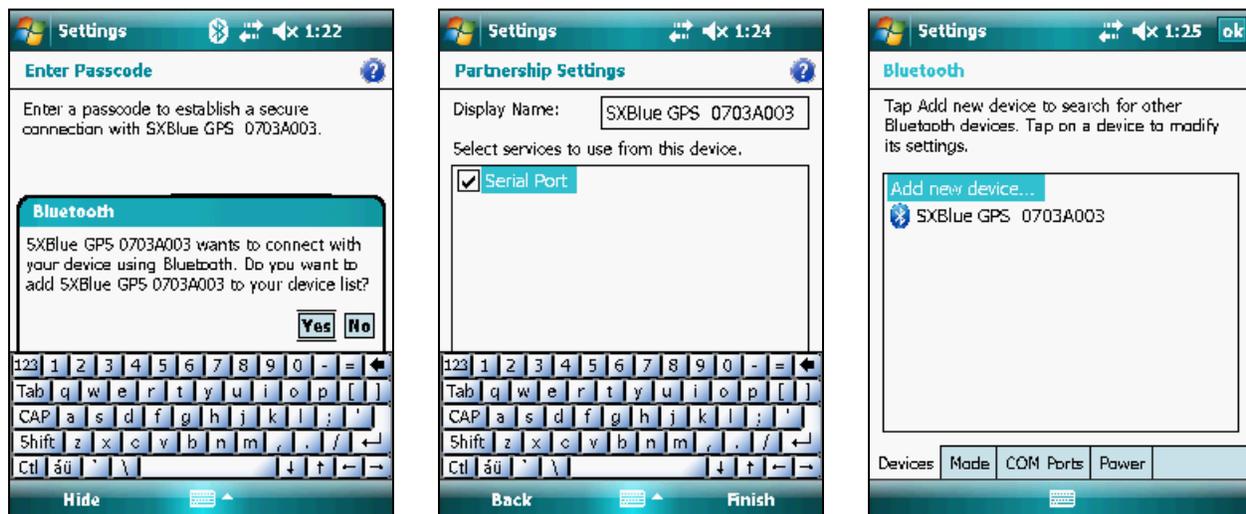


View of Window Mobile 6.0




View of Window Mobile 6.5

With some older versions of the Microsoft or Broadcom drivers, you might get a message saying: "SXBlue II GPS ... wants to connect...", select "Yes". For Windows Mobile 6.x you should click on the Advanced button at the bottom right and check the "Serial Port" option and the SXBlue II GPS will be added to the list of discovered devices.

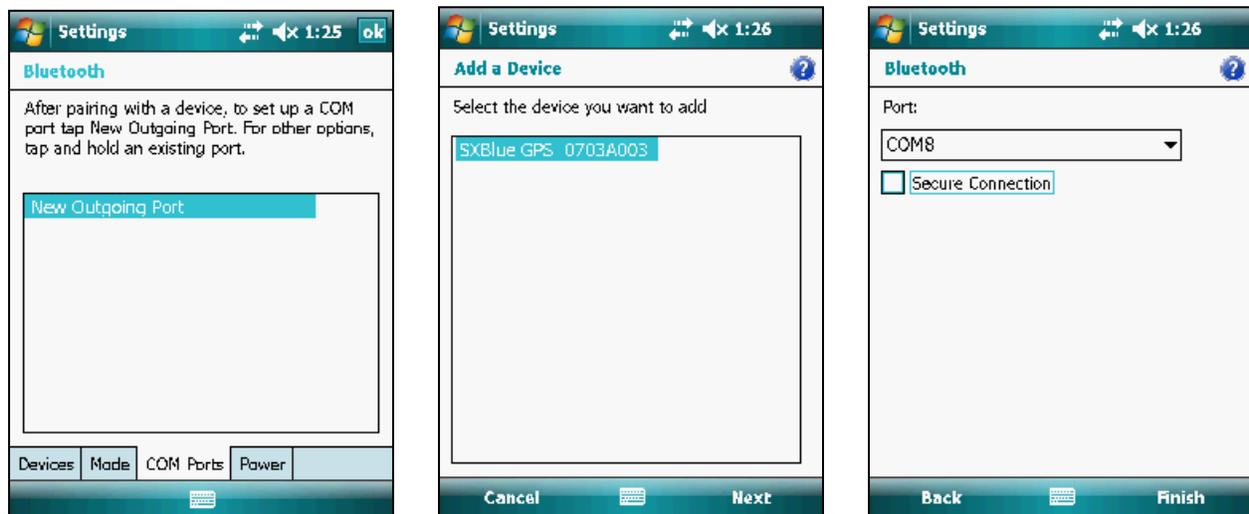

View of Window Mobile 6.0

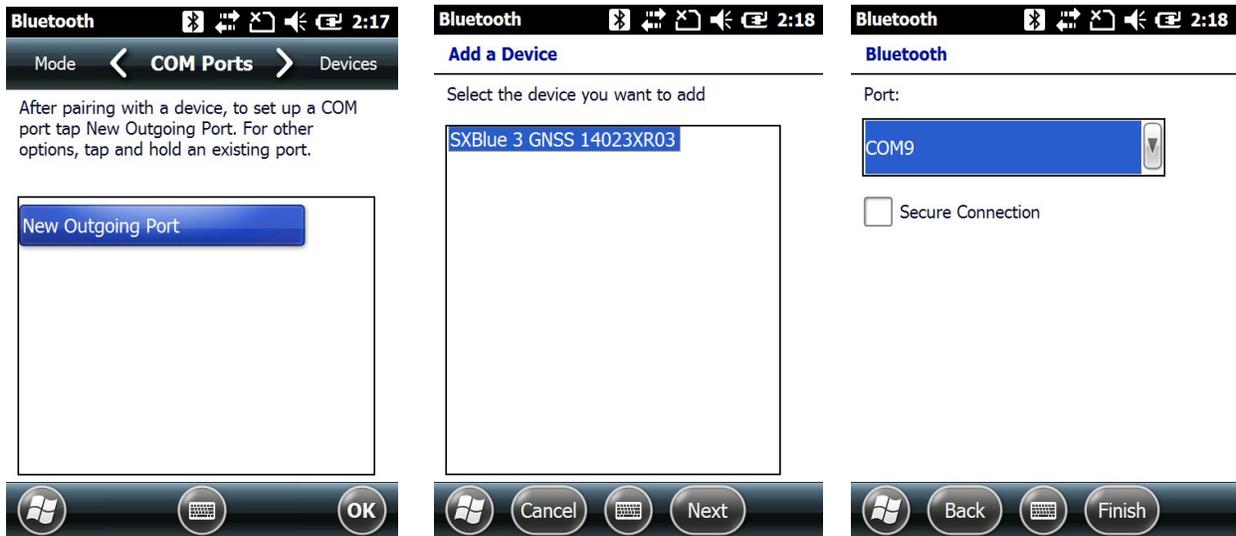


View of Window Mobile 6.5

The next step is to assign a COM port number to the newly discovered iSXblue/SXBlue II device. Tap the “Com Ports” tab then select “New Outgoing Port”. Select the iSXBlue/SXBlue II receiver in the list and hit “Next”. Unselect the “Secure Connection” option and select a COM Port number (in this example: COM 8). It is recommended that you start with the highest available COM port (usually COM 9, 8 and 7 are free; COM 6 is by default used by the Microsoft “External GPS” virtual COM port settings and can be used, but the default settings must be changed for this utility under the “Settings” menu of the Windows Mobile operating system; COM5 is a 50/50 pick; choosing a COM port below COM 5 is usually risky as it might conflict with other internal components inside your PDA (internal GPS, Modem, etc). It all depends on the model/brand you are using).

Hit “Finish”.



View of Window Mobile 6.0

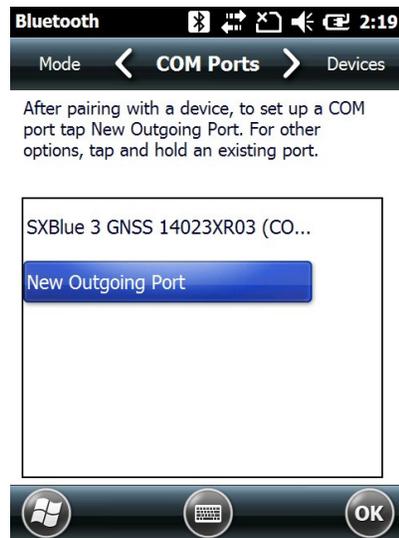


View of Window Mobile 6.5


Your iSXBlue/SXBlue II receiver will be shown in the list along with its assigned COM port number. This is the port number that should be selected in your data collection software settings; The Bluetooth connection will be activated automatically by your software, therefore there is no need to connect manually should this option be available in the Bluetooth utility. Tap “Ok” at the top right corner. Windows Mobile 6.0 will eventually show a “Cannot Connect” window; Tap on “Ok” in this window to bypass the message and finally on “Done” in the last window.

1.3.2.2 Windows Mobile with Socket Communication driver


On (legacy) non-Bluetooth enabled PDA’s a Compact Flash (CF) or Secure Digital (SD) Bluetooth card can be used. The example in this sub-section shows a typical configuration for Socket Communication drivers on Windows Mobile 2003.

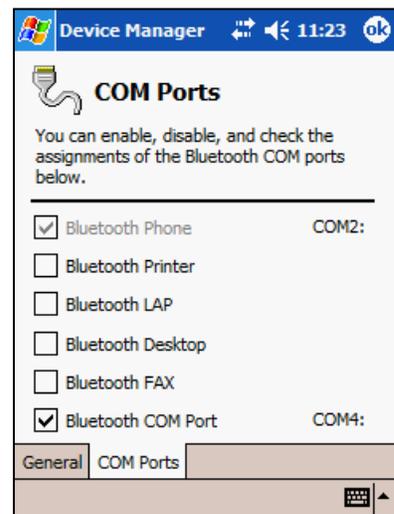


Tap on the Bluetooth icon in the task bar, on the lower right portion of the screen. In the popup menu, select “Advanced Features”, then “My Bluetooth Device”. Make sure “Use Authentication” is unchecked and click on the “COM Ports” tab. Check the “Bluetooth COM Port” profile and a COM port number will be assigned to a Serial Port Profile (in this example: COM4). Tap “Ok” on the top right corner to close the window.

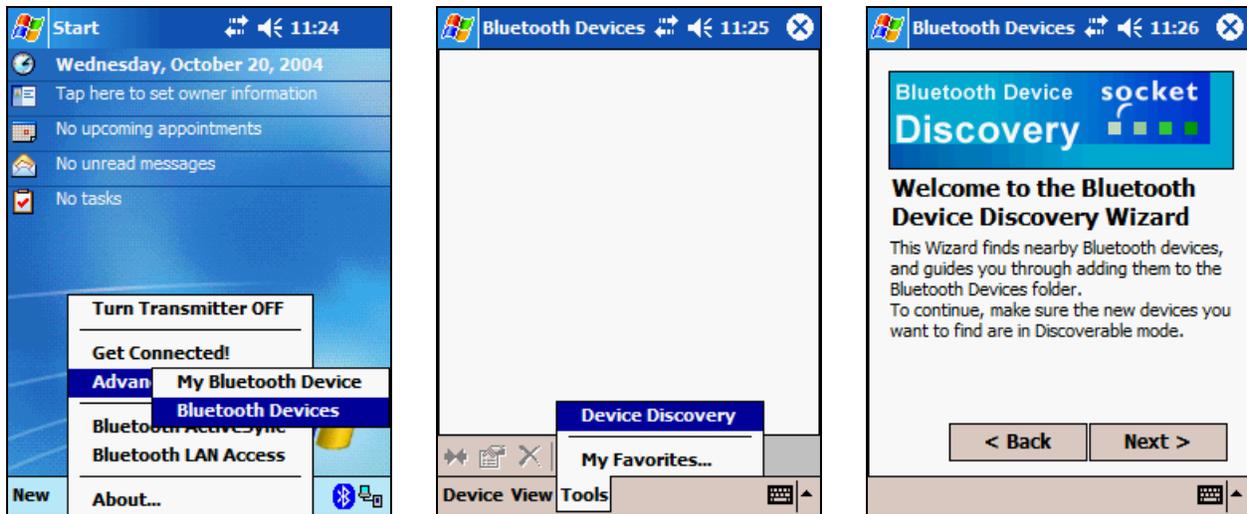

From the Bluetooth Icon in the task bar, select “Advanced Features”, then “Bluetooth Devices”. Select “Tools”, “Device Discovery” and hit “Next” in the Device Discovery Wizard.

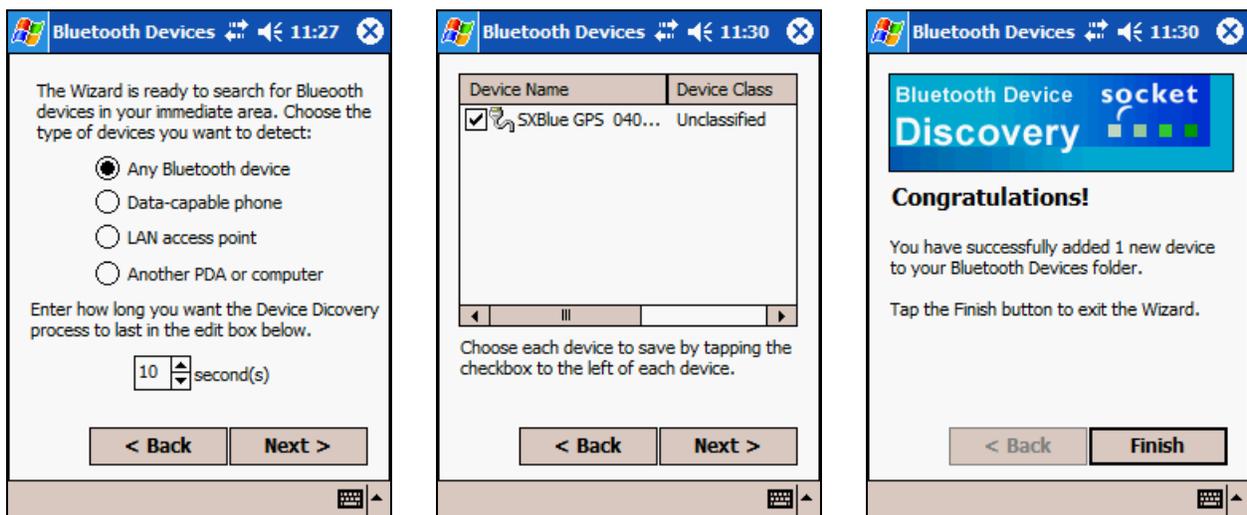


By default, the “Any Bluetooth device” option will be selected. Hit “Next”. After the search, the iSXBlue/SXBlue II receiver will be displayed in the list. Check the box next to it, hit “Next” then “Finish”. The iSXblue/SXBlue II receiver will appear with an icon in the Bluetooth Devices window.

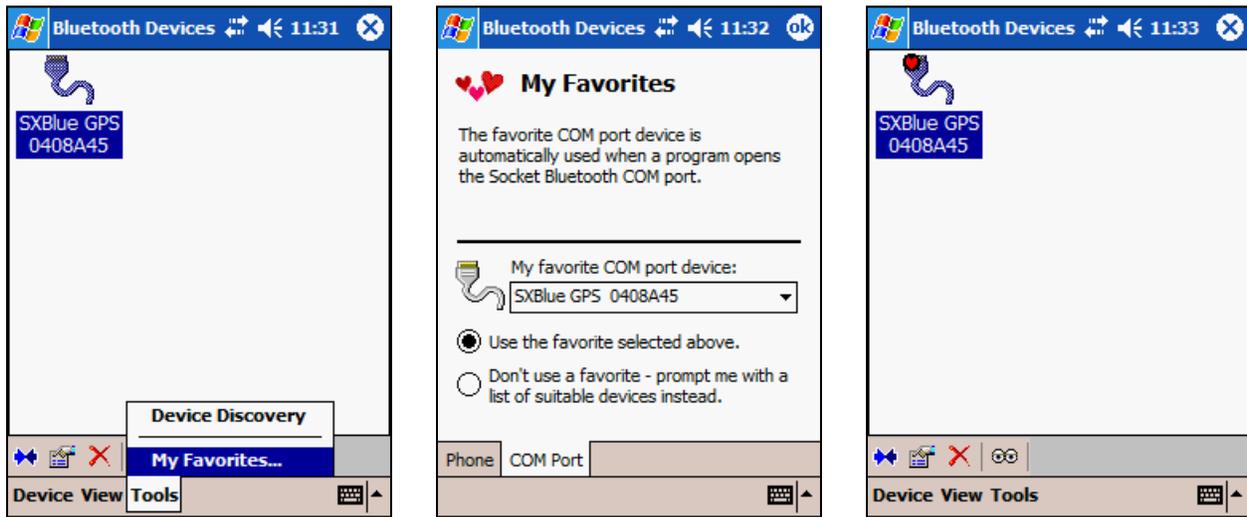

The last step is to set the iSXBlue/SXBlue II receiver as a favourite device for the serial Com port. In the bottom menu, select “Tools”, “My Favorites...”. Select “Use the favorite selected above” and in the pull-down menu for “My favorite COM port device:”, select the iSXblue/SXBlue II receiver. Tap on “Ok” on the top right corner to close the window. The iSXBlue/SXBlue II icon should now appear with a small red heart and, in this example, is set as a favourite on COM port 4. An application calling COM 4 will automatically search for this particular iSXblue/SXBlue II receiver. Click on the “X” to close the window.


1.3.2.3 Windows Mobile with WidComm driver

Most (legacy) iPaq series PDA’s from Hewlett Packard (HP) use drivers from Widcomm Inc. Below is a typical Bluetooth configuration for these devices.

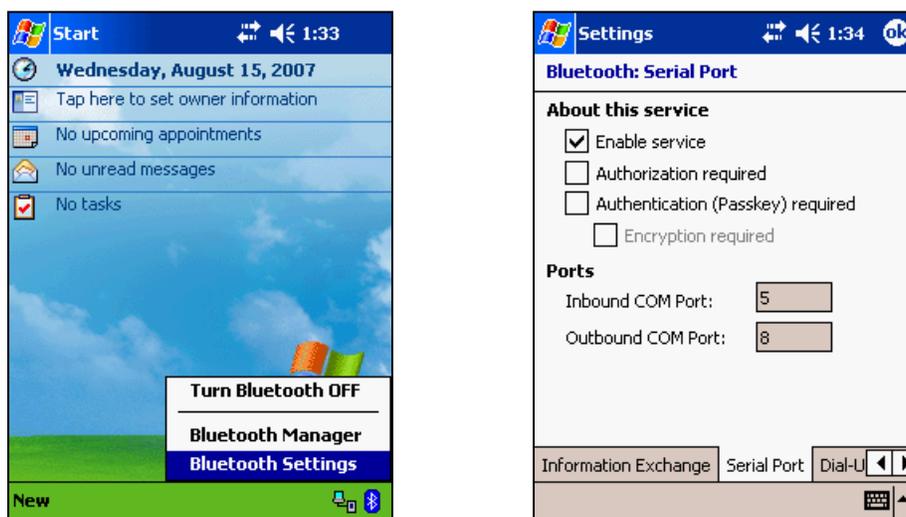


Tap the Bluetooth icon on the bottom right corner and from the menu, select “Bluetooth Settings”. In the settings window, scroll right to the “Serial Port” tab, and only the “Enable service” option should be

checked. Some driver versions will show “Inbound” and “Outbound” COM ports. Since the software on the PDA will be initiating the Bluetooth communication with the iSXblue/SXBlue II receiver, the “Outbound COM Port” is the port number that should be specified in the software. Close the window by clicking on “Ok” on the top right corner.

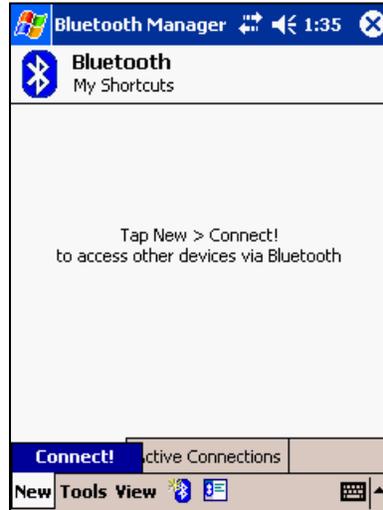

Again, from the Bluetooth icon, select “Bluetooth Manager”. In the menu at the bottom of the screen, tap “New”, then “Connect!”. In the Connection Wizard window that appears, select “Explore a Bluetooth device” then hit “Next”.

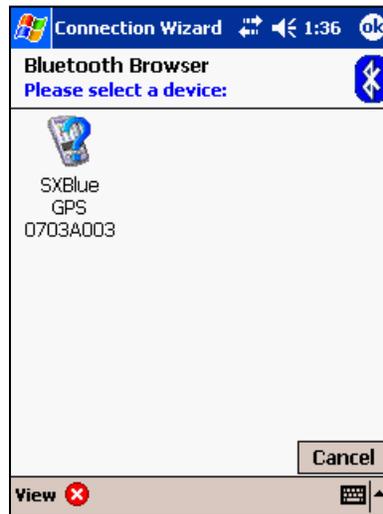

Tap “Next” to allow the wizard to search for a Bluetooth device. Once found, the iSXblue/SXBlue II receiver will appear in the Bluetooth Browser; select it. The “Security” section of the following screen, “Use a secure, encrypted connection” should be unchecked. Tap next.

iSXblue/SXBlue II GNSS Series Techni



The iSXBlue/SXBlue II shortcut will be created and, in this example, will be available as COM 8.

1.3.2.4 Microsoft Windows with IVT Corporation's BlueSoleil driver

The configuration of IVT's BlueSoleil for Windows is simple and straightforward.




From the Classic Display's menu, select "Bluetooth" then "Search Devices". All nearby Bluetooth devices will be shown.

Double-click on the iSXBlue/SXBlue II icon.




BlueSoleil will detect the iSXBlue/SXBlue II as a Serial Port

Service.

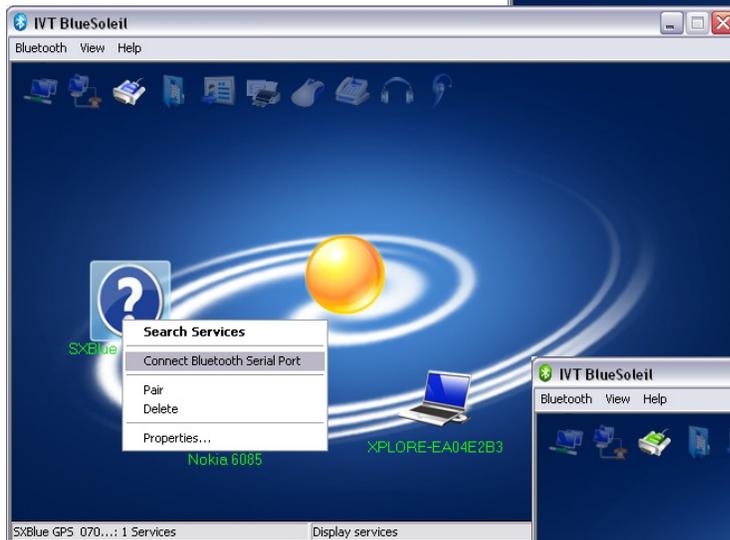

Right-click on the iSXBlue/SXBlue II icon and select "Connect Bluetooth Serial Port".


The assigned COM port number will be displayed in the taskbar once communication is established.

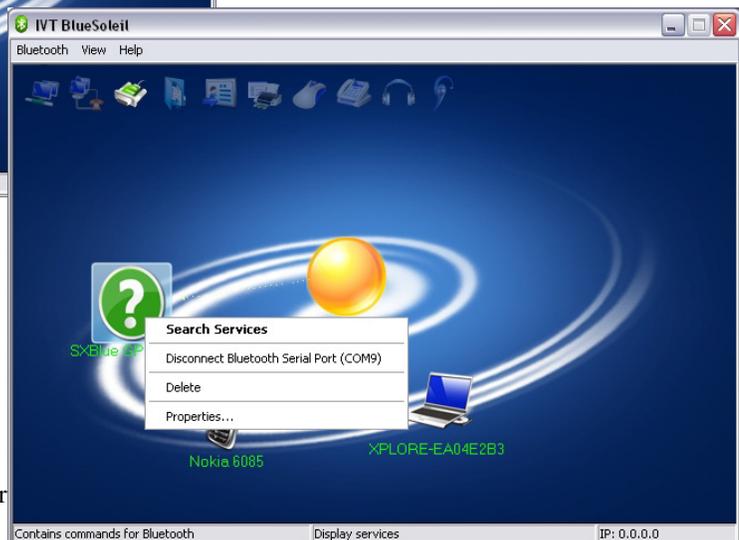

iSXblue/SXBlue II GNSS Series Technical Refer



1.3.2.5 Microsoft Windows with Widcomm's My Bluetooth Places driver

This (legacy) driver allows multiple ways to setup a Bluetooth device. The wizard will be used to detect the iSXBlue/SXBlue II.

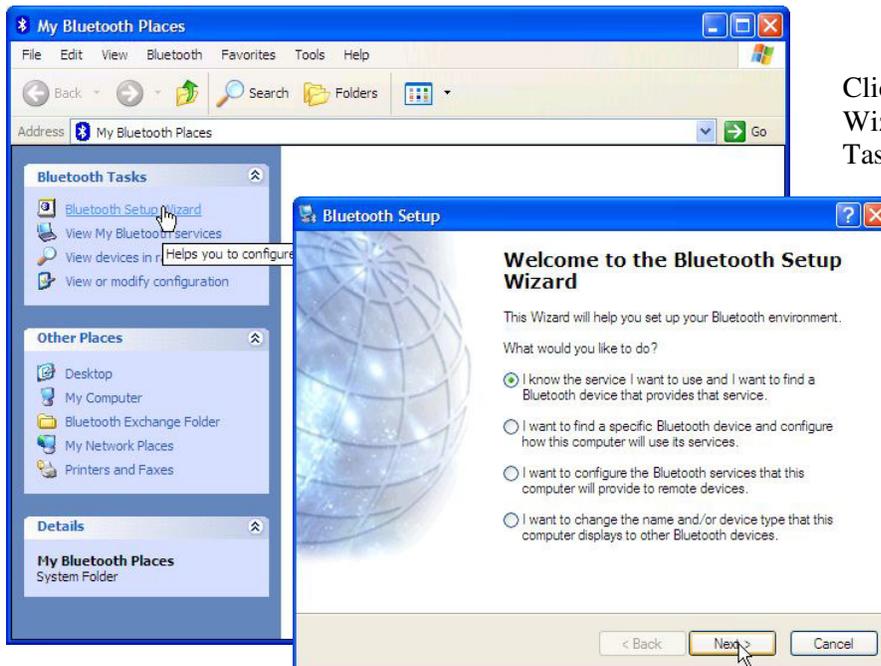

Click on the “Bluetooth Setup Wizard” option in the “Bluetooth Tasks”.

Select the first option in the list “I know the service I want to use...” then hit “Next”.

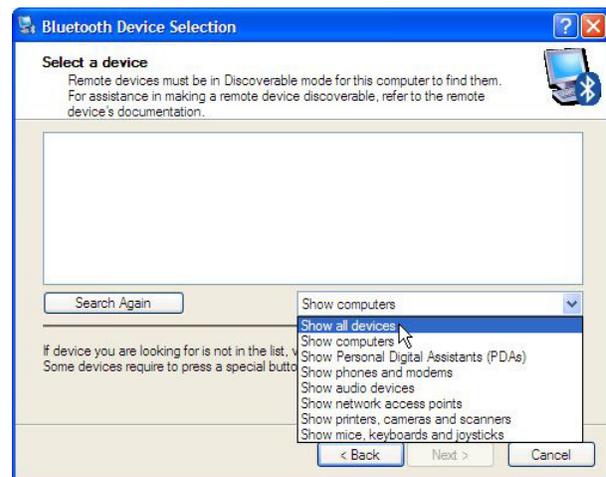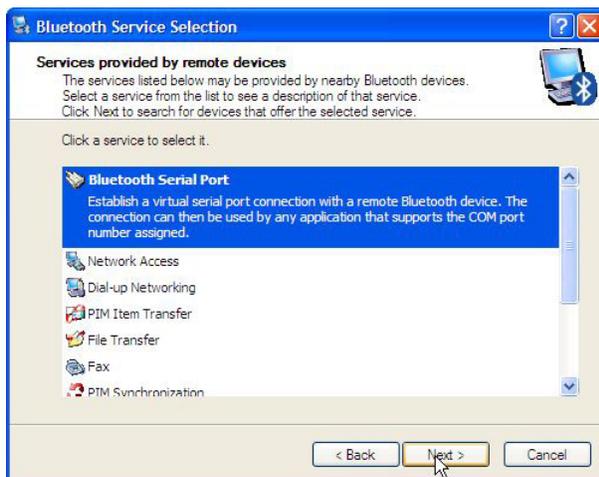


In the “Bluetooth Service Selection” window select the “Bluetooth Serial Port” service then click “Next”.

In the “Bluetooth Device Selection” window, from the pull-down menu, select “Show all devices”. After the search, the iSXBlue/SXBlue II receiver should appear in the list.



Click on the iSxBlue/SXBlue II icon, then on “Next”. In the “Bluetooth Setup Wizard Completion Page”, click on the “Configure Button and uncheck the “Secure Connection” option. The COM port number that is assigned to the iSxBlue/SXBlue II will be shown (in this example: COM8). Click “Ok” to close the “Bluetooth Properties” window.

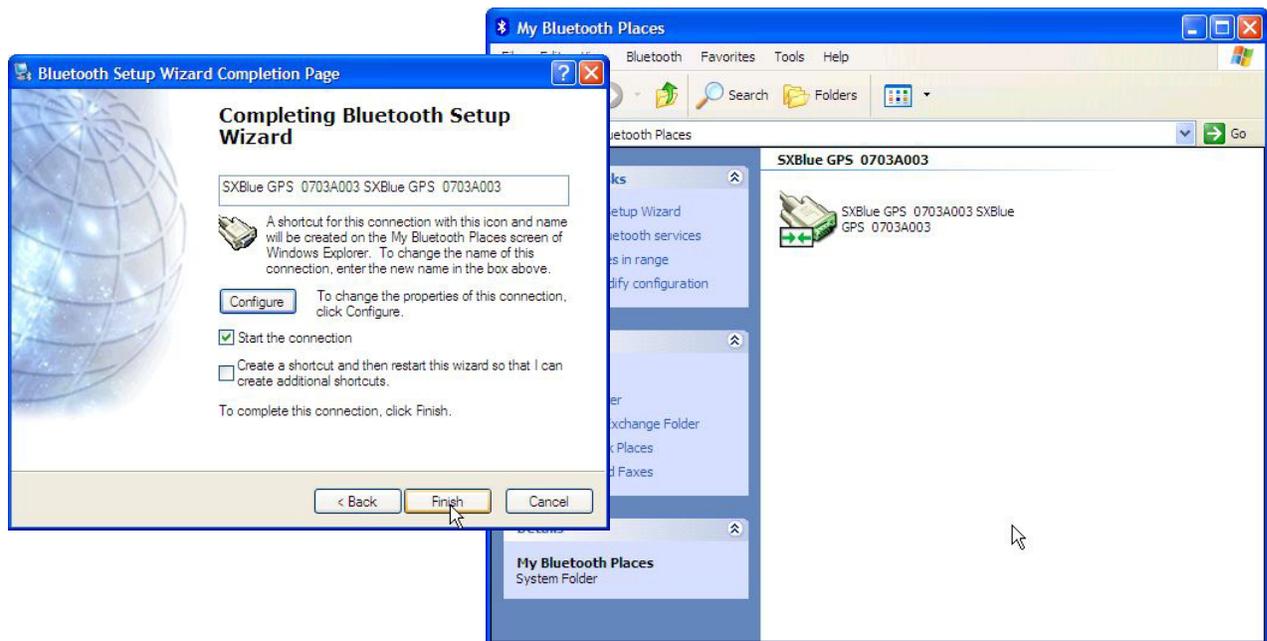


Hit “Finish” to complete the configuration. If the “Start the connection” option is checked, Bluetooth connection will automatically be activated with the iSxBlue/SXBlue II receiver.

1.3.2.6 iOS Apple Bluetooth communication

iPhone/iPad app using location services will receive data from an external GPS receiver following the Bluetooth module protocol. Make sure to connect an antenna to the iSXBlue II GNSS before a first connection. Any app using location services has to track a position before receiving data from the core location with new values of the iSXBlue II GNSS.


1. A pairing with your iPhone/iPad must be done before using any Mapping App.
2. Go to the setting icons and then select the Bluetooth tab. The Bluetooth switch must be to ON position to recognize any Bluetooth device.
3. After a couple of second, you will see a device name ex: iSXBlue II GNSS-XXXXXXXX icon appear with the same serial number of your receiver.
4. Click on the iSXBlue II GNSS-XXXXXXXX device until it mark connected.

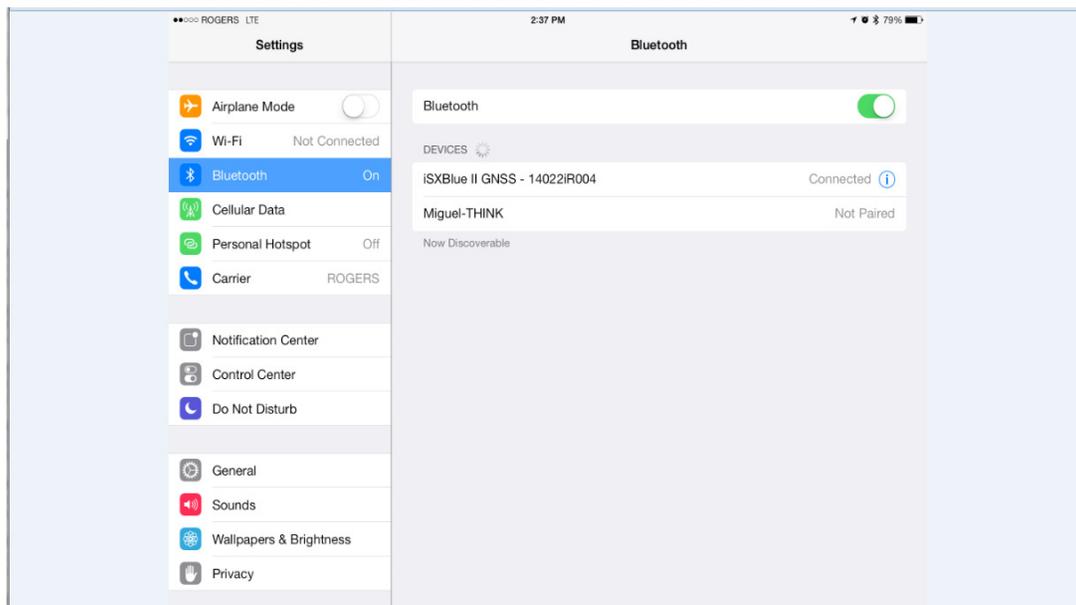

5. You may verify the manufacturer setting by following these instructions. Go to Settings→General→About→iSXBlue II GNSS-XXXXXXXX. See example below

Note –While your iOS device can maintain multiple pairing records, it can only connect to one iSXBlue/SXBlue II GNSS. This prevents your iOS device from sending your data to the wrong iSXBlue/SXBlue receivers. The device might also take a few times before being connected on Bluetooth. See the FAQ Section 7 for troubleshoot

General

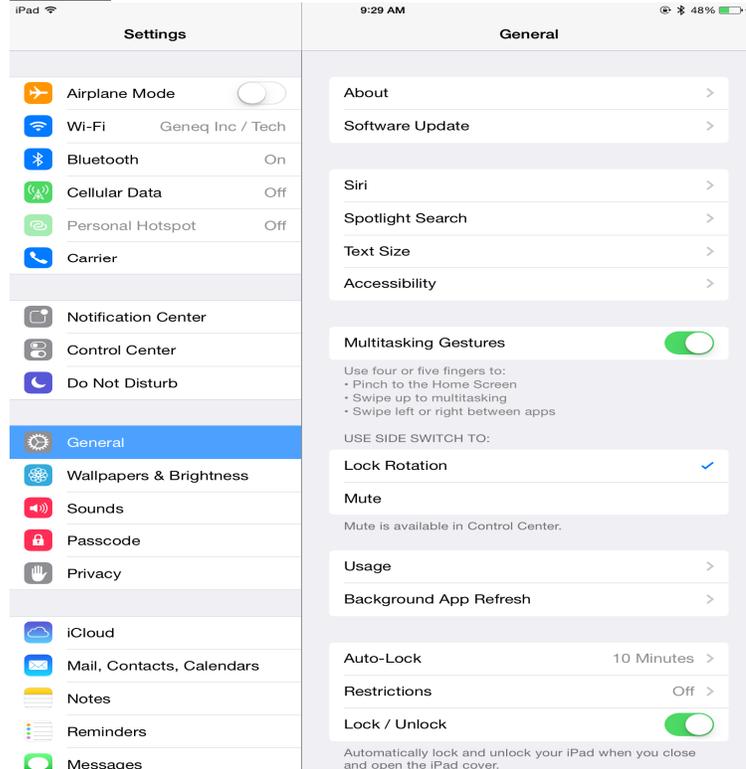

The screenshot shows the iPad Settings app with the 'General' section selected. The left sidebar lists various settings categories, and the main area displays the 'General' settings page.

Settings


- Airplane Mode
- Wi-Fi: Geneq Inc / Tech
- Bluetooth: On
- Cellular Data: Off
- Personal Hotspot: Off
- Carrier
- Notification Center
- Control Center
- Do Not Disturb
- General**
- Wallpapers & Brightness
- Sounds
- Passcode
- Privacy
- iCloud
- Mail, Contacts, Calendars
- Notes
- Reminders
- Messages

General

- About
- Software Update
- Siri
- Spotlight Search
- Text Size
- Accessibility
- Multitasking Gestures:

 - Use four or five fingers to:
 - Pinch to the Home Screen
 - Swipe up to multitasking
 - Swipe left or right between apps
 - USE SIDE SWITCH TO:
 - Lock Rotation:
 - Mute: Mute is available in Control Center.
 - Usage
 - Background App Refresh
 - Auto-Lock: 10 Minutes
 - Restrictions: Off
 - Lock / Unlock:
 - Automatically lock and unlock your iPad when you close and open the iPad cover.

About

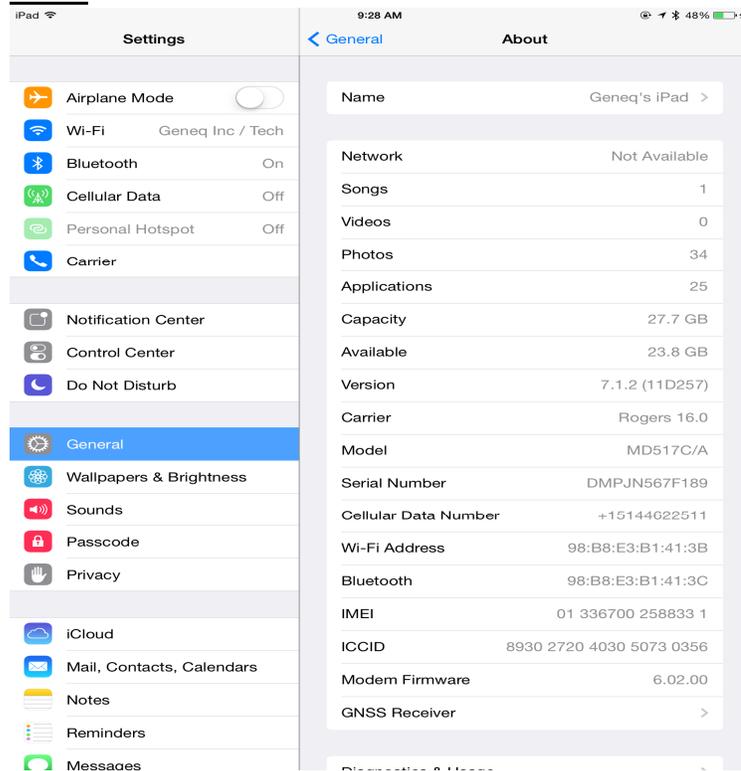

The screenshot shows the iPad Settings app with the 'About' section selected. The left sidebar is the same as in the previous screenshot, and the main area displays the 'About' settings page.


Settings

- Airplane Mode
- Wi-Fi: Geneq Inc / Tech
- Bluetooth: On
- Cellular Data: Off
- Personal Hotspot: Off
- Carrier
- Notification Center
- Control Center
- Do Not Disturb
- General**
- Wallpapers & Brightness
- Sounds
- Passcode
- Privacy
- iCloud
- Mail, Contacts, Calendars
- Notes
- Reminders
- Messages


About

- Name: Geneq's iPad
- Network: Not Available
- Songs: 1
- Videos: 0
- Photos: 34
- Applications: 25
- Capacity: 27.7 GB
- Available: 23.8 GB
- Version: 7.1.2 (11D257)
- Carrier: Rogers 16.0
- Model: MD517C/A
- Serial Number: DMPJN567F189
- Cellular Data Number: +15144622511
- Wi-Fi Address: 98:B8:E3:B1:41:3B
- Bluetooth: 98:B8:E3:B1:41:3C
- IMEI: 01 336700 258833 1
- ICCID: 8930 2720 4030 5073 0356
- Modem Firmware: 6.02.00
- GNSS Receiver

GNSS Receiver

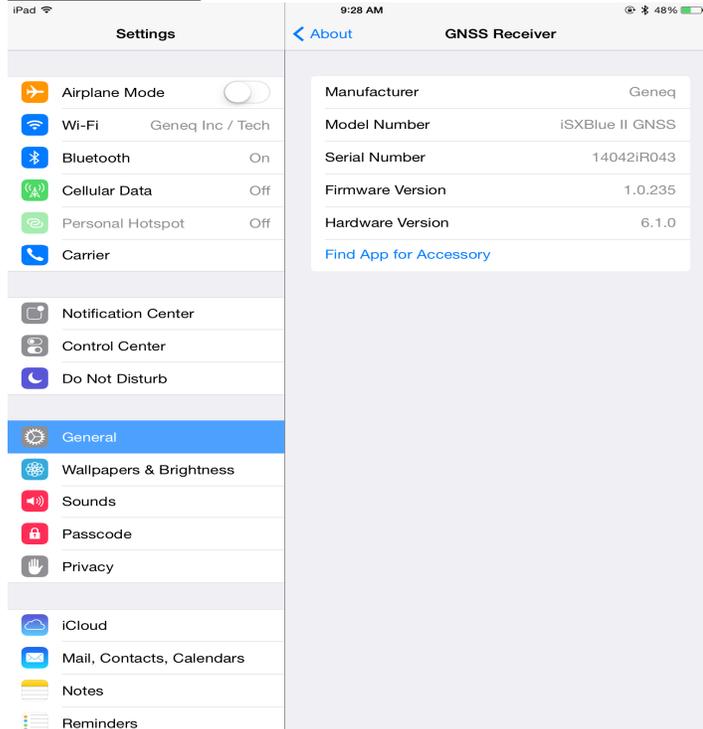

- The baud rate is set at 115200 baud rate from the Bluetooth port. The iSXBlue is working properly when streaming data are generated to the terminal on iSXBlue View app.

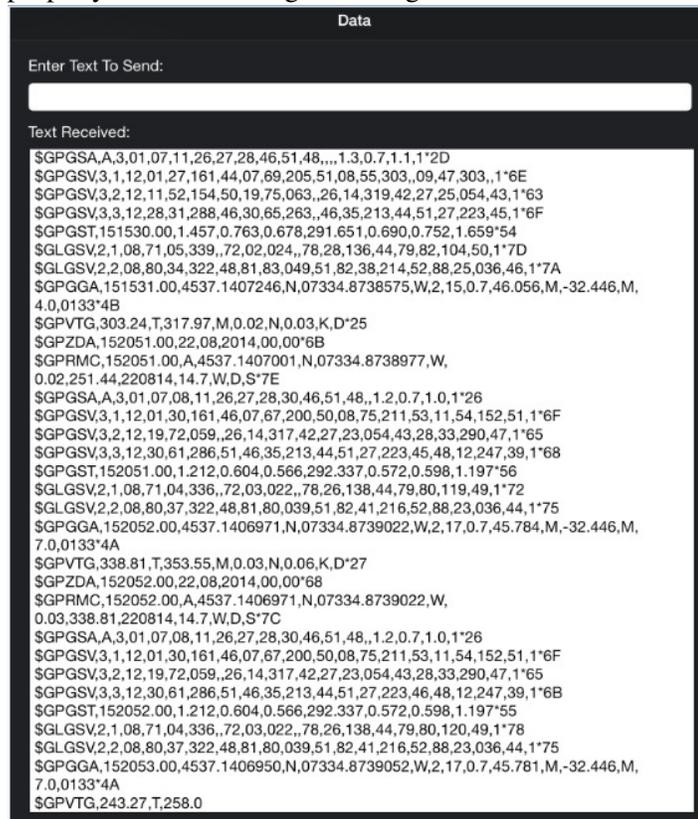

1.3.2.7 Android Bluetooth communication

Android application using location data from an external GPS receiver need to follow the Bluetooth protocol for a pairing. Make sure your Android devices has developer settings. Recent Android operating systems don't have developer settings available by default, and the location of those settings is in different places on different operating system.


Enable the "Allow mock locations" in Android Settings' Developer settings. This is a must for the Bluetooth GPS app to make the GPS receiver's location data available to your apps, bypassing the built-in GPS.


The iSXBlue/SXBlue II GNSS can be connected to an Android device but you need to use a third party software to do it.

We use here Bluetooth GPS (you can find it in the Playstore).

Here the pairing protocol:

- 1-Pair the GPS receiver with the Android device
- 2-Open Bluetooth GPS and select the iSXBlue/SXBlue from the list.
- 3-Check the "Enable Mock GPS Provider" box
- 4-Click on the Settings and be sure that the "Use Insecure Connection" box is checked (with that option, the Android device will always ask for a password).
- 5- Reduce the Bluetooth GPs software and open/start the software you want to use.
- 6- You should be able to track a position from the iSXBlue/SXBlue II GNSS this way.

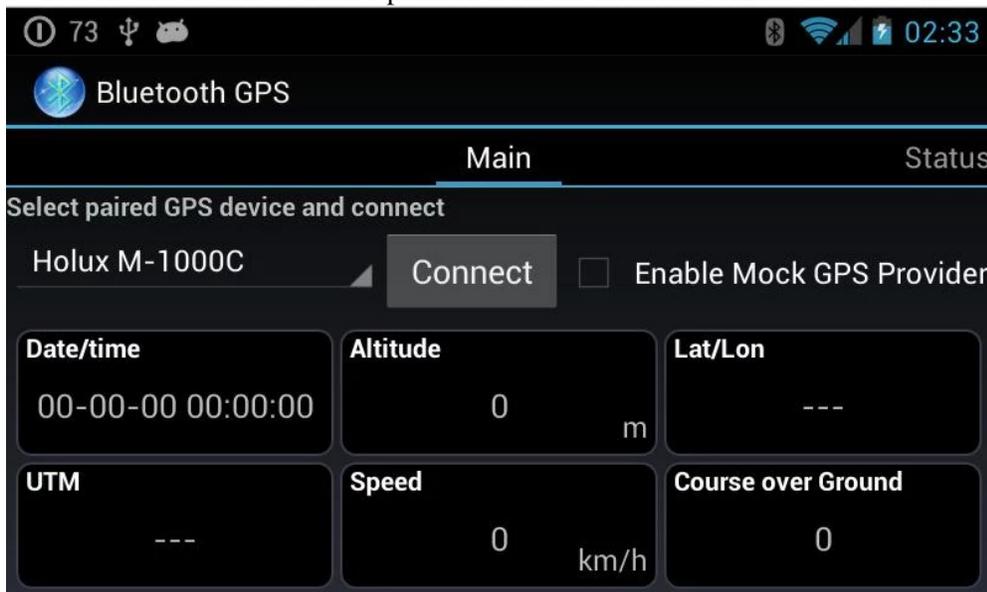

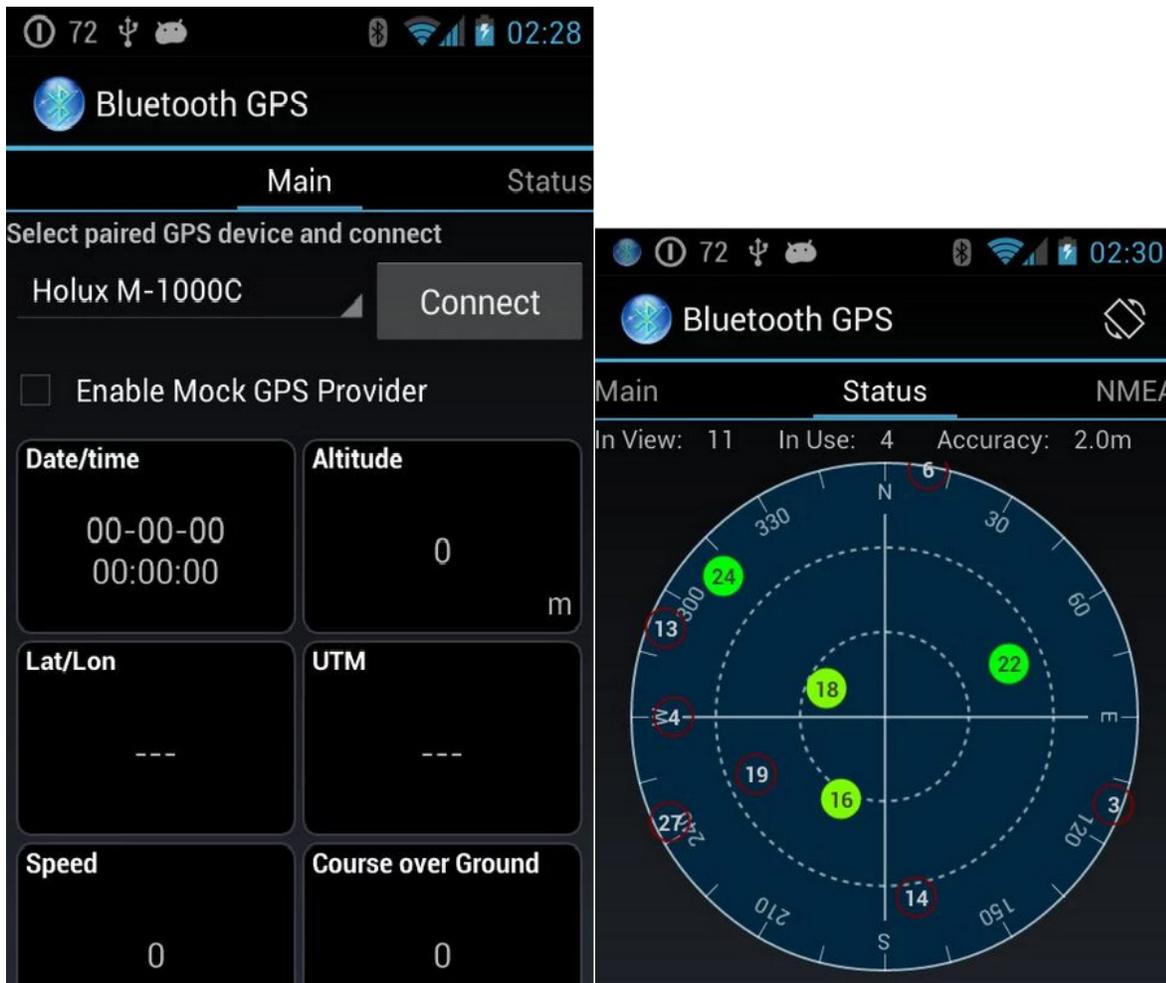


1.3.3 Installing the USB Drivers for Microsoft Windows

Drivers for the iSXBlue/SXBlue II Series are available for multiple operating systems: Microsoft Windows 98, ME, 2000, 32-bit and 64-bit Server/XP/Vista/Windows 7. Other drivers are also available for Windows Mobile, Linux.

There are two versions of the USB drivers for Microsoft Windows: a 32-bit and a 64-bit. Make sure the correct version is used with your operating system.

Once the driver is installed, **the port number assigned to a specific USB port will be the same every time the iSXBlue/SXBlue II is connected to this port.**


The installation software can be found on the supplied CD-ROM, in the “Download” section of the <http://www.sxbluegps.com> web site or will be installed automatically by Windows (requires an Internet connection). The software will install two subsets of the driver: The Serial Converter and the USB Serial Port emulation.

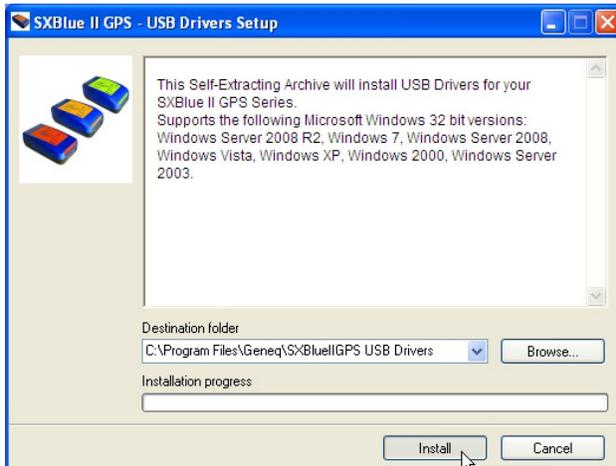


In the “iSXBlue/SXBlue II GNSS – USB Driver Setup”, the default location for the driver installation will be “C:\Program Files\Geneq\SXBlueIIGPS USB Drivers”. Click on “Install”. The driver files will be uncompressed to the specified location and the Installer window will be displayed. Click on “Next” to proceed with the installation.



Once the installation is completed, the window on the left will be displayed and the names of the two driver subsets will be displayed.

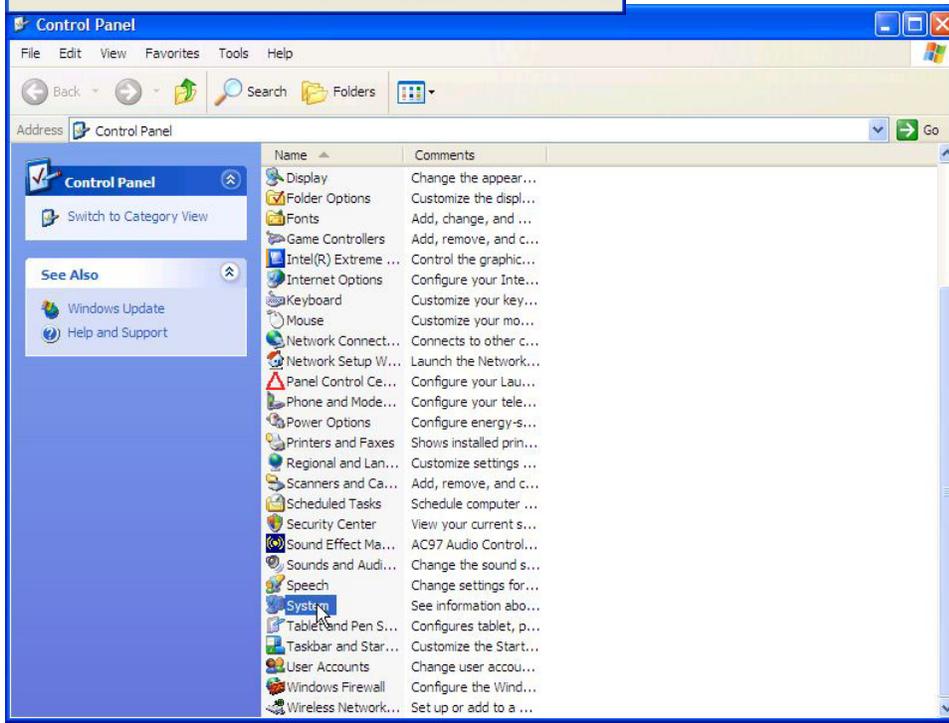

In order to find the COM port number that Windows has assigned to the iSXBlue/SXBlue II GNSS, the receiver must be connected to the USB port and powered on.

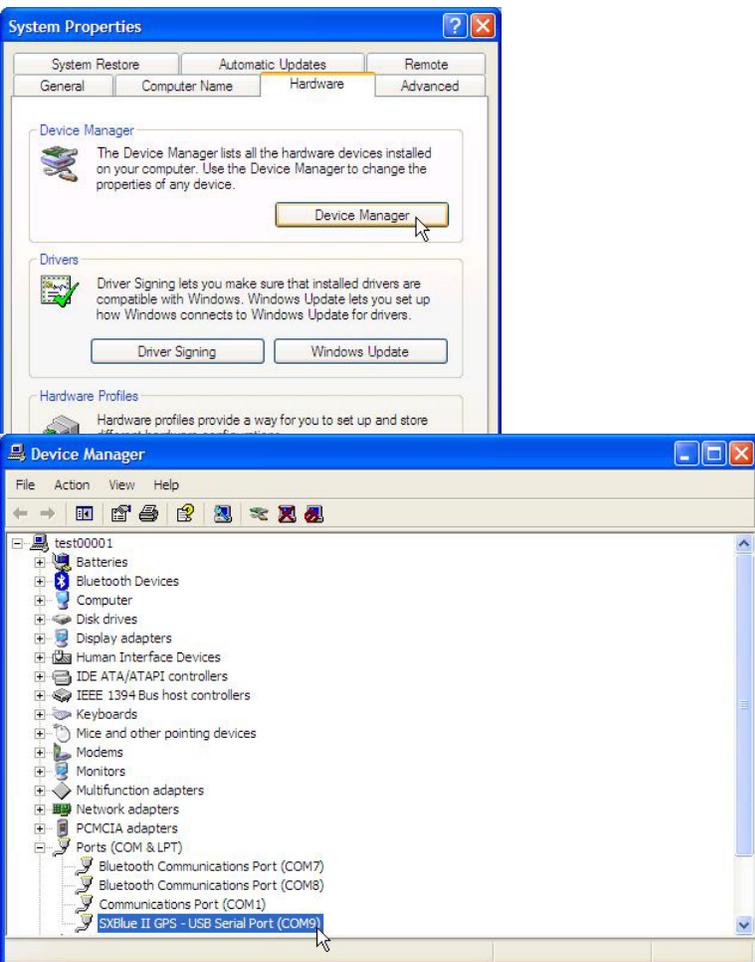

In Windows, go to “Start”, “Settings” and “Control Panel”. Double click on “System” to open the “System Properties” window.

Select the “Hardware” tab then click on the “Device Manager” button.

Scroll down to and expand the “Ports (COM & LPT)” category. The iSxBlue/SXBlue II GNSS – USB Serial Port will be shown with the COM port number assigned to it.

1.4 In the Field

This section covers the following topics: setting up for submeter work using the nylon carrying case and soft hat, setting up the receiver on a range pole using the mounting plate and brackets, definition of the LED indicators, generic data collection software configuration and basic recommendations for optimal performance.

1.4.1 Setting up for Submeter Work

For applications requiring only submeter positioning, a softhat for the Precision Antenna is provided when you order the Standard Package. The supplied antenna mounting plate can also be used in a backpack or survey rangepole setup. Proper installation of the receiver and cable in the carrying case is shown in the subsection below.

1.4.1.1 Using the Nylon Carrying Case

The nylon carrying case features a belt loop and can also be used with a belt clip or a shoulder strap. The pictures below show how to properly run the antenna cable in the carrying case.



Note that a small opening on the side allows recharging the battery pack without having to remove the receiver from the case.

Figure 1-6 Carrying Case

1.4.1.2 Using the Softhat

When using the softhat or the antenna mounting plate, the magnet adaptor should be removed from the Precision Antenna. Simply locate the four screws at the bottom of the antenna and use a “Philips” type screwdriver to remove the magnet adaptor.



Figure 1-7 Removing the Magnet Adaptor

Insert the Precision Antenna in the pouch on top of the softhat, close the flap while allowing the antenna SMA connector to pass through the hole and attach the cable by tightening the SMA connector all the way.



Figure 1-8 Using the Softhat

1.4.1.3 Rangepole Setup

This section shows how to mount the iSXBlue/SXBlue II on a rangepole using the carrying case and the L-shaped bracket.



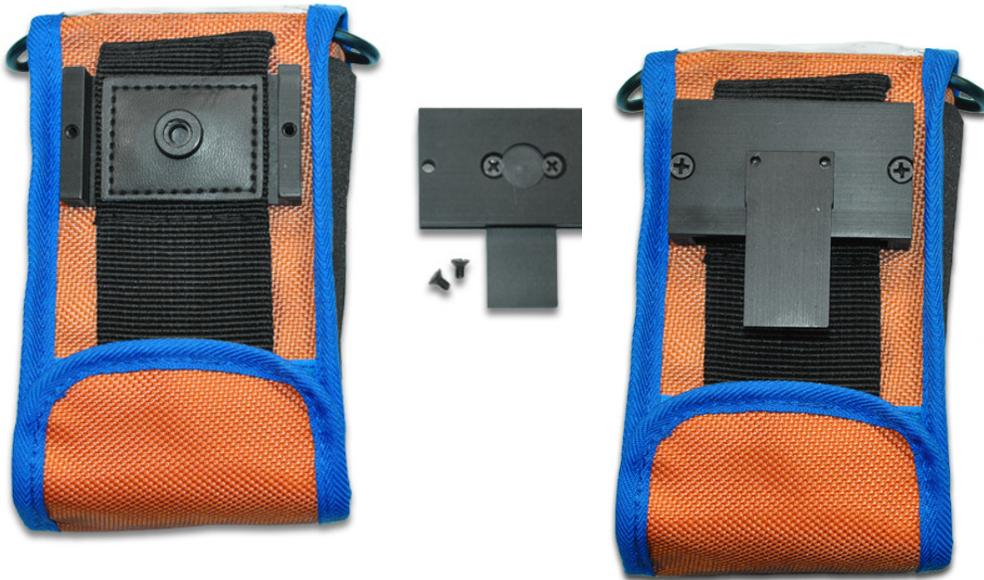


Figure 1-10 Using the L-Shaped Bracket

Separate the two parts of the L-Shaped Bracket by removing the two outer screws in the back.

Slide the “U” shaped part of the bracket through the belt-loop of the nylon carrying case.

Place the cover back (with the two inner screws facing inside) and tighten the two outer screws.





Figure 1-11 Mounting on a Rangepole

Attach the Pole clamp on the rangepole and simply slide the iSXBlue/SXBlue II receiver's L-Shaped bracket into the Pole Clamp slot.

The Pole clamp supplied with the iSXBlue/SXBlue II packages is manufactured by Seco and provides with a mechanism to accommodate a holding bracket for PDA or computer. Geneq supplies a mounting bracket for the SXPAD receiver (shown in the picture above).

The pole clamp has the following description and part number at Seco: “*Pole Bracket Assy, 1-1/4, w/”X” Slot*” and part number is: 5198-059.

1.4.3 Antenna Phase Center

The diagrams below show the phase centers for the various types of antennae supplied with the iSXBlue/SXBlue II Series. If only one phase center measurement is required by the RTK or post-processing software, the L1 phase center must be used. The mounting plate height should also be added to rangepole height. Measurements are in mm (inches).

1.4.3.1 GNSS Precision Antenna (all models)

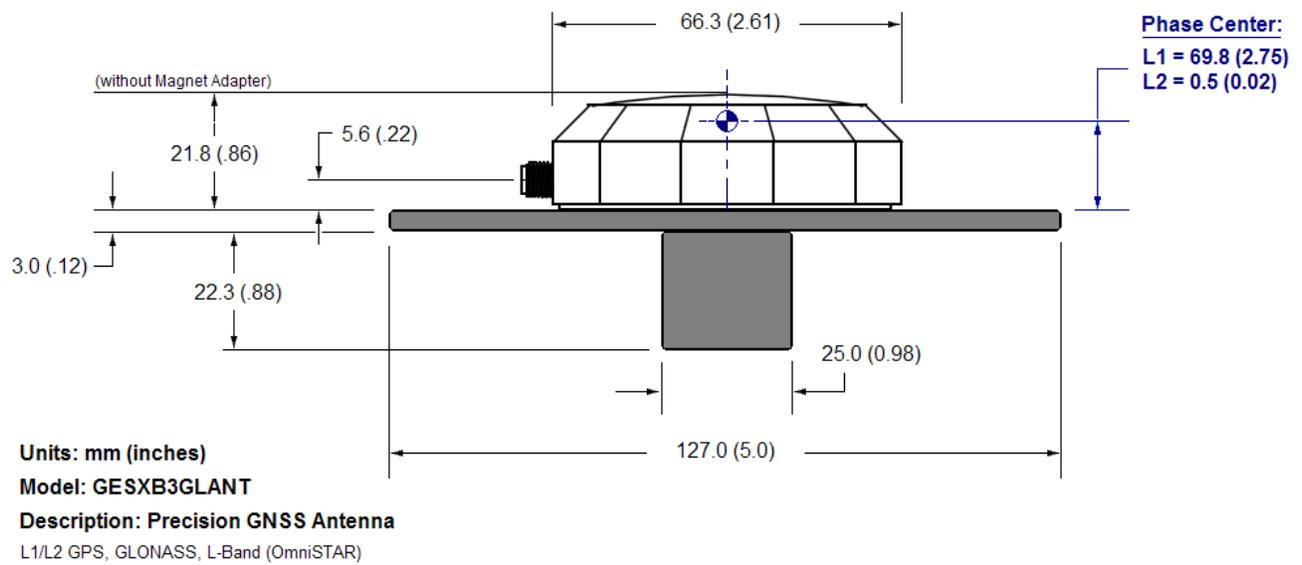


Figure 1-14 Phase Center – Precision GNSS Antenna (GESXB3GLANT)

1.4.4 Definition of the LED Indicators

The iSXBlue/SXBlue II features diagnostic LEDs that provide a quick indication of the receiver’s status. These LEDs are visible on the front panel display and provide the following information:

Table 1-5 LED Indicators Definitions

LED	Color	Function
	Red	Power – when the iSXBlue/SXBlue II GNSS is powered, this LED will illuminate. When battery is low, the Power indicator will start blinking 20 minutes prior to auto shut-down.
	Green	GPS Lock – once the iSXBlue/SXBlue III GNSS achieves a solid GPS lock and computing a valid position, this LED will remain illuminated. If this LED continues to blink, it could be an indication of a receiver hardware failure.
	Orange	DGPS Position – this LED will illuminate when the receiver has achieved a differential position and the pseudorange residuals are below that set with the \$JLIMIT command and the computed solution is a 3D fix. The default value is a pseudorange residual of better than 10.0 meters. If the residual value is worse than the current threshold, the orange DGPS LED will blink indicating that differential mode has been attained but that the residual has not yet met the threshold. The same happens when the PDOP exceeds the 10.5 factory default threshold and switches to 2D mode (this is set with \$JALT,sometimes,10.5). For DGPS operation, the LED will blink to an amount of time equivalent to the \$JAGE value (default is 3600 seconds) if the source of differential correction (ex. SBAS) is lost. The Coast technology will maintain submeter accuracy for 30-40 minutes depending on ionospheric conditions. For RTK operation under the MFA application, it will remain solid for 1 minute after the loss of RTK signal and blink for an extra 2 minutes indicating a float solution; after a total of 3 minutes the receiver will switch to the next best available differential correction source (ex. SBAS if available).
	Yellow	Differential Lock – this indicator will illuminate continuously when the iSXblue/SXBlue III GNSS has achieved a solid SBAS or OmniSTAR lock (depending on model) with better than a 150 bit error rate (BER) or when it is successfully receiving externally input RTCM/RTK corrections. For example, if the SBAS BER is higher than 150 but the receiver is still locked, this LED will blink, showing that lock is marginal.
	Blue	Bluetooth – this LED will illuminate when there is a Bluetooth connection between the iSXBlue/SXBlue II GNSS and a Bluetooth compatible device and blinking, depending when there is no Bluetooth connection.

Note: When the iSXBlue/SXBlue II GNSS acquires a GPS lock, the green GPS lock LED will illuminate. Similarly, the yellow differential LED (DIFF) will illuminate when differential corrections are being received successfully. The orange DGPS LED will illuminate when the receiver has acquired a GPS lock, differential lock, and has applied corrections within the position solution. The following image displays the front panel layout of the iSXBlue/SXBlue II receiver, including the location and labelling of each LED. For more information on LED operation and troubleshooting, refer to Chapter 7.



Figure 1-16 iSXBlue/SXBlue II GNSS Front Panel

1.4.5 GIS Field Data Collection and Datum Considerations

For optimal performance and results of field data collection, proper configuration of the field software and some common GPS guidelines are essential when using the iSXBlue/SXBlue II GNSS. This section only lists some important points to be aware of before going to the field but Chapter 3, Advanced Operations, will cover the required receiver configurations in detail.

1.4.5.1 Generic Field Data Collection Software Configuration

- The software that will be used for collecting GPS data should accept **standard NMEA messages**. As mentioned in section 1.3.1, the iSXBlue/SXBlue II receivers output by default six NMEA sentences: GGA, GSA, GST, GSV, VTG and ZDA all at 1Hz (once every second) on the Bluetooth and USB ports. Refer to chapters 3 and 4 for more information on the NMEA messages format.
- To communicate with the iSXBlue II via its Serial or USB port, a **baud rate of 57600 and for SXBlue II GNSS 19200** must be set in the communicating software. To set the baud rate to higher values on these two ports, refer to Chapter 5 for sending commands to the iSXBlue/SXBlue II GNSS.
- The coordinates output by the iSXBlue/SXBlue II follow the differential correction source datum. You should make sure that your data collection software is up-to-date, supports and applies the proper transforms to GPS data it receives to match your existing map data.
 - When not using differential correction, the output coordinates from the iSXBlue/SXBlue II are in the **current GPS WGS84 (G1674) datum** (note that there have been many evolutions of the WGS84 datum over the years and the current revision differs greatly from the original one).
 - When using SBAS, the coordinates will be in ITRF 2008 current epoch.
 - When using RTK corrections, the datum will depend on the reference frame of the local RTK network, or if using a base/rover configuration, the output coordinates will follow the same datum of the base station coordinates.
- **Masks and filters** are very useful features of field data collection software and prevent recording of poor GPS data. HDOP or PDOP limits should be set to proper values to suit the application (accuracy vs. productivity). A “3D only” mode is useful for optimal accuracy but an “Allow 2D Mode” can be very convenient in some forestry applications. If a “DGPS Only” or an “RTK Only” mode is available, we strongly suggest that it be used. Also for RTK operations a mask on the RMS value (found in the standard GST NMEA sentence) offers great benefits.

1.4.5.2 General Guidelines for Submeter GIS Field Data Collection

- **Proper antenna location** is critical for sub-meter positioning. The best location for a GPS antenna is above the head with no obstruction of the sky. A soft hat for the precision antenna is supplied with the iSXBlue/SXBlue II standard packages. In the case where the use of a security hardhat is a must, the antenna can be mounted inside or outside the hat with Velcro type material. For applications requiring a survey or backpack range pole, refer to the previous subsections for mounting the Precision Antennae and the receiver on a range pole. When less accuracy is needed, the antenna can be shoulder-mounted (ex. on a cruising vest for some forestry work).
- When the iSXBlue/SXBlue II is first powered in a data collection session, it is preferable to allow it to **track GPS and SBAS satellites for a minimum of 5 minutes** (ideally 10 minutes) before recording any data. Here are a few reasons for doing this:

- A GPS receiver, with a freshly downloaded GPS almanac, will track better under obstructed conditions like in forestry applications
- It can take up to 5 minutes for a GPS receiver to download a complete Ionospheric Grid from an SBAS satellite. A special feature of the SXBlue II Series is its ability to extrapolate the downloaded grid (see chapter 2)
- With the GNSS models, if using a source of differential correction that does contain GLONASS correctors, the **G-Dif** feature of the receiver will internally generate correctors for and use all GLONASS satellites in view. This unique feature requires 3 to 5 minutes of tracking constant GPS differential corrections signal.
- For forestry applications, if SBAS visibility is marginal, it is preferable to activate the receiver outside of forest canopy condition, let the receiver track the SBAS signal for at least 5 minutes, then the data collection can start
- It takes about 2 minutes of GPS tracking for carrier phase smoothing to be effective
- If doing submeter work, it is preferable to let the receiver settle (for about 15 to 30 seconds) after a loss of position fix, prior to resume data collection.

1.4.6 Available Software and Utilities

This section gives a brief overview of the various software and utilities available for the iSXBlue/SXBlue II receiver family. Throughout this manual, various menus of some of the utilities are presented to help configure and monitor the receivers for specific applications.

All software and utilities are free (with the exception of the SXBlue Server and the Geneq EZSurv post-processing software) and can be downloaded from the www.sxbluegps.com web site. The SXBlue Server features a trial mode with full functionality but with a limitation of one hour per execution. Please contact your SXBlue representative for more information on how to purchase these products.

1.4.6.1 SXBlue Config



SXBlue Config is a **free utility** to configure and monitor the SXBlue receivers. It also allows logging NMEA messages and raw data. Available for Windows 2000/XP/7 (32-bit and 64-bit) and for Windows Mobile 6.x.

1.4.6.2 SXBlue RTN



When your field software does not feature a built-in NTrip and/or DIP client, SXBlue RTN is a **free utility** that allows the SXBlue receivers to use RTK/DGPS Internet corrections from a network. It uses only one communication port with the SXBlue GPS to both send the corrections and receive the NMEA messages. A virtual COM port is created on your computer to allow your software to receive RTK corrected positions. Available for Windows 2000/XP/7 (32-bit and 64-bit) and for Windows Mobile 6.x.

1.4.6.4 SXBlue Server



SXBlue Server is a TCP Direct IP server with NTrip emulation to set your base station on the Internet. Besides being used as a stand-alone server, it is capable of linking to an NTrip Caster as a mountpoint. It also features a mirror mode to allow a base station to be carried in the field. Available for Windows XP/7, 32-bit and 64-bit.

1.4.6.5 SXBlue Mirror



SXBlue Mirror is a **free utility** that allows an SXBlue base station to be installed in the field and use the Mirror mode of the SXBlue Server to allow a DIP connection from an SXBlue rover. As there are many free applications available on the Internet for Windows, this utility was only designed to support Windows Mobile 6.x..

1.4.6.6 RINEX Converter



RINEX Converter is a **free utility** to convert SXBlue GPS receivers' raw binary data to standard RINEX format. Data can be collected with the SXBlue Config software or any other software capable of recording binary files. Available for Windows 2000/XP/7 (32-bit and 64-bit) and for Windows Mobile 6.x.

1.4.6.7 Geneq EZSurv



The Geneq EZSurv is the SXBlue version of Effigis' post-processing software. This software can be installed on more than one computer but only processes SXBlue rovers for which the serial number has been registered. Many upgradeable levels are available: L1 Lite, L1 GPS, L1 GNSS, L1/L2 GPS, L1/L2 GNSS. The software processes automatically multiple baselines, with automatic search and download of Internet base stations and also supports PPP (Precise Point Positioning).

1.4.6.8 Geneq iSXBlue View on iOS devices



The Geneq iSXBlue View app. is a free utility to display the data from the iSXBlue device. Show comparison of GIS data with internal and external GPS and possibility to send configuration command through the terminal. The application require iOS 5.1.1 or later. It is compatible with iPhone, iPad, and iPod touch. This app is optimized for iPhone 5 for fully operation.

1.4.6.9 Bluetooth GPS Utility on Android devices



The Bluetooth GPS app is a free utility to display the data from the iSXBlue/SXBlue II GNSS devices. It Connect to an external Bluetooth receiver using mock provider that's allows other apps to work with the device. Here are others similar apps such as Bluetooth GPS provider and Bluetooth GPS output.

2. Features and Performance

This chapter provides an introduction to some of the iSXBlue/SXBlue II Series high-level features. The remaining chapters provide more detailed information on the workings of the product.

As mentioned in the previous chapter, if you are new to GPS, SBAS, DGPS, RTK corrections, we recommend that you consult Appendix C for further information on these services and technologies.

When powered for the first time, the iSXBlue/SXBlue II will perform a ‘cold start’, which involves acquiring the available GPS/GNSS satellites in view and the default differential service.

If you choose to use an external source of RTCM SC-104 correction data, you will need to ensure that the external source supports an eight data bit, no parity, and one stop bit configuration (8-N-1) and a baud rate between 4800 and 230400 baud.

This chapter describes the various modes of operation and features of your iSXblue/SXBlue II receiver.

2.1 GPS

The following sections describe the general operation of the iSXBlue/SXBlue II receiver running the MFA (Multi-Function Application firmware).

2.1.1 Satellite Tracking

The iSXBlue/SXBlue II automatically searches for GPS satellites, acquires the signal, and manages the associated navigation information required for positioning and tracking. This is a hands-free mode of operation. Satellite acquisition quality is described as a signal to noise ratio (SNR). A higher SNR is indicative of better quality signal reception. For the GNSS models, GLONASS satellites are tracked, but used only in the solution when either GPS-only (see G-DIF and Suretrack features in Section 2.5 below) or GNSS differential correction is available. The receiver can be forced to use GLONASS in non-differential mode by setting the differential input to none: \$JDIF, NONE

Note – The GPS engine is always operating, regardless of the DGPS mode of operation.

2.1.2 Positioning Accuracy

The iSXBlue/SXBlue II GNSS is a sub-meter (horizontally), 95% accurate product under ideal conditions (minimum error) when using code-phase, submeter when using RTK, decimeter when using OmniSTAR HP and G2 services and sub-centimeter when used in post-processing.

Keeping in mind that this horizontal performance specification is a real world but ideal scenario test, obstruction of satellites, multipath signals from reflective objects, and operating with poor corrections will detract from the receiver’s ability to provide accurate reliable positions. Submeter differential performance can also be compromised if the iSXBlue/SXBlue II GNSS is using SBAS in a region without sufficient ionospheric map coverage. If external corrections are used, the baseline separation between the remote and base station antennas can affect performance.

Since the iSXBlue/SXBlue II GNSS will be used sometimes in harsh conditions, blockage of the line of sight to SBAS satellites is often inevitable. The COAST technology provides solace from obstruction of

SBAS or other code-phase differential correction services for up to about 40 minutes, depending on the amount of tolerable performance drift. Section 2.5 provides with a description of the Coast technology.

The estimated positioning precision is accessible through the use of NMEA 0183 command responses as described in Chapter 4 (The GST NMEA data message). As the receiver is not able to determine accuracy with respect to a known location in real time (this is traditionally performed in post-mission analysis), the precision numbers are relative in nature and are approximates.

2.1.3 Update Rates

By default, the iSXBlue/SXBlue II GNSS is supplied with a 1Hz update rate. A higher 10Hz or 20Hz update rate option can be purchased via your dealer and a code will be used to unlock the feature. Carrier phase output is standard on all models of the iSXBlue/SXBlue II Series.

The update rate of each NMEA and binary message of the iSXBlue/SXBlue II GNSS can be set independently with a maximum that is dependent upon the message type. Some messages have a 1 Hz maximum, for example, while others are up to 20 Hz.

Higher update rates are valuable for applications where higher speeds are present (such as aviation, UAVs or racing cars) or more frequent updates are required for manual navigational tasks, such as Agricultural Guidance.

2.2 SBAS

The following sections describe the general operation and performance monitoring of the SBAS demodulator within the iSXBlue/SXBlue II GNSS receiver. See Appendix C for more information on SBAS currently available in the world (at time of print).

2.2.1 Automatic Tracking and Ranging

The SBAS demodulator featured within the iSXBlue/SXBlue II GNSS will automatically scan and track the SBAS satellite signals. At time of print, SBAS signals available are WAAS (USA and covering Central and North America), EGNOS (Europe), MSAS (Japan) and GAGAN (India). This automatic tracking allows the user to focus on other aspects of their application rather than ensuring the receiver is tracking SBAS correctly.

The SBAS demodulator features three-channel tracking that provides an enhanced ability to maintain acquisition on a SBAS satellite in regions where more than one satellite is in view. This redundant tracking approach will result in more consistent acquisition of a signal when in an area where signal blockage of either satellite is possible.

Furthermore, the iSXBlue/SXBlue II GNSS is set by default with the SBAS ranging feature activated. This feature uses the SBAS satellites in the position computation. In other words, the geosynchronous SBAS satellites, besides providing with the differential correction and when broadcasting ranging information, are also used as “extra” GPS satellites. As an example, WAAS satellites provide with ranging information whereas EGNOS’ do not.

2.2.2 SBAS Performance

The performance of the SBAS receiver is described in terms of a differential LED. SBAS requires a line of sight to the SBAS satellites in order to acquire the signal.

The BER number indicates the number of unsuccessfully decoded symbols in a moving window of 2048 symbols. Due to the use of forward error correction algorithms, one symbol is composed of two bits. The BER value for both SBAS receiver channels is available in the RD1 NMEA data message described in detail in chapter 4.

A lower BER indicates that data is being successfully decoded with fewer errors, providing more consistent throughput. The bit error rate has a default, no-lock value of 500 or more. As the receiver begins to successfully acquire the signal, it will result in a lower bit error rate. For best operation, this value should be less than 150 and ideally less than 20.

Space-Based Augmentation Systems broadcast an ionospheric map on a periodic basis that may take up to 5 minutes to receive upon startup. The iSXBlue/SXBlue II GNSS uses the GPS broadcast ionospheric model until it has downloaded the SBAS map, which can result in lower performance as compared to when the map has been downloaded. This will be the case for any GPS product supporting SBAS services. The G-Dif feature is also dependent on the SBAS ionospheric map and the GLONASS satellites will not be included in the solution before the SBAS map is downloaded.

Caution – When the map has been downloaded, you may observe a position jump due to the potential difference between the GPS ionospheric model and the ionospheric SBAS map. To minimize the impact of this issue on your use of the iSXBlue/SXBlue II GNSS, you may wish to wait up to five minutes before using the receiver or issue the \$JQUERY,GUIDE<CR><LF> message to ‘ask’ the iSXBlue/SXBlue II GNSS if it feels performance will be sufficient for operation. G-Dif will also coincide with the positive response of the above command.

To improve upon the ionospheric map provided by SBAS, the receiver extrapolates information from the broadcast ionospheric coverage map, extending its effective coverage. This allows the receiver to be used successfully in regions that competitive products may not. Please note that the process of estimating ionospheric corrections beyond the WAAS broadcast map would not be as good as having an extended SBAS map in the first place. This difference may lead to minor accuracy degradation.

Figure 2-1 shows sample grids for WAAS, EGNOS, GAGAN and MSAS systems. The inner areas are actual broadcast grids by the satellites and the outer areas are the extrapolation the iSXBlue/SXBlue II GNSS achieves. Note that the SBAS grid maps shown are typical as their extents constantly undergo slight changes due to ionospheric activities and time of the day. But overall, the coverage map fairly consistent from one day to another.

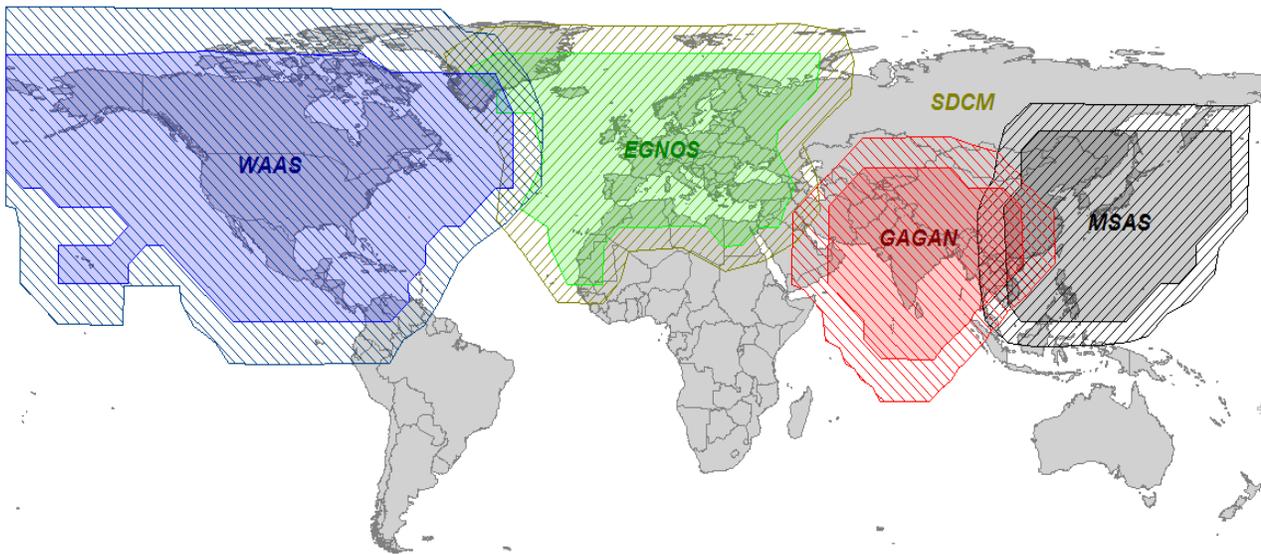


Figure 2-1 Sample Extrapolated Ionospheric Grids

2.3 GLONASS

The following section describe the benefits of navigation satellites system GLONASS within the iSXBlue/SXBlue II GNSS receiver.

2.3.1 Satellite tracking

The iSXBlue/SXBlue II automatically searches for GPS and GNSS satellites when GLONASS is included. This system makes it especially effective for usage in high latitudes whether its north or south. Most of these area have issue getting a GPS signal. Any receiver using GLONASS could at least track a minimum of 15 and a maximum of 24 satellites depending where you are located, the canopy, the ionospheric activities, the type of antenna, etc.

2.3.2 GLONASS Performance

Since it has being launched on 1982, three decade of satellite design has gone through improvements for performance with the accuracy, At this moment, the GLONASS system offer a submeter accuracy approximately from 30 to 60 cm. The next decade a new generation name as GLONASS-K2 will come up to 1 cm accuracy. Previously, SBAS system did not support GLONASS. However, new technology employed by the iSXBlue/SXBlue II GNSS allows it to use both GPS and GLONASS satellites for high-performance. The GLONASS signal is distribute to any place on Earth. Any one time can be received at least four satellite navigation information for the user's navigation and positioning to provide protection. GLONASS satellites are each equipped with satellite stability of cesium atomic clock, and receives the ground control station and control the navigation information and instructions Its ability to perform a GLONASS correction within 2 minutes make user not to wait for the high accuracy data. This is specially a benefit for GIS worker on the field.

Note – In addition, with the different GPS, GLONASS does not reduce the accuracy of any artificial measures.

2.4 COAST™, G-Dif™ and SureTrack™ Technologies

The iSXBlue/SXBlue II is packed with features that make it unique on the market. Coast and G-Dif technologies affect positively the submeter performance of the receiver, whereas SureTrack is related to the RTK performance.

- The iSXBlue/SXBlue II receiver incorporates the **COAST™** technology that allows it to operate with old correction data for up to 35 to 40 minutes or more without significant accuracy degradation. The feature's performance is attributed to sophisticated algorithms that are able to anticipate how errors change during a period of correction loss. Traditional receiver technology would experience an increasing degradation with increasing age of corrections, resulting in less than adequate performance over a shorter period of time. COAST technology provides more consistent positioning during periods when signal loss occurs, thus bridging the gap to when the signal is reacquired. This means that the iSXBlue/SXBlue II is more tolerant than competing products to loss of SBAS or externally input RTCM SC-104 corrections.
- The **G-Dif** feature allows the iSXBlue/SXBlue II (with GLONASS) to use GLONASS with GPS-only corrections. For example, all SBAS (besides, eventually, the Russian SDCM) only broadcast corrections for GPS satellites and contain no GLONASS correctors. When tracking an SBAS signal, the iSXBlue/SXBlue II GNSS will use its DGPS solution along with other parameters to generate its own GLONASS corrections. This unique feature of using all satellites in view, provides with the advantages of all the extra GLONASS observations required in tough and challenging conditions.
- The **SureTrack** technology is the same as the G-Dif but for carrier phase RTK corrections (as opposed to code-phase). SureTrack feature, as for the G-Dif only applies to the GNSS models. With SureTrack technology the RTK rover makes use of every satellite it is tracking, even satellites not tracked at the base. This results in fewer RTK dropouts in congested environments, faster reacquisitions and more robust solutions due to better cycle slip detection. SureTrack also removes concerns with using various manufacturers GNSS base. Even if the GNSS base delivers L1/L2 GPS, SureTrack with GLONASS at the rover will deliver the RTK performance

2.5 Real-Time Differential Options

Real-time differential options can be added to your iSXblue/SXBlue II receiver. These options are made available depending on the installed firmware and the subscription/activation. Up to two firmware applications can be installed on the receiver and the user can switch from one to the other to select the proper differential mode. See Chapter 3 for more information on firmware architecture and activating options (RTK Base, RTK Rover, Auto-Dif, GLONASS and 20Hz).

There are three (3) firmware applications available for the SXBlue II family and each of them allows various differential modes:

- Multi-Function Application, called the **MFA**: SBAS, DGPS input (RTCM 2.x), RTK Rover (inputs RTCM 3.x, CMR, CMR+), RTK Base (outputs RTCM 3.x, CMR) and OmniSTAR L-Band (supports VBS, XP, HP and G2).
- SBAS/RTK Base Application (**SBASRTKB**): SBAS, DGPS input (RTCM 2.x), RTK Base (outputs RTCM 3.x, CMR) and OmniSTAR L-Band (supports VBS, XP, HP and G2).

- **Auto-Dif** (in autonomous mode or RTCM 2.x Base station mode)

(The SBASRTKB and RTK applications are available only upon request)

2.5.1 The “MFA” Application

The SXBlue II family comes standard with the Multi-Function Application (MFA) installed which includes all the features of both the SBASRTKB and RTK applications. The iSXBlue/SXBlue II GNSS come standard with the RTK Base and RTK Rover options pre-activated.

Table 2-1 Differential and Global Options

Receiver Model	SBAS	RTK Base	RTK Rover	GLONASS	10Hz	20Hz
iSXBlue II GNSS	●	Optional	Optional	●	Optional	Optional
SXBlue II GNSS	●	Optional	Optional	●	Optional	Optional

2.5.2 Auto-Dif – Autonomous Differential / RTCM Base Station Option

The SXBlue III is designed to operate with the optional Auto-Dif software. Auto-Dif can be used in two modes:

- Auto-Dif Base Station mode: to output standard RTCM 2.x corrections from a stationary location (does not output RTK compatible messages)
- Auto-Dif Autonomous Rover mode: the iSXblue/SXBlue II can perform differential-like submeter accuracy autonomously. When referring to Auto-Dif in the remaining of this manual, this is the mode of operation that will be implied

Auto-Dif Rover is a mode where the iSXblue/SXBlue II can perform with differential-like accuracy for extended periods without the use of a differential service. It models the effects of ionosphere, troposphere, and timing errors for extended periods by computing its own set of pseudo-corrections.

Auto-Dif may be used anywhere geographically and is especially useful where SBAS networks have not yet been installed, such as South America, Africa, Australia, and part of Asia. Since Auto-Dif is an option, it will either come pre-installed inside your iSXBlue/SXBlue II receiver, or you may order the option at a later time. It can be easily installed in the field using a PC computer and some simple software if not pre-installed.

Positioning with Auto-Dif is relatively jump-free, provided that the iSXBlue/SXBlue II maintains lock on at least four satellites at one time. The accuracy of positioning will have a slow drift that limits the use of Auto-Dif for approximately 35 to 45 minutes; however, it depends on how tolerable your application is to drift, as Auto-Dif can be used for longer periods.

You should test this mode of operation and determine if it's suitable for your application and for how long you're comfortable with its use. As accuracy will slowly drift, you need to determine at what point you would like to recalibrate Auto-Dif in order to maintain a certain level of accuracy.

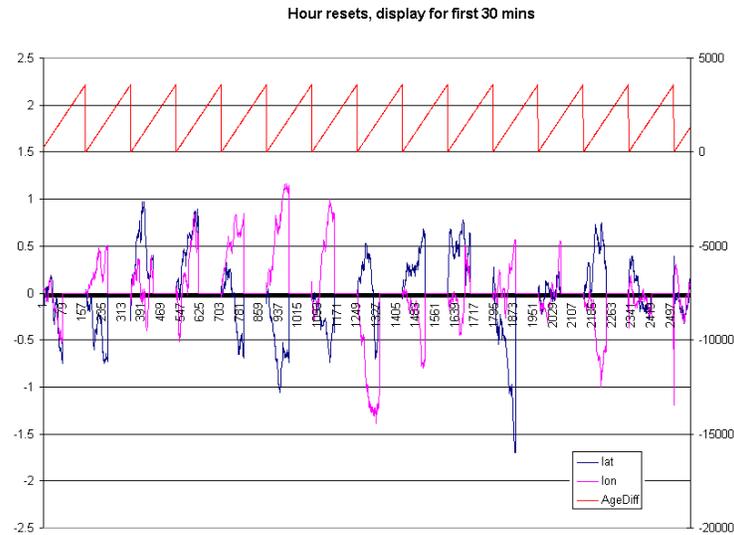


Figure 2-2 Auto-Dif Error Drift

Figure 2-2 displays the static positioning error of Auto-Dif, while it is allowed to age for 14 consecutive cycles of 30 minutes. The top (red) line indicates the age of the differential corrections. The iSXBlue/SXBlue II computes a new set of corrections using Auto-Dif during the calibration at the beginning of each hour. After the initialization, the age correspondingly increases from zero until the next calibration.

The position excursion from the true position (the lines centered on the zero axis are Northing (blue) and Easting (pink)) with increasing correction age is smooth from position to position, but you can see that there is a slow drift to the position. The amount of drift will depend on the rate of change of the environmental errors and how these change from the models used inside the Auto-Dif software engine.

It's up to you for how long you would like Auto-Dif to function before performing another calibration. We recommend that you test this operating mode to determine the level of performance that's acceptable to you.

Please contact Geneq for more information on this feature.

2.6 Post Processing

The iSXBlue/SXBlue II receiver is able to output raw measurement data for post processing applications. The raw measurement and ephemeris data are contained in various binary messages documented in chapter 6. Messages must be logged in a binary file (SXBlue Config allows logging of raw binary data). For cm-level post-processing, a survey grade L1/L2 GNSS antenna with ground plane is highly recommended and software that processes the carrier phase like EZSurv should be used.

A RINEX translator is available; however, RINEX has no facility to store station information. Please contact Geneq if you wish to use this utility. Off-the-shelf software is available for collecting and post-processing iSXBlue/SXBlue II raw data.

Various types of post-processing can be performed: Static, semi-kinematic, kinematic, code-phase, phase, using L1 only or L1/L2, GPS only or GPS/GLONASS, with a local base station or using PPP. Refer to the post-processing software documentation for recommended occupation times to achieve the highest possible performance.

2.7 Evaluating the iSXBlue/SXBlue GNSS II Performance

The iSXBlue/SXBlue II receiver performance has been evaluated with the objective of determining best-case performance in a real-world environment. Static testing has shown that the iSXBlue/SXBlue II achieves a performance better than 60cm 95% of the time when using SBAS signal (WAAS, EGNOS, GAGAN or MSAS)

The qualifier of 95% is a statistical probability. Often you may see manufacturers using a probability of ‘rms’ or standard deviation. Performance measures with these probabilities are not directly comparable to a 95% measure since they are a lower probability (less than 70% probability). This means that less often, a product would position within a radius of the prescribed amount.

The following table summarizes the common horizontal statistical probabilities.

Table 2-2 Horizontal Accuracy Probability Statistics

Accuracy Measure	Probability (%)
Rms (root mean square)	63 to 68
CEP (circular error probability)	50
2drms (twice the distance root mean square)	95 to 98
R95 (95% radius)	95

It is possible to convert from one statistic to another using the following table. Using the value where the ‘From’ row meets the ‘To’ column, multiply the accuracy by this conversion value.

Table 2-3 Horizontal Accuracy Statistic Conversions

		To			
		CEP	rms	R95	2drms
From	CEP	1	1.2	2.1	2.4
	rms	0.83	1	1.7	2.0
	R95	0.48	0.59	1	1.2
	2drms	0.42	0.5	0.83	1

For example, if Product A after test results in an accuracy of 90 cm 95% (R95) and you want to compare this to Product B that has a sub-meter horizontal rms specification, select the value from where the ‘R95’ row and the ‘rms’ column intersect (to convert to rms). You will see that this conversion value is 0.59. Multiply the 90 cm accuracy by this conversion factor and the result will be 53 cm rms. If you now compare this to Product B’s specification of sub-meter rms, you can see the Product A would offer better performance. To properly evaluate one receiver against another statically, they should be using identical correction input (from an external source) and also share the same antenna using a power splitter (equipped with appropriate DC-blocking of the receivers and a bias-T to externally power the antenna). With this type of setup, the errors in the system are identical with the exception of receiver noise.

Although this is a comparison of the GPS performance quality of a receiver, it excludes other performance merits of a GPS engine. The dynamic ability of a receiver should be compared in a similar way with the test subjects sharing the same antenna. Unless a receiver is moving, its software filters are not stressed in a similar manner to the final product application. When testing dynamically, a much more accurate reference would need to be used, such as an RTK system so that a ‘truth’ position per epoch is available.

Further, there are other performance merits of a GPS engine, such as its ability to maintain a lock on GPS and SBAS satellites. In this case, the same GPS antenna should be shared between the receiver test subjects. For the sake of comparing the tracking availability of one receiver to another, no accurate ‘truth’ system is required, unless performance testing is also to be analyzed. Again, an RTK system would be required; however, it’s questionable how its performance will fair with environments where there are numerous obstructions, such as foliage. Other methods of providing a truth reference may need to be provided through observation times on surveyed monuments or traversing well-known routes. Again, be aware that the coordinates output by the iSXBlue/SXBlue II, with no differential correction, are in the current GPS WGS84 (G1674) datum (which follows ITRF 2008, epoch 2005).

The GPS antenna included should be mounted pursuant to the following requirements:

- The iSXBlue/SXBlue II receiver computes a position based upon measurements from each satellite to the location of the GPS antenna’s phase center. Mount the GPS antenna in the location for which you desire a position. When choosing a location to mount the antenna, please ensure that there is an unobstructed hemisphere of sky available to the GPS antenna. This will ensure that GNSS and SBAS satellites are not masked by obstructions, potentially reducing system performance.
- It is important to locate any transmitting antennas away from the GNSS antenna by several feet or more. This will help to ensure that tracking performance of the iSXBlue/SXBlue II is not compromised, giving you the best performance possible.
- Make sure that there is sufficient length of the antenna extension cable available in order to be able to connect it to the iSXBlue/SXBlue II enclosure.

If you require assistance in developing a test setup or procedure for evaluating the iSXBlue/SXBlue II, please contact Geneq.

2.8 Communication

The iSXBlue/SXBlue II features three (3) independent communication ports and any of these can be used to receive data or send configuration commands to the receiver.

2.8.1 Interface

- **NMEA 0183** Message Interface. The iSXBlue/SXBlue II uses an NMEA 0183 protocol for interfacing, which allows you to output standard messages recognized by any off-the-shelf GNSS data collection software. The NMEA interface also allows to easily making configuration changes by sending text-type commands to the receiver. Relevant commands for the configuration changes are presented in the following chapter.
- **Binary** Message Interface. In addition to the NMEA interface, the iSXBlue/SXBlue II also supports a selection of binary message outputs. There is a wider array of information available through the binary messages, plus binary messages are inherently more efficient with data. If your application has a requirement for raw measurement data, for instance, this information is available only in a binary format. Consult Chapter 6 for more information on Binary messages.

2.8.2 Bluetooth, USB and Serial Ports

- **Bluetooth** is a wireless communication technology that enables seamless data connections between a wide ranges of devices through short-range digital two-way radio. The iSXBlue/SXBlue II is equipped with Bluetooth technology and requires another Bluetooth device with which to communicate (a Bluetooth-capable PDA, for example). The Bluetooth wireless module inside the iSXBlue/SXBlue II is a power class 1 device supporting version 2.0 of the Bluetooth standard, and has been certified. As mentioned in the previous chapter, the iSXBlue/SXBlue II does not require pairing (or bonding, or authentication) using passwords (or pass codes, passkeys, etc).
- The **USB** port on the back panel is of Type B and requires a driver to be installed on the computer in order to emulate a serial port. See section 1.3 for USB driver installation.
- There is one **Serial Port** on the iSXBlue/SXBlue II receiver and it is compatible with the RS-232C interface level to communicate with external data loggers, navigation systems, PC computers, PDAs and other devices. This serial port is accessible via the back panel of the iSXBlue/SXBlue II enclosure and has an 'RS-232' label. You can interface most devices to the iSXBlue/SXBlue II directly with the serial cable (supplied with your receiver), accommodating any gender changes necessary, or with the addition of a null modem as necessary.

The following figure and table detail the pin assignment of the DB-9 connector of the serial port (DCE Mode) of the iSXBlue/SXBlue II. The Pulse Per Second output (PPS), Event Marker (EM) and 5Volt Power are available only upon request.

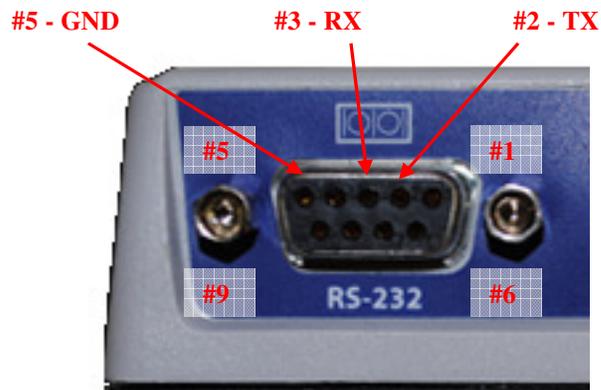


Figure 2-3 RS-232 Connector Pin-out

Table 2-4 Serial Port Pin-out, RS-232C Interface Level

<i>iSxBlue/SxBlue II GNSS</i>		
Pin	Signal	Description
2	TXD	NMEA 0183, binary, and RTCM (output)
3	RXD	NMEA 0183, binary, and RTCM (input)
5	GND	Signal Ground
6*	1PPS*	One Pulse Per Second (Output)
8*	EM*	Event Marker (Input)
9*	PWR*	Power 5VDC @ 100mA (max) (Output)

* PPS, EM and PWR are available upon request at time of purchase

Note - For successful communications, the baud rate of the iSxBlue/SxBlue II serial ports must be set to match that of the devices to which they are connected. Chapter 5 describes the \$JBAUD baud rate change command.

2.8.3 Event Marker, 1 Pulse per Second and 5Vdc Power

The 1PPS, EM and 5Vdc Power are available upon request on the DB-9 connector when ordering the iSxBlue/SxBlue II receiver. These features can also be activated after purchase but you will need to contact your local reseller.

2.8.3.1 One Pulse per Second (1PPS)

The one pulse per second (1 PPS) timing signal is used in applications where devices require time synchronization.

The 1 PPS signal is 3.3V HCMOS normally low with rising edge synchronization. The 1 PPS signal is capable of driving a load impedance which is greater than 10 kΩ in parallel with 10 pF capacitor. The pulse is approximately 1ms long.

2.8.3.2 Event Marker Input (EM)

Depending on your application, you may have the need to force a GPS solution at a particular instance, not synchronized with GPS time. Such an application could be to compute the location of a perspective center of a camera being used for a photogrammetric application, where the aircraft moves with considerable speed and an interpolation between two GPS epochs could be unreliable.

The Event Marker input is active low 3.3V HCMOS with falling edge synchronization. The input impedance and capacitance is higher than 10k Ω and 10pF respectively, with a threshold of lower than 0.7V required to recognize the input.

Upon detecting an Event, the iSXBlue/SXBlue II will output immediately the set of strings it has been configured to output. Also it is worth noting that binary message (Bin1) has a field reserved for the event marker. See chapter 6 for more information.

2.8.3.3 5Volt DC Output (PWR)

Some external sensor might require a 5Vdc power source. An example can be attaching an RS-232 Bluetooth or Wi-Fi dongle to the receiver. The iSXBlue/SXBlue II will supply up to 100mA to power the external device. Care must be taken not to short-circuit this input.

2.9 Environmental Requirements

The equipment supplied with the iSXBlue/SXBlue II system has specific environmental limits that you should ensure are met when storing and using the system.

The iSXBlue/SXBlue II receiver is designed to be stored between -40°C and +85°C. The operating temperature range is -40°C and +85°C. Note that Li-Ion battery performance degrades below -20°C. The iSXBlue/SXBlue II and antenna are designed to operate in an outdoor environment with 100% relative humidity.

3. Advanced Operations

This chapter introduces the general operational features of the iSXBlue/SXBlue II and configuration procedures.

3.1 Communicating with the iSXBlue/SXBlue II Receiver

The iSXBlue/SXBlue II features three communication ports that may be configured independently from each other (Bluetooth, Serial and USB). The ports may be configured for any mixture of NMEA 0183, binary, and RTCM SC-104 data. The usual data output is limited to NMEA data messages since these are industry standard. When sending commands to configure the iSXBlue/SXBlue II, these ports are referred to as:

- Port A (Bluetooth)
- Port B (Serial)
- Port C (USB)

Note - If you require different data types to be output from the iSXBlue/SXBlue simultaneously (such as NMEA and binary or NMEA and RTCM), ensure that the software used for logging and processing of the data has been designed to correctly parse the different data types from the single stream of data. Alternatively, you may also use any two ports to separate the different data types and also set them at different output rates if needed.

3.1.1 NMEA 0183 Interface

NMEA 0183 is a communications standard established by the National Marine Electronics Association (NMEA) and provides data definitions for a variety of navigation and related equipment. Such instruments supported include gyrocompasses, Loran receivers, echo sounders, GPS receivers, and more. NMEA functionality is virtually standard on all GPS equipment available. NMEA has an ASCII character format that allows you to read the data via terminal software on the receiving device (if possible). One second of example NMEA data from the iSXBlue/SXBlue II GNSS follows:

```
$GPGGA,141823.00,4536.79732,N,07333.95861,W,2,09,1.0,49.6,M,-32.4,M,5.4,0313*4E
$GPVTG,151.61,T,,M,0.08,N,0.15,K,D*36
$GPZDA,141823.00,9,7,2004,00,00*63
$GPGSA,M,3,06,08,10,17,18,21,24,26,29,,,,,1.7,1.0,1.3*31
$GPGSV,3,1,11,06,40,234,48,08,18,056,42,10,43,066,45,16,00,319,*7F
$GPGSV,3,2,11,17,43,121,45,18,21,264,45,21,39,304,45,24,10,125,45*7E
$GPGSV,3,3,11,26,69,160,48,27,07,031,39,29,73,109,45,,,,,*45
```

The iSXBlue/SXBlue II supports a variety of standard and proprietary NMEA messages and commands. You may configure a selection of NMEA 0183 data messages on one port at various update rates (each message has a maximum update rate) using proprietary commands to activate them. Since the ports are fully independent you configure a different selection of NMEA 0183 messages with different rates on another other port.

Chapter 5 presents information relating to the NMEA interface of the iSXBlue/SXBlue II series. Appendix D - Resources provides contact information, should you wish to purchase a copy of the NMEA 0183 standard.

3.1.2 Binary Messages

Both binary and NMEA 0183 data messages may be output from the iSXBlue/SXBlue II simultaneously. Binary messages have a proprietary definition and would likely require custom software support if you wish to use them. Binary messages are inherently more efficient than NMEA 0183 and would be used when you require maximum communication efficiency. Use of binary messages for most users is not recommended - the NMEA interface (commands) allows you to control the operation of the iSXBlue/SXBlue II and also receive most types of information regarding status and positioning information.

Note – If you wish to log binary data, please ensure that your logging software has opened the file as a binary file, otherwise you may lose data.

3.1.3 RTCM SC-104 Protocol

RTCM SC-104 is a standard that defines the data structure for differential correction information for a variety of real time differential correction applications. It has been developed by the Radio Technical Commission for Maritime services (RTCM) and has become an industry standard for communication of correction information. RTCM is a binary data protocol and is not readable via a terminal program. It appears as ‘garbage’ data on-screen since it is a binary format and not ASCII text. The following is an example of how the RTCM data appears on-screen:

```
mRMP@PJfeUtNsmMFM{nVtIOTDbA^xGh~kDH`_FdW_yqLRryrDuhcB\@}N`ozbSD@O^}nrGqk
eTlpLLrYpDqAsrLRrQN{zW|uW@H`z]~aGxWYt@I`_FxW_qqLRryrDCikA\@Cj]DE]|E@w_ml
roMNjkKOSmMFM{PWDwW@HVEbA^xGhLJQH`_F`W_aNsmMFM[WVLA\@S}amz@ilIuPqx~_IZhT
CpLLrYpdP@kOsmMFM[kVDHwVGbA^P{WWuNt_SW_yMsmMnqdrhcC\@sE^ZfC@}vJmNGAHJVhT
CqLRryrdviStW@H_GbA^P{wxu[K
```

RTCM has various levels of detail; however the highest level is the message. RTCM defines numerous messages that contain specific information. The iSXBlue/SXBlue II receiver supports more advanced methods of differential positioning, such as real-time kinematic (RTK) that uses different standard RTCM message types. The iSXBlue/SXBlue II uses standard (RTCM2.x and RTCM 3.x) and proprietary (ROX, CMR, CMR+) real time correction messages to achieve cm-level RTK.

In very simple words here are the various version of RTCM SC-104 and their usage:

- RTCM 2.0 - Pseudorange corrections for GPS L1 C/A code only. Usually used for submeter positioning.
- RTCM 2.1 – Added GPS-only L1 carrier phase message to v2.0 for single frequency RTK.
- RTCM 2.2 – Equivalent to 2.0 with the addition of the GLONASS pseudorange corrections.
- RTCM 2.3 – Equivalent to 2.1 with single frequency carrier phase corrections for both GPS and GLONASS.
- RTCM 3.1 – Sends dual-frequency corrections for both GPS and GLONASS for the highest level of performance for RTK work.

Note - RTCM is a local area data standard. This means that when positioning with external correction, performance will degrade as a function of distance from the base station. The additional degradation will depend on the difference in observed orbit and ionospheric errors between the reference station and the remote unit. This error is often seen as a bias in positioning, resulting in a position offset. The scatter of the receiver is likely to remain close to constant. RTK Networks overcome the limitations of relatively short baseline length (distance between rover and base) with sophisticated interpolation techniques.

SBAS (WAAS, EGNOS, MSAS, GAGAN) use a different correction format called RTCA. When using SBAS (and \$JMODE,BASE is set to “NO”, see chapter 5) The RTCM SC-104 data output by the iSXBlue/SXBlue II is converted from the RTCA SC-159 data broadcast by the SBAS networks. Appendix D - Resources contains the contact information should you wish to purchase a copy of the RTCM SC-104 specification.

3.2 Configuring the iSXBlue/SXBlue II Receiver

The iSXBlue/SXBlue II features three bi-directional ports referred to as Bluetooth (Port A), Serial (Port B) and USB (Port C). GPS data messages for all ports are easily configured by sending NMEA commands to the iSXBlue/SXBlue II through either of its communication ports (the output of the Serial Port can be configured through the Bluetooth port for instance and vice versa). The \$JASC NMEA message discussed in detail in Chapter 5 allows you to turn messages on and off as you require as well as setting their output rates.

Although free utilities (like the SXBlue Config) are available to configure iSXBlue/SXBlue II, a terminal emulation software, such as HyperTerminal or TeraTerm, can be used to send commands, query the receiver and view the receiver’s output stream. These commands are described in Chapter 5. The following items are examples of user-configurable features:


- Selecting one of the on-board applications (SBAS, Auto-Dif, LBAND, Local-Dif, RTK, etc)
- Setting the baud rate of the serial RS-232 port or the USB port (Bluetooth baud rate is fixed)
- Choosing which NMEA data messages to output on each of the ports and the update rate of each message
- Setting the maximum differential age cut-off
- Setting the satellite elevation angle cut-off mask

3.2.1 Using HyperTerminal


HyperTerminal is a free terminal emulation utility within the Microsoft Windows XP and earlier versions (HyperTerminal is no longer included in Windows 7 and later installations). It can be launched from “Start/Program/Accessories/Communications/HyperTerminal”.

3.2.1.1 HyperTerminal Setup

When you launch HyperTerminal for the first time, it will prompt for some configuration information.

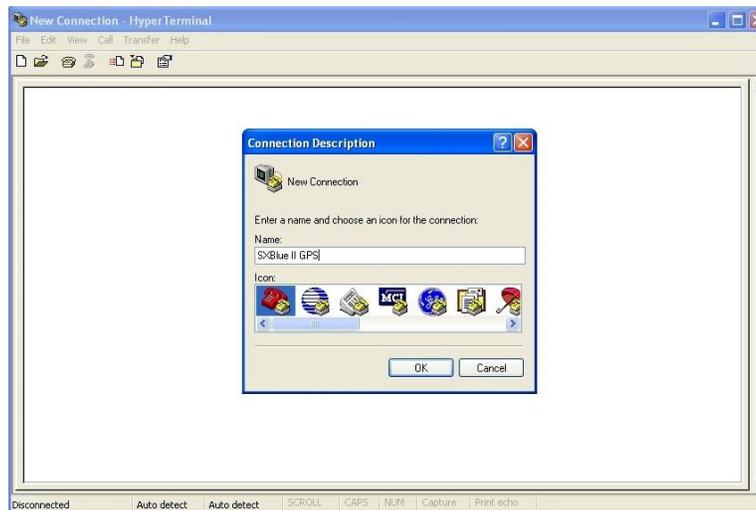


Start by entering a “Name” for the Connection Description.

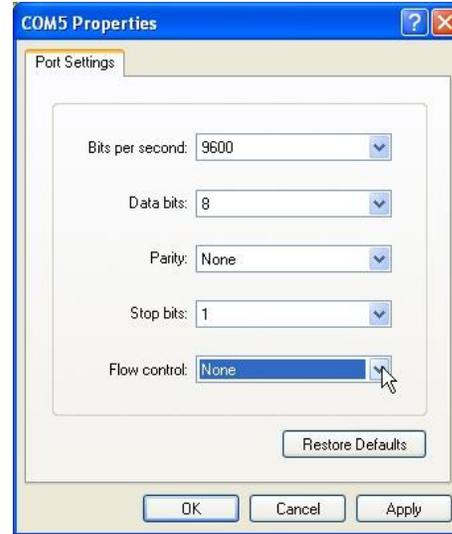

In the “Connect To” window, select the communication port that will be used with the receiver (COM5 in this example). In the next “COMx Properties”, enter the following parameters: **9600** bits per seconds, **8** Data bits, Parity **None**, **1** Stop bit, Flow control **None**.

Click on OK and the communication with the iSXBlue/SXBlue II should start immediately. The flow of data should look like the following screenshot:

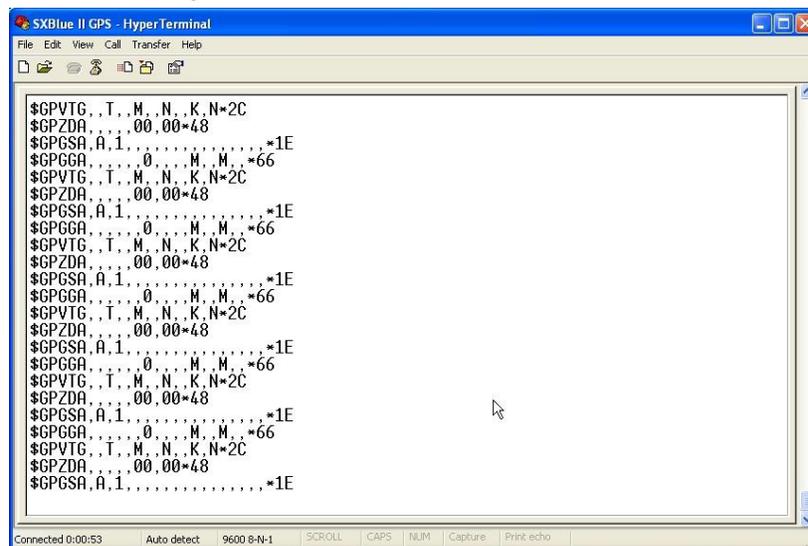


If you do not see any data streaming out the receiver’s port, it might be caused by either one of the following two factors:

- All data messages are turned off. To verify, type a command like \$JI or \$JT and the receiver should send a reply (at this point you might not see the characters that were typed, but should get a reply anyway; local echo of the characters will be turned on below).
- The communication speed of the receiver is not at 9600 bits per seconds. Click on the “Disconnect” icon  to drop the communication. Call the Properties windows  and click on the Configure button to select a different baud rate. Reconnect to the receiver with the “Connect”  icon until you see a flow of data or until the receiver responds to the \$JI or \$JT commands.

The last step is to configure the ASCII protocol. Disconnect the communication with the iSXBlue/SXBlue II and click on the Properties icon .

Select the “Settings” tab and click on the “ASCII Setup...” button. Activate both the “Send line...” and the “Echo typed...” options. The line delay controls the rate at which the lines of a configuration file are sent to the receiver (see following section) and can be set to a suggested value of 10 to 500 milliseconds. Character delay should be set to “0” and for “ASCII Receiving”, only the “Wrap line...” option can be activated. Click on “OK” to close the windows and reconnect to the receiver.

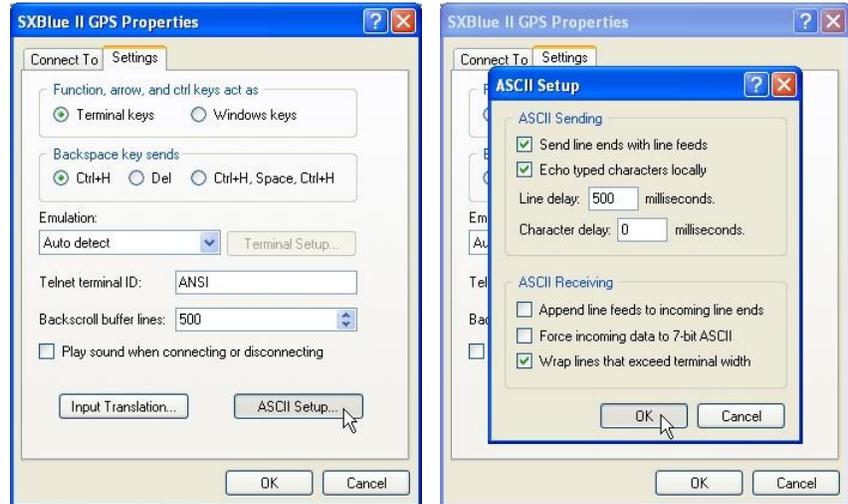

3.2.1.2 Sending Individual Commands

The NMEA interface for the Serial Port and the Bluetooth Port (only) uses ‘This’ and ‘Other’ terminology. When interfacing to a port for turning data messages on or off, on that same port, the port is referred to as ‘This’ port. The opposite port is referred to as the ‘Other’ port. This is valid only between the Bluetooth and Serial Ports. In addition, the port names can be explicitly used at the end of the command (PORTA, PORTB or PORTC) instead of “OTHER” or “THIS”. ‘PORTC’ must be used for the USB port when configuring it from the Serial or the Bluetooth port.

For example, if you are communicating with the iSXBlue/SXBlue II Serial Port and wish to activate the GPGGA message at an update rate of 10 Hz on the Bluetooth Port, either of the following commands would be used.

`$JASC,GPGGA,10,OTHER<CR><LF>`

or

`$JASC,GPGGA,10,PORTA<CR><LF>`

If you wish to turn on the GLL message at 10Hz on the USB port from either the Bluetooth or Serial port, you would issue the following command:

`$JASC,GPGLL,10,PORTC<CR><LF>`

If you wish to turn the GPGGA message on at 5 Hz on the Serial Port while connected to it, you would issue the following command.

`$JASC,GPGGA,5<CR><LF>`

When turning a message on or off on the port on which you are connected, you do not need to indicate ‘This’ nor a port name at the end of the message. See chapter 5 for more information on NMEA messages.

When sending commands to the receiver while messages are already activated, you will not see clearly what you are typing in HyperTerminal. The reply of the receiver will also be mixed with the NMEA messages that are being received. You might open a “log” text file if you want to monitor the responses of the receiver.

Each time that you change the configuration of the iSXBlue/SXBlue II, you may wish to save the new configuration so the receiver does not have to be reconfigured again after a power cycle.

To save the settings, issue the \$JSAVE command and the receiver will record the current configuration to non-volatile memory. The iSXBlue/SXBlue II will let you know when the save process has been completed which can take approximately five seconds (see following sub-section).

Note – When turning messages ON at a specific baud rate, make sure the number of messages sent do not “saturate” or overflow the communication port. The Bluetooth port’s factory default is 230400 baud and should never be changed. The USB and Serial ports can be set up to 460800 baud (most computers might not support more than 115200 baud on their serial ports).

3.2.1.3 Sending Configuration Files to the Receiver

If you have many commands to send to the iSXBlue/SXBlue II or have multiple units to configure, instead of sending them manually to the receiver, you can create a configuration text file using any text editor (Microsoft Notepad preferably).

The file contains each command that would normally be sent, followed by a carriage return (“Enter”) depending on the text editor used. The last command in the file should normally be a \$JSAVE command.

Care must be taken when using the \$JBAUD command to change the baud rate of a port. If you are connected via HyperTerminal to the receiver for example on the Serial Port at 9600 baud, and send or include in the configuration file a \$JBAUD,4800,PORTB, then the receiver will immediately change the baud rate to 4800 and the communication with HyperTerminal will be lost. In this case, “Disconnect” from the receiver, change the COM port properties to match the new 4800 baud, and “Reconnect” to the receiver.


```

$JBAUD,4800,PORTB
$JBAUD,57600,PORTC
$JBIN,95,1,PORTC
$JBIN,96,1,PORTC
$JASC,GPGGA,1,PORTA
$JASC,GPGSV,1,PORTA
$JASC,GPRRE,0,PORTA
$JASC,GPVTG,1,PORTA
$JASC,GPVTG,1,PORTC
$JASC,RTCM,0,PORTA
$JASC,RTCM,0,PORTB
$JASC,RTCM,0,PORTC
$JAGE,60
$JALT,NEVER
$JSMOOTH,LONG
$JDIFF,WAAS
$JMASK,10
$JWAASPRN,AUTO
$JSAVE
  
```

Figure 3-1 Sample Config. File


Factory default and Sample configuration files are provided on the SXBlue Series CD-ROM supplied with the receiver.

To send a configuration file to the iSXBlue/SXBlue II, use the “Transfer / Send Text File...” feature from the HyperTerminal menu and select the text file to be sent. Commands will be sent while messages are being received (the line delay can be modified in the ASCII setup, see section 3.3.1.1). If a \$JSAVE command is included at the end of the file, the last reply will be “Save Complete”.

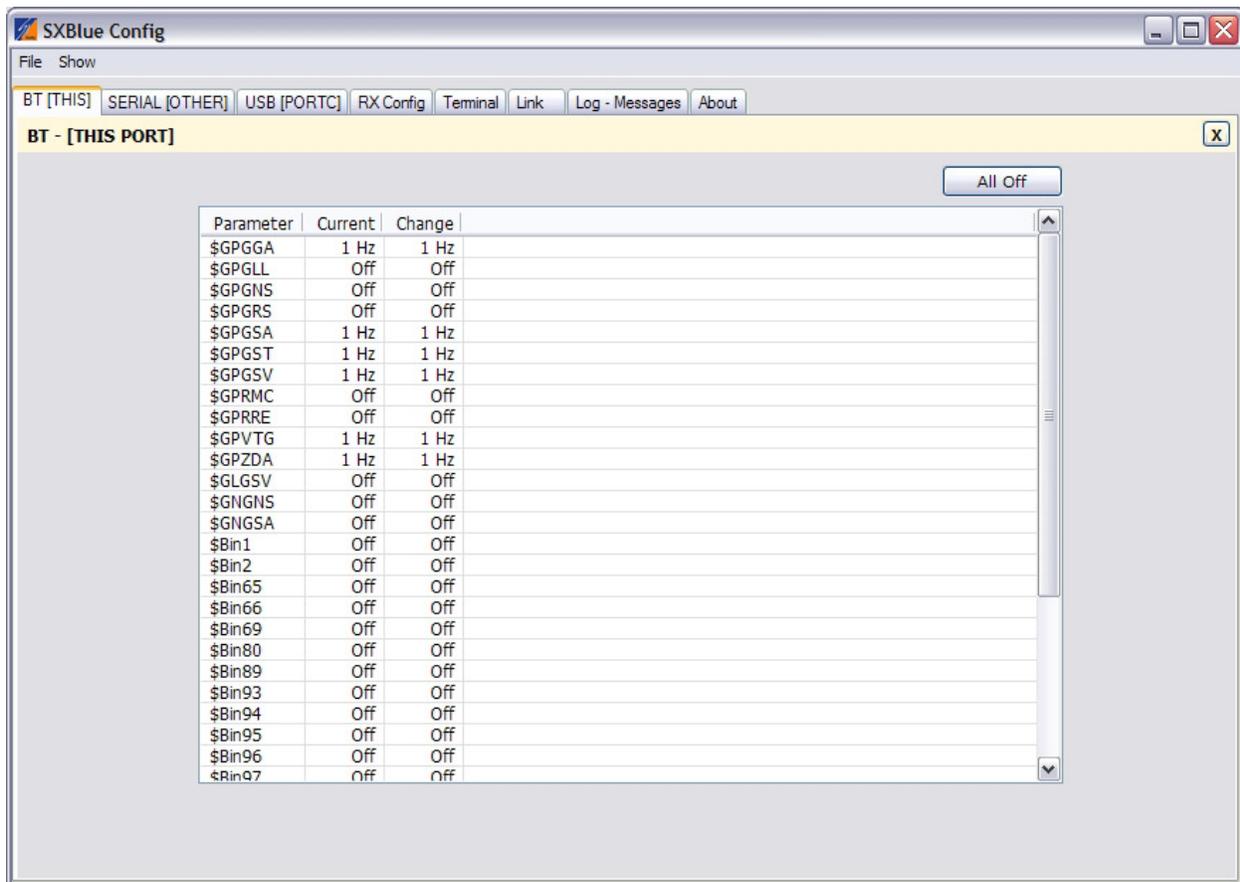

3.2.2.2 Advanced Mode

The Advanced mode offers the same functionality as the Quick Config but adds “Position”, “Satellites” and “SBAS” menus to view detailed positioning and satellite tracking information. When connected to an SXBlue III-L, the L-Band menus are shown to monitor and configure the frequency tuning. “Base” and “RTK” menus are displayed when RTK Base and Rover features are activated on the receiver. The “Precision” and “Plot” menu are tools to monitor the accuracy of the receiver when testing.

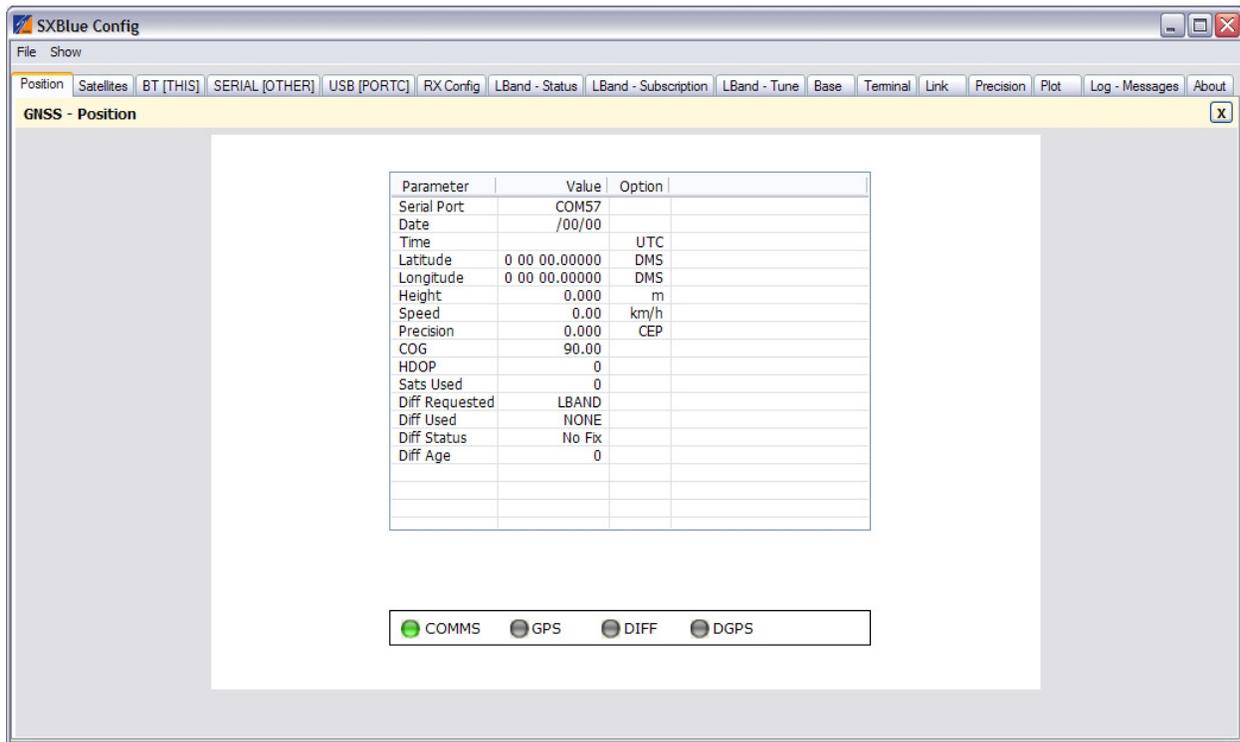

Note that the Advanced mode activates many binary messages on the communication port (that are turned off when exiting the software) and requires a connection at a higher baud rate than 19200. A baud rate of 57600 or 115200 is suggested for proper operation.

3.3 Firmware Architecture

The software that runs the iSXBlue/SXBlue II is often referred to as firmware since it operates at a low level. There are two types of firmware within the iSXBlue/SXBlue III: the on-board Digital Signal Processor (DSP) and the ARM processor. Each of these types of firmware may be upgraded by the end-user through the main serial port as new revisions become available.

The ARM processor of the iSXBlue/SXBlue II engine supports two simultaneous versions of firmware called “Application”. Only one of them is in operation at any given time. These two versions of firmware may have different functionality and user can switch between applications as needed.

3.3.1 Available Applications

The iSXBlue/SXBlue II currently ships with the MFA (Multi-Function Application) installed as Application 1 and Auto-Dif as Application 2. The Auto-Dif requires a subscription code for activation.

The default differential input within Application 1 is set to “WAAS” for the iSXBlue/SXBlue II. The MFA has the particularity of being able to detect and handle all sources of differential correction (SBAS, RTK, OmniSTAR) and to switch to the best source available without user intervention (refer to the “\$JDIFFX,INCLUDE / EXCLUDE” commands). It also supports the Base station mode.

The 10Hz and 20Hz update rate output is not an application, but should rather be considered as an “activated” or “unlocked” feature within the applications (1Hz is default on all iSXBlue/SXBlue II models). RTK Base and Rover subscriptions are optional on the iSXBlue/SXBlue II series. Chapter 5 describes the \$JAPP command used to change between the two iSXBlue/SXBlue II applications. Chapter 5 also describes the \$JDIF and \$JDIFX commands used to setup the differential modes.

1. The default **MFA** application is factory-installed on Application 1 memory slot. This application offers the following features:
 - Uses SBAS (iSXBlue/SXBlue II) as a default differential correction source
 - Automatically detects the source and type of RTCM corrections on any of the communication ports and overrides SBAS default (if RTCM 2 and up) or L-Band default (if RTCM 3)
 - Relays (and translates to RTCM format) the differential correction received from SBAS, L-Band or RTK (RTCM, or proprietary formats) signals to any communication port (if \$JMODE,BASE is set to NO; see chapter 5). This feature can be used to feed another nearby receiver for special applications
 - Outputs RTCM corrections (and/or other proprietary formats) when used in base station mode
2. The **Auto-Dif** application is pre-installed in the Application 2 memory of the iSXBlue/SXBlue II but is not activated and requires a subscription. The Auto-Dif application offers the following features:
 - Autonomous differential (submeter) correction mode (with “calibration”)
 - Standard Base Station mode for RTCM 2.0 differential correction output

The Auto-Dif activation can be purchased at any time from Geneq inc. or through an authorized reseller. The necessary firmware update with installation tool and the subscription code will be provided.

The 20Hz Output Rate option can also be activated and do not require any installation.

3.3.2 Activating an Application or Option

These instructions explain how to activate an application code on an iSXBlue/SXBlue II receiver.

1. Requirements

- You must establish a communication between the iSXBlue/SXBlue II and your computer, and use a generic terminal program such as HyperTerminal or TeraTerm
- The application in which to subscribe must be loaded onto the iSXBlue/SXBlue II receiver. See the installation guide received with the purchased application.
- The application subscription code must be purchased from Geneq or an authorized representative

2. To activate the application on the iSXBlue/SXBlue II:

- a) Using a terminal software

Establish a communication with HyperTerminal, TeraTerm, RealTerm or similar terminal emulation software and type the following command:

```
$JAPP
```

Confirm what applications are loaded onto the receiver and the order in which they appear. One example of a line in the response list is:

```
$>JAPP,MFA,AUTODIFF
```

In that example, MFA is the number one application (or application number 1) and AUTODIFF, which is the Auto-Dif, is the “other” application (or application number 2). Use the following command to switch the applications:

```
$JAPP,O
```

“O” stands for “Other” in the example. This will swap the two applications so that Auto-Dif will be the current (active) application

Type the following command in the MESSAGE window:

```
$JI
```

The first number in the response is the serial number of the receiver. An example of the response is:

```
$>JI,810133,1,3,09031998,01/06/1998,12/31/2018,3.5,31
```

where, the serial number is 810133. Write down that serial number and provide it to Geneq with your request for an Auto-Dif subscription code.


Type the following command in the MESSAGE window after receiving the subscription code from Geneq:

```
$JK,nnnn
```

“nnnn” is the subscription number in the example. The receiver will respond with “subscription accepted.” Auto-Dif is now loaded as the current application and is ready for use.

b) Using SXBlue Config

Alternatively, the same can be accomplished with SXBlue Config. The “About” menu will display the serial number of the receiver along with the activated subscriptions.

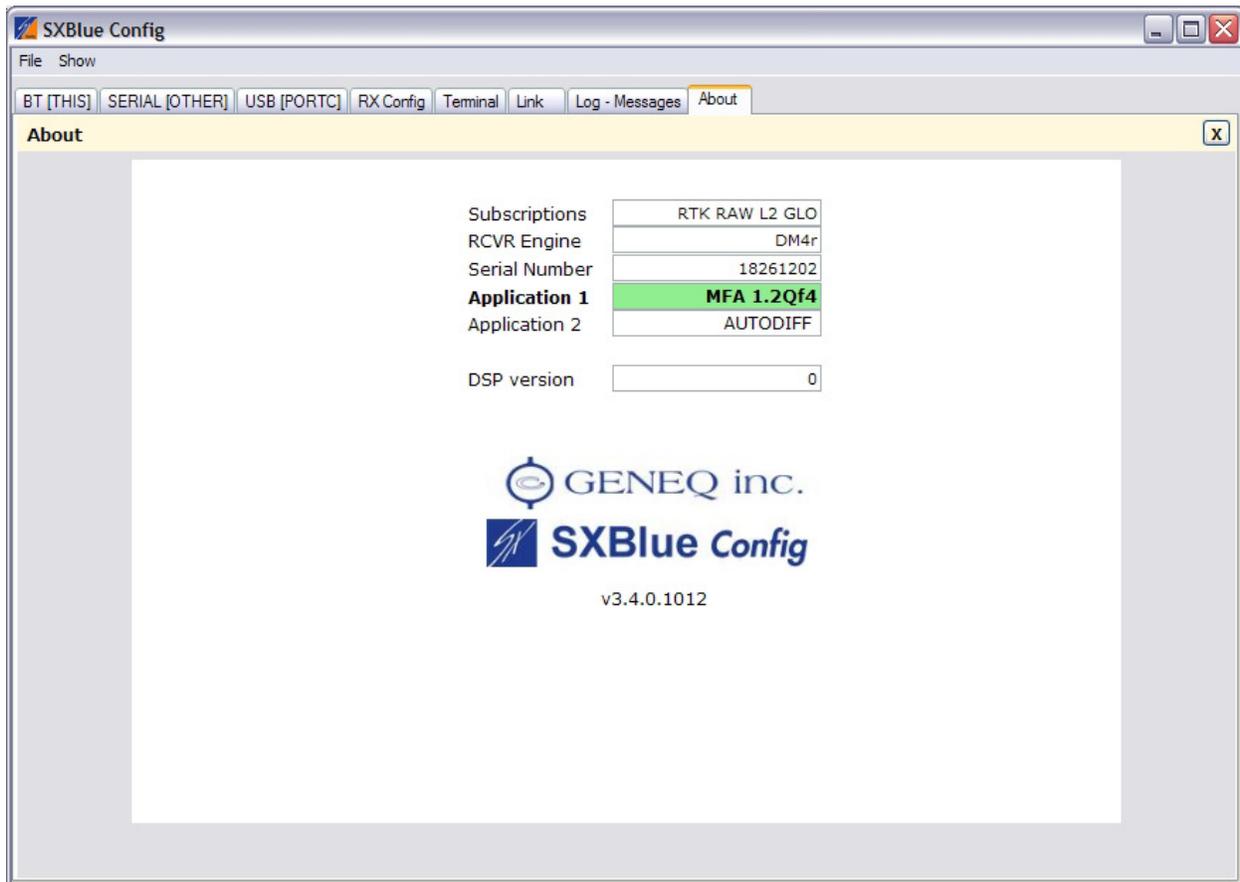

The Application in bold indicates the active one (in this example: **Application 1**). The subscription code can be sent from the “Terminal” window using the \$JK command above.

To change application, select “File”, “Exit”, then click on “Swap Receiver Apps”. This will reboot the receiver to the “other” application.

3.3.3 Interpreting Subscription Date Codes

A date code is a 4-digit number that can be used to gain a quick understanding of what subscription codes were applied to the receiver. There are two commands that provide the date code of the receiver. This section provides information on interpreting the \$JI and \$JK subscription date codes. An example of the \$JI and \$JK subscription date codes is listed below. The date code is in bold and underlined text.

```
$>JI,12838,1,7,26022003,01/01/1900,01/01/3000,6.8Hx,38
```

```
$>JK,01/01/3000,0,(1,2 or no number)
```

The field to the right of the date code in the \$JK response (“0” in this example) corresponds to the hexadecimal equivalent to the last two digits of the date code. Refer to section 5.2 for a complete table of the date codes.

4. Differential Correction Operations

This section provides basic configuration steps for various modes of differential corrections.


4.1 Automatic Differential of the MFA Application

4.1.1 Principle of Operation

The Multi-Function Application is the software (firmware) that operates the iSXBlue/SXBlue II receivers. The MFA automatically detects various sources and types of differential correction and uses the best one available in the following order of priority:

- RTK of the following formats (ROX, RTCM3, CMR/CMR+) on any of the communication ports. Note that Glonass correctors are not used from the CMR+ format, even with the Glofix mode is set to yes (see \$JMODE command in Chapter 5). The SureTrack feature (see Section 2.5) however will allow the use of the Glonass satellites in the solution after the GPS ambiguities are solved.
- OmniSTAR XP/HP/G2 (for SXBlue III-L models only)
- DFX (single frequency proprietary RTK)
- RTCM 2.x
- OmniSTAR VBS
- SBAS

While the iSXBlue/SXBlue II always tries to swap to the best source of differential correction available, types can be excluded or included in this automatic detection process. The \$JDIFFX,EXCLUDE or \$JDIFFX,INCLUDE commands can be used (refer to Chapter 5) to narrow the detection to only a few types or prevent the receiver from switching to other types. Alternatively, the “RX Config” menu of the SXBlue Config software offers the possibility to Include/Exclude the differential types.

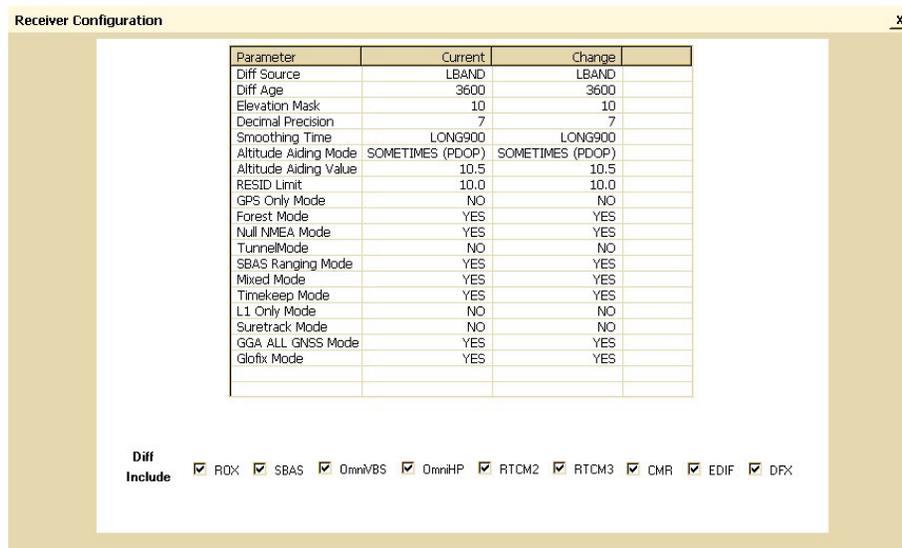

The screenshot shows the 'Receiver Configuration' window with a table of parameters and a 'Diff Include' section. The table has columns for Parameter, Current, and Change. The 'Diff Include' section has checkboxes for ROX, SBAS, OmniVBS, OmniHP, RTCM2, RTCM3, CMR, EDIF, and DFX, all of which are checked.

Parameter	Current	Change
Diff Source	LBAND	LBAND
Diff Age	3600	3600
Elevation Mask	10	10
Decimal Precision	7	7
Smoothing Time	LONG900	LONG900
Altitude Aiding Mode	SOMETIMES (PDOP)	SOMETIMES (PDOP)
Altitude Aiding Value	10.5	10.5
RESID Limit	10.0	10.0
GPS Only Mode	NO	NO
Forest Mode	YES	YES
Null NMEA Mode	YES	YES
TunnelMode	NO	NO
SBAS Ranging Mode	YES	YES
Mixed Mode	YES	YES
Timekeep Mode	YES	YES
L1 Only Mode	NO	NO
Suretrack Mode	NO	NO
GGA ALL GNSS Mode	YES	YES
Glofix Mode	YES	YES

Diff Include ROX SBAS OmniVBS OmniHP RTCM2 RTCM3 CMR EDIF DFX

It is recommended to keep EDIF activated as it is required for proper operation of the SureTrack and GDif features (see section 2.5).

4.1.2 Datum Considerations

The iSxBlue/SxBlue II output coordinates always follow the datum of the differential correction source. If using local RTK, the output coordinates will be in the same datum as the base station coordinates. If the receiver has an active OmniSTAR subscription and RTK is lost, the iSxBlue/SxBlue III will switch its differential source to OmniSTAR and the datum will change to ITRF 2008 (epoch 2010). There will most likely be a shift (or jump) in the data being collected.

It is important to use a field software that offers on-the-fly datum transformation. Some companies offer source codes for easy integration of 14-parameter datum transformation in a custom software. Also monitoring the DSID (Differential Station ID) in the GPGGA NMEA message will be an indication of the differential source being used. Alternatively, the \$JDIFFX,TYPE and \$JDIFFX,AVAIL can be used to see respectively what the receiver is currently using and what other type has been detected and is available for use.

4.2 RTK Operations

This section covers RTK operations and is a step-by-step guide for setting up the iSxBlue/SxBlue II either as a base station to broadcast corrections or as a rover. The receiver must have both RTK Base and Rover options activated; this can be verified using the date code in the reply of the \$JI command or in the “About” menu of the SxBlue Config software.

4.2.1 Guideline for Base Station Operation

The following steps must be performed in order to set a GNSS receiver as a base station:

- a) Install the iSxBlue/SxBlue II antenna on a reference point
- b) Set the reference point coordinates in the receiver’s memory
- c) Configure the output port of the iSxBlue/SxBlue II for the type of differential correction (RTCM 3, ROX or CMR) to be broadcast via the communication link used (ex. radio modems, Internet, Wi-Fi, Bluetooth, etc)

These steps will be described in a sub-section below, but first, the automatic and manual operation modes will be presented here.

4.2.1.1 Automatic and Manual Reference Points

In order to compute and output differential corrections, the iSxBlue/SxBlue II must use a set of coordinates for the reference point on which the antenna is installed. The receiver will either use a set of coordinates entered manually or automatically average a position on its own if there are no manual ones. These coordinates are stored in non-volatile memory and are called Manual and Automatic respectively. The \$JMODE, FIXLOC, \$JMODE, BASE and \$JRTK commands are the main commands used in the configuration process.

- a) Automatic mode. If \$JMODE, FIXLOC (Fixed Location) is set to NO (see chapter 5), the iSxBlue/SxBlue II is allowed to set the reference coordinates automatically. Once the receiver is able to compute a valid position (or fix) it will compare it with the last saved Manual and Automatic reference points.

- If any of these memory coordinates are within 10 meters of the current fix, the closest one will be used automatically as reference point and the iSXBlue/SXBlue will start computing differential corrections.
 - If there are no coordinates saved in memory or if the differences between the current position and the memory coordinates are greater than 10 meters then the receiver will automatically average a 300 second position and use it as Reference Point to compute the differential corrections.
- b) Manual mode. If \$JMODE, FIXLOC is set to YES, the iSXBlue/SXBlue II will not go into an automatic average process but instead, will use the last Reference Point or a new user-entered set of coordinates (with \$JRTK,1,lat,lon,height) or wait for a user-forced average of the antenna location (using \$JRTK,1,R).

In all cases, the \$JRTK,1 command returns the coordinates of the Reference memory location (reference point being used by the iSXBlue/SXBlue II) and will be equal to the content of either the Manual or the Automatic memory location.

4.2.1.2 Base Station Configuration


The use of SXBlue Config is recommended for easy setup of the iSXBlue/SXBlue II as a base station (see following sub-section). This section lists the normal steps involved in this process (please refer to Chapter 5 for details on the commands mentioned here):

- Set the antenna in a perfectly clear view of the sky. Make sure the base station is at least 50 meters (160 feet) away from obstructions. If using a radio modem, the transmitting antenna should be at least 3 meters away from the iSXBlue/SXBlue II antenna. Do not set the antenna directly on the ground but at least 75cm above all surface.
- Set the receiver to base mode with the following command \$JMODE,BASE,YES and set the satellite elevation mask to 5 or 10 degrees with \$JMASK,5 (or ,10).
- If the coordinates will be entered manually or if the last memory saved is to be used, then issue the \$JMODE, FIXLOC, YES (default) command. This will prevent the receiver from going into automatic averaging.
- Enter the reference coordinates of the antenna location using the \$JRTK,1,lat,lon,height (\$JRTK,1 alone replies with the set of coordinates being used) or wait for the automatic averaging to be completed. Note that the coordinates must be entered in degrees decimal and the height should be expressed in meters. Also note that the antenna height above ground along with the antenna phase center offset (see section 1.4) should be taken into account (for example if occupying a survey monument, add the pole height plus the phase center offset to the benchmark height).
- If broadcasting corrections to a rover of a different brand, make sure it supports SBAS ranging in the RTK ambiguity resolution, otherwise turn off SBAS parameters in the differential correction messages using the \$JMODE, SBASNORTK, YES command.
- You may also select the GNSS signals to be output in the differential correction messages. By default, correctors for both GPS and GLONASS are activated with the following commands: \$JDIFFX,GNSSOUT,GPS,YES and \$JDIFFX,GNSSOUT,GLONASS,YES. If one of the two types is to be omitted replaced the last argument with a “NO”.

- If broadcasting corrections in RTCM 3 format, the following default messages should be included: \$JRTCM3,INCLUDE,1004,1005,1008,1012.
- A base station Broadcast ID ranging from 0 to 4095 (except for CMR format 0 to 31) can also be assigned to the receiver. This ID will be shown in the DSID (Differential Station ID) field of the GGA sentence on the rover. To enter a broadcast ID of 333 for example, send the command: \$JRTK,28,333.
- Set the baud rate of the port(s) that will be used for transmission using the \$JBAUD command (note that Bluetooth port (PORTA) baud rate needs not be changed). It is preferable to set the baud rate to at least 9,600 or higher.
- Turn off all messages on the output ports to be used and activate only one type of differential correction (RTCM, ROX or CMR) per port. For example, to output RTCM on the serial port (PortB) issue the following commands: \$JOFF,PORTB followed by \$JASC,RTCM3,1,PORTB.
- Note that if using Automatic referencing mode, there will be no output until the 300 second averaging is completed. To check the transmission status of the iSXBlue/SXBlue II along with the “time to go” before transmitting RTK, use the \$JRTK,6 command.

4.2.1.3 SXBlue Config Base Menu


The above configuration can be done in the “Base” menu of SXBlue Config. Click on “Initialize” after a manual input of the reference coordinate. If “Fixed Location” is checked and an average is required, click on “Re-Average”, wait for the 300-second count to be completed, then click on “Initialize”. The “Memory Location – Reference” will show the coordinates being used. The communication ports setup can be done in the Bluetooth, Serial and USB menus.

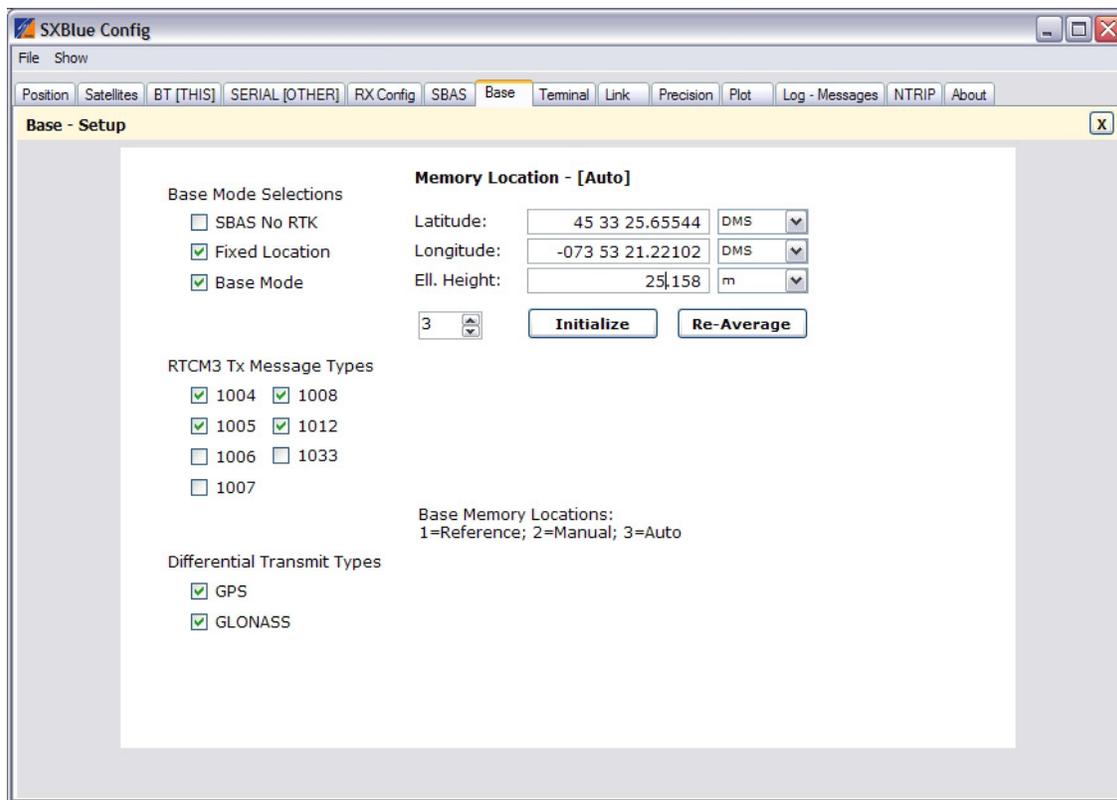

4.2.2 Guideline for RTK Rover Operation

RTK operations involve the use of carrier phase, therefore, the rover must be in clear, unobstructed view of the sky. Also the performance of RTK will be affected by the baseline length (distance between base and rover, less than 20km is preferred) or the receiver's location within an RTK network and the quality of the constellation (number of satellites available above the antenna). The following image shows the default iSXBblue/SXBblue II configuration

Below are some general considerations for proper RTK operation along with the configuration commands involved. The sub-sections below are more specific to RTK networks and local (or single baseline)

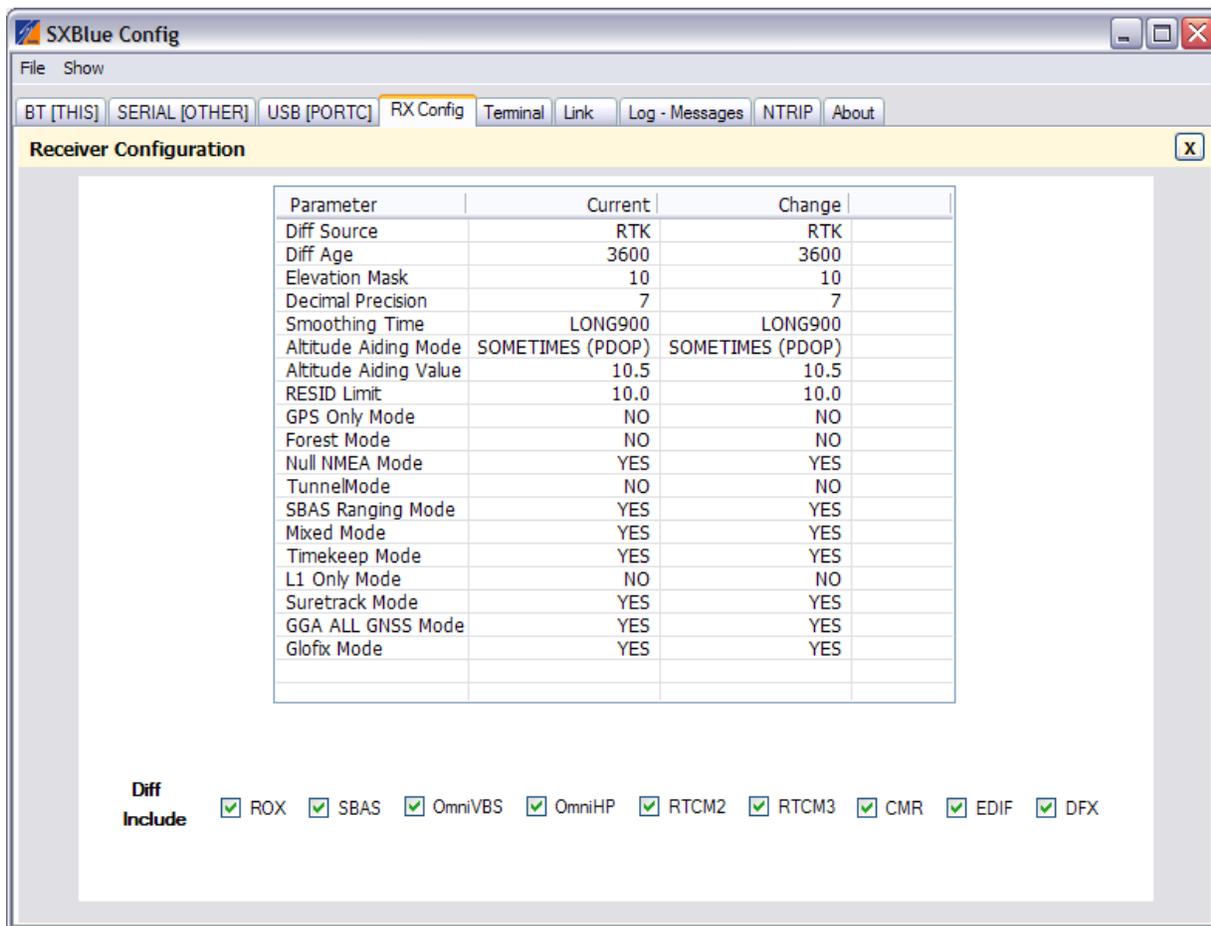

corrections.

- The default iSXBblue/SXBblue II configuration allows automatic selection of the best differential correction source (RTK, OmniSTAR, SBAS, etc) and type (RTCM3, ROX, CMR/CMR+). For some applications in which only RTK is desired, some sources/types can be excluded using the \$JDIFFX,INCLUDE or \$JDIFFX,EXCLUDE commands. This will prevent the iSXBblue/SXBblue II from automatically falling back to SBAS if RTK is lost for more than 3 minutes, especially for field software that do not monitor nor give alarms on the DGPS status. Refer to Section 4.1 above.

- To prevent multipath and for faster ambiguity resolution, set the elevation mask to at least 10 degrees using \$JMASK,10. Using an elevation mask higher than 15 degrees has minimal impact on multipath rejection.
- Give preference to a field software that monitors the DGPS status (RTK fixed/float, DGPS), age of differential correction, and RMS values. The first two are contained in the GGA sentence and the RMS values are available in the GST sentence. See NMEA messages in Chapter 5.
- Enable GLOFIX to allow the iSXBlue/SXBlue II to use the GLONASS correctors if available in the RTCM 3 message: \$JMODE,GLOFIX,YES. Note that this command is only used for RTCM 3 type messages.
- SureTrack allows the receiver to internally compute correctors for GLONASS satellites that have no correctors in the differential message. It is activated with the \$JMODE,SURETRACK,YES command. EDIF type must remain included in the automatic differential list for SureTrack to work properly (\$JDIFFX,INCLUDE,EDIF).
- There is no need to specify the port on which the differential correction is coming as the receiver constantly scans all the three ports and automatically detects the signals available. Only the baud rate needs to be set to match either the computer communication port or the radio modem serial port.
- Configure the output port with the required NMEA messages using the \$JASC command. By default the following sentences are activated: GGA, GSA, GST, GSV, VTG and ZDA.

4.2.2.1 Using RTK Networks

RTK Networks use the NTrip protocol (over the Internet) and an NTrip client, like SXBlue RTN, is required to handle the communication between the NTrip caster and the iSXBlue/SXBlue II (refer to the SXBlue RTN User's Guide for more information). Note that the source table of an NTrip caster may also include single baseline mountpoints, therefore these are considered "Local correction" and the comments in this section do not apply to them.

- RTK networks usually compute a correction specific to the user's location and requires the GGA sentence to be activated on the rover's communication port and be sent at regular interval to the server by the NTrip client (usually every 15 to 30 seconds is a good frequency).
- Always give preference to mountpoints with RTCM3 corrections instead of CMR/CMR+ types, as GLONASS correctors are not decoded by the iSXBlue/SXBlue II from these proprietary formats.

4.2.2.2 Using Local Corrections

Local correction implies that the rover communicates directly with a nearby base station to receive the differential signal.

- It is preferable to keep the baseline length below 20km as longer baselines will affect both initialisation time and accuracy
- If using radio modems, make sure the baud rates of both the radio and the iSXBlue/SXBlue II serial port match.

- When debugging for communication issues, we recommend testing with a wired condition between base and rover, prior to using a third party wireless connection. A null-modem cable should be used to connect the two iSXBlue/SXBlue II serial ports.

4.3 Auto-Dif (Autonomous and Base Station Modes)

Operation of the iSXBlue/SXBlue II unit with the Auto-Dif application requires sending of NMEA messages. These commands may be automatically issued through customized software or a simple terminal interface running on a PDA or data logger. Chapter 5 provides detailed information on the commands supported by the Auto-Dif feature.

- The Auto-Dif autonomous mode requires only that a reference point be set with the \$JRAD,1,x command.
- The Auto-Dif in base station mode also requires the \$JRAD,2 command be also sent (after the \$JRAD,1) to tell the receiver to use the entered reference point for base station operation. In addition, RTCM message output should be activated on one of the ports using the \$JASC,RTCM,1,PORTx

The remainder of this sub-section covers the autonomous mode of Auto-Dif operation.

4.3.1 Start-up

When you turn the iSXBlue/SXBlue II on with the Auto-Dif application running, it will require a minimum of a few minutes to gather enough satellite tracking information to model the errors for the future (up to 10 minutes may be required depending on your environment). You do not have to keep the iSXBlue/SXBlue II stationary for this process, but you should ensure that the iSXBlue/SXBlue II maintains acquisition on the satellites available. We refer to this process of gathering information for the Auto-Dif application as Calibration.

4.3.2 Calibration

Calibration is the process of zeroing the increasing errors in the Auto-Dif modeling process. Calibration can be performed either in a relative or absolute sense, depending on your positioning needs. Relative positioning will provide positions that are accurate to one another, however, there may be some offset compared to truth. Calibrating for relative positioning is easier than for absolute since any arbitrary position can be used. Calibrating for absolute positioning mode requires that you perform this task with the antenna at a known reference location.

4.3.3 Auto-Dif Performance

The positioning performance of the iSXBlue/SXBlue II unit is dependent upon the rate at which the environmental modeling of Auto-Dif and the environmental errors diverge. The more that Auto-Dif is able to model the errors correctly, the longer that Auto-Dif will provide reliable, accurate positioning. As there's no way in real-time to know the rate of divergence, a rule of thumb is to set your maximum age of differential to either 40 or 45 minutes, depending on how much error your application is able to tolerate. Testing, a sample of which is shown in Figure 2-2 has shown that accuracy will usually be better than 1.0 m 95% after 30 minutes of Auto-Dif operation.

We suggest that you perform your own testing at your location to determine the level of performance that you would expect to see on average. When testing this feature, it's a good idea to look at a number of

Auto-Dif cycles per day, and monitor performance against a known coordinate. This should be done over a number of days with different states of the ionosphere.

You can monitor the energy level of the ionosphere based upon the amount of solar flare activity at the following Web sites:

<http://iono.jpl.nasa.gov//index.html>

<http://www.spaceweather.com>

<http://www.n3kl.org/sun/noaa.html>


4.4 Recording Raw data and converting to RINEX

Raw data is used for applications in which post-processing is required. Some off-the-shelf software support the iSXBlue/SXBlue II binary format and take care of the logging during the data collection session. Geneq EZSurv software also allows post-processing of the collected data.

Should an in-house software requires logging the iSXBlue/SXBlue II raw data, the following binary messages should be recorded: Bin 65 (GLONASS Ephemeris), Bin 66 (GLONASS L1/L2 code and carrier phase), Bin 76 (GPS L1/L2 code and carrier phase), Bin 95 (GPS ephemeris), Bin 96 (GPS L1 code and carrier phase). Refer to Chapter 5 for more information on the Binary messages.

4.4.1 Using SXBlue Config to Log Raw Data

Both the PC and Windows Mobile versions of SXBlue Config can be used to record raw data.

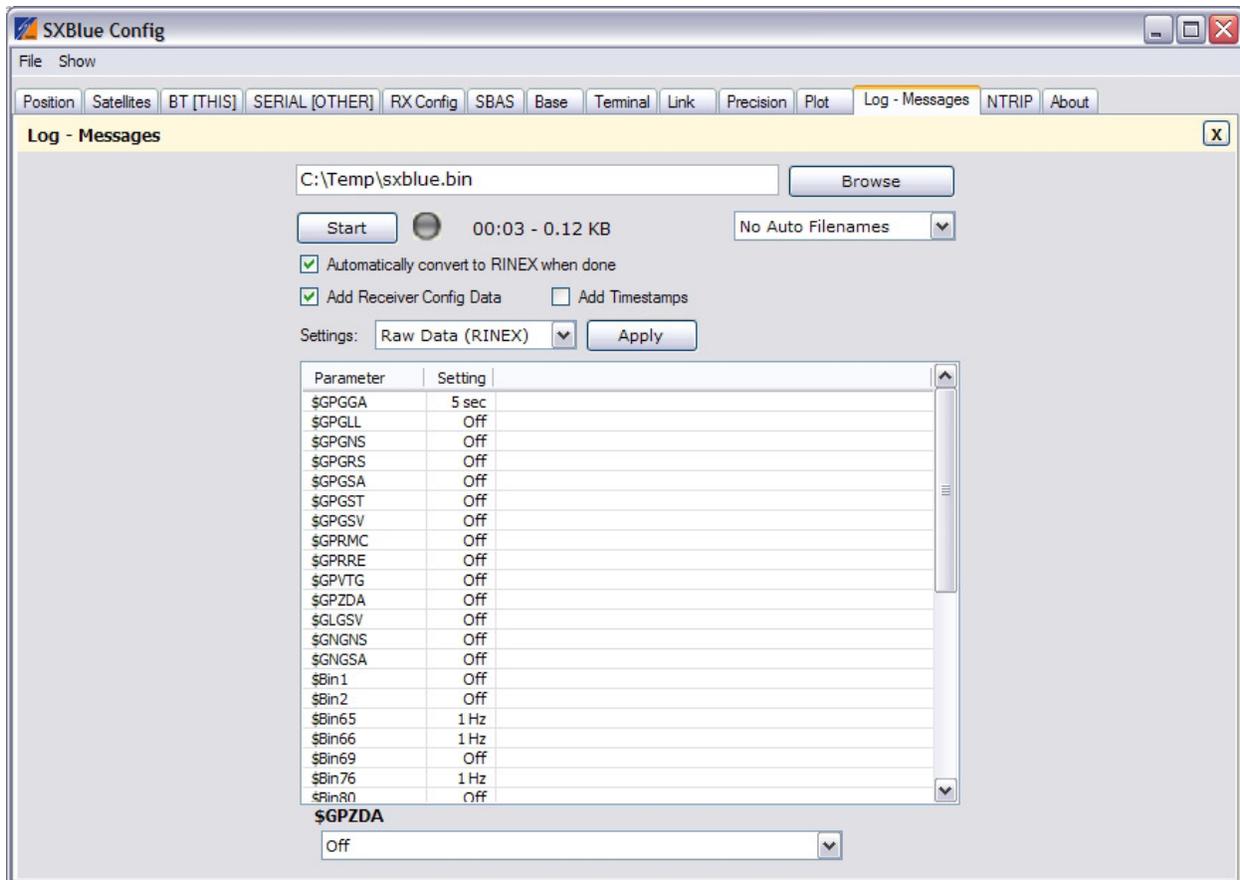

First, select the “Log – Messages” tab and in the “Settings” pull-down, select Raw Data (RINEX), then click on “Apply”. SXBlue Config will activate the required binary messages in the list, along with the GGA sentence every 5 seconds. The GGA sentence is used to compute an average position for the header of the RINEX files that will be created if “Automatically convert to RINEX...” is checked; two files will be created: a .obs for the observations and a .nav for the “navigation” files. For the automatic conversion to work, the RINEX utility available in the Download section of the www.sxbluegps.com web page must be installed in its default directory.

If Geneq EZSurv will be used for post-processing, the “Add Receiver Config Data” is mandatory, otherwise it is optional but can be useful for further reference.


When recording raw data as base station, filenames can be created automatically on a regular period. Select either “No Auto Filenames” for one file recording or select another option from the pull-down. Click on “Browse to give a filename and a path to the logging.

Do not checked “Add Timestamp” as it is available only for advanced and specific usage. To begin the recording, click on “Start”.

4.4.2 Converting to RINEX Format

As mentioned above, SXBlue Config offers an automatic conversion of the RAW data into a RINEX (Receiver INdependent EXchange) format. If more control is required on the content of the RINEX header file, the stand-alone RINEX tools can be used.

First, load the RINEX utility and click on “File”, then “New Profile” and finally “Load Binary File” to select a raw data file.

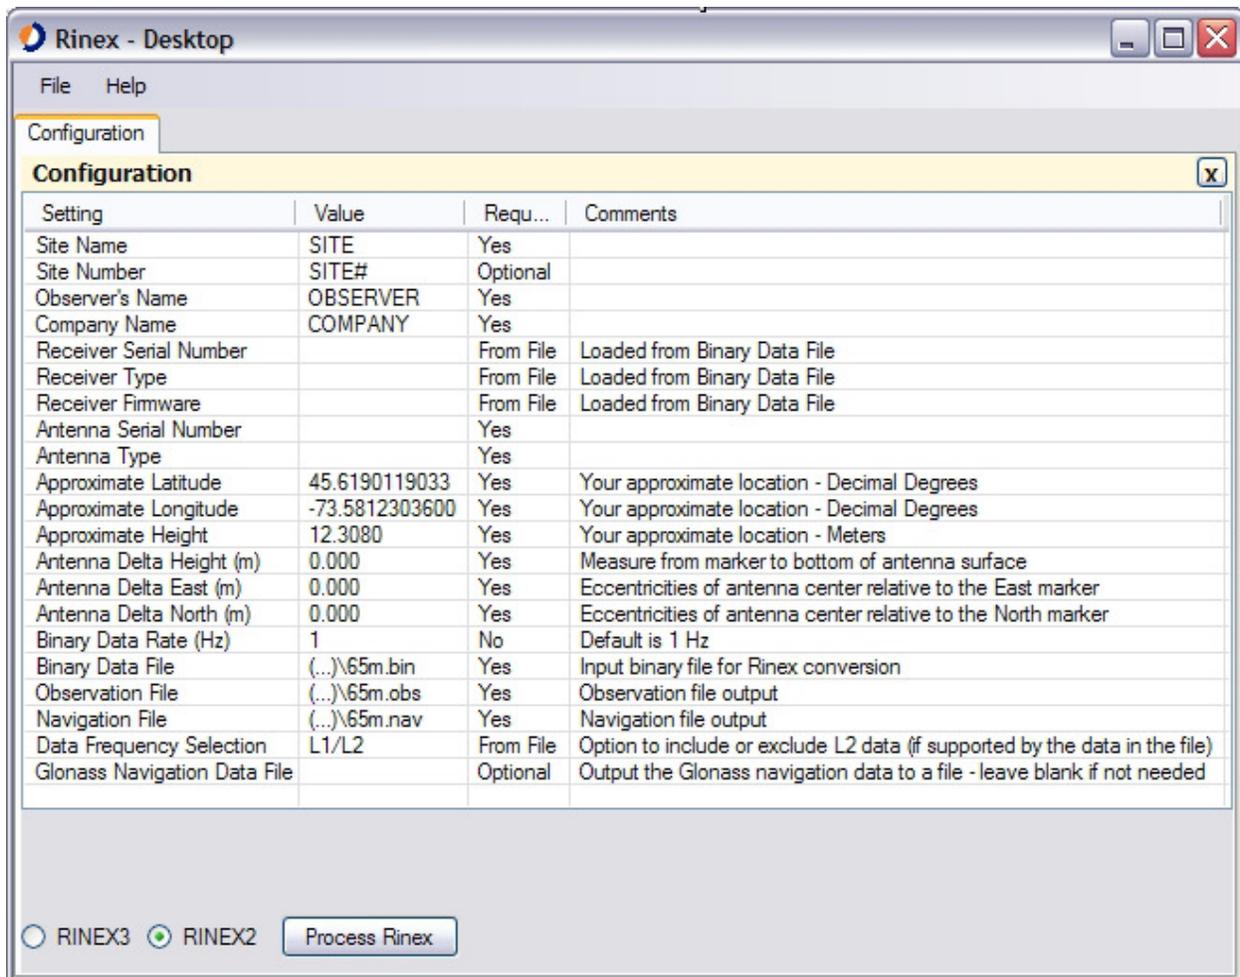

The above interface will be displayed and allows to edit all information contained in the header along with some output configuration parameters. Click on any of the line to activate the entry line.

Once done, select either RINEX2 or RINEX3 format and click on the “Process Rinex” button.

5. Complete NMEA Interface

The iSXBlue/SXBlue II supports a selection of NMEA 0183 and proprietary binary messages. This current chapter describes the NMEA interface in detail and chapter 6 describes the Binary messages. It’s your choice as a systems designer to choose whether or not to support a NMEA-only software interface or a selection of both NMEA and binary messages. The SXBlue II is configured using only NMEA commands.

5.1 NMEA Message Elements

NMEA 0183 messages have a common structure, consisting of a message header, data fields, checksum, and carriage return/line feed message terminator. An example NMEA sentence follows:

$$\$XXYYY,zzz,zzz,zzz...*xx<CR><LF>$$

The components of this generic NMEA message example are displayed in Table 5-1.

Table 5-1 NMEA Message Elements

Element	Description
\$	Message header character
XX	NMEA Talker field. GP indicates a GPS talker
YYY	Type of GPS NMEA Message
zzz	Variable Length Message Fields
*xx	Checksum
<CR>	Carriage Return
<LF>	Line Feed

Null, or empty fields occur when no information is available for that field.

Factory default settings are shown with an “*” next to the values.

5.2 General Commands

This section presents various commands relating to the general operation and configuration of the iSXBlue/SXBlue II. The following table provides a brief description of the general commands supported by the receiver.

Table 5-2 General Commands

Message	Description
\$JASC,Dx	Command to turn on diagnostic information.
\$JAIR	This is a command to place the receiver into 'AIR' mode where the receiver will respond better to the high dynamics associated with airborne applications.
\$JASC,VIRTUAL	This command is used to output RTCM data fed into the other port, through the current port.
\$JALT	This command is used to set the altitude aiding mode of the GPS inside the iSXBlue/SXBlue II GNSS.
\$JLIMIT	This command is used to set the threshold of estimated horizontal performance.
\$JAPP	This command is used to query the current applications and also choose the current application.
\$JBAUD	Baud rate change command for the iSXBlue/SXBlue II GNSS.
\$JCONN	Virtual circuit command used to interface to communicate with the menu system microprocessor.
\$JDIFF	This command is used to set the differential mode.
\$JK	This command is used to subscribe certain features of use of the iSXBlue/SXBlue II GNSS.
\$JPOS	This command is used to provide the iSXBlue/SXBlue II GNSS with a seed position to acquire a SBAS signal more quickly upon start-up. This is not normally needed.
\$JQUERY,GUIDE	This command is used to poll the iSXBlue/SXBlue II GNSS for its opinion on whether or not it is providing suitable accuracy after the both SBAS and GPS have been acquired (up to 5 min)
\$JRESET	This command is used to reset the configuration of the iSXBlue/SXBlue II GNSS.
\$JSAVE	This command is used to save the configuration of the iSXBlue/SXBlue II GNSS.
\$JSHOW	This command is used to query the iSXBlue/SXBlue II GNSS receiver for its configuration.
\$JT	This command is used to poll the iSXBlue/SXBlue II GNSS for its receiver type.
\$JBIN	This command is used to turn on the various binary messages supported by the receiver.
\$JI	Command is used to get information from the receiver, such as serial number, activated application and firmware version information.
\$JBOOT	Allows you to reboot the receiver to drop the satellite to which it is currently locked.

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Complete' response.

5.2.1 \$JASC,D1

This command allows you to adjust the output of the RD1 diagnostic information message from the SXBlue II GPS receiver.

This command has the following structure:

\$JASC,D1,r[,PORTx]<CR><LF>

Currently, only the RD1 message is defined, with x = 1. The message status variable 'r' may be one of the following values:

r	Description
0*	OFF
1	ON

When the ',PORTy' data field is specified (without the square brackets), this command will enact a change in the RD1 message on the specified PORTA, PORTB or PORTC.

5.2.2 \$JAIR

This command allows you to place the iSXBlue/SXBlue II GNSS into AIR mode HIGH, where the receiver is optimized for the high dynamic environment associated with airborne platforms. JAIR defaults to normal (NORM) and this setting is recommended for most applications. The AUTO option allows the receiver to decide when to turn JAIR on HIGH. Turning AIR mode on to HIGH is not recommended for iSXBlue/SXBlue II GNSS operation.

\$JAIR,NORM: normal track and nav filter bandwidth

\$JAIR,HIGH: highest track and nav filter bandwidth

\$JAIR,LOW: lowest track and nav filter bandwidth

\$JAIR,AUTO: default track and nav filter bandwidth, usually the same as normal, but automatically goes to "HIGH" above 30 m/sec (108 Km/hr or 67.1 mi/hr).

On "HIGH" setting, larger "sudden drops in SNR" are tolerated before observation data is discarded from the Navigation solution. This may be beneficial when an aircraft is rapidly banking (e.g., crop-duster) and, hence, the GPS signal rapidly transitions its entry into the antenna from area of high-antenna-gain pattern to that of low antenna gain.

The format of this command follows:

\$JAIR,r<CR><LF>

Where feature status variable, 'r', may be one of the following values:

r	Description
0 or NORM	Normal
1 or HIGH	High
2 or LOW	Low
3 or AUTO*	Norm (Auto)

The SXBlue II GPS will reply with the following response:

\$>JAIR,MAN,NORM

\$>JAIR,MAN,HIGH

\$>JAIR,MAN,LOW

\$>JAIR,AUTO,NORM

5.2.3 \$JASC,VIRTUAL

When using an external correction source, this command is used to 'daisy chain' RTCM data from being input from one port and output through the other. For example, if RTCM is input on Port B, this data will correct the iSXBlue/SXBlue II GNSS position and can also be output through Port C. The iSXBlue/SXBlue II GNSS acts as a pass-through for the RTCM data. Either port may be configured to accept RTCM data input and this command then allows another port to output the RTCM data. To

configure the iSXBlue/SXBlue II GNSS to output RTCM data on the current port from data input on another port, issue the following command:

`$JASC,VIRTUAL,r<CR><LF>`

To configure the iSXBlue/SXBlue II GNSS to output RTCM data on a specific port from RTCM data input on another port, issue the following command:

`$JASC,VIRTUAL,r,PORTy<CR><LF>`

Where the message status variable, ‘r’, may be one of the following:

r	Description
0*	OFF
1	ON

And the port number variable “y” can be A, B or C for the Bluetooth, Serial and USB respectively.

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>`

5.2.4 \$JALT

This command turns altitude aiding on or off for the iSXBlue/SXBlue II GNSS. When set to on, altitude aiding uses a fixed altitude instead of using one satellite’s observations to calculate the altitude. The advantage of this feature, when operating in an application where a fixed altitude is acceptable, is that the extra satellite’s observations can be used to betterment of the latitude, longitude, and time offset calculations, resulting in improved accuracy and integrity. Marine markets, for example, may be well suited for use of this feature.

This command has the following layout:

`$JALT,c,v[,GEOID] <CR><LF>`

Where feature status variable, ‘c’, and threshold variable, ‘v’, may be one of the following:

c	Description
NEVER	This is the default mode of operation where altitude aiding is not used.
SOMETIMES	Setting this feature to SOMETIMES allows the receiver to use altitude aiding, dependent upon the PDOP threshold, specified by ‘v’
ALWAYS	Setting this feature to ALWAYS allow the receiver to use altitude aiding regardless of a variable. In this case, you may specify the ellipsoidal altitude, ‘v’ that the receiver should use. Optionally, if you specify the ‘GEOID’ field, the receiver will use the GEOID as its reference.

The
GPS
with

SXBlue II
will reply
the following
response:

`$>`

If the antenna is at a constant height, then altitude aiding should help with accuracy. When using a DGPS position, average the height over a period of time. The longer the time period, the more accurate this height value will be. Then take the average height and issue the following command:

`$JALT,ALWAYS,h`

Where “h” is the ellipsoid height. If you are using the height reported from the GGA message this is actually geoidal and not ellipsoidal height. In this case, you will need to issue the following command:

`$JALT,ALWAYS,h,GEOID`

5.2.5 \$JLIMIT

This command is used to change the threshold of estimated horizontal performance for which the DGPS position LED is illuminated. The default value for this parameter is a conservative 10.0 meters. This command has the following format:

`$JLIMIT,limit<CR><LF>`

Where ‘Limit’ is the new limit in meters. The receiver will respond with the following message:

`$>`

If you wish to verify the current \$JLIMIT threshold, the response to the \$JSHOW command provides this information.

5.2.6 \$JAPP

This command allows you to request the iSXBlue/SXBlue II GNSS for the currently installed applications and to choose which application to use. The iSXBlue/SXBlue II GNSS by default comes pre-installed with WAAS (SBAS) in Application Slot 1 and Auto-Dif in Application Slot 2, but Auto-Dif requires a subscription that must be purchased from Geneq or an authorized reseller.

To poll the receiver for the current applications, send the following message:

`$JAPP<CR><LF>`

There are no data fields to specify in this message. The receiver will respond with the following message:

`$>JAPP,current,other,[1 or 2],[2 or 1]`

Where ‘current’ indicates the current application in use and ‘other’ indicates the secondary application that is not in use currently. 1 and 2 indicate which application slot is used by the applications (see the list of applications in the table below).

For the sake of the application names, the SBAS application is referred to as WAAS by the iSXBlue/SXBlue II GNSS internal software.

For example, if the response to `$JAPP<CR><LF>` is

`$>JAPP,WAAS,AUTODIFF,1,2`

it indicates that WAAS (SBAS) is in application slot 1, Auto-Dif is in application slot 2, and that WAAS in application slot 1 is currently being used.

To change from the current application to the other application, when two applications are present, issue the following command:

`$JAPP,OTHER<CR><LF>`

or

`$JAPP,app<CR><LF>`

Where ‘app’ may be one of the following by name:

Applications	Description
WAAS*	This will change to the SBAS application
AUTODIF	This will change to the Auto-Dif application
LOCDF	This will change to the Local Differential Rover application (Local-Dif)
LOCRTK	This will change to the Local Differential RTK application Local-RTK)
RTKBAS	This will change to the Local Differential Base Station application (Local-Base) for operation with Local-Dif or Local-RTK

If you issue a `$JAPP,OTHER<CR><LF>` (or `$JAPP,O`) on a receiver, continuing with the above example, the response to `$JAPP<CR><LF>` would then be

`$>JAPP,AUTODIFF,WAAS,2,1`

indicating that application slot 2, containing Auto-Dif, is currently being used.

Note – Other derivatives of the \$JAPP command are the `$JAPP,1<CR><LF>` and `$JAPP,2<CR><LF>` commands that can be used to set the iSXBlue/SXBlue II GNSS to use the first and second application. It’s best to follow up the sending of these commands with a \$JAPP query to see which application is 1 or 2. These two commands are best used when upgrading the firmware inside the iSXBlue/SXBlue II GNSS, as the firmware upgrading utility uses the application number to designate which application to overwrite.

5.2.7 \$JBAUD

This command is used to configure the baud rates of the iSXBlue/SXBlue II GNSS.

This command has the following structure:

`$JBAUD,r[,PORTy] <CR><LF>`

Where ‘r’ may be one of the following baud rates:

Baud Rates
4800
9600
19200
38400
57600*

When this command has been issued without the ‘,PORTy’ data field, the baud rate of the current port will be changed accordingly. When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), a baud rate change will occur for the specified port. Note that the Bluetooth port (PORTA) only supports 57600 baud (9600 baud for serial number below 0808A100) and can only be modified by Geneq.

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.2.8 \$JCONN

This command is used to create a virtual circuit between the A and B port, if needed. This allows you to communicate through the iSXBlue/SXBlue II GNSS to the device on the opposite port.

The virtual circuit command has the following form:

\$JCONN,p<CR><LF>

Where the connection type, ‘p’, may be one of the following:

p	Description
AB	Specify ‘AB’ in order to connect the A port (Bluetooth) to the B port (Serial)
X	Once a virtual circuit has been established, to remove the virtual circuit, specify ‘X’ in this command to return the current port to normal

5.2.9 \$JDIFF

This command is used to change the differential mode of the iSXBlue/SXBlue II GNSS receiver.

The structure of this command follows:

\$JDIFF,diff<CR><LF>

Where the differential mode variable, ‘diff’, has one of the following values:

diff	Description
OTHER	Specifying OTHER instructs the iSXBlue/SXBlue II GNSS to use external corrections input through the opposite port from which you are communicating (valid for Port A and B)
PORTy	Specifying PORTy (where y is A, B or C) instructs the iSXBlue/SXBlue II GNSS to use external corrections input through the specified port (A = Bluetooth, B = RS-232, C = USB)
THIS	THIS instructs the receiver to use external correction input through the same port from which you are communicating
WAAS*	Specifying WAAS instructs the iSXBlue/SXBlue II GNSS to use SBAS corrections. This is also the response when using the Local-Base application
X	Specifying X instructs the receiver to use the Auto-Dif mode (the receiver will respond back with \$JDIF,AUTO to a \$JDIF query)
RTK	This is the response when running the Local-Dif and Local-RTK applications
NONE	In order for the iSXBlue/SXBlue II GNSS to operate in autonomous mode, the NONE argument may be specified in this command.
BEACON	Specifying BEACON instructs the iSXBlue/SXBlue II GNSS receiver to use the internal beacon demodulator as the source of differential correction
LBAND	Specifying LBAND instructs the SXBlue II-L GPS to use OmniSTAR differential correction while in the LBAND application

5.2.10 \$JK

This command is used by the iSXBlue/SXBlue II GNSS to enable (subscribe) to the various applications and options such as Auto-Dif, Local-Dif, Local-RTK, Local-Base, 10Hz and 20Hz output rates.

This command will have the following format:

\$JK,x...<CR><LF>

Where ‘x...’ is the subscription key provided by Geneq and is 10 characters in length. If you send the \$JK command without a subscription key as follows, it will return the date code of the subscription.

\$JK<CR><LF>

\$>JK,01/01/3000,0,(1,2 or no number)

The field to the right of the date code in the \$JK response (“0” in this example) corresponds to the hexadecimal equivalent of the last two digits of the date code.

See the table below for a list of date codes along with their description and their HEX value.

Date Code	Hex (\$JK)	Enabled Applications	Date Code	Hex (\$JK)	Enabled Applications
3000	0	10Hz / SBAS	3008	8	10Hz / SBAS / L-Dif
3001	1	20Hz / SBAS	3009	9	20Hz / SBAS / L-Dif
3002	2	10Hz / SBAS / Auto-Dif	3010	A	10Hz / SBAS / Auto-Dif / L-Dif
3003	3	20Hz / SBAS / Auto-Dif	3011	B	20Hz / SBAS / Auto-Dif / L-Dif
3004	4	10Hz / SBAS / L-RTK	3012	C	10Hz / SBAS / L-RTK / L-Dif
3005	5	20Hz / SBAS / L-RTK	3013	D	20Hz / SBAS / L-RTK / L-Dif
3006	6	10Hz / SBAS / Auto-Dif / L-RTK	3014	E	10Hz / SBAS / Auto-Dif / L-RTK / L-Dif
3007	7	20Hz / SBAS / Auto-Dif / L-RTK	3015	F	20Hz / SBAS / Auto-Dif / L-RTK / L-Dif

5.2.11 \$JPOS

This command is used to speed

up the initial acquisition when changing continents with the iSXBlue/SXBlue II GNSS (for example,

powering it for the first time in Europe after it has been tested in Canada). This will allow it to begin the acquisition process for the closest SBAS spot beams. This will save some time with acquisition of the SBAS service, however, use of this message is typically not required due to the quick overall startup time of the iSXBlue/SXBlue II GNSS receiver. It is preferable to set SBAS acquisition to specific PRN number or for Automatic search mode using the \$JWAASPRN command in section 4.4.

This command has the following layout:

\$JPOS,lat,lon<CR><LF>

Where ‘lat’ and ‘lon’ have the following requirements:

Position Component	Description
lat	Latitude component must be entered in decimal degrees. This component does not have to be more accurate than half a degree.
lon	Longitude component must be entered in decimal degrees. This component does not have to be more accurate than approximately a half degree.

Note – This command is not normally required for operation of the SXBlue II GPS.

5.2.12 \$JQUERY, GUIDE

This command is used to poll the iSXBlue/SXBlue II GNSS for its opinion on whether or not it is providing suitable accuracy after the both SBAS and GPS have been acquired (up to 5 min). This feature takes into consideration the download status of the SBAS ionospheric map and also the carrier phase smoothing of the unit.

This command has the following format:

\$JQUERY,GUIDE<CR><LF>

If the iSXBlue/SXBlue II GNSS is ready for use with navigation or positioning with optimum performance, it will return the following message:

\$>JQUERY,GUIDE,YES<CR><LF>

Otherwise, it will return the following message:

\$>JQUERY,GUIDE,NO<CR><LF>

5.2.13 \$JRESET

This command is used to reset the GPS engine inside the iSXBlue/SXBlue II GNSS to its default operating parameters. The \$JRESET command does the following:

- Turn off outputs on all ports
- Save the configuration
- Set the configuration to its board-level defaults (refer to the table below)

Configuration (Command)	Setting
Elevation Mask (\$JMASK)	5
Residual Limit (\$JLIMIT)	10
Altitude Aiding (\$JALT)	None
Age of Differential (\$JAGE)	45 minutes
Air Mode (\$JAIR)	Auto
Differential Type (\$JDIFF)	Default for Application
NMEA Precision (\$JNP)	5 decimals
COG Smoothing (\$JTAU,COG)	None
Speed Smoothing (\$JTAU,SPEED)	None

The board-level defaults are different than the factory default settings. The configuration files for factory default settings are found as Utilities in the supplied CD-ROM.

This message has the following format:

```
$JRESET<CR><LF>
```

```
$JRESET,ALL<CR><LF>
```

does everything \$JRESET does, plus it clears almanacs.

```
$JRESET,BOOT<CR><LF>
```

does everything \$JRESET,ALL does, plus the following:

- Clears use of the Real-Time clock at startup
- Clears use of backed-up ephemeris and almanacs
- Re-boots the receiver when done

When the ‘,ALL’ field is present (without the square brackets), the almanac is also defaulted. Issuing this command with this optional data field is not usually necessary.

5.2.14 \$JSAVE

Sending this command is required after making changes to the configuration of the iSXBlue/SXBlue II GNSS receiver.

This command has the following structure:

```
$JSAVE<CR><LF>
```

The iSXBlue/SXBlue II GNSS will reply with the following two messages. Ensure that the receiver indicates that the save process is complete before turning the receiver off or changing the configuration further.

```
$> Saving Configuration. Please Wait...
```

```
$> Save Complete
```

No data fields are required. The receiver will indicate that the configuration is being saved and will notify you when the save is complete.

5.2.15 \$JSHOW

This command is used to poll the iSXBlue/SXBlue II GNSS for its current operating. This command has the following structure:

\$JSHOW[,subset] <CR><LF>

Using the \$JSHOW command without the optional ‘,subset’ field will provide a complete response from the receiver. An example of this response follows:

```

$>JSHOW,BAUD,9600 (1)
$>JSHOW,BAUD,9600,OTHER (2)
$>JSHOW,BAUD,9600,PORTC (3)
$>JSHOW,ASC,GPGGA,1.0,OTHER (4)
$>JSHOW,ASC,GPVTG,1.0,OTHER (5)
$>JSHOW,ASC,GPGSV,1.0,OTHER (6)
$>JSHOW,ASC,GPGST,1.0,OTHER (7)
$>JSHOW,ASC,D1,1,OTHER (8)
$>JSHOW,DIFF,WAAS (9)
$>JSHOW,ALT,NEVER (10)
$>JSHOW,LIMIT,10.0 (11)
$>JSHOW,MASK,10 (12)
$>JSHOW,POS,51.0,-114.0 (13)
$>JSHOW,AIR,AUTO,OFF (14)
$>JSHOW,FREQ,1575.4200,250 (15)
$>JSHOW,AGE,60 (16)

```

This example response is summarized in the following table:

Line	Description
1	This line indicates that the current port is set to a baud rate of 9600 (when queried from Bluetooth (A) or Serial (B))
2	This line indicates that the other port is set to a baud rate of 9600
3	This line indicates that the USB port (C) is set to a baud rate of 9600
4	This line indicates that GPGGA is output at a rate of 1 Hz from the other port
5	This line indicates that GPVTG is output at a rate of 1 Hz from the other port
6	This line indicates that GPGSV is output at a rate of 1 Hz from the other port
7	This line indicates that GPGST is output at a rate of 1 Hz from the other port
8	This line indicates that D1 is output at a rate of 1 Hz from the other
9	This line indicates that the current differential mode is WAAS
10	This line indicates the status of the altitude aiding feature
11	This indicates the threshold of horizontal performance
12	This line indicates the current elevation mask cutoff angle, in degrees
13	This line indicates the current seed position used for startup, in decimal degrees
14	This line indicates the current status of the AIR mode
15	This line indicates the current frequency of the L-band receiver
16	This line indicates the current maximum acceptable differential age in seconds

When issuing this command with the optional ‘subset’ data field (without the square brackets), a one-line response is provided. The subset field may be either CONF or GP. When CONF is specified for ‘subset’, the following response is provided:

`$>JSHOW,CONF,N,0.0,10.0,5,A,60W`

This response is summarized in the following table:

Message Component	Description
<code>\$>JSHOW,CONF</code>	Message header
<code>N</code>	‘N’ indicates no altitude aiding
<code>0.0</code>	‘0.0’ indicates the aiding value, if specified (either specified height or PDOP threshold)
<code>10.0</code>	Residual limit for the <code>\$JLIMIT</code> command, which is not supported by the SXBlue II GPS.
<code>5</code>	Elevation mask cut-off angle, in degrees
<code>A</code>	AIR mode indication
<code>60</code>	Maximum acceptable age of correction data in seconds
<code>W</code>	Current differential mode, ‘W’ indicates WAAS mode.

When GP is specified for ‘subset’, the following is an example response provided:

`$>JSHOW,GP,GGA,1.0`

This response will provide the `>$JSHOW,GP` message header, followed by each message currently being output through the current port and also the update rate for that message.

5.2.16 \$JT

This command displays the revision of the receiver engine within the iSXBlue/SXBlue II GNSS:

`$JT<CR><LF>`

The receiver will return the following response, indicating that the receiver is an SX2g (‘g’ for global differential operation) when in SBAS mode and SX2i when in Auto-Dif mode (‘i’ for internal differential operation):

`$>JT,SX2g`

The list of responses is shown in the table below:

Active Application	\$JT Reply
WAAS (SBAS)	SX2g
Auto-Dif	SX2i
Local-Dif and Local-RTK	SX2r
Local-Base	SX2b

5.2.17 \$JBIN

This command allows you to request the output of the various binary messages, but most notably, the Bin95 and Bin96 messages. These latter two messages contain all information required for post-processing. Refer to chapter 5 for the binary format.

This message has the following structure:

\$JBIN,msg,r[,PORTy]<CR><LF>

Where ‘msg’ is the message name and ‘r’ is the message rate as shown in the table.

msg	r (Hz)	Description
1	20, 10, 2, 1, 0, or .2	Binary GPS position message
2	10, 2, 1, 0, or .2	Binary message containing GPS DOP's
80	1 or 0	Binary message containing SBAS information
95	1 or 0	Binary message containing ephemeris information
96	10, 2, 1 or 0	Binary message containing code and carrier phase information
97	10, 2, 1, 0, or .2	Binary message containing process statistics
98	1 or 0	Binary message containing satellite and almanac information
99	10, 2, 1, 0, or .2	Binary message containing GPS diagnostic information

When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), this command will enact a change on the Bluetooth, Serial or USB port.

The iSxBlue/SxBlue II GNSS will reply with the following response:

\$>

Note – Higher update rates are available with a subscription on Bin 1, 2, 96, 97, 99

5.2.18 \$JI

This command displays receiver information. It has the following format:

\$JI<CR><LF>

The receiver will reply with the following message:

\$>JI,11577,1,5,11102002,01/01/1900,01/01/3003,6.3,46

This command is summarized in the following table:

Message Component	Description
11577	This field provides the serial number of the GPS engine
1	This field is the fleet number
5	This is the hardware version
11102002	This field is the production date code

01/01/1900	This field is the subscription begin date
1/01/3003	This field is the subscription expiration date and also acts as subscription code enumerator (See 4.2.10, \$JK command)
1.1	This field is the application software (or firmware) version number
46	This field is a place holder

5.2.19 \$JBOOT

Power down the Eclipse engine and then power it back up. This allows you to reboot the receiver to drop the satellite to which it is currently locked and retune to another satellite without cycling the power of the Eclipse II.

`$JBOOT<CR><LF>`

If MFA is the current application and you send the \$JBOOT command, the response is similar to the following:

`$>STARTED,MFA,Ver=1.2Qe`

If any application other than MFA is the current application and you send the \$JBOOT command, the response is similar to the following:

`$>`

5.2.20 \$JFORCEAPP

Force an application to be used in a multi-application (MFA)

Note: This command is not saved; it is only for the current session.

`$JFORCEAPP,app<CR><LF>`

where 'app' is one of the following applications:

- AUTO = allow automatic selection of the application in the MFA (default setting)
- RTK
- SBAS

Response to issuing command to force an application to be used

`$>`

5.2.21 \$JMODE

The JMODE command is used to control various GPS tracking parameters.

\$JMODE<CR><LF>

Command	Description
JMODE	Query receiver for status of JMODE settings
JMODE,BASE	Enable/disable base mode functionality or query the current setting
JMODE,FIXLOC	Set the receiver to not re-average (or re-average) its position or query the current setting
JMODE,FOREST	Enable/disable high gain functionality (for tracking under canopy) or query the current setting
JMODE,GLOFIX	Enable/disable use of RTCM v3 (RTK) GLONASS correctors
JMODE,GPSONLY	Set the receiver to use GPS data in the solution or query the current setting (if GLONASS is available, setting to YES will cause the receiver to only use GPS data)
JMODE,L1ONLY	Set the receiver to use L1 data even if L2 data is available or query the current setting
JMODE,MIXED	Include satellites that do not have DGPS or SBAS corrections in the solution
JMODE,NULLNMEA	Enable/disable output of NULL fields in NMEA 0183 messages when there is no fix (when position is lost)
JMODE,SBASNORTK	Disable/enable the use of SBAS ranging signals (carrier phase) in RTK
JMODE,SBASR	Enable/disable SBAS ranging or query the current setting
JMODE,SURETRACK	Enable/disable SureTrack functionality (default is enabled) or query the current setting
JMODE,TIMEKEEP	Enable/disable continuous time updating in NMEA 0183 messages when there is no fix (when position is lost) or query the current setting
JMODE,TUNNEL	Enable/disable faster reacquisition after coming out of a tunnel or query the current setting

5.2.22 \$JNMEA, GGALLGNSS

Configure the GGA string to include full GNSS information (the number of used GLONASS satellites will be included in the [GPGGA](#) message) or query the current setting

To include full GNSS information in GGA string:

\$JNMEA,GGALLGNSS,YES<CR><LF>

To exclude full GNSS information from GGA string:

\$JNMEA,GGALLGNSS,NO<CR><LF>

5.2.23 \$JNMEA, PRECISION

Specify or query the number of decimal places to output in the [GPGGA](#), [GPGLL](#), and [GPGNS](#) messages or query the current setting

Specify the number of decimal places

```
$JNMEA,PRECISION,x<CR><LF>
```

where 'x' specifies the number of decimal places from 1 to 8

5.2.24 \$JPRN, EXCLUDE

Exclude GPS and/or GLONASS satellites from being used in the positioning solution or query the current setting

Exclude GPS and/or GLONASS PRNs:

```
$JPRN,EXCLUDE[,GPS,x,x,x...][,GLO,y,y,y...]<CR><LF>
```

where:

- 'x,x,x...' represents the GPS PRNs you want to exclude
- 'y,y,y...' represents the GLONASS PRNs you want to exclude

5.2.25 \$JRELAY

Send user-defined text out of a serial port.

```
$JRELAY,PORTx,msg<CR><LF>
```

- 'x' = destination port where the message (MSG) will be sent
- 'msg' = message to be sent

GPS Commands

This section describes the selection of commands specific to the configuration and operation of the iSXblue/SXBlue II GNSS.

The following table provides a brief description of the commands supported by the receiver for its configuration and operation.

Table 5-3 GPS Commands

Message	Description
\$JASC	This command is used to configure the NMEA message output of the GPS engine
\$JAGE	This command is used to configure the maximum age of DGPS corrections
\$JOFF	This command is used to turn off all data output by the GPS engine
\$JMASK	This command allows you to modify the cut-off angle for tracking of GPS satellites
\$JNP	This command allows to set the number of decimal digits in the GGA and GLL output messages
\$J4STRING	This command allows you to configure the GPS for output of the GPGGA, GPGSA, GPVTG, and GPZDA messages at a specific baud rate
\$JSMOOTH	This command allows changes in the carrier phase smoothing interval
\$JTAU	Time constants to adjust level of responsiveness of SPEED and COG

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Complete' response.

5.2.26 \$JASC

Using this command, you may turn GPS data messages on at a particular update rate or off. When turning messages on, you have the choice of various update rates available, depending on what your requirements are.

This command has the following layout:

`$JASC,msg,r[,PORTy]<CR><LF>`

Where 'msg' is the name of the data message and 'r' is the message rate, as shown in the table below. Sending the command without the optional [,PORTy] data field (without the square brackets) will enact a change on the current port.

A message is turned off by sending a command with a zero value for the 'r' field.

msg	r (Hz)	Description
GPGBS	20, 10, 2, 1, 0 or .2	Satellite Fault Detection (used for RAIM)
GPGGA	20, 10, 2, 1, 0 or .2	Global Positioning System Fix Data
GPGLL	20, 10, 2, 1, 0 or .2	Geographic Position – Latitude/Longitude
GPGNS	20, 10, 2, 1, 0 or .2	GNSS (Global Navigation Satellite System) fix data
GPGRS	20, 10, 2, 1, 0 or .2	GNSS Range Residuals
GPGSA	1 or 0	GNSS DOP and Active Satellites
GPGST	1 or 0	GNSS Pseudorange Error Statistics
GPGSV	1 or 0	GNSS Satellites in View
GPRMC	10, 2, 1, 0 or .2	Recommended Minimum Specific GNSS Data
GPRRE	1 or 0	Range residual message
GPVTG	10, 2, 1, 0 or .2	Course Over Ground and Ground Speed
GPZDA	10, 2, 1, 0 or .2	Time and Date

When the ',PORTy' data field is specified (without the square brackets and where 'y' is A, B or C), this command will enact a change in the \$GPmsg message on the Bluetooth, Serial or USB port.

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.2.27 \$JAGE

This command allows you to choose the maximum allowable age for correction data. The default setting for the iSXBlue/SXBlue II GNSS is 3600 seconds for forestry applications; however, you may change this value as you feel appropriate.

Using COAST technology, the iSXBlue/SXBlue II GNSS is able to use old correction data for extended periods of time. If you choose to use a maximum correction age older than 1800 seconds for sub-60cm work, we recommend that you consider testing the receiver to ensure that the new setting meets your requirements as accuracy will slowly drift with increasing time.

This command has the following structure:

\$JAGE,age<CR><LF>

Where maximum differential age timeout variable, 'age', may be a value from 6 to 8100 seconds.

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.2.28 \$JOFF

This command allows you to turn off all data messages being output through the current or a specific port, including any binary messages, such as Bin95 and Bin96, etc.

This command has the following definition:

\$JOFF[,PORTy]<CR><LF>

When the ',PORTy' data field is specified (without the square brackets and where 'y' is A, B or C), this command will turn on the four NMEA messages on the specified port.

There are no variable data fields for this message. The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.2.29 \$JMASK

This command allows you to change the elevation cut-off mask angle for the receiver. Any satellites below this mask angle will be ignored, even if available. The factory default angle is 10 degrees (board-level default is 5 degrees), as satellites available below this angle will have significant tropospheric refraction errors.

This message has the following format:

`$JMASK,e<CR><LF>`

Where the elevation mask cut-off angle, ‘e’, may be a value from 0 to 60 degrees.

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>`

5.2.30 \$JNP

This command allows the user to specify the number of decimal places output in the GGA and GLL messages.

This command has the following definition:

`$JNP,x<CR><LF>`

Where “x” specifies the number of decimal places from 1 to 8. This command will affect both the GGA and the GLL messages.

5.2.31 \$J4STRING

This command allows the GPGGA, GPVTG, GPGSA, and GPZDA messages to be all output with the issue of a single command. The output rate of each message is limited to 1 Hz, however, you may choose to set the baud rate of the current or another port at the same time.

This command has the following definition:

`$J4STRING[,r][,PORTy] <CR><LF>`

Where ‘r’ may be one of the following baud rates:

Baud Rates
4800
9600
19200
38400
57600

When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), this command will turn on the four NMEA messages on the specified port. Remember that the Bluetooth port (A) is fixed at 57600 baud (9600 for serial number prior to 0808A100).

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>`

5.2.32 \$JSMOOTH

The \$JSMOOTH command enables the user to change the carrier smoothing interval. This command was designed to offer the user flexibility for tuning in different environments.

You may find a slight improvement in positioning performance using either the short or long smoothing interval, depending on your multipath environment. The default for this command is 900 seconds (15 minutes) or LONG.

To change the smoothing interval to 300 seconds (5 minutes), or SHORT, use the following command:

`$JSMOOTH,SHORT<CR><LF>`

If you wish to change the smoothing interval to 900 seconds (15 minutes), or LONG, use the following command:

`$JSMOOTH,LONG<CR><LF>`

You can also enter this command using the number of seconds you wish to use for smoothing. The limits are from 15 seconds to 6000 seconds (100 minutes). Use the following command, where “X” is the number of seconds you wish used for the carrier smoothing interval:

`$JSMOOTH,x<CR><LF>`

If you wish to request the status of this message, send the following command. It will return the word SHORT or LONG as well as the number of seconds used. The status of this command is also output in the \$JSHOW message:

`$JSHOW<CR><LF>`

Note - If you are unsure of the best value for this setting, it is best to be conservative and leave it at the default setting of LONG (900 seconds).

5.2.33 \$JTAU

The \$JTAU command allows you to adjust the level of responsiveness of the Speed and Course Over Ground (COG). The command has the following structure

`$JTAU,var,tc<CR><LF>`

where ‘var’ is one of the two variables in the table below and ‘tc’ is the time constant

Var
SPEED
COG

- **The speed time constant** allows you to adjust the level of responsiveness of the speed measurement provided in the \$GPVTG message. The default value of this parameter is 0.0 seconds of smoothing. Increasing the time constant will increase the level of speed measurement smoothing. The following command is used to adjust the speed time constant.

`$JTAU,SPEED,tc<CR><LF>`

Where “tc” is the new time constant that falls within the range of 0.0 to 200.0 seconds. The setting of this value depends upon the expected dynamics of the receiver. If the receiver will be in a highly dynamic environment, this value should be set to a lower value, since the filtering window would be shorter, resulting in a more responsive measurement. However, if the receiver will be in a largely static environment, this value can be increased to reduce measurement noise. The following formula provides some guidance on how to set this value initially, however, we recommend that you test how the revised value works in practice. If you are unsure of the best value for this setting, it is best to be conservative and leave it at the default setting.

$$tc \text{ (in seconds)} = 10 / \text{Maximum Acceleration (in m/s}^2\text{)}$$

You may query the receiver for the current speed time constant by issuing the same command without an argument:

```
$JTAU,SPEED<CR><LF>
```

- **The course over ground (COG) time constant** allows you to adjust the level of responsiveness of the COG measurement provided in the \$GPVTG message. The default value of this constant is 0.0 seconds of smoothing. Increasing the time constant will increase the level of COG smoothing.

The following command is used to adjust the COG time constant:

```
$JTAU,COG,tc<CR><LF>
```

Where “tc” is the new time constant that falls within the range of 0.0 to 200.0 seconds. The setting of this value depends upon the expected dynamics of the iSXBlue/SXBlue II GNSS. If the receiver will be in a highly dynamic environment, this value should be set to a lower value since the filtering window would be shorter, resulting in a more responsive measurement. However, if the receiver will be in a largely static environment, this value can be increased to reduce measurement noise. The following formula provides some guidance on how to set this value. If you are unsure of the best value for this setting, it’s best to be conservative and leave it at the default setting.

$$tc \text{ (in seconds)} = 10 / \text{maximum rate of change of course (in } ^\circ\text{/s)}$$

You may query the receiver for the current course over ground time constant by issuing the same command without an argument:

```
$JTAU,COG<CR><LF>
```

Note - If you are unsure of the best value for the SPEED and COG settings, it’s best to be conservative and leave them at the default settings of 0.0 seconds.

5.3 SBAS Commands

This section details the NMEA messages accepted by the internal SBAS engine of the iSXBlue/SXBlue II GNSS receiver. The following table provides a brief description of the commands supported by the SBAS demodulator for its control and operation.

Table 5-4 SBAS Commands

Message	Description
\$JWAASPRN	This message is used to reconfigure the WAAS and WAAS compatible PRN numbers (for use with other Space Based Augmentation Systems (SBAS) like EGNOS, MSAS, GAGAN)
\$JGEO	This command is used to poll the WAAS demodulator for information relating to your current location and WAAS satellites
\$JRD1	This command is used to poll the iSXBlue/SXBlue II GNSS for SBAS diagnostic information
\$JASC,RTCM	This feature allows you to configure the iSXBlue/SXBlue II GNSS to output RTCM data from the WAAS demodulator

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Complete' response.

5.3.1 \$JWAASPRN

This command allows you to both poll the GPS engine for the SBAS PRN's in memory, and change them, if desired.

To poll the receiver for the current SBAS PRN's, send the following message:

```
$JWAASPRN<CR><LF>
```

There are no data fields to specify in this message. The receiver will respond with the following message:

```
$>JWAASPRN,prn1,prn2
```

Where 'prn1' indicates the first PRN number and 'prn2' indicates the second PRN number. The PRN numbers for WAAS are 133 and 138 (PRN 135 has been lost). EGNOS is currently using PRN 120 and 126 but also has PRN 124 (for industry testing). MSAS currently uses PRN numbers 129 and 137.

To change from the current PRN numbers, the following message should be used:

```
$JWAASPRN[,sv1[,sv2]] <CR><LF>
```

Where 'sv1' is the PRN number of the first SBAS satellite and 'sv2' is the PRN number of the second SBAS satellite. Either 'sv1' or both 'sv1' and 'sv2' may be specified.

The iSXBlue/SXBlue II GNSS will reply with the following response:

```
$>
```

If you wish to return the unit to automatic SBAS tracking, the following command should be sent to the receiver:

```
$JWAASPRN,,,AUTO <CR><LF>
```

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.3.2 \$JGEO

This message is used to display information related to the current frequency of SBAS, and its location in relation to the iSXBlue/SXBlue II GNSS antenna.

To query the iSXBlue/SXBlue II GNSS for the currently used SBAS satellite information, use the following query:

\$JGEO<CR><LF>

The receiver will respond with the following data message:

\$>JGEO,Sent=1575.4200,Used=1575.4200,PRN=prn,Lon=lon,El=ele,Az=az

This message response is summarized in the following table:

Data Field	Description
\$>JGEO	Message header.
Sent=1575.4200	Frequency (MHz) sent to the digital signal processor
Used=1575.4200	Frequency (MHz) currently used by the digital signal processor
PRN=prn	SBAS satellite PRN number
Lon=-lon	Longitude of the satellite
El=ele	Elevation angle from the iSXBlue/SXBlue II GNSS antenna to the SBAS satellite, referenced to the horizon.
Az=az	Azimuth from the iSXBlue/SXBlue II GNSS antenna to the SBAS satellite, referenced to the horizon.

To monitor this information for dual SBAS satellites, add the ‘,ALL’ variable to the \$JGEO message as follows:

\$JGEO[,ALL] <CR><LF>

This will result in an output message similar to the following:

\$>JGEO,Sent=1575.4200,Used=1575.4200,PRN=135,Lon=-133,El=9.7,Az=114.0

\$>JGEO,Sent=1575.4200,Used=1575.4200,PRN=138,Lon=-107,El=5.0,Az=252.6

As can be seen from this output, the first message is identical to the output from the \$JGEO query, however, the second message provides information on the SBAS satellite not being currently used. Both outputs follow the format in the previous table for the \$JGEO query.

5.3.3 \$JRD1

This command is used to request diagnostic information from the iSXBlue/SXBlue II GNSS.

To command the iSXBlue/SXBlue II GNSS to output the diagnostic information message for the currently used SBAS satellites at a rate of 1 Hz, use the following query:

\$JASC,D1,1[,OTHER]<CR><LF>

The receiver will respond with the following data message:

\$>

This message may be turned off by setting the update rate to zero as follows:

\$JASC,D1,0<CR><LF>

5.3.4 \$JASC,RTCM

This command allows you to configure the iSXBlue/SXBlue II GNSS to output RTCM corrections from SBAS through either of the iSXBlue/SXBlue II GNSS ports. The correction data output is RTCM SC-104 even though SBAS uses a different over-the-air protocol (RTCA).

To have the iSXBlue/SXBlue II GNSS output RTCM corrections, send the following command to the receiver:

\$JASC,RTCM,r[,PORTy] <CR><LF>

The message status variable ‘r’ may be one of the following values:

r	Description
0	OFF
1	ON

When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), this command will turn RTCM data on or off on the Bluetooth, Serial or USB port.

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>

5.4 DGPS Beacon Commands (SXBlue II-B GPS)

This section details the NMEA messages accepted by the internal DGPS RadioBeacon demodulator of the SXBlue II-B GPS receiver. The following table provides a brief description of the commands supported by the demodulator for its control and operation.

Note – All Beacon commands listed in this section must be sent in CAPITAL letters.

Table 5-5 DGPS Beacon Commands

Message	Description	Type
\$GPMSK	Command to tune beacon receiver and turn on diagnostic information	Proprietary
\$PCSI,1 \$PCSI,2	These commands are used to get beacon status information from channel #0 and channel #1	Proprietary
\$PCSI,3,2	Command to list the 10 closest stations	Proprietary
\$PCSI,3,3	Command to display the contents of the internal station database	Proprietary
\$PCSI,0	Receiver Help Query. Lists available \$PCSI commands	Proprietary
\$PCSI,8,NITRAM	Advanced configuration settings	Proprietary
\$GPRQ,MSK	Standard NMEA query to prompt receiver for Operational Status	Standard
\$GPRQ,MSS	Standard NMEA query to prompt receiver for Performance Status	Standard

5.4.1 \$GPMSK

\$GPMSK is the Beacon Tune command. This command instructs the SXBlue II-B GPS to tune to a specified frequency and automatically select the correct MSK rate. The resulting confirmation of this message will be returned to the same port from which the command was sent. It has the following form:

\$GPMSK,fff.f,F,mmm,M,n<CR><LF>
(*\$GPMSK in Capital letters*)

Response:

\$PCSI,ACK,GPMSK,fff.f,F,mmm,M,n<CR><LF>

If using Database (D) or Automatic (A) tuning mode the command has the following form:

\$GPMSK,,D,,D<CR><LF> or \$GPMSK,,A,,A<CR><LF>

Data Field	Description
fff.f	This field is the beacon frequency in kHz (283.5 to 325) and may be left null if the following field is set to automatic "A" or Database "D"
F	This field selects the frequency selection mode, either Manual "M" or Automatic "A" or Database "D"
mmm	This field is the MSK bit rate. If the following field is set to Automatic "A" or Database "D," this field can be left null.
M	This field selects the MSK rate selection mode, either Manual "M" or Automatic "A" or Database "D"
n	Period of output of performance status message 0 to 100 seconds (\$CRMSS)

When this message is acknowledged by the SXBlue II-B GPS, it will immediately tune to the frequency specified and demodulate at the rate specified. When the "n" field is set to a non-zero value, the SXBlue II-B GPS will output the \$CRMSS message at that period through the communication port from which the SXBlue II-B GPS was tuned. When issuing the tune command with a nonzero "n" field, the periodic output of the \$CRMSS message will not impact the current output of messages. However, when tuning the SXBlue II-B GPS with a non-zero "n" field, the \$CRMSS status message will be interspersed within the preset messages on the current communication port. Most GPS software will not be able to filter the NMEA 0183 messages, causing the overall data to fail parity checking. When power to the SXBlue II-B GPS is removed and reapplied, the status output interval resets to zero (no output).

5.4.2 \$PCSI,1 and \$PCSI,2

This command is used to obtain beacon status data from channel 0 or channel 1 of the internal beacon demodulator. The resulting \$PCSI,CS0 or \$PCSI,CS1 message will be returned to the same port from which the command was sent and at the desired rate. It has the following format:

\$PCSI,1,n<CR><LF> LF or \$PCSI,2,n<CR><LF> LF
(*\$PCSI in Capital letters*)

where “n” is the desired output rate of the CSx message. Two responses will be sent by the receiver: the “Acknowledge” and the CSx responses. The acknowledge response is sent once and if “n” is not specified, the CSx message is also sent once by the receiver.

Acknowledge Response:

\$PCSI,ACK,1,n or \$PCSI,ACK,2,n

CSx Response:

\$PCSI,CSx,Pxxx-y.yyy,SN,fff.f,F,mmm,M,SS,SNR,MTP,WER,ID,H,T,G

Data Field	Description
CSx	CS0 for channel #0 (from \$PCSI,1) or CS1 for channel #1 from (\$PCSI,2)
Pxxx-y.yyy	Resident Beacon engine firmware version
SN	Internal Beacon engine serial number
fff.f	Beacon frequency (being searched or tracked) in kHz (283.5 to 325)
F	Frequency mode of the receiver, either Manual “M” or Automatic “A” or Database “D”
Mmm	MSK bit rate being searched or tracked
M	MSK rate mode of the receiver, either Manual “M” or Automatic “A” or Database “D”
SS	Signal Strength of the received signal. Higher the better.
SNR	Signal to Noise Ratio. Higher the better.
MTP	Message Throughput. Higher the better.
WER	Word Error Rate. It displays the percentage of bad 30-bit RTCM words in the last 25 words. Lower the better.
ID	Beacon Station ID 1024 (undefined), 0 – 1023 (valid range)
H	Health of tuned Beacon Station 8 (undefined), 0 – 7 (valid range)
T	\$PCSI,1 or \$PCSI,2 output period (0 to 99)
G	Automatic Gain Control in dB (0 to 48 dB)

After a power cycle, the \$PCSI,CSx will no longer be output. If you wish to have the CS0 message output for every power cycle, use the following derivative of this command:

\$PCSI,1,n,S<CR><LF>
(*\$PCSI and S in Capital letters*)

Response:

\$PCSI,ACK,1,n,S

Where “n” is the desired output period in seconds (from 0 to 99). The ‘S’ field must be present and be capitalized as well as ‘\$PCSI’.

5.4.3 \$PCSI,3,2

This command displays the ten closest stations. It has the following format:

\$PCSI,3,2<CR><LF>
(*\$PCSI in Capital letters*)

Response:

\$PCSI,3,2,StationID,Name,Freq,Status,Time,Date,Distance,Health,WER

Data Field	Description
StationID	Beacon Station ID
Name	Station Name
Freq	Beacon Station Frequency (no decimal point, ex 296.0 kHz displayed as 2960)
Status	0 (operational), 1 (undefined), 2 (no information), 3 (do not use)
Time	Not implemented.
Date	Not implemented. Currently displays as 0
Distance	Calculated in nautical miles
Health	-1 (not updated), 8 (undefined), 0 – 7 (valid range)
WER	-1 (not updated), 0 – 100 (valid range)

Example:

```
$PCSI,ACK,3,2
$PCSI,3,2, 929,St Jean    QC,2960,0,14,0,0,-1,-1
$PCSI,3,2, 919,Cardinal  ON,3060,0,94,0,0,-1,-1
$PCSI,3,2, 927,Lauzon    QC,3090,0,123,0,0,-1,-1
$PCSI,3,2, 844,Hudson Falls NY,3240,0,136,0,0,-1,-1
$PCSI,3,2, 800,Brunswick  ME,3160,0,178,0,0,-1,-1
$PCSI,3,2, 801,Portsmouth NH ,2880,0,188,0,0,-1,-1
$PCSI,3,2, 799,Penobscot  ME,2900,0,207,0,0,-1,-1
$PCSI,3,2, 926,Rivière duLoupQC,3000,0,210,0,0,-1,-1
$PCSI,3,2, 772,Acushnet   MA,3060,0,247,0,0,-1,-1
$PCSI,3,2, 839,Youngstown NY,3220,0,269,0,0,-1,-1
```

5.4.4 \$PCSI,3,3

This command displays the contents of the station database. It has the following format:

\$PCSI,3,3<CR><LF>
(*\$PCSI in Capital letters*)

Response:

\$PCSI,3,3,IDref1,IDref2,StationID,Name,Freq,Lat,Lon,Datum,Status

Data Field	Description
IDref1	Reference Station ID #1
IDref2	Reference Station ID #2
StationID	Station ID
Name	Station Name
Freq	Beacon Station Frequency (no decimal point, ex 296.0 kHz displayed as 2960)
Lat	Scaled by 364 (positive value indicates North and "-" indicates South)
Lon	Scaled by 182 (positive value indicates East and "-" indicates West)
Datum	1 (Nad83), 0 (WGS84)
Status	0 (operational), 1 (undefined), 2 (no information), 3 (do not use)

Example:

```
$PCSI,3,3,0793,0823,0513,Skomvaer ,2865,24540,2163,1,0
$PCSI,3,3,0736,1024,0469,Goteborg ,2965,20972,2181,1,0
$PCSI,3,3,0765,1024,0495,Bad Abbach ,3145,17812,2190,1,1
$PCSI,3,3,1024,1024,1024,Punta della Maes,2985,16441,2242,1,1
$PCSI,3,3,0820,0821,0491,Mohrdorf ,3080,19777,2254,1,0
$PCSI,3,3,0732,1024,0466,Kullen ,2930,20493,2266,1,0
$PCSI,3,3,0733,1024,0467,Hjortensudde ,3020,21343,2305,1,0
$PCSI,3,3,1024,1024,1024,St. Vito lo Capo,3065,13899,2317,1,1
```

5.4.5 \$PCSI,0

This command queries the SXBlue II-B GPS for a list of available proprietary \$PCSI beacon commands (must be entered in Capital letters):

```
$PCSI,0<CR><LF>
```

The response is :

```
$PCSI,ACK,0
$PCSI,Pxxx-y,yyy (Beacon engine firmware version)
$PCSI,0 ->HELP Msg
$PCSI,1 ->Status Channel 0,<n>,<S> (See section 4.5.2)
$PCSI,2 ->Status Channel 1,<n> (See section 4.5.2)
$PCSI,3 ->Dump Search,<x> (See section 4.5.3 and 4.5.4)
$PCSI,4 ->Wipe Search
$PCSI,5 ->(Do not use)
$PCSI,6 ->Beacon Engine Reset
$PCSI,7 ->RTCM Mode
```

5.4.6 \$PCSI,8,NITRAM

These commands are normally used for production configuration settings, but are listed here for advanced operations only. Do not use these commands unless you know exactly what you are doing. The commands must be sent in Capital letters.

\$PCSI,8,NITRAM,A: Sets the power-up default to Automatic Mode (Default)

\$PCSI,8,NITRAM,E: Sets the power-up default to Database Mode

\$PCSI,8,NITRAM,W: Enable weak signal tracking (WER of 50%)

\$PCSI,8,NITRAM,Q: Enable Legacy Q value output in place of WER

5.4.7 \$GPCRQ,MSK (\$CRMSK)

This standard NMEA query prompts the SXBlue II-B GPS for its operational status. It has the following format:

\$GPCRQ,MSK<CR><LF>

Response:

\$CRMSK,fff.f,F,mmm,M,n*CS

Data Field	Description
fff.f	This field is the beacon frequency in kHz (283.5 to 325)
F	This field shows the frequency selection mode, either Manual "M" or Automatic "A" or Database "D"
mmm	This field is the MSK bit rate
M	This field shows the MSK rate selection mode, either Manual "M" or Automatic "A" or Database "D"
n	Period of output of performance status message 0 to 100 seconds (\$CRMSS)

5.4.8 \$GPCRQ,MSS (\$CRMSS)

This standard NMEA query prompts the SXBlue II-B GPS for its performance status:

\$GPCRQ,MSS<CR><LF>

Response:

\$CRMSS,SS,SNR,fff.f,mmm*CS

Data Field	Description
SS	Signal Strength of the received signal. Higher the better.
SNR	Signal to Noise Ratio. Higher the better.
fff.f	This field is the beacon frequency in kHz (283.5 to 325)
mmm	This field is the MSK bit rate
*CS	NMEA Checksum

5.5 OmniSTAR Commands (SXBlue II-L GPS)

This section details the commands accepted by the SXBlue II-L GPS to configure and monitor the OmniSTAR functionality of the receiver. Table 4-5 provides a brief description of the commands supported by the OmniSTAR built-in sensor for its configuration and control.

Table 5-6 OmniSTAR Commands

Message	Description
\$JLBEAM	Request the current spot beam tables in use by the OmniSTAR receiver
\$JLXBEAM	Request debug information for the current spot beam tables
\$JFREQ	Tune the OmniSTAR receiver either in automatic mode or manually
\$JOMS	Request the OmniSTAR engine to provide the current subscription information for the OmniSTAR service
\$JBOOT,OMNI	Allows you to reset the L-band high precision services resolution algorithm

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Completed' response.

5.5.1 \$JLBEAM

This command displays the current spot beams used by the OmniSTAR built-in engine. This command has the following layout:

\$JLBEAM<CR><LF>

The receiver will output a first line component (1) and a “multiple second line” component (2) to (n):

\$>JLBEAM,Sent freq1,Used freq2,Baud xxx,Geo xxx

(1)

\$>JLBEAM,freq1,long1,lat1,baud1,satlong1

(2)

.....

.....

.....

\$>JLBEAM,freqn,longn,latn,baudn,satlongn

(n)

The first line (1) of this output is described in the following table:

Data Field	Description
Sent freq1	Frequency (MHz) sent to the digital signal processor
Used freq2	Frequency (MHz) currently being used by the digital signal processor
Baud xxx	Currently used baud rate of the acquired signal
Geo xxx	Currently used satellites longitude (in degrees)

The second line, and those that follow (2) to (n), are described in the following table:

Data Field	Description
freq	Frequency (MHz) of the spot beam
long	Longitude of the center of the spot beam (in degrees)
lat	Latitude of the center of the spot beam (in degrees)
baud	Baud rate at which this spot beam is modulated
satlong	Satellites longitude (in degrees)

Example:

```

$>JLBEAM,Sent 1557.8450,Used 1557.8450,Baud 1200,Geo 0
$>JLBEAM,1535.1250,-26,40,600,(9999)
$>JLBEAM,1535.1575,65,30,600,(9999)
$>JLBEAM,1535.1850,136,-25,1200,(160)
$>JLBEAM,1535.1850,172,-40,1200,(160)
$>JLBEAM,1557.8350,-100,50,1200,(9999)
$>JLBEAM,1557.8350,-101,66,1200,(9999)
$>JLBEAM,1557.8450,-74,52,1200,(9999)
$>JLBEAM,1557.8550,-122,45,1200,(9999)
$>JLBEAM,1535.1375,-85,2,1200,(-98)
$>JLBEAM,1535.1375,-60,-25,1200,(-98)
$>JLBEAM,1535.1375,-142,15,1200,(-98)
$>JLBEAM,1535.1375,109,2,1200,(109)
$>JLBEAM,1535.1375,140,38,1200,(109)
$>JLBEAM,1537.4400,23,-2,1200,(25)
$>JLBEAM,1537.4400,14,59,1200,(25)
$>JLBEAM,1537.4400,11,28,1200,(25)

```

5.5.2 \$JLXBEAM

This command displays the current spot beams used by the OmniSTAR built-in engine. This command has the following layout:

\$JLBEAM<CR><LF>

Response:

```

$>JLBEAMEX,0 (1)
$> Table:0 (2)
$> Beam:1,DDSfreq1,long1,lat1,symbol1,satlong1
$> Beam:n,DDSfreqn,longn,symboln,satlongn
$> Table:1

```

The response components are described in the following table:

Data Field	Description
DDSfreq	DDS Frequency
long	Longitude of the spot beam centroid (in degrees)
lat	Latitude of the spot beam centroid (in degrees)
symbol	Symbol rate used for that particular spot beam
satlong	Satellites longitude (in degrees)

Example:

```

$>JLBEAMEX
$> Beam:22,1535125000,600,-26,40,2,41,0,9999,*
$> Beam:21,1535157500,600,65,30,31,18,-21,9999,*
$> Beam:13,1535185000,1200,136,-25,23,28,-40,160,*
$> Beam:13,1535185000,1200,172,-40,13,26,-26,160,*
$> Beam:24,1557835000,1200,-100,50,6,28,0,9999,*
$> Beam:24,1557835000,1200,-101,66,12,6,0,9999,*
$> Beam:25,1557845000,1200,-74,52,12,30,-30,9999,*
$> Beam:26,1557855000,1200,-122,45,11,30,25,9999,*
$> Beam:8,1535137500,1200,-85,2,30,20,-5,-98,*
$> Beam:8,1535137500,1200,-60,-25,34,36,-20,-98,*
$> Beam:8,1535137500,1200,-142,15,20,35,45,-98,*
$> Beam:4,1535137500,1200,109,2,14,19,-27,109,*
$> Beam:4,1535137500,1200,140,38,27,51,-56,109,*
$> Beam:7,1537440000,1200,23,-2,29,49,50,25,*
$> Beam:7,1537440000,1200,14,59,41,23,34,25,*
$> Beam:7,1537440000,1200,11,28,17,24,0,25,*

```

5.5.3 \$JFREQ

This message allows the SXBlue II-L GPS to be either manually or automatically tuned to the OmniSTAR satellite frequency. This command has the following structure:

\$JFREQ,freq,symb<CR><LF>

Where “freq” is the frequency in KHz and “symb” is the symbol rate (1200 or 2400 baud).

The receiver will reply with the following response:

\$>

Entering a frequency of zero with no associated symbol rate will place the OmniSTAR engine into automatic mode. Entering a valid frequency and symbol rate will manually tune the receiver.

The following table provides frequency information for the OmniSTAR satellites. This information is subject to change. Visit www.omnistar.com for up-to-date information.

Coverage Area	Longitude	Frequency (KHz)	Baud Rate	Satellite
Eastern US	101 West	1557845.0	1200	MSV-E
Central US	101 West	1557835.0	1200	MSV-C
Western US	101 West	1557855.0	1200	MSV-W
North, Central and South America, Caribbean	98 West	1535137.5	1200	AM-SAT
Asia, Pacific Islands	109 East	1535137.5	1200	AP-SAT
Europe, Africa, Middle East	25 East	1537440.0	1200	EUSAT
Australia, Far East	160 East	1535185.0	1200	OCSAT

Sending the \$JFREQ command does not require sending a \$JSAVE.

5.5.4 \$JOMS

This command requests the raw OmniSTAR subscription information and has the following form:

\$JOMS

The receiver will respond with the following message:

\$>JOMS,Opt,Source,Type,AccrReduction,StartDate,EndDate,HourGlass,ExtentionTime,LinkVector,SoftwareVersion

Data Field	Description
Opt	Indicates a WET or DRY Subscription
Source	RTCM Source ID, VBS, or VRC
Type	Subscription Type (VBS, XP, HP)
AccrReduction	<i>Not Used</i>
StartDate	Subscription Start Date
EndDate	Subscription End Date
HourGlass	Seconds of metered time
ExtensionTime	Seconds of extension
LinkVector	Hexadecimal mask of links
SoftwareVersion	OmniSTAR Library version

Example:

\$>JOMS,DRY,ALL,VBS,0,01/06/2000,01/06/2001,0,0,1E00,1.43

5.5.5 \$JHP

The JHP command is used to control the operation of the L-band high precision services engine.

\$JHP

Command	Description
OTHER	Specifying OTHER instructs the iSXBlue/SXBlue II GNSS to use external corrections input through the opposite port from which you are communicating (valid for Port A and B)
PORTy	Specifying PORTy (where y is A, B or C) instructs the SXBlue II GPS to use external corrections input through the specified port (A = Bluetooth, B = RS-232, C = USB)
THIS	THIS instructs the receiver to use external correction input through the same port from which you are communicating
WAAS*	Specifying WAAS instructs the iSXBlue/SXBlue II GNSS to use SBAS corrections. This is also the response when using the Local-Base application
X	Specifying X instructs the receiver to use the Auto-Dif mode (the receiver will respond back with \$JDIF,AUTO to a \$JDIF query)
RTK	This is the response when running the Local-Dif and Local-RTK applications
NONE	In order for the iSXBlue/SXBlue II GNSS to operate in autonomous mode, the NONE argument may be specified in this command.
BEACON	Specifying BEACON instructs the SXBlue II-B GPS receiver to use the internal beacon demodulator as the source of differential correction
LBAND	Specifying LBAND instructs the SXBlue II-L GPS to use OmniSTAR differential correction while in the LBAND application

5.6 Auto-Dif Commands in Autonomous Mode

This current section provides information related to the NMEA messages accepted by the iSXBlue/SXBlue II GNSS' optional Auto-Dif application. The following table provides a brief description of the commands supported by the Auto-Dif application for its control and operation in Autonomous mode.

The following section (4.8) provides information on using Auto-Dif in Base Station mode.

Table 5-7 Auto-Dif Commands in Autonomous Mode

Message	Description
\$RAD,1	This command is used to display the current reference position
\$JRAD,1,P	Store present position as reference
\$JRAD,1,lat,lon,alt	Store entered position as reference
\$RAD,2	Use reference position as calibration point
\$JRAD,3	Use current position as calibration point

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Completed' response.

5.6.1 \$JRAD,1

This command is used to display the current reference position.

This command has the following format:

\$JRAD,1<CR><LF>

The iSXBlue/SXBlue II GNSS will reply with a response similar to the following:

\$>JRAD,1,51.00233513,-114.08232345,1050.212

Upon startup of the iSxBlue/SxBlue II GNSS with the Auto-Dif application running (as opposed to the SBAS application), no reference position will be present in memory. If you attempt to query for the reference position, the iSxBlue/SxBlue II GNSS will respond with the following message:

\$>JRAD,1,FAILED,Present Location Not Stable

5.6.2 \$JRAD,1,P

This command records the current position as the reference with which to compute Auto-Dif corrections. This would be used in relative mode, as no absolute point information is specified. The \$JRAD,2 command will need to be issued after this command.

This command has the following format:

\$JRAD,1,P<CR><LF>

The iSxBlue/SxBlue II GNSS will reply with the following response:

\$>JRAD,1P,OK

5.6.3 \$JRAD,1,lat,lon,alt

This command is a derivative of the \$JRAD,1,P command and is used when absolute positioning is desired. The \$JRAD,2 command will need to be issued after this command.

This command has the following layout:

\$JRAD,1,lat,lon,alt<CR><LF>

Where the data fields in this command are described in the following table.

Data Field	Description
lat	This is the latitude of the reference point in degrees decimal degrees.
lon	This is the longitude of the reference point in degrees decimal degrees.
alt	This is the ellipsoidal height of the reference point in m. (Ellipsoidal height can be calculated by adding the altitude and geoidal separation, both available from the GGA sentence. See example below.)

Example of ellipsoidal height calculation:

\$GPGGA,173309.00,5101.04028,N,11402.38289,W,2,07,1.4,1071.0,M,-17.8,M,6.0,0122*48
(and ellipsoidal height = 1071.0 + (-17.8) = 1053.2 meters)

The iSxBlue/SxBlue II GNSS will reply with the following response:

\$>JRAD,lat,lon,alt

Note - Both latitude and longitude must be entered as decimal degrees. The receiver will not accept the command if there are no decimal places.

5.6.4 \$JRAD,2

This command is used to force the receiver to use the new reference point. This command is normally used following a \$JRAD,1 type command.

This command has the following format:

`$JRAD,2<CR><LF>`

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>JRAD,2,OK`

5.6.5 \$JRAD,3

This command is used for two primary purposes. The first is to invoke the Auto-Dif function once the unit has started up (with the Auto-Dif application active). The second purpose is to update the Auto-Dif solution (calibration) using the current position as opposed to the reference position used by the \$JRAD,2 command. This command has the following format:

`$JRAD,3<CR><LF>`

The receiver will respond with the following command if it has tracked enough satellites for a long enough period before you sent the command. This period of time can be from 3 to 10 minutes long and is used for modeling errors going forward.

`$>JRAD,3,OK<CR><LF>`

If the Auto-Dif algorithms do not find that there has been sufficient data collected, the iSXBlue/SXBlue II GNSS will send the following response:

`$>JRAD,3,FAILED,Not Enough Stable Satellite Tracks`

If you receive the failure message after a few minutes of operation, try again shortly until the 'OK' acknowledgement message is sent. The Auto-Dif application will begin operating as soon as the \$JRAD,3,OK message has been sent, however, you will still need to define a reference position for Auto-Dif, unless relative positioning is sufficient for your needs.

5.7 Auto-Dif Commands in Base Station Mode

This section provides information related to the NMEA messages accepted by the iSXBlue/SXBlue II GNSS' optional Auto-Dif application. The following table provides a brief description of the commands supported by the Auto-Dif application for its control and operation in a fixed Base Station mode.

Table 5-8 Auto-Dif Commands for Base Station Operation

Message	Description
\$JRAD,1	This command is used to display the current reference position
\$JRAD,1,P	Store present position as reference
\$JRAD,1,lat,lon,alt	Store entered position as reference
\$RAD,2	Use reference position as base
\$JRAD,3	Use current position as base
\$JRAD,9	Initialize Base Station feature

The following subsections provide detailed information relating to the use of each command.

Note - Please ensure that you save any changes that you wish to survive beyond the current power-up by using the \$JSAVE command and wait for the '\$> Save Complete' response.

5.7.1 \$JRAD,1

This command is used to display the current reference position.

This command has the following format:

\$JRAD,1<CR><LF>

The iSXBlue/SXBlue II GNSS will reply with a response similar to the following:

\$>JRAD,1,51.00233513,-114.08232345,1050.212

Upon startup of the iSXBlue/SXBlue II GNSS with the Auto-Dif application running (as opposed to the SBAS application), no reference position will be present in memory. If you attempt to query for the reference position, the receiver will respond with the following message:

\$>JRAD,1,FAILED,Present Location Not Stable

5.7.2 \$JRAD,1,P

This command records the current position as the reference with which to compute Base Station corrections. This would be used in relative mode, as no absolute point information is specified. This command is normally followed by \$JRAD,2.

This command has the following format:

\$JRAD,1,P<CR><LF>

The iSXBlue/SXBlue II GNSS will reply with the following response:

\$>JRAD,1P,OK

5.7.3 \$JRAD,1,lat,lon,alt

This command is a derivative of the \$JRAD,1,P command. It is normally followed by a \$JRAD,2 command.

This command has the following layout:

`$JRAD,1,lat,lon,alt<CR><LF>`

Where the data fields in this command are described in the following table.

Data Field	Description
lat	This is the latitude of the reference point in degrees decimal degrees.
lon	This is the longitude of the reference point in degrees decimal degrees.
alt	This is the ellipsoidal height of the reference point in m. (Ellipsoidal height can be calculated by adding the altitude and geoidal separation, both available from the GGA sentence. See example below.)

Example of ellipsoidal height calculation:

`$GPGGA,173309.00,5101.04028,N,11402.38289,W,2,07,1.4,1071.0,M,-17.8,M,6.0,0122*48`

ellipsoidal height = 1071.0 + (-17.8) = 1053.2 meters

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>JRAD,lat,lon,alt`

Note - Both latitude and longitude must be entered as decimal degrees. The receiver will not accept the command if there are no decimal places.

5.7.4 \$JRAD,2

This command is used to force the receiver to use the new reference point. This command is normally used following a \$JRAD,1 type command.

This command has the following format:

`$JRAD,2<CR><LF>`The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>JRAD,2,OK`

5.7.5 \$JRAD,3

This command is used for two primary purposes. The first is to invoke the Auto-Dif function once the unit has started up (with the Auto-Dif application active). The second purpose is to update the Auto-Dif solution using the current position as opposed to the reference position used by the \$JRAD,2 command. This command has the following format:

`$JRAD,3<CR><LF>`

The receiver will respond with the following command if it has tracked enough satellites for a long enough period before you sent the command. This period of time can be from 3 to 10 minutes long and is used for modeling errors going forward.

`$>JRAD,3,OK<CR><LF>`

If the Auto-Dif algorithms do not find that there has been sufficient data collected, the iSXBlue/SXBlue II GNSS will send the following response:

```
$>JRAD,3,FAILED,Not Enough Stable Satellite Tracks
```

If you receive the failure message after a few minutes of operation, try again shortly until the 'OK' acknowledgement message is sent. The Auto-Dif application will begin operating as soon as the \$JRAD,3,OK message has been sent, however, you will still need to define a reference position for Auto-Dif using the \$JRAD,1,lat,lon,alt , unless relative positioning is sufficient for your needs.

5.7.6 \$JRAD,9

This command initializes the Base Station feature and uses the previously entered point, either with \$JRAD,1,P or \$JRAD,1,lat,long,alt, as the reference with which to compute Base Station corrections. When using this command, the position output by the receiver will not vary (as opposed to the \$JRAD,2) and is the preferred method.

This command has the following format:

```
$JRAD,9,1,1<CR><LF>
```

The receiver will reply with the following response:

```
$>JRAD,9,OK
```

To disable the base station mode the following command should be sent:

```
$JRAD,9,0
```

Note – The \$JASC,RTCM,1,PORTy command must be sent to the receiver to start outputting standard RTCM corrections. The other receiver (rover) must be set to use RTCM corrections coming in from one of its communication ports.

If operating the iSXBlue/SXBlue II GNSS with the latest version of the Auto-Dif firmware, the \$JMODE,BASE,YES command (followed by a \$JSAVE) can be used to configure the receiver to automatically restart in Base Mode after a power cycle. Allow 4 to 5 minutes for the receiver to start outputting RTCM correction after power up.

To take the receiver out of this permanent base mode status, issue the following command: \$JMODE,BASE,NO followed by a \$JSAVE.

5.8 Local Differential Commands

The Local Differential Commands are used for all three modes of local differential operations: Local-Dif, Local-RTK and Local-Base. Make sure proper application is activated on the iSXBlue/SXBlue II GNSS before operation.

This section provides information related to the NMEA messages accepted by the iSxBlue/SxBlue II GNSS optional Local Differential applications. The following table provides a brief description of these commands.

Table 5-10 Local Differential Commands

Message	Modes used	Description
\$JRTK,1	Base	This command is used to display the stored Manual-reference position
\$JRTK,1,Other	Base	This command is used to display the stored Auto-reference position
\$JRTK,1,P	Base	Store present (computed) position as reference
\$JRTK,1,R	Base	Force Base Station to re-average its location
\$JRTK,1,lat,lon,alt	Base	Store entered position as reference (Manual)
\$JRTK,5	Base	Show and set transmission status of RTK corrections
\$JRTK,6	Base	Show status/progress of base station
\$JRTK,9	Base	Save base station location determined during the averaging process to the Manual-Reference memory
\$JRTK,17	Base	Display coordinates currently being used as reference
\$JASC,DFX	Base	Activate RTK output on a communication port
\$JRTK,12	Rover	Enable/Disable the receiver to go into fixed integer mode
\$JRTK,18	Rover	Display distance to base station

Note – The iSxBlue/SxBlue II GNSS stores two different reference positions in distinct memory locations. The first is called Manual-Reference and the other is called Auto-Reference (that the receiver obtains automatically by averaging).

\$JRTK,1 returns the manually entered reference position. \$JRTK,1,OTHER returns the receiver's automatic reference position that the receiver obtains by averaging.

At startup, the receiver will determine which of these two locations it is nearest to (within 10 meters), and use that location. If it is not within 10 meters of either of these two locations, it will compute a new location by averaging and store that location in the Auto-Reference memory. To store this new location in the Manual-Reference memory, the \$JRTK,9 command should be used.

A user can never change the content of the Auto-Reference memory and the receiver will never automatically change the Manual-Reference memory without the user's request.

To make the base station automatic, all you need to do is turn on the differential output with the \$JASC,DFX command and do a \$JSAVE. Then, wherever you put the base station, it will do a quick average and begin transmitting RTK corrections. Furthermore, if you power down the Base station and then power it up without changing its location, it will use the previously averaged (which has been saved in memory). Of course, you can still enter the position manually.

If you move the base station to a new location, the old average gets overwritten, but not the manually entered location.

If you move it to the manually entered location, it will not do an average; instead it will just start with the manually entered location.

The threshold for this logic determining that it is near to a saved location is 10 meters (three dimensional Lat, Lon, Height), using the receiver's estimated location. Ellipsoidal Height must be used and not Mean Sea Level.

5.8.1 \$JRTK,1

This command is used to display the manual-reference position currently stored in the receiver's internal memory.

This command has the following format:s

`$JRTK,1<CR><LF>` for the manual-reference position

`$JRTK,1,Other<CR><LF>` for the auto-reference (auto averaged) position

The iSXBlue/SXBlue II GNSS will reply with a response similar to the following:

`$>JRTK,1,51.00233513,-114.08232345,1050.212`

5.8.2 \$JRTK,1,P

This command records the current computed position as the reference with which to compute Base Station corrections.

This command has the following format:

`$JRTK,1,P<CR><LF>`

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>JRTK,1P,OK`

5.8.3 \$JRTK,1,R

This command causes the base station to re-average it's location. Differential transmission will stop until the location is determined.

This command has the following format:

`$JRTK,1,R<CR><LF>`

The iSXBlue/SXBlue II GNSS will reply with the following response:

`$>JRTK,1R,OK`

5.8.4 \$JRTK,1,lat,lon,alt

This command is a derivative of the \$JRTK,1,P command. The \$JRTK,1,lat,lon,height always sets the Manual-Reference memory and forces the Base station receiver to use this as the reference location.

This command has the following layout:

\$JRTK,1,lat,lon,alt<CR><LF>

Where the data fields in this command are described in the following table.

Data Field	Description
lat	This is the latitude of the reference point in degrees decimal degrees.
lon	This is the longitude of the reference point in degrees decimal degrees.
alt	This is the <u>ellipsoidal height</u> of the reference point in m. (Ellipsoidal height can be calculated by adding the altitude and geoidal separation, both available from the GGA sentence. See example below.)

Example of ellipsoidal height calculation:

\$GPGGA,173309.00,5101.04028,N,11402.38289,W,2,07,1.4,1071.0,M,-17.8,M,6.0, 0122*48
 Ellipsoidal height = 1071.0 + (-17.8) = 1053.2 meters

The iSXBlue/SXBlue II GNSS will use this reference position immediately and reply with the following response:

\$>JRTK,lat,lon,alt

Note - Both latitude and longitude must be entered as decimal degrees. The receiver will not accept the command if there are no decimal places.

5.8.5 \$JRTK,5

This command is used to show or to set the base station transmission status of the iSXBlue/SXBlue II GNSS.

This command has the following format:

\$JRTK,5[,Tx]<CR><LF>

Where “Tx” is set to “0” to Suspend transmission or to “1” to Resume transmission (without the brackets).

When used without any value for “Tx”, the receiver returns the current status of the transmission:

\$>JRTK,5,0 if transmission is suspended, otherwise response is \$>JRTK,5,1

5.8.6 \$JRTK,6

This command is used to show the progress of the base station.

This command has the following format:

\$JRTK,6<CR><LF>

The iSXBlue/SXBlue II GNSS will respond with the following information:

\$>JRTK,6,TimeToGo, ReadyTransmit,Transmitting

where,

- TimeToGo: Seconds left until ready to transmit RTK
- ReadyTransmit: Non zero when configured to transmit and ready to transmit RTK on at least one communication port. It is a BitMask of the transmitting port, with bit 0 = port A (Bluetooth), bit 1 = port B (Serial) and bit 2 = port C (USB). It will be equal to "Transmitting" unless Transmission has been suspended with the \$JRTK,5,0 command above.
- Transmitting: Non zero when actually transmitting RTK on at least one port. It is a BitMask of the transmitting port, with bit 0 = port A (Bluetooth), bit 1 = port B (Serial) and bit 2 = port C (USB).

5.8.7 \$JRTK,9

This command saves the "averaged" base-station location that was determined during the base station's averaging process. This is saved to non-volatile memory and overwrites the location used by the \$JRTK,1 command.

Note that the base station may determine that averaging is not needed and instead use a previous location. If this is the case, then \$JRTK,9 will actually re-save the previous location. Basically, \$JRTK,9 saves whatever is being used and this value can be viewed with the \$JRTK,17 command.

Generally, the \$JRTK,9 command is not required since the averaged base station location is saved automatically in a 2nd internal memory location (Auto-Reference) that is kept separate from that used by \$JRTK,1 (Manual-Reference). This 2nd memory location is only overwritten when the base station is moved by more than 10 meters.

This command has the following format:

```
$JRTK,9<CR><LF>
```

5.8.8 \$JRTK,17

The \$JRTK,17 command displays the Lat, Lon Height coordinate that is currently used as a reference for the base station.

This command has the following format:

```
$JRTK,17<CR><LF>
```

The iSXBlue/SXBlue II GNSS will reply with a response similar to the following:

```
$>JRTK,17,51.00233513,-114.08232345,1050.212
```

5.8.9 \$JASC,DFX

This command allows you to configure the iSXBlue/SXBlue II GNSS used as base station to output RTK corrections through either of the iSXBlue/SXBlue II GNSS ports. The correction data output is a proprietary RTCM format and can only be used with iSXBlue/SXBlue family of products.

To have the iSXBlue/SXBlue II GNSS output RTK corrections, send the following command to the receiver:

`$JASC,DFX,r[,PORTy]<CR><LF>`

The message status variable ‘r’ may be one of the following values:

r	Description
0	OFF
1	ON

When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), this command will turn RTCM data on or off on the Bluetooth, Serial or USB port.

The iSxBlue/SxBlue II GNSS will reply with the following response:

`$>`

5.8.10 \$JASC,CMR

This command only applies to an Eclipse base station receiver when using GPS dual frequency RTK mode. RTK is relative to the reference position (base only).

Set the proprietary CMR messages to on or off to provide corrections to the rover

`$JASC,CMR,r[,PORTy]<CR><LF>`

The message status variable ‘r’ may be one of the following values:

r	Description
0	OFF
1	ON

When the ‘,PORTy’ data field is specified (without the square brackets and where ‘y’ is A, B or C), this command will turn CMR data on or off on the Bluetooth, Serial or USB port.

The iSxBlue/SxBlue II GNSS will reply with the following response:

`$>`

5.8.11 \$JRtk,12

This command is used to enable or disable the rover to go into a fixed integer solution mode (i.e. RTK mode).

This command has the following format:

`$JRtk,12[,Allow]<CR><LF>`

where “Allow” is set to “0” to stay in Local-Dif mode or to “1” to allow computation of a fixed RTK solution. When used without any value for the “Allow” variable, the receiver returns the current status of the solution computation:

\$>JRTK,12,0 for Local-Dif mode, otherwise response is \$>JRTK,12,1 if RTK is enabled.

5.8.12 \$JRTK,18

This command is used on the rover and displays the distance to the base station.

This command has the following format:

\$JRTK,18<CR><LF>

and the receiver replies with a response similar to the following:

\$>JRTK,18,distance (m)

5.8.13 \$JQUERY,RTKPROG

Perform a one-time query of RTK fix progress information.

\$JQUERY,RTKPROG<CR><LF>

As an alternative you can log this as a message using the [JASC,PSAT,RTKPROG](#) command.

\$>JQUERY,RTKPROG,R,F,N,SS1,SS2,SS3,MASK*CC<CR><LF>

Message	Description
R	1 = Ready to enter RTK ambiguity fix 0 = Not ready to enter RTK ambiguity fix
F	1 = Receiver running in RTK ambiguity fix mode 0 = Receiver not running in RTK ambiguity fix mode
N	Number of satellites used to fix
SS1	summer-1 SS1 must be significantly larger than SS2 and SS3 to enter R=1 mode
SS2	summer-2
SS3	summer-3
MASK	Bit mask; bits identify which GNSS observables are being received from base recently (1 = GPS, 3 = GPS + GLONASS)
*CC	Checksum
<CR>	Carriage return
<LF>	Line Feed

5.8.14 \$JQUERY,RTKSTAT

Perform a one-time query of the most relevant parameters affecting RTK.

\$JQUERY,RTKSTAT<CR><LF>

As an alternative you can log this as a message using the [JASC,PSAT,RTKSTAT](#) command.

\$>JQUERY,RTKSTAT,MODE,TYP,AGE,SUBOPT,DIST,SYS,NUM,SNR,RSF,BSF,HAG,ACCSTAT,SNT

5.8.15 \$JRTCM3,EXCLUDE

Specify RTCM3 message types to not be transmitted (excluded) by base station

Specify RTCM3 message to not be transmitted:

```
$JRTCM3,EXCLUDE[,1004][,1005][,1006][,1007][,1008][,1012][,1033]<CR><LF>
```

Query the current setting:

```
$JRTCM3,EXCLUDE<CR><LF>
```

5.8.16 \$JRTCM3,INCLUDE

Specify RTCM3 message types to be transmitted by base station

Specify RTCM3 message to be transmitted:

```
$JRTCM3,INCLUDE[,1004][,1005][,1006][,1007][,1008][,1012][,1033]<CR><LF>
```

Query the current setting:

```
$JRTCM3,INCLUDE<CR><LF>
```

5.8.17 \$JRTCM3,NULLANT

Specify the antenna name as null (no name) that is transmitted in various RTCM3 messages from the base

Specify the antenna name as null

```
$JRTCM3,NULLANT<CR><LF>
```

Message	Description
MODE	1 = Ready to enter RTK ambiguity fix 0 = Not ready to enter RTK ambiguity fix
TYP	1 = Receiver running in RTK ambiguity fix mode 0 = Receiver not running in RTK ambiguity fix mode
AGE	Number of satellites used to fix
SUBOPT	summer-1 SS1 must be significantly larger than SS2 and SS3 to enter R=1 mode
DIST	summer-2
SYS	summer-3
NUM	Bit mask; bits identify which GNSS observables are being received from base recently (1 = GPS, 3 = GPS + GLONASS)
SNR	Checksum
RSF	Carriage return
BSF	Line Feed
HAG	Horizontal accuracy guess
ACCSTAT	<p>RTK accuracy status (hex), where:</p> <ul style="list-style-type: none"> • 0x1 = no differential or differential too old, for the application • 0x2 = problems with differential message • 0x4 = horizontal position estimate poor for the application • 0x8 = HDOP high, poor satellite geometry • 0x10 = fewer than 6 L1 satellites used • 0x20 = poor L1 SNRs • 0x40 = not in RTK mode • 0x80 = not in RTK mode or RTK only recently solved (< 10 sec ago) • 0x100 = RTK solution compromised, may fail <p>The status message can be any of the above or any combination of the above. For example, a status message of '047' indicates the following:</p> <ul style="list-style-type: none"> • 0x1 = no differential or differential too old, for the application • 0x2 = problems with differential message • 0x4 = horizontal position estimate poor for the application • 0x40 = not in RTK mode
SNT	<p>Ionospheric scintillation, values are:</p> <ul style="list-style-type: none"> • 0 (little or no scintillation - does not adversely affect RTK solution) • 1-100 (scintillation detected - adversely affects RTK solution)
<CR>	Carriage return
<LF>	Line feed

5.8.18 \$JRTCM3,ANTNAME

Specify the antenna name that is transmitted in various RTCM3 messages from the base

Specify the antenna name:

\$JRTCM3,ANTNAME,name

where name must be an antenna name from the following list:

<http://www.ngs.noaa.gov/ANTCAL/LoadFile?file=ngs08.003>

Query the current setting:

\$JRTCM3,ANTNAME<CR><LF>

5.9 Output Data Messages

The following subsections describe the NMEA data messages listed in the Table below in detail.

Table 5-11 Output Data Messages

Message	Max Rate	Description
GPGNS	20 Hz	Fix data for single or combined satellite navigation systems
GPGGA	20 Hz	Global Positioning System Fix Data
GPGLL	20 Hz	Geographic Position – Latitude/Longitude
GPGSA	1 Hz	GNSS (Global Navigation Satellite System) DOP and Active Satellites
GPGST	1 Hz	GNSS Pseudorange Error Statistics
GPGSV	1 Hz	GNSS Satellites in View
GPRMC	20 Hz	Recommended Minimum Specific GNSS Data
GPRRE	1 Hz	Range residual message
GPVTG	20 Hz	Course Over Ground and Ground Speed
GPZDA	20 Hz	Time and Date
GRS	20 Hz	Support for the Receiver Autonomous Integrity Monitoring (RAIM)
RD1	1 Hz	SBAS diagnostic information (proprietary NMEA message)

5.9.1 GNS Data Message

The GPGNS message fixes data for GPS, GLONASS, possible future satellite systems and system combining these. The GPGNS data message is broken down into its components in the Table below. This message follows the following form:

\$GPGNS,hhmmss.ss,llll.ll,s,yyyy.yy,t,n,qq,pp,p,saaaaa.aa,M,±xxxx.xx,M,sss,aaaa*cc<CR><LF>

Table 5-12 GNS Data Message Defined

Field	Description
hhmmss.ss	UTC time in hours, minutes, seconds of the GNSS position
llll.ll	Latitude
s	s = N or s = S, for North or South latitude
yyyy.yy	Longitude
t	s =E or s = W, for East or West longitude
n	Mode Indicator
qq	Number of satellites used in position computation
pp.p	HDOP =0.0 to 9.9
saaaa.aa	Antenna altitude
M	Altitude units, M = meters
±xxxx.xx	Geoidal separation (needs geoidal height option)
M	Geoidal separation units, M = meters
sss	Age of differential corrections in seconds
aaa	Reference station identification
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.2 GGA Data Message

The GGA message contains detailed GPS position information, and is the most frequently used NMEA data message. In the table below, the GGA data message is broken down into its components. This message takes the following form:

\$GPGGA, hhmmss.ss, ddmm.mmmm, s, dddmm.mmmm, s, n, qq, pp.p, saaaa.aa, M, ±xxxx.xx, M, sss, aaa*cc<CR><LF>

Table 5-13 GGA Data Message Defined

Field	Description
hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
ddmm.mmmmm	Latitude in degrees, minutes, and decimal minutes
s	s = N or s = S, for North or South latitude
dddmm.mmmmm	Longitude in degrees, minutes, and decimal minutes
s	s =E or s = W, for East or West longitude
n	Quality indicator: 0 = no position, 1 = undifferentially corrected position, 2 = differentially corrected position, 4 = fixed RTK solution, 5 = float solution, 9= position computed using almanac
qq	Number of satellites used in position computation
pp.p	HDOP =0.0 to 9.9
saaaa.aa	Antenna altitude
M	Altitude units, M = meters
±xxxx.xx	Geoidal separation (needs geoidal height option)
M	Geoidal separation units, M = meters
sss	Age of differential corrections in seconds
aaa	Reference station identification
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.3 GLL Data Message

The GLL message contains Latitude and Longitude. In the table below, the GLL data message is broken down into its components. This message has the following format:

\$GPGLL,ddmm.mmmm,s,dddmm.mmmm,s,hhmmss.ss,s*cc<CR><LF>

Table 5-14 GLL Data Message Defined

Field	Description
ddmm.mmmmm	Latitude in degrees, minutes, and decimal minutes
s	s = N or s = S, for North or South latitude
dddmm.mmmmm	Longitude in degrees, minutes, and decimal minutes
s	s = E or s = W, for East or West longitude
hhmmss.ss	UTC time in hours, minutes, and seconds of GPS position
s	Status, s = A = valid, s = V = invalid
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.4 GSA Data Message

The GSA message contains GPS DOP and active satellite information. Only satellites used in the position computation are present in this message. Null fields are present when data is unavailable due to the number of satellites tracked. The table below breaks down the GSA message into its components. This message has the following format:

\$GPGLSA,a,b,cc,dd,ee,ff,gg,hh,ii,jj,kk,mm,nn,oo,p.p,q.q,r.r *cc<CR><LF>

Table 5-15 GSA Data Message Defined

Field	Description
a	Satellite acquisition mode M = manually forced to 2D or 3D, A = automatic swap between 2D and 3D
b	Position mode, 1 = fix not available, 2 = 2D fix, 3 = 3D fix
Cc to oo	Satellites used in the position solution, a null field occurs if a channel is unused
p.p	Position Dilution of Precision (PDOP) = 1.0 to 9.9
q.q	Horizontal Dilution of Precision (HDOP) = 1.0 to 9.9
r.r	Vertical Dilution of Precision (VDOP) = 1.0 to 9.9
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.5 GST Data Message

The GST message contains Global Navigation Satellite System (GNSS) pseudorange error statistics. The table below breaks down the GST message into its components. This message has the following format:

\$GPGST,hhmmss.ss,a.a,b.b,c.c,d.d,e.e,f.f,g.g *cc<CR><LF>

Table 5-16 GST Data Message Defined

Field	Description
Hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
a.a	Root mean square (rms) value of the standard deviation of the range inputs to the navigation process. Range inputs include pseudoranges and differential GNSS (DGNSS) corrections
b.b	Standard deviation of semi-major axis of error ellipse (meters)
c.c	Standard deviation of semi-minor axis of error ellipse (meters)
d.d	Orientation of semi-major axis of error ellipse (degrees)
e.e	Standard deviation of latitude error (meters)
f.f	Standard deviation of longitude error (meters)
g.g	Standard deviation of altitude error (meters)
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.6 GSV Data Message

The GSV message contains GPS satellite information. Null fields occur where data is not available due to the number of satellites tracked. The Table below breaks down the GSV data message into its components. This message has the following format:

\$GPGSV,t,m,n,ii,ee,aaa,ss,...ii,ee,aaa,ss,*cc<CR><LF>

Table 5-17 GSV Data Message Defined

Field	Description
t	Total number of messages
m	Message number, m = 1 to 3
n	Total number of satellites in view
ii	Satellite number
ee	Elevation in degrees, ee = 0 to 90
aaa	Azimuth (true) in degrees, aaa = 0 to 359
ss	SNR (dB) + 30, ss = 0 to 99
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.7 RMC Data Message

The RMC message contains recommended minimum specific GPS data. The table below breaks down the RMC data message into its components. This message has the following format:

\$GPRMC,hhmmss.ss,a,ddmm.mmm,n,dddmm.mmm,w,z.z,y.y,ddmmyy,d.d,v *cc<CR><LF>

Table 5-18 RMC Data Message Defined

Field	Description
hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
a	Status is valid if a = A, status is invalid if a = V
ddmm.mmmmm	Latitude in degrees, minutes, and decimal minutes
n	S = N or s = S, for North or South latitude
dddmm.mmmmm	Longitude in degrees, minutes, and decimal minutes
w	S = E or s = W, for East or West longitude
z.z	Ground speed in knots
y.y	Track made good, referenced to true north
ddmmyy	UTC date of position fix in day, month, year
d.d	Magnetic Variation in degrees
v	Variation sense v = E = East, v = W = West
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.8 RRE Data Message

The RRE message contains the satellite range residuals and estimated position error. The table below breaks down the RRE data message into its components. This message has the following format:

\$GPRRE,n,ii,rr...ii,rr,hhh.h,vvv.v *cc<CR><LF>

Table 5-19 RRE Data Message Defined

Field	Description
n	Number of satellites used in position computation
ii	Satellite number
rr	Range residual in meters
hhh.h	Horizontal position error estimate in meters
vvv.v	Vertical position error estimate in meters
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.9 VTG Data Message

The VTG message contains velocity and course information. The table below breaks down the VTG data message into its components. This message has the following format:

\$GPVTG,ttt,c,ttt,c,ggg,gg,u,ggg,gg,u*cc<CR><LF>

Table 5-20 VTG Data Message Defined

Field	Description
Ttt	True course over ground, ttt = 000 to 359, in degrees
C	True course over ground indicator, c = T always
Ttt	Magnetic course over ground, ttt = 000 to 359, in degrees
C	Magnetic course over ground Indicator, always c = M
ggg,gg	Speed over ground, 000 to 999 knots
U	Speed over ground units, u = N = Nautical mile/h
ggg,gg	Speed over ground, 000 to 999 km/h
U	Speed over ground units, u = K = kilometer/h
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.10 ZDA Data Message

The ZDA message contains Universal Time information. The table below breaks down the ZDA data message into its components. This message has the following format:

\$GPZDA,hhmmss.ss,dd,mm,yyyy,xx,yy*cc<CR><LF>

Table 5-21 ZDA Data Message Defined

Field	Description
hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
dd	Day, dd = 0 to 31
mm	Month, mm = 1 to 12
yyyy	Year
xx	Local zone description in hours, xx = -13 to 13
yy	Local zone description in minutes, yy = 0 to 59
*cc	Checksum
<CR><LF>	Carriage return and line feed

5.9.11 GRS Data Message

The GRS message supports the Receiver Autonomous Integrity Monitoring (RAIM). The GRS data message is broken down into its components in the table below. This message takes the following form:

\$--GRS.hhmmss.ss,y,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x,x.x*hh<CR><LF>

Table 5-22 GRS Data Message Defined

Field	Description
Hhmmss.ss	UTC time of the GGA or GNS fix associated with this sentence
Y	Mode 0: residuals were used to calculate the position given in the matching GGA or GNS sentence Mode 1: residuals were recomputed after the GGA or GNS position was computed
x.x	Range residuals, in meters, for satellites used in the navigation solution. Order matches order of satellite ID numbers in GSA sentence. When GRS is used, GSA and GSV are generally required

5.9.12 RD1 Data Message

The RD1 message contains diagnostic information for SBAS operation. The table below breaks down the RD1 data message into its components. This message has the following format:

\$RD1,SecOfWeek,WeekNum,FreqMHz,DSPLocked,BER-BER2,AGC,DDS,Doppler,DSPStat,ARMStat,DiffStatus,NavCondition *cc<CR><LF>

Table 5-23 RD1 Data Message Defined

Field	Description
SecOfWeek	The second of GPS week (may be a couple of seconds old)
WeekNum	The GPS week number
FreqMHz	The L-band frequency in MHz (1475.4200 is used for SBAS)
DSPLocked	1 if DSPStat = 1B or 1F
BER-BER2	Bit error rate – bit error rates are given for both SBAS satellites being tracked
AGC	L-band Signal strength
DDS	0.0 for SBAS
Doppler	0 for SBAS
DSPStat	A status bit mask for the DSP tracking of SBAS
ARMStat	A status bit mask for the ARM GPS solution
DiffStatus	The SBAS PRN of the satellite in use
NavCondition	A series of hex character fields, which is read from right to left, with each field representing the number of GPS satellites satisfying a certain condition, all of which conditions are required if the satellite is to be used in the solution
*cc	Checksum
<CR><LF>	Carriage return and line feed

The following table describes the DSP status. The DSP status should be 17, 1B, or 1F when SBAS tracking has been achieved.

DSP Status

Field	Description
01	Carrier lock
02	BER is ok on at least one SBAS satellite
04	Frame synchronization has been achieved on the second satellite
08	Frame synchronization has been achieved on the first satellite
10	Carrier lock

The following table describes the ARM status.

ARM Status

Field	Description
01	GPS lock
02	DGPS valid data
04	The ARM processor has lock
08	DGPS solution
10	DGPS solution is good
20	Not used
40	Not used

An example of the NavCondition is presented in the following table for the 179889A value.

NavCondition

Field	Description
A	The number of satellites with lock and carrier phase
9	The number of satellites with ephemeris received
8	The number of satellites with healthy ephemeris
8	The number of satellites that are tracked, have an ephemeris, which is healthy, and are above the elevation mask
9	The number of satellites above the elevation mask
7	The number of satellites with differential
1	The number of satellites with no differential

5.10 RAIM Command and Message

RAIM stands for Receiver Autonomous Integrity Monitoring. RAIM is a GPS integrity monitoring scheme that uses redundant ranging signals to detect a satellite malfunction that results in a large range error. The iSXBlue/SXBlue II GNSS uses RAIM to alert users when errors have exceeded a user specified tolerance. RAIM is available for the SBAS applications.

5.10.1 \$JRAIM Command

This command allows you to set the parameters of the RAIM scheme that affects the output of the \$PSAT,GBS message. This command has the following structure:

```
$JRAIM,HPR,probHPR,probFALSE<CR><LF>
```

Where:

Variable	Description
HPR	Horizontal Protection Radius (HPR). You will receive notification in the \$PSAT,GBS message that the horizontal error has exceeded this amount. The acceptable range for this value is 1 to 10,000 meters. The default is 10 meters.
probHPR	Maximum allowed probability that the position computed lies outside the HPR. The acceptable range for this value is from 0.001% to 50%. The default is 5%.

probFALSE	Maximum allowed probability that there is a false alarm (That the position error is reported outside the of the HPR, but it is really within the HPR). The acceptable range for this value is from 0.001% to 50%. The default is 1%.
-----------	--

The purpose of the probability of false alarm (probFALSE) is to help make a decision as to whether to declare a fault or warning in an uncertain situation. As an example, you have several satellites which may have failed, all giving similar probabilities of failure. One would put you outside of the horizontal protection radius (HPR) and the others would not. You always choose the one that puts you outside of the radius to be safe, but in this situation, you have likely made an error (the failed satellite may actually be another satellite). So here, there is a high probability of false alarm. The high probability of false alarm can be used to downgrade a fault to a warning. If the probability of false alarm (probFALSE) is > 5%, (assuming this is the chosen threshold) a fault is downgraded to a warning.

There are other situations where the probability of false alarm is high due to geometry. Because of the geometry, you may get excessive faults, even though you are actually within the protection radius. Again, downgrading to a warning prevents excessive faults when the conditions are highly uncertain.

The philosophy is to only issue a fault if you are relatively certain (to within the probability of a false alarm) that the protection radius has been exceeded, else issue a warning.

5.10.2 \$PSAT,GBS Data Message

The GBS message is used to support Receiver Autonomous Integrity Monitoring (RAIM). In the table below, the GBS data message is broken down into its components. This message takes the following form:

`$PSAT,GBS,hmmss.ss,ll.l,LL.L,aa.a,ID,p.ppppp,b.b,s.s,flag*cc<CR><LF>`

Table 5-24 \$PSAT,GBS Data Message Defined

Field	Description
hmmss.ss	UTC time in hours, minutes, seconds of the GGA or GNS fix associated with this sentence
ll.l	Expected error in latitude
LL.L	Expected error in longitude
aa.a	Expected error in altitude
ID	ID number of most likely failed satellite
p.ppppp	Probability of HPR fault
b.b	Estimate of range bias, in meters, on most likely failed satellite
s.s	Standard deviation of range bias estimate
flag	Good (0), Warning (1), Bad or Fault (2), (based on horizontal radius)
*cc	Checksum
<CR><LF>	Carriage return and line feed

To start outputting the \$PSAT,GBS message once per second (the only output rate available), enter the following:

`$JASC,GPGBS,1<CR><LF>`Or, to turn the \$PSAT,GBS message off, send the following command.

`$JASC,GPGBS,0<CR><LF>`

6. Binary Data

The iSXBlue/SXBlue II GNSS supports a selection of binary data messages that provide improved communication port efficiency. See Section 4.2 for information on using the \$JBIN command to turn on binary messages.

6.1 Binary Message Structure

The Binary messages supported by the iSXBlue/SXBlue II GNSS are in an Intel Little Endian format for direct read in a PC environment. You can find more information on this format at the following Web site.

www.cs.umass.edu/~verts/cs32/endiian.html

Each binary message begins with an 8-byte header and ends with a carriage return line-feed pair (0x0D, 0x0A). The first four characters of the header is the ASCII sequence \$BIN.

The following table provides the general binary message structure.

Table 6-1 Binary Message Structure

Group	Components	Type	Bytes	Value
Header	Synchronization String	4 byte string	4	\$BIN
	BlockID – a number which tells the type of binary message	Unsigned short	2	1, 2, 80, 93, 94, 95, 96, 97, 98, or 99
	DataLength – the length of the binary messages	Unsigned short	2	52, 16, 40, 56, 96, 128, 300, 28, 68, or 304
Data	Data Binary Data – varying fields of data with a total length of DataLength bytes	Mixed fields	Varies – see message tables	52, 16, 40, 56, 96, 128, 300, 28, 68, or 304
Epilogue	Checksum – sum of all bytes of the data (all DataLength bytes). The sum is placed in a 2-byte Integer	Unsigned Short	2	Sum of data bytes
	CR – Carriage return	Byte	1	0D hex
	LF – Line feed	Byte	1	0A hex

The total length of the binary message packet is DataLength plus 12 (8 byte header, 2 byte checksum, and 2 bytes for CR, LF).

6.1.1 Bin 1

This message has a BlockID of 1 and is 52 bytes excluding the header and epilogue. It consists of GPS position and velocity data. It is the only binary message that can be output at a rate of 20 Hz. The following table describes the content of this message.

Table 6-2 Bin 1 Message

Group	Components	Type	Bytes	Value
AgeOfDiff	Age of differential, seconds. Use Extended AgeOfDiff first. If both = 0 then no differential	Byte	1	0 to 255
NumOfSats	Number of satellites used in the GPS solution	Byte	1	0 to 12
GPSWeek	GPS week associated with this message	Unsigned Short	2	0 to 65536
GPSTimeOfWeek	GPS tow (sec) associated with this message	Double	8	0.0 to 604800.0
Latitude	Latitude in degrees North	Double	8	-90.0 to 90.0
Longitude	Longitude in degrees East	Double	8	-180.0 to 180.0
Height	Altitude above the ellipsoid in meters	Float	4	
VNorth	Velocity north in m/s	Float	4	
VEast	Velocity East in m/s	Float	4	
VUp	Velocity up in m/s	Float	4	Positive
StdDevResid	Standard deviation of residuals in meters	Float	4	Positive
NavMode	Navigation mode: 0 = No fix 1 = 2D no diff (solving RTK) 2 = 3D no diff 3 = 2D with diff 4 = 3D with diff (not solving RTK) 5 = RTK Search 6 = 3D with RTK If bit 7 is set (left-most bit), then this is a manual mark position	Unsigned short	2	Bits 0 through 6 = Navmode Bit 7 = Manual mark
Extended	Extended age of differential, Seconds. If 0, use 1 byte AgeOfDiff listed above	Unsigned short	2	0 to 65536

6.1.2 Bin 2

This message has a BlockID of 2 and is 16 bytes excluding the header and epilogue. This message contains various quantities that are related to the GPS solution. The following table describes the details of this message in order.

Table 6-3 Bin 2 Message

Group	Components	Type	Bytes	Value
MaskSatsTracked	A mask of satellites tracked by the GPS. Bit 0 corresponds to the GPS satellite with PRN 1.	Unsigned long	4	Individual bits represent satellites
MaskSatsUsed	A mask of satellites used in the GPS solution. Bit 0 corresponds to the GPS satellite with PRN 1.	Unsigned long	4	Individual bits represent satellites
GPSUtcDiff	Whole seconds between UTC and GPS time (GPS minus UTC)	Unsigned short	2	Positive
HDOPTimes10	Horizontal Dilution of precision scaled by 10 (0.1 units)	Unsigned short	2	Positive
VDOPTimes10	Vertical Dilution of precision scaled by 10 (0.1 units)	Unsigned short	2	Positive
WAAS PRN Bitmask	SBAS PRN and tracked or used status masks	Unsigned short	2	See below

WAAS (SBAS) PRN bit mask:

- Bit 00 Mask of satellites tracked by first WAAS satellite
- Bit 01 Mask of satellites tracked by second WAAS satellite
- Bit 02 Mask of satellites used by first WAAS satellite
- Bit 03 Mask of satellites used by second WAAS satellite
- Bit 04 Unused
- Bit 05-09 Value used to find PRN of first WAAS satellite (This value +120 = PRN)
- Bit 10-14 Value used to find PRN of second WAAS satellite (This value + 120 = PRN)
- Bit 15 Unused

6.1.3 Bin 80

This message has a BlockID of 80 and is 40 bytes excluding the header and epilogue. This message contains the SBAS message. The following table describes the constituents of this message in order.

Table 6-4 Bin 80 Message

Group	Components	Type	Bytes	Value
PRN	Broadcast PRN	Unsigned short	2	
Spare	Not used at this time	Unsigned short	2	Future use
MsgSecOfWeek	Seconds of week for message	Unsigned long	4	
WaasMsg[8]	250 bit SBAS message (RTCA DO-229). 8 unsigned longs with most significant bit received first	Unsigned long	4 x 8 = 32	

6.1.4 Bin 93

This message has a BlockID of 93 and is 56 bytes excluding the header and epilogue. This message contains information relating to the SBAS ephemeris. The following table describes the contents of this message in order.

Table 6-5 Bin 93 Message

Group	Components	Type	Bytes	Value
SV	Satellite to which this data belongs	Unsigned short	2	
Spare	Not used at this time	Unsigned short	2	Future use
TOWSecOfWeek	Time at which this arrived (LSB = 1 sec)	Unsigned long	4	
IODE		Unsigned short	2	
URA	Consult the ICD-GPS-200 for definition in Appendix D – Resources	Unsigned short	2	
T0	Bit 0 = 1 sec	Long	4	
XG	Bit 0 = 0.08 m	Long	4	
YG	Bit 0 = 0.08 m	Long	4	
ZG	Bit 0 = 0.4 m	Long	4	
XGDot	Bit 0 = 0.000625 m/s	Long	4	
YXDot	Bit 0 = 0.000625 m/s	Long	4	

ZGDot	Bit 0 = 0.004 m/s	Long	4	
XGDotDot	Bit 0 = 0.0000125 m/s ²	Long	4	
YGDotDot	Bit 0 = 0.0000125 m/s ²	Long	4	
ZGDotDot	Bit 0 = 0.0000625 m/s ²	Long	4	
Gf0	Bit 0 = 2 ^{**} -31 s	Unsigned short	2	
Gf0Dot	Bit0 = 2 ^{**} -40 s/s	Unsigned short	2	

6.1.5 Bin 94

This message has a BlockID of 94 and is 96 bytes excluding the header and epilogue. This message contains ionospheric and UTC conversion parameters. The following table describes the details of this message in order.

Table 6-6 Bin 94 Message

Group	Components	Type	Bytes	Value
a0,a1,a2,a3	AFCRL alpha parameters	Double	8 x 4 = 32	
b0,b1,b2,b3	AFCRL beta parameters	Double	8 x 4 = 32	
A0,A1	Coefficients for determining UTC time	Double	8 x 2 = 16	
Tot	Reference time for A0 and A1, second of GPS week	Unsigned long	4	
Wnt	Current UTC reference week	Unsigned short	2	
Wnlsf	Week number when dtlsf becomes effective	Unsigned short	2	
Dn	Day of week (1-7) when dtlsf becomes effective	Unsigned short	2	
Dtls	Cumulative past leap	Short	2	
Dtlsf	Scheduled future leap	Short	2	
Spare	Not used at this time	Unsigned short	2	Future use

6.1.6 Bin 95

This message has a BlockID of 95 and is 128 bits excluding the header and epilogue. This message contains ephemeris data of all 12 channels. The following table describes the contents of this message in order.

Table 6-7 Bin 95 Message

Group	Components	Type	Bytes	Value
SV	The satellite to which this data belongs	Unsigned short	2	
Spare1	Not used at this time	Unsigned short	2	Future use
SecOfWeek	Time at which this arrived (LSB = 6)	Unsigned long	4	
SF1words[10]	Unparsed SF 1 message	Unsigned long	4 x 10 = 40	
SF2words[10]	Unparsed SF 2 message	Unsigned long	4 x 10 = 40	
SF3words[10]	Unparsed SF 3 message	Unsigned long	4 x 10 = 40	

6.1.7 Bin 96

This message has a BlockID of 96 and is 300 bytes excluding the header and epilogue. This message contains phase and code data. The following table describes the constituents of this message in order.

Table 6-8 Bin 96 Message

Group	Components	Type	Bytes	Value
Spare1	Not used at this time	Unsigned short	2	Future use
Week	GPS week number	Unsigned short	2	
TOW	Predicted GPS time in seconds	Double	8	
UICS_TT_SNR_PRN[12]	See below	Unsigned long	4 x 12 = 48	
UIDoppler_FL[12]	See below	Unsigned long	4 x 12 = 48	
PseudoRange[12]	Pseudoranges	Double	8 x 12 = 96	
Phase[12]	Phase (m) L1 wave = 0.190293672798365m	Double	8 x 12 = 96	

Where:

UICS_TT_SNR_PRN

- Bits 0-7: PRN (PRN is 0 if no data)
- Bits 8-15: SNR value (SNR= $10.0 * \log_{10} * (0.8192 * \text{SNR value})$)

- Bits 16-23: Phase Track Time in units of 1/10 second, range = 0 to 25.5 seconds (see next word)
- Bits 24-31: Cycle Slip Counter (Increments by 1 every cycle slip with natural rollover after 255)

UIDoppler_FL

- Bit 0: 1 if Valid Phase, 0 otherwise
- Bit 1: 1 if Track Time > 25.5 seconds, 0 otherwise
- Bits 2-3: Unused
- Bits 4-31: Signed (two's complement) Doppler in units of m/sec x 4096. (i.e. LSB=1/4096), range = +/- 32768 m/sec. Computed as phase change over 1/10 sec.

6.1.8 Bin 97

This message has a BlockID of 97 and is 28 bytes excluding the header and epilogue. This message contains statistics for processor utilization. The following table describes the details of this message in order.

Table 6-9 Bin 97 Message

Group	Components	Type	Bytes	Value
CPUFactor	CPU utilization factor. Multiply by 450e-06 to get percentage of spare CPU that is available	Unsigned long	4	Positive
MissedSubFrame	The total number of missed sub frames in the navigation message since power on	Unsigned short	2	Positive
MaxSubFramePnd	Max sub frames queued	Unsigned short	2	Positive
MissedAccum	The total number of missed code accumulation measurements in the channel tracking loop	Unsigned short	2	Positive
MissedMeas	The total number of missed pseudorange measurements	Unsigned short	2	Positive
Spare 1 Spare 2 Spare 3	Not used at this time Not used at this time Not used at this time	All Unsigned long	4 4 4	Future use Future use Future use
Spare 4 Spare 5	Not used at this time Not used at this time	All Unsigned short	2 2	Future use Future use

6.1.9 Bin 98

This message has a BlockID of 98 and is 68 bytes excluding the header and epilogue. This message contains data derived from the satellite almanacs. The following table describes the contents of this message in order.

Table 6-10 Bin 98 Message

Group	Components	Type	Bytes	Value
AlmanData	Almanac-derived-data, 8 satellites at a time	Structure array	8 x 8 =64	See the following table
LastAlman	Last almanac processed	Byte	1	0 to 31
IonoUTCVFlag	Flag that is set when ionosphere modeling data is extracted from the GPS sub frame 4	Byte	1	0 = not logged 2 = valid
Spare	Not used at this time	Unsigned short	2	Future use

AlmanData Structure Array

Group	Components	Type	Bytes	Value
DoppHz	Predicted Doppler in Hz for the satellite in question (assuming a stationary satellite).	Short	2	
CountUpdate	Number of times the almanac has changed for this satellite since the receiver was turned on	Byte	1	Positive
Svindex	Channel number (groups of 8)	Byte	1	0 to 7 8 to 15 16 to 23 24 to 31
AlmVFlag	Almanac valid flag	Byte	1	0 = not logged 1 = invalid 2 = valid 3 = has data (not yet validated)
AlmHealth	Almanac health from sub frame 4 of the GPS message	Byte	1	See ICD-GPS-200
Elev	Elevation angle in degrees	Char	1	-90 to 90
Azimuth	½ the azimuth in degrees	Byte	1	0 to 180 represents 360 degrees

6.1.10 Bin 99

This message has a BlockID of 99 and is 304 bytes excluding the header and epilogue. This message contains quantities related to the tracking of the individual GPS satellites along with some other relevant data. The following table describes the constituents of this message in order.

Table 6-11 Bin 99 Message

Group	Components	Type	Bytes	Value
NavMode2	Navigation mode data (lower 3 bits hold the GPS mode, upper bit set if differential is available).	Byte	1	Lower 3 bits take on the values 0 = time not valid 1 = no fix 2 = 2D fix 3 = 3D fix Upper bit (bit 7) is 1 if differential is Available
UTCTimeDiff	Whole seconds between UTC and GPS time (GPS minus UTC)	Byte	1	Positive
GPSWeek	GPS week associated with this message	Unsigned short	2	0 to 65536
GPSTimeOfWeek	GPS tow (sec) associated with this message	Double	8	0.0 to 604800.0
ChannelData	12 structures (see below) containing tracking data for each of the 12 receiver channels	Structure array	12x24 =288	See following table
ClockErrAtL1	The clock error of the GPS clock oscillator at L1 frequency in Hz	Short	2	-32768 to 32768
Spare	Not used at this time	Unsigned short	2	Future use

ChannelData Array

Group	Components	Type	Bytes	Value
Channel	Channel number	Byte	1	0 to 12
SV	Satellite being tracked, 0 == not tracked	Byte	1	0 to 32
Status	Status bit mask (code carrier bit frame)	Byte	1	Bit 0 = code lock 1 = carrier lock 2 = bit lock 3 = frame sync 4 = frame sync and new epoch 5 = channel reset 6 = phase lock 7 = spare
LastSubFrame	Last sub frame processed in the GPS message	Byte	1	1 to 5
EphmVFlag	Ephemeris valid flag	Byte	1	0 = not logged 1 = invalid 2 = valid 3 = has data (not yet validated)

EphmHealth	Satellite health from sub frame 1 of the GPS message	Byte	1	See ICD-GPS-200
AlmVFlag	Almanac valid flag	Byte	1	0 = not logged 1 = invalid 2 = valid 3 = has data (not yet validated)
AlmHealth	Almanac health from sub frame 4 of the GPS message	Byte	1	See ICD-GPS-200
Elev	Elevation angle in degrees	Char	1	-90 to 90
Azimuth	½ the azimuth in degrees	Byte	1	0 to 180 represents 0 to 360 degrees
URA	User range error from sub frame 1 of the GPS message	Byte	1	See ICD-GPS-200
Spare	Not used at this time	Byte	1	Future use
CliForSNR	Code lock indicator for SNR. SNR = 10.0 * 4096 CliForSNR/ Nose_floor) where Nose_floor = 80000.0	Unsigned short	2	Positive
DiffCorr	100 times the differential correction for this channel's pseudorange	Short	2	
PosResid	10 times the position residual from the GPS solution for this channel	Short	2	
VelResid	10 times the velocity residual from the GPS solution for this channel	Short	2	
DoppHZ	Expected Doppler for this channel in Hz	Short	2	
NCOHz	Carrier track offset for this channel in Hz	Short	2	

7. Frequently Asked Questions

7.1 General

Q – Are the SBAS services reliable for differential operation?

A – Yes, these services have proven themselves for some time now and have shown excellent results. As WAAS (North and Central America), EGNOS (Europe) and MSAS (Japan) are operational, they can be used as sole means of navigation. GAGAN is currently in test mode and might experience some periods of outage or times when the signal should not be used. We recommend that you refer to Appendix D - Resources of this manual for Web sites that provide details on the status of WAAS, EGNOS, MSAS and GAGAN.

Q – Can the COAST technology work with corrections from an external source?

A – Yes, the iSXBlue/SXBlue II GNSS will operate in a similar fashion with the COAST technology as when using SBAS. However, SBAS corrections have the advantage that they are separated into distinct error components, allowing the iSXBlue/SXBlue II GNSS to anticipate how errors will change over the coasting period with more consistent accuracy and for a longer period than regular RTCM range corrections.

Q – Is Auto-Dif the solution for my positioning needs?

A – It is difficult to say without knowing more about your application. Auto-Dif is not a different solution / replacement for everyone's application. Certain applications lend themselves to successful Auto-Dif operation, such as crop dusting. In this application, the aircraft must refuel and be filled with chemicals quite frequently, perhaps every 20 minutes. This allows for a new initialization when the aircraft lands. Provided that the user feels that it's efficient to do so, Auto-Dif can be successfully used in geographic regions where the only differential services available are subscription-based. Auto-Dif, in this application, would require an initialization as frequently as the user feels is necessary to maintain a level of performance that they're comfortable with. This may mean an initialization every 30 minutes or so. Also, if absolute positioning accuracy is needed as opposed to relative positioning, a point of known coordinates should be used for initializing the system. Of course, more points in the area of the system use could be used, provided that their coordinates are correctly entered into the system. This can be easily implemented through development of a custom software application running on a PDA product.

Q – How does the iSXBlue/SXBlue II GNSS compare to competitor's products?

A – The iSXBlue/SXBlue II GNSS is a unique solution in that it is very compact, yet offers a high degree of performance. There are a number of DGPS products on the marketplace, however, very few of these are suitable for commercial use in applications such as GIS & Mapping due to their positioning performance and their update rates. The iSXBlue/SXBlue II GNSS is up for this task and meets the needs for these applications. The iSXBlue/SXBlue II GNSS also offers the facility of outputting raw measurement data for post-processing in the office.

Q – What should I do if I want to evaluate Auto-Dif?

A – We suggest that you contact your dealer to see if they have a unit available with Auto-Dif activated for your testing.

7.2 Support and Repairs

Q - How do you recommend that I pursue support to solve a problem that I can't isolate?

A - We recommend that you contact your dealer first. With their experience with this and other products from Geneq, they're likely to help you isolate a problem. If the issue is beyond the capability or experience of your dealer, either they or you can contact a Technical Service Representative from Geneq.

Q - Can I contact Geneq directly regarding technical problems?

A - Yes, however, we recommend that you get in touch with your dealer first as they would be your local support. They may be able to solve your problem more promptly than us, due to their location and experience with our equipment.

7.3 Troubleshooting

Q - What should I do initially if I have a problem with the operation of the iSXBlue/SXBlue II GNSS module?

A - Try to isolate the source of the problem. Problems are likely to fall within one of the following categories. It's important to review each in detail to remove each from being a suspect source of the problem.


- Power, communication, and configuration
- GPS reception and performance
- SBAS reception and performance
- External corrections
- Installation

The questions in the following sections provide information that may help you to isolate and solve the problem that you are experiencing.

Q - What should I do initially if I have a Bluetooth pairing issue with the iSXBlue II GNSS module and an iPad/iPhone?


A -The iSXBlue is able to pair at the first time but in some case it might show this warning below. It is recommend to keep the iSXBlue near the iPad/iPhone and retry the connection a couple of time.

Normally when this issue happening, it could take up to 3 times for a successful pairing.

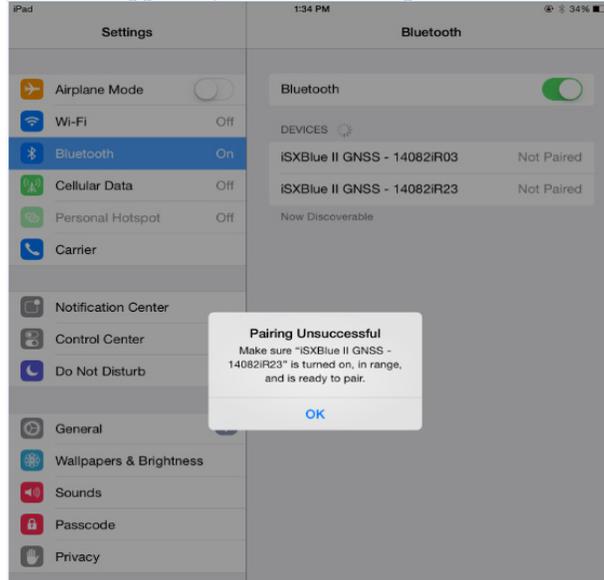

Q - What should I do if I have a Bluetooth pairing request on the iPad/iPhone using iSxBlue II GNSS?

A –Each time the iSxBlue make a connection with the last iOS device, it keep the mac address for a possible next connection. This feature is an automatic pairing when both iSxblue and iPad/iPhone are turn on for multiple use with the same iOS device. It has to be reset to zero for a new connection. Go on the Bluetooth setting and click the “I” icon to forget this device on the serial number you tried already to log on and then turn off the iSxBlue and iPad/iPhone. After you will be able to restart both unit and make a new connection. See example below.

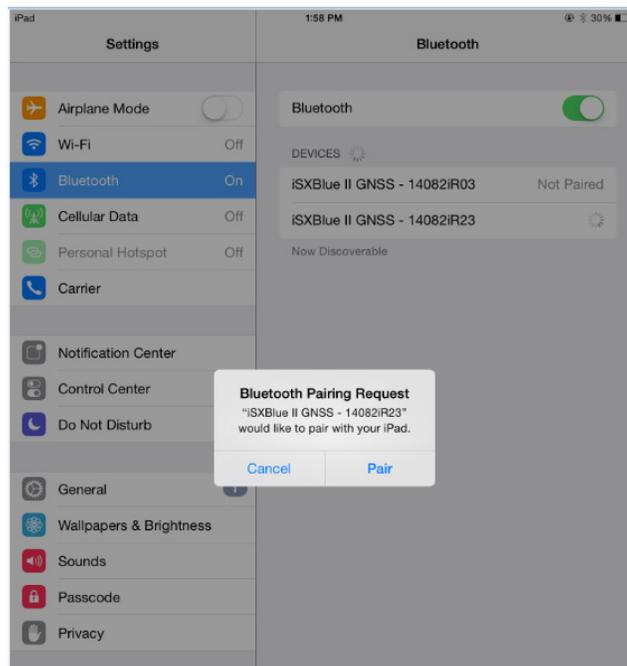


Q - What should I do if I have a Bluetooth connection with the iSXBlue View app without streaming Data?

A –The iSXBlue might paired on Bluetooth but when launching the ISXBlue View app there is no reception of NMEA message. Make sure to connect an antenna to the iSXBlue before you do any connection because the iSXBlue View app has to track a position before starting replacing the values from the core location with the values from the external GPS (iSXBlue). See examples below.

Adapter		Adapter	
Adapter Status	Connected	Adapter Status	Connected
Rx	0	Rx	1

Q - What should I do if I have data from internal GPS using my Android and a GIS app?

A –The iSXBlue/SXblue might paired on Bluetooth using the Bluetooth GPS app as a tool but still receive value from the internal GPS. You must enable the Developer Options same as the Mock locations. On the front page, you must also enable the Mock GPS Provider to allow the iSXBlue/SXBlue take over the current GIS app. See examples below.

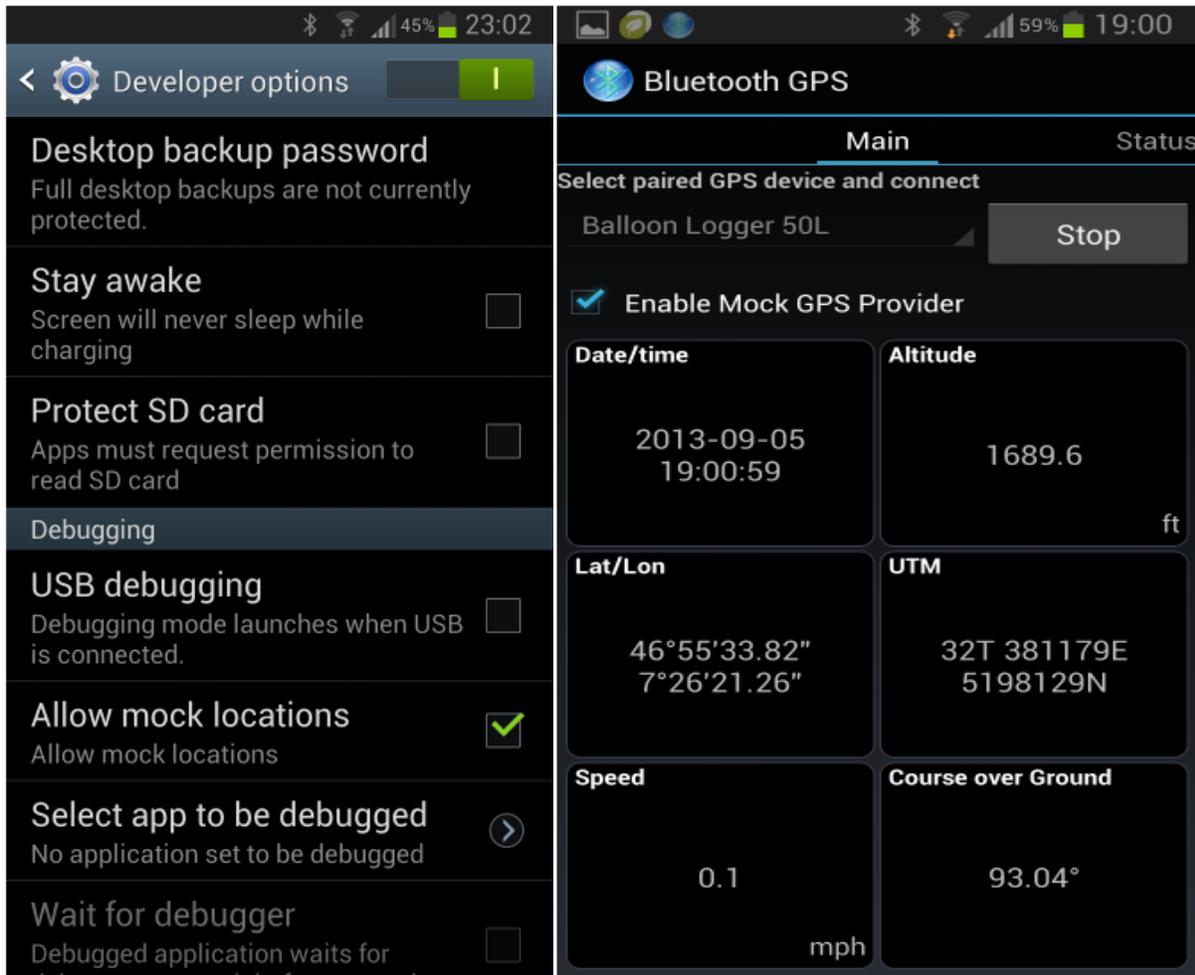

Q - What should I do if I can't resolve the problem after trying to diagnose it myself?

A - You should contact your dealer to see if they have any information that may help to solve the problem. They may be able to provide some in-person assistance too. If this either isn't viable or does not solve the problem, Geneq Technical Support is available during normal business hours to help solve the problem. You may reach Technical Support at:

Telephone number: +1-514-354-2511
 Fax number: +1-514-354-6948
 E-mail address: support@geneq.com

Technical Support is available from 8:30 AM to 5:00 PM Eastern Time, Monday to Friday.

7.4 Power, Communication, and Configuration

Q - My iSXBlue/SXBlue II GNSS system doesn't appear to be communicating, what should I do?

A - This could be one of a few issues:

1. Examine the iSXBlue/SXBlue II GNSS cables and connectors for signs of damage.

2. Ensure that you have adequate battery charge.
3. Check the documentation of the receiving device, if using RS-232, to ensure that the transmit line from the iSXBlue/SXBlue II GNSS is connected to the receive line of the other device. Also ensure that the signal grounds are connected.
4. If using the USB connection, make sure drivers are installed on the computer.
5. If the iSXBlue/SXBlue II GNSS is connected to a custom or special device, ensure that the serial connection to it does not have any incompatible signal lines present that may not allow either to communicate properly. Try using the Serial port for communication as only pins 2, 3, and 5, which are the only pins required for communication, are connected.
6. Make sure that the baud rate of the iSXBlue/SXBlue II GNSS matches the other device. The other device must also support an 8 data bit, 1 stop bit, and no parity port configuration (8-N-1). Some devices support different settings that may be user-configurable. Ensure that the settings match.
7. Consult the troubleshooting section of the other devices reference manual to determine if there may be a problem with that equipment.

Q - Am I able to configure the various ports with different baud rates?

A - Yes, the Serial, USB and Bluetooth ports are independent. However, the Bluetooth port must be set to 9600 baud for proper operation.

Q - Am I able to have the iSXBlue/SXBlue II GNSS output different NMEA messages through the ports?

A - Yes, you may have different NMEA messages turned on for the ports. Further, these NMEA messages may also be at different update rates.

Q - How can I determine the current configuration of the iSXBlue/SXBlue II GNSS?

A - The `$JSHOW<CR><LF>` command will request the configuration information from the iSXBlue/SXBlue II GNSS. The response will be similar to the following output and is described in detail in chapter 4.

```
$>JSHOW,BAUD,19200
$>JSHOW,BIN,1,5.0
$>JSHOW,BAUD,9600,OTHER
$>JSHOW,ASC,GPGGA,1.0,OTHER
$>JSHOW,ASC,GPVTG,1.0,OTHER
$>JSHOW,ASC,GPGSA,1.0,OTHER
$>JSHOW,ASC,GPZDA,1.0,OTHER
```

Q – How can I be sure that the configuration will be saved for the subsequent power cycle?

A – The surest method is to query the receiver to make sure you’re satisfied with the current configuration, by issuing a `$JSHOW<CR><LF>` command (if not, make the necessary changes and repeat). If the current configuration is acceptable, issue a `$JSAVE<CR><LF>` command. Wait for the

receiver to indicate that the save is complete. You may power the receiver down and issue another \$JSAVE if you feel it's necessary; however, it is not required.

Q - What is the best software tool to use to communicate with the iSXBlue/SXBlue II GNSS and how to configure it?

A - We use two different software applications at Geneq for this application:

- PocketMAX - Available from Geneq. This application is a very useful tool for graphically viewing tracking performance, positioning accuracy, and more on a Pocket PC.
- HyperTerminal – Available on all Windows 95, 98, ME, 2000 and XP. This tool is useful as it allows you to easily configure the iSXBlue/SXBlue II GNSS by directly typing commands into the terminal window. The output from the SXBlue II GPS is shown simultaneously. Ensure that when using HyperTerminal that it is configured to use the correct PC communication port, baud rate, and that the local echo feature is on (see section 3.3).

7.5 GPS Reception and Performance

Q - How do I know what the iSXBlue/SXBlue II GNSS is doing?

A - The iSXBlue/SXBlue II GNSS supports standard NMEA data messages. The \$GPGSV data message contains satellite tracking information. Since the GPS automatically tracks GPS satellites when powered, this will give you information on the tracking status. If your receiver has computed a position, this will be contained within the \$GPGGA data message. Additionally, the SXBlue II GPS module has LEDs that give indication of receiver status.

Q - Do I have to be careful when using the iSXBlue/SXBlue II GNSS to ensure that it tracks properly?

A – For best performance, you have to be careful such that the hemisphere above the iSXBlue/SXBlue II GNSS's antenna is unobstructed for satellite tracking. The iSXBlue/SXBlue II GNSS is tolerable of a certain amount of signal blockage due to the availability of redundant satellites (only four are required for a position). However, as more satellites are blocked, the more impact this could have on your positioning accuracy.

7.6 SBAS Reception and Performance

Q - How do I know if I can receive a SBAS signal in my area?

A - Refer to Appendix C that contains approximate coverage maps for both WAAS (for Central and North America) and EGNOS (for Europe). It's important to have both signal coverage and ionospheric map coverage. In fact, it's desirable to have a few degrees of latitude and longitude of ionospheric map coverage around your location to ensure that the satellites available have these correctors.

Q - How do I know if the iSXBlue/SXBlue II GNSS module has acquired a SBAS signal?

A - The "DIFF" LED is the primary indicator that SBAS signal has been acquired and locked. The iSXBlue/SXBlue II GNSS allows you to request the output of the \$RD1 message that contains the SBAS bit error rate (BER) for both receiver channels. The BER value describes the rate of errors received from SBAS. Ideally, this should be zero; however, the iSXBlue/SXBlue II GPS should provide good performance up to a 150 BER. The PocketMAX utility discussed in the PocketMAX Manual is a useful tool that provides this information without needing to use NMEA commands.

Q - How do I know if the iSXBlue/SXBlue II GNSS is offering a differentially corrected position?

A – The “DGPS” LED is the primary indicator that the receiver is outputting differentially corrected positions. The iSXBlue/SXBlue II GNSS outputs the GGA message as the main positioning data message. This message contains a quality fix value that describes the GPS status. If this value is a 2, then the position is differentially corrected. The PocketMAX utility is a useful tool that provides this information without needing to use NMEA commands.

Q - Does it matter much if the iSXBlue/SXBlue II GNSS is frequently losing lock on SBAS due to obstructions and the low satellite elevation angles at my geographic location?

A - No, provided that the receiver is receiving a full set of corrections relatively often. Using the COAST technology, the iSXBlue/SXBlue II GNSS will be able to perform well for up to 40 minutes with old correction data (similar to Auto-Dif, accuracy towards the end will not be as accurate as the beginning.) In order to obtain a full set of corrections, the iSXBlue/SXBlue II GNSS antenna receives the ionospheric map over a period of a few minutes (about 5 minutes). This is the minimum amount of time required to get a full set of corrections for SBAS operation. After this, the receiver can COAST until the next set of corrections has been received.

7.7 Auto-Dif

Q – Why was Auto-Dif developed?

A – Once Selective Availability was removed in May of 2000, it opened the door to develop this technology as environmental errors change much more slowly than SA did. The purpose of Auto-Dif was to market an alternative to users in place of costly subscription-based differential services around the world where free services such as DGPS beacon and SBAS did not exist.

Q – Will Auto-Dif perform as well as other correction services?

A – Auto-Dif will perform with a similar level of performance as other differential services at first. There will be a slow drift to the positioning performance with increasing time. We normally allow Auto-Dif to age for a maximum of 30 to 40 minutes; however, it’s up to you on how long you will allow it to age. A simple update to the reference position will again provide best performance.

Q – Will Auto-Dif correct for multipath?

A – No, there’s no method of differentially correcting multipath signals. There’s only ways of reducing their impact on the measurements gathered by the receiver.

7.8 External Corrections

Q - My iSXBlue/SXBlue II GNSS system doesn’t appear to be using corrections from an external correction source, what could be the problem?

A - This could be due to a number of issues:

- Make sure that the corrections are of an RTCM SC-104 protocol.
- Make sure that the differential source is set to receive RTCM by issuing a \$JDIF,THIS<cr><lf> on the RS-232 Serial port.

- Check to see that the baud rates of the port used by the iSXBlue/SXBlue II GNSS matches that of the external correction source
- The external correction source should be using an 8 data bit, no parity, and 1 stop bit serial port configuration.
- Inspect the cable connection to ensure there's no sign of damage
- Check the pin-out information for the cables to ensure that the transmit line of the external correction source is connected to the receive line of the iSXBlue/SXBlue II GNSS's serial port and that the signal grounds are connected.

7.9 Installation

Q - Does it matter where I mount the iSXBlue/SXBlue II GNSS antenna?

A - Yes, the main consideration is that it must have an open hemisphere of sky for satellite tracking. Additionally, the position that it computes is referenced to the center of the antenna. It should be placed in the location for which you would like a position. Often, this is the centerline of a vehicle, on a pole-mount for georeferencing or in the provided soft hat.

Q - Can I use a vehicle's power system to operate the iSXBlue/SXBlue II GNSS system?

A - Yes, a cigarette lighter plug is available from your dealer or Geneq. This adapter recharges the integrated Li-Ion battery pack. It is important to use only the charger supplied by Geneq (see section 1.2.2 for more information on the battery pack).

8. Troubleshooting

8.1 Troubleshooting Checklist

Use the following checklist to troubleshoot anomalous iSxBlue/SxBlue II GNSS system operation. The following table provides a problem symptom, followed by a list of possible solutions.





Table 8-1 Troubleshooting

Symptom	Possible Solution
Receiver fails to power	<ul style="list-style-type: none"> Recharge battery pack and try again after 15 minutes of charge Verify contact modules between battery pack and receiver Verify gasket around receiver's battery contact module
No data or position from iSxBlue/SxBlue II GNSS	<ul style="list-style-type: none"> Check receiver power status and/or battery pack Verify that the receiver is configured to output data messages on the port you are communicating with (you may issue a \$JSHOW command with a terminal software to verify this) Verify that iSxBlue/SxBlue II GNSS is locked to a valid DGPS signal (this can often be done on the receiving device or with the use of HyperTerminal running on a PC) Verify that iSxBlue/SxBlue II GNSS is locked to GPS satellites (this can often be done on the receiving device or with the use of HyperTerminal running on a PC) Check integrity and connectivity of data cable connections
Random data from iSxBlue/SxBlue II GNSS	<ul style="list-style-type: none"> Verify that the RTCM or Binary messages are not being output accidentally (send a \$JSHOW command to view the configuration of the receiver and the messages configured for output) Verify that baud rate settings of iSxBlue/SxBlue II GNSS and remote device match correctly. Bluetooth (PortA) must be set to 9600 baud on the receiver Potentially, the volume of data requested to be output by the iSxBlue/SxBlue II GNSS could be higher than the current baud rate supports. Try using a higher baud rate on the RS-232 and USB ports.
No GPS lock	<ul style="list-style-type: none"> Check integrity of antenna cable Verify antenna's unobstructed view of the sky Verify the lock status of GPS satellites (this can often be done on the receiving device or with the use of HyperTerminal running on a PC)
No SBAS lock	<ul style="list-style-type: none"> Check antenna connections Verify antenna's unobstructed view of the sky. If starting the receiver under dense forest canopy, move the antenna location a bit until the DIFFerential LED (yellow) illuminates. See section 1.4.3.2 for field data collection guidelines Verify the lock status of SBAS satellites (this can often be done on the receiving device or with the use of HyperTerminal running on a PC – monitor BER value) Verify that SBAS satellite PRN numbers being searched by the receiver are the proper ones (WAAS, EGNOS, MSAS, GAGAN, etc). This may be verified with the \$JWAASPRN command. See Appendix C for a list of PRN numbers for the various active SBAS constellations
No DGPS position in external RTCM mode	<ul style="list-style-type: none"> Verify that the baud rate of the RTCM input port matches the baud rate of the external source Verify the pin-out between the RTCM source and the RTCM input port (transmit from the source must go to receive of the RTCM input port and grounds must be connected - Refer to Appendix B)
Non-differential GPS output	<ul style="list-style-type: none"> Verify the SxBlue II GPS' SBAS and lock status (or if external source is locked)

8.2 Using the LEDs to Troubleshoot

The iSxBlue/SxBlue II GPS receiver has 5 LED indicator lights that serve as status indicators. The first 4 lights should all be illuminated solid (non-blinking) when the receiver is powered on and has a valid GPS and differential solution. The last LED (furthest to the right) should only be illuminated solid if you are connected using Bluetooth communications. Otherwise, the lights can be in various states (blinking, on solid, or off). Table 7-2 describes the LED lights operation.

Table 8-2 LED Functions

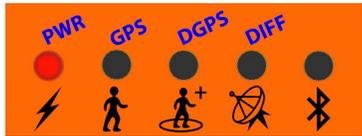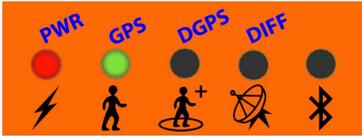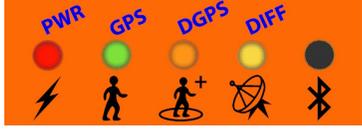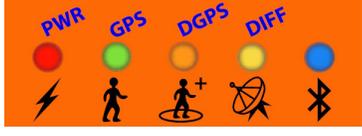	<p>Power LED: (Red)</p> <p>This LED should be on (solid) once power is applied to the receiver. This is the only LED that is not under GPS computer control. Once the battery voltage reaches a certain threshold, this LED will start blinking (roughly 15-20 minutes prior to auto shutdown).</p>
	<p>GPS LED: (Green)</p> <p>This LED serves two purposes: At power-on if it starts blinking, the GPS processor is likely faulty. After a minute or so, this LED should go on solid green to indicate that GPS has locked. This is true even if differential corrections are not available. If the LED is continually blinking and you have been programming your iSxBlue/SxBlue II GNSS, it is possible it is still in programming mode. The iSxBlue/SxBlue II GNSS will not communicate while in this state. Simply power cycle the SxBlue II GPS to restore normal communications.</p>
	<p>DGPS LED: (Orange)</p> <p>This LED will remain off until a differentially corrected GPS solution is available. It will blink at a steady rate if the solution has not converged to the accuracy specified by the \$JLIMIT command and will become solid yellow after the solution has converged. (The \$JLIMIT sets the threshold for the RMS residual error and this error gives a rough indication of expected user accuracy. Note, however, that it is not a direct measure of accuracy. Factors such as constellation geometry must also be taken into account. The default value for \$JLIMIT is 10 meters). It will also blink if the solution is a 2D solution (see the \$JALT command).</p>
	<p>Differential Source LED: (Yellow)</p> <p>This LED can be in several states: Off – Differential signal has not been received. Flickering on and off – the receiver is close to acquiring the differential signal. Blinking at a steady rate - Differential signal has been acquired, but the Bit-Error-Rate (BER) of the “best” signal tracked is higher than 150. Generally, this will not affect performance, but it is a warning of weak signal strength. On Solid – WAAS, Omnistar, Radio Beacon or external differential correction has been acquired and signal strength is good.</p>
	<p>Bluetooth LED: (Blue)</p> <p>This LED will remain off until a Bluetooth connection is established between the iSxBlue/SxBlue II GNSS and the other device. It will remain on until the connection is broken.</p>

Appendices

Appendix A - Specifications

This appendix provides the operational, mechanical, electrical, physical, and environmental specifications of the iSXBlue/SXBlue II GNSS receiver.

Table A-1 iSXBlue/SXBlue II GNSS Receiver Specifications

Internal GPS Engine Operational Specifications	
Item	Specification
Frequency	1.575 GHz
GPS + SBAS Channels	10 + 2 parallel tracking
DGPS Beacon (SXBlue II-B GPS)	2
OmniSTAR (SXBlue II-L GPS)	1
Horizontal DGPS accuracy	< 60 cm 2dRMS (95% confidence)
Horizontal RTK accuracy	< 5 cm
Horizontal Post-processed accuracy with carrier phase	1 cm (varies with baseline and length of observation)
Max Position update rate	Up to 20 Hz (selected messages)

Interface Specifications	
Item	Specification
Serial port interface level	RS-232C
RS-232 Data Port	9-pin D-sub
USB interface	2.0, Type B connector
Bluetooth Class / Version	Class 1 / Version 2.0
Data Port available baud rates	4800 to 57600
Output protocol	NMEA 0183, proprietary binary
Input protocol	NMEA 0183
External correction input protocol	RTCM SC-104

Power Specifications	
Item	Specification
Battery type	Lithium-Ion
Battery capacity	3,900mAh, 7.2V
Battery autonomy	> 10 hours (depending on model)
Power consumption	< 2.5 W

Mechanical Characteristics	
Item	Specification
Enclosure	Re-enforced nylon and ABS
Rating	Waterproof, IP-67
Length	14.1 cm (5.57")
Width	8.0 cm (3.15")
Height SXBlue II / II-B and II-L GPS	4.7 cm (1.85") / 5.6 cm (2.22")
Weight (SXBlue II GPS)	464 g (1.02 lb) including battery pack
Weight SXBlue II-B and II-L GPS	517 g (1.14 lb) including battery pack
Data connectors	DB-9 female and USB Type B female
Antenna connector	SMA female

Environmental Specifications	
Item	Specification
Operating temperature	-40°C to 85°C
Storage temperature	-40°C to 85°C
Humidity	99% Non-Condensing
Compliance	FCC, CE, RoHS and Lead-free

Appendix B - Interface

This appendix provides information on interfacing the main aspects of your iSXBlue/SXBlue II GNSS.

The main purpose of the iSXBlue/SXBlue II GNSS is to provide differentially corrected position and related information to a data logging or navigation device in the standard NMEA format. In addition to the iSXBlue/SXBlue II GNSS operating as a positioning sensor, you may also have a use for the correction data received by the internal SBAS demodulator.

The following sections detail how to interface your iSXBlue/SXBlue II GNSS depending on your application.

GPS NMEA Output

When operating the iSXBlue/SXBlue II GNSS as a differential positioning tool, the data output from either iSXBlue/SXBlue II GNSS communication port (Serial, USB or Bluetooth) is NMEA data that provides a variety of information, such as position, speed, satellites tracked, and more. This is the normal (default) data output and mode of operating the iSXBlue/SXBlue II GNSS.

To establish communications between the iSXBlue/SXBlue II GNSS receiver and your data logging or navigation device in this mode of operation, you must:

- Connect Pin-2 - transmit (TX) of the supplied iSXBlue/SXBlue II GNSS Serial cable to the receive pin (RX) of the data logging or navigation device.
- Connect Pin-3 - receive (RX) of the iSXBlue/SXBlue II GNSS Serial cable to transmit pin (TX) of the other device if it is able to configure the iSXBlue/SXBlue II GNSS. Otherwise, this connection is optional.
- Connect Pin-5 - signal ground of the iSXBlue/SXBlue II GNSS Serial Port to the signal return or ground of the external device.

Figure B-1 illustrates the required interface between the iSXBlue/SXBlue II GNSS and an external device using the serial cable:



Figure B-1 Serial Interface

Note - For successful communication, the baud rate of the iSXBlue/SXBlue II GNSS port must be set to match that of the data logging or monitoring device. The SXBlue II GPS only supports an RS-232C voltage level serial port. Refer to chapter 4 for instructions related to setting the iSXBlue/SXBlue II GNSS baud rate with the \$JBAUD command.

RTCM Data Output

To output (only) RTCM correction data from the internal SBAS correction source from the Serial, USB or Bluetooth ports of the iSxBlue/SxBlue II GNSS, use the following procedure:

- Turn off all NMEA and binary messages using the \$JOFF<CR><LF> command
- Turn RTCM on using the \$JRTCM,1<CR><LF> command

To establish communication between the iSxBlue/SxBlue II GNSS and an external GPS receiver, you must:

- Connect Pin-2-transmit (TX) of the serial cable to the receive pin (RX) of the separate GPS receiver or logging device.
- Connect Pin-5-Common Ground of the serial cable to the signal return or common ground of the separate GPS receiver.

Figure B-2 illustrates the required interface between the iSxBlue/SxBlue II GNSS and device that receives position information:

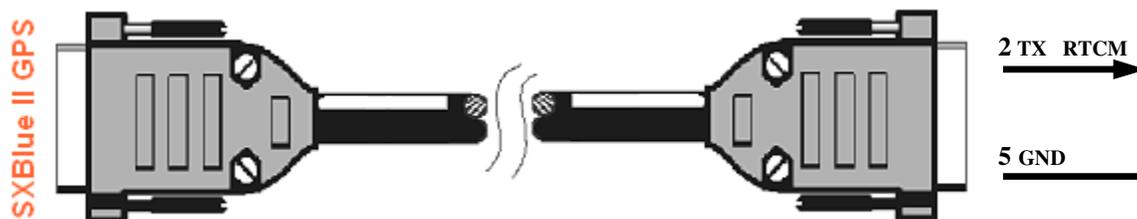


Figure B-2 RTCM Data Output From Serial Port

Note - For successful communication, the baud rate of the iSxBlue/SxBlue II GNSS Serial port must be set to match that of the separate GPS receiver. Additionally, you must interface the iSxBlue/SxBlue II GNSS to an RS-232C serial port of the separate GPS receiver. Refer to chapter 4 for instructions related to setting the iSxBlue/SxBlue II GNSS baud rate using the \$JBAUD command.

External Correction Input

In this operating mode, an external correction device inputs RTCM correction data through the Serial port. In order to accomplish this, the iSxBlue/SxBlue II GNSS must be commanded to use external corrections using the \$JDIFF command.

To configure external correction input on the Serial port you must:

- Communicate with the iSxBlue/SxBlue II GNSS on the Serial Port. Ensure that the baud rate of the Serial Port and the external correction source match by issuing the appropriate \$JBAUD command.
- Issue a \$JDIFF,THIS<CR><LF> command through the Serial port.

To establish communications between the iSxBlue/SxBlue II GNSS and an external differential

correction source, you must:

- Connect Pin-3-receive (RX) of the serial cable to transmit pin (TX) of the external correction source
- Connect Pin-5-Common Ground of the serial cable to the signal return or common ground of the external correction source

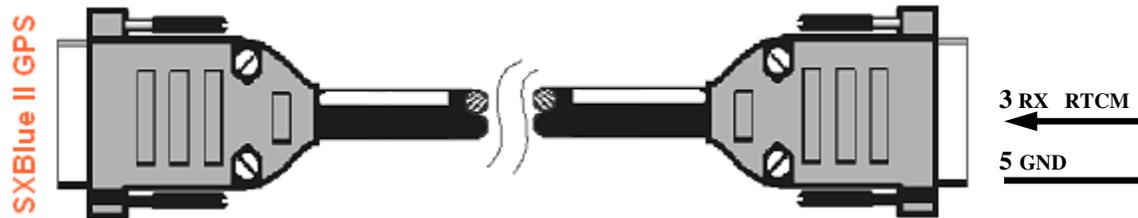


Figure B-3 RTCM Data Input to Serial Port

Note - For successful communications, the baud rate of the iSXBlue/SXBlue II GNSS differential port must be set to match that of the external correction source. The correction source must support an RS-232 interface level and the baud rates between each device must match. Refer to chapter 4 for instructions related to setting the iSXBlue/SXBlue II GNSS baud rate using the \$JBAUD command.

Appendix C - Introduction to GPS and DGPS Services

This chapter provides a brief overview of GPS, differential GPS, Space Based Augmentation Systems (SBAS) such as WAAS / EGNOS / MSAS / GAGAN.

GPS

The United States Department of Defense (DoD) operates a reliable, 24 hour a day, all weather Global Positioning System (GPS).

Navstar, the original name given to this geographic positioning and navigation tool, includes an official constellation of 24 satellites (plus active spares) orbiting the Earth at an altitude of approximately 22,000 km.

How it Works

These satellites transmit coded information to GPS users at UHF (1.575 GHz) frequencies that allows user equipment to calculate a range to each satellite. GPS is essentially a timing system - ranges are calculated by timing how long it takes for the coded GPS signal to reach the user's GPS antenna.

To calculate a geographic position, the GPS receiver uses a complex algorithm incorporating satellite coordinates and ranges to each satellite. Reception of any four or more of these signals allows a GPS receiver to compute 3D coordinates. Tracking of only three satellites reduces the position fix to 2D coordinates (horizontal with fixed vertical).

The GPS receiver calculates its position with respect to the phase center of the GPS antenna. The latitude, longitude, and altitude of the antenna are referenced according to the current version of the World Geodetic System 1984 ellipsoid (WGS-84). At the time of print, the current WGS-84 version is G1150 and follows the ITRF 2000 datum (Inter Terrestrial Reference Frame)

GPS Services

The positioning accuracy offered by GPS varies depending upon the type of service and equipment available. For security reasons, two GPS services exist: the Standard Positioning Service (SPS) and the Precise Positioning Service (PPS). The SPS uses a code modulated onto the signal for measurements and is referred to as the Coarse Acquisition code (C/A code). The US Department of Defense (DoD) reserves the PPS for use by its personnel and authorized partners. The PPS uses a different code than the SPS, referred to as the Precise Code (P-code) and contains more resolution than the C/A code. The DoD provides the SPS free of charge, worldwide, to all civilian users.

In order to maintain a strategic advantage, the US DoD used to artificially degrade the performance of the SPS so that the positioning accuracy was limited to 100 meters 95% of the time. This intentional degradation was called Selective Availability (SA). The effect of SA has been turned to zero since mid-2000, and has been officially 'turned off' since then (2007).

Currently, autonomous GPS is able to provide accuracy on the order of 10 meters, depending on the sophistication of the GPS engine. For many positioning and navigation applications, this level of accuracy is not sufficient, and differential techniques must be employed.

Differential GPS

The primary sources of errors that degrade GPS performance include SA (currently set to a zero effect), atmospheric errors, timing errors, satellite orbit errors, and multipath. Differential GPS (DGPS) is essentially a differencing process that removes sources of error from the GPS position solution and improves the integrity of the GPS position solution. There are a number of methods of differential measurement correction:

- Conventional real-time differential – This is the most common form of correcting GPS errors in real-time with corrections sent to the rover GPS receiver by some form of communications equipment. Conventional real-time differential uses C/A code range measurements and their associated corrections. Carrier phase corrections are not used with this form of differential technique.
- Post processing – This method is often used when either higher accuracy than achievable through conventional differential is needed, or a conventional form of real-time corrections is not available in the region where the rover receiver is being operated. Depending on receiver hardware and the methodology used for post process, performance can be from many centimeters to millimeter precision. A variety of 3rd party software packages are available to post process GPS raw measurement data. The iSXBlue/SXBlue II GNSS can be configured to output raw measurement data at rates of up to 20 Hz in a proprietary format. This data can be converted to an industry standard RINEX format if needed.
- Real-Time Kinematic – This method uses more sophisticated techniques to resolve the number of wavelengths between the satellite and the user, to provide centimeter-level positioning (or better) in real-time. This technique uses high-end receiver hardware, antennas, and internal operating software to compute accurate position solutions. The compromise with this method of differential correction is increased system complexity, cost, and operating constraints.

The iSXBlue/SXBlue II GNSS includes a primary source of conventional real-time corrections –Space-Based Augmentation System (SBAS). External corrections may also be input to the iSXBlue/SXBlue II GNSS for situations where either internal correction services is not available or an external source is preferential.

In addition to the conventional differential positioning with internal sources of corrections, the iSXBlue/SXBlue II GNSS also has a documented binary raw measurement protocol. A RINEX translator is available from Geneq in the event that this may be useful, in addition to some C code snippets to aid in integrating the binary format itself into your own application.

The iSXBlue/SXBlue II GNSS also uses an RTK solution option in two versions: fixed and floating-only solution. This allows for cm level field data collection, precise guidance and stake-out applications.

Conventional Real-Time Differential

The majority of GPS navigation and positioning uses this form of positioning. Conventional real-time differential techniques are more robust in their usage and versatility than post-processing or RTK solutions. They are tolerant to errors in communication of the real-time corrections from the base station or correction network, provide a reasonable amount of accuracy (sub-meter accuracy is best-case), and can be simply turned on and used without too much regard other than ensuring a lock to GPS satellite signals and the correction communication link.

How it Works

Conventional DGPS involves setting up a reference GPS receiver at a point of known coordinates. This receiver makes distance measurements, in real-time, to each of the GPS satellites. The measured ranges include the errors present in the system. The base station receiver calculates what the true range, without errors, knowing its coordinates and those of each satellite. The difference between the known and measured range for each satellite is the range error. This error is the amount that needs to be removed from each satellite distance measurement in order to correct for errors present in the system.

The base station transmits the range error corrections to remote receivers in real-time. The remote receiver corrects its satellite range measurements using these differential corrections, yielding a much more accurate position. This is the predominant DGPS strategy used for a majority of real-time applications. Positioning using corrections generated by DGPS radiobeacons will provide a horizontal accuracy of 1 to 5 meters with a 95% confidence. More sophisticated, short-range DGPS systems (10 to 15 km) can achieve centimeter-level accuracy, but are expensive and often limited to precise survey applications due to technical constraints on their use.

DGPS Format

For manufacturers of GPS equipment, commonality is essential to maximize the utility and compatibility of a product. The governing standard associated with GPS is the Interface Control Document, ICD-GPS-200, maintained by the US DoD. This document provides the message and signal structure information required to access GPS.

Like GPS, DGPS data and broadcast standards exist to ensure compatibility between DGPS services and associated hardware and software. The Radio Technical Commission for Maritime Services Special Committee 104 has developed the primary DGPS standard associated with conventional DGPS, designated RTCM SC-104 V2.2. This correction standard is used by many correction services, including many private reference stations and DGPS beacon systems. The iSXBlue/SXBlue II GNSS supports this correction protocol via either of its communication ports.

In addition to the RTCM standard, the Radio Technical Commission for Aeronautics has a differential service intended for wide area correction services, designated RTCM SC-159. The United States Federal Aviation Administration's Wide Area Augmentation System (WAAS) and other compatible Space Based Augmentation Systems (SBAS) such as the European Geostationary Navigation Overlay System (EGNOS), the Japanese MT-SAT Satellite-based Augmentation System (MSAS) and the Indian Space Research Organization's GPS Aided Geo-Augmented Navigation system (GAGAN) system (still in test mode at the time of print) use this data format. The iSXBlue/SXBlue II GNSS receiver is compatible with each of these differential services.

Note – When using a differential correction service, the resultant position may be referenced to a local datum rather than the current WGS-84 ellipsoid. Please refer to your signal provider for more information.

Post Processing

Post processing is a method to compute accurate positions in post mission by logging raw measurement data at the base station and the rover simultaneously. The differential processing can then be performed

later in the office using sophisticated processing software tools. There are a small variety of methodologies available to the operator, such as static, rapid static, kinematic, etc.

Describing in detail the various post processing techniques is beyond the scope of this document, however, generally, post processing is more complicated from a procedural perspective and requires more skill to successfully operate than real-time systems.

Factors Affecting DGPS Accuracy

Many factors affect the positioning accuracy that a user may expect from a DGPS system. The most significant of these influences include:

- Proximity of the remote user to the reference station (atmospheric and orbit errors)
- Age of the received differential corrections
- Atmospheric conditions at the beacon and remote user locations
- Satellite constellation geometry, often expressed as a Dilution of Precision (DOP)
- Magnitude of GPS signal multipath present at the remote station
- Quality of the GPS receiver being used at both the reference and remote stations

Proximity of the Reference Station

The distance between a remote user and the reference station can sometimes be considerable, such as when using 300 kHz DGPS radiobeacons. Consequently, some of the errors associated with GPS at the base station differ somewhat from those at the remote user's location. This spatial decorrelation of errors can result in a relative position offset from the absolute coordinates of the remote receiver. This offset may be as much as one meter for every 100 km (62 miles) between the base station and remote receiver.

The causes of decorrelation are:

- GPS satellite orbit errors (significant)
- Ionospheric errors (potential to be most significant depending on level of activity)
- Tropospheric errors (less significant)

GPS satellite orbit errors are typically a greater problem with local area differential systems. The decorrelation effect is such that the satellite's orbit error projects onto the reference receiver and remote receiver's range measurements differently. As the separation between the receivers increases, the orbit error will not project onto the ranges in the same manner, and will then not cancel out of the measurement differencing process completely. SBAS networks, with the use of multiple base stations, are able to accurately compute the orbit vector of each satellite. The resulting corrector is geographically independent, so minimal decorrelation occurs with respect to position within the network.

The ionosphere and the troposphere both induce measurement errors on the signals being received from GPS. The troposphere is the humid portion of the atmosphere closest to the ground. Due to its humidity, refraction of GPS signals at lower elevations can distort the measurements to satellites. This error source is rather easily modeled within the GPS receiver and doesn't constitute a significant problem.

The error induced by the ionosphere is more significant, however, and is not as simple a task to correct. The ionosphere is the charged layer of the atmosphere responsible for the Northern Lights. Charged particles from the sun ionize this portion of the atmosphere, resulting in an electrically active atmospheric

layer. This charged activity affects the GPS signals that penetrate this layer, affecting the measured ranges. The difficulty in removing the effect of the ionosphere is that it varies from day to day, and even hour to hour due to the sun's 11-year solar cycle and the rotation of the earth, respectively. During the summer of 2001, the sun's solar cycle reached an 11-year high and going forward we saw a general cooling trend of the ionosphere over the few years that followed, thus with reduced ionospheric activity.

Removing the effect of the ionosphere depends on the architecture of the differential network. DGPS radiobeacons, for example, use a more conventional approach than WAAS or SBAS in general. DGPS beacons make use of a single reference station, which provides real-time GPS error corrections based upon measurements that it makes at its location. It is possible that the state of the ionosphere differs between the remote user and the single reference station. This can lead to an incompletely corrected error source that could degrade positioning accuracy with increased distance from the base station.

SBAS systems (WAAS, EGNOS, MSAS, GAGAN, etc) use a different approach, using a network of reference stations in strategic locations to take measurements and model the real-time ionosphere. Updates of the ionospheric map are sent on a continual basis to ensure that as the activity of the ionosphere changes with time, the user's positioning accuracy will be maintained. Compared to using a DGPS beacon, the effect of geographic proximity to a single reference station is minimized resulting in more consistent system performance throughout all locations within the network.

Correction Latency

The latency of differential corrections to a lesser extent affects the achievable positioning accuracy at the remote receiver since the magnitude of SA was turned to zero in year 2000. Latency is a function of the following:

- The time it takes the base station to calculate corrections
- The data rate of the radio link
- The time it takes the signal to reach the user
- The time required for the remote differential receiver to demodulate the signal and communicate it to the GPS receiver.
- Any data loss that occurs through reception problems

Most of these delays require less than a second, though in some instances, depending upon the amount of information being transferred, overall delays of three to five seconds may occur. The effect of latency is mitigated by the COAST technology within the iSXBlue/SXBlue II GNSS. This technology is especially valuable in conditions of DGPS signal loss where the age of corrections increases for each second of signal loss. See Section 2.3 for further information on COAST.

Satellite Constellation Geometry

The number of satellites visible and their geometry in the sky influences positioning accuracy. The Dilution of Precision (DOP) describes the strength of location and number of satellites in view of the receiver. A low DOP indicates a strong potential for better accuracy than a high DOP. Generally, more satellites visible to both the reference and remote receivers will provide a lower DOP (any satellites seen by one receiver and not the other, are not used in the position solution). Additionally, if the satellites are evenly spread around the receiver, rather than grouped in a few regions of the sky, a lower DOP (stronger solution) will result.

GPS Signal Multipath

Satellite signals received by the GPS receiver by a reflection from an object can decrease positioning accuracy. These multipath signals increase the measured range to a satellite as the signal takes a longer route to the GPS antenna. Certain precautions will minimize GPS antenna sensitivity to these reflected signals. Operating away from large reflective structures such as buildings or using special antennas and GPS equipment can help to reduce the impact of multipath. For most consumer-level applications, a small amount of multipath is tolerable.

GPS Receiver Quality

The quality of a GPS receiver has a dramatic influence on positioning accuracy. Consumer-based GPS products, such as many affordable handheld and fixed-mount receivers, typically operate with an accuracy of 3 to 5 meters horizontally 95% of the time. The accuracy of a particular product depends on the specific receiver's performance characteristics. Higher accuracy GPS receivers are able to achieve sub-1 meter horizontal accuracy 95% of the time using real-time DGPS transmissions. The iSXBlue/SXBlue II GNSS falls into this latter category.

Space Based Augmentation Systems (SBAS)

The US Federal Aviation Administration has developed a Wide Area Augmentation System (WAAS) for the purpose of providing accurate positioning to the aviation industry. In addition to providing a high quality and accurate service for this industry, this service is available free of charge to all other civilian users and markets in Central and North America. This service falls into the greater category of Space Based Augmentation System (SBAS).

Upon the successful completion of a 21-day test on August 24, 2000, the Federal Aviation Administration of the United States of America announced that its Wide Area Augmentation System (**WAAS**) would be running 24 hours per day, seven days per week from then on. Testing has shown since that this signal is accurate and reliable. Since the date it was commissioned (July 10, 2003), WAAS has undergone a few changes in its satellite constellation and coverage (PRN 122 and 134 phased out and replaced by PRN 135 and 138 at new locations; and with the addition of ground monitoring stations in Canada and Mexico in September 2007). In summer 2010, PRN 133 has been added to the constellation and in late December 2010, PRN 135 was recovered after being out of control for a few months, bringing the total number of operational satellites to three.

Other government agencies have followed the pace and developed compatible SBAS systems for their respective geographic regions. In Europe, the European Space Agency, the European Commission, and EUROCONTROL have jointly developed the European Geostationary Overlay System (**EGNOS**). EGNOS is now fully deployed and in its pre-operational phase. The system will undergo certification for safety-of-life applications before becoming fully operational. Furthermore, on June 28, 2007, the European Space Agency and the Agency for Security of Air Navigation in Africa and Madagascar have signed a cooperation agreement with the objective of using satellite navigation to improve air traffic safety over the African continent.

In Japan, the MTSAT Satellite-based Augmentation System (**MSAS**) has been deployed by the Japan Civil Aviation Bureau (JCAB). Successful launches of MTSAT-1R and MTSAT-2 were followed by system integration for MSAS ground system and MTSATs by transmitting test signal from MTSATs. Purposes of test signal transmission were to optimize system performance and then to verify that

augmentation information meets safety and performance requirements. Since those tests had been accomplished successfully, MSAS for aviation use was commissioned on September 27, 2007.

In India, the Indian Space Research Organisation and Airports Authority of India have successfully completed the final system acceptance test of the GPS Aided GEO Augmented Navigation system (**GAGAN**) as announced on November 20, 2007 by Raytheon Company. With completion of the final system acceptance test, the stage is set for India to embark on the next phase of the program, which will expand the existing ground network, add redundancy, and produce the certification analysis and documentation for safety-of-flight commissioning. The launch of their own communication satellites is scheduled for May 11, 2011. Note that GAGAN is no longer broadcasting on Inmarsat 4f1.

China has a similar program for a SBAS and the service is named the Chinese Satellite Navigation Augmentation System (**SNAS**).

The iSXBlue/SXBlue II GNSS is capable of receiving correction data from all compatible SBAS.

Warning – Use of non-commissioned SBAS signals is entirely at your risk and discretion.

How it Works

A SBAS incorporates a modular architecture, similar to GPS, comprised of a Ground Segment, Space Segment, and User Segment:

- The Ground Segment includes reference stations, processing centers, a communication network, and Navigation Land Earth Stations (NELS)
- The Space Segment includes geostationary satellites (For example, EGNOS uses Inmarsat transponders).
- The user segment consists of the user equipment, such as a iSXBlue/SXBlue II GNSS receiver and antenna

A SBAS uses a state-based approach in their software architecture. This means that a separate correction is made available for each error source rather than the sum effect of errors on the user equipment's range measurements. This more effectively manages the issue of spatial decorrelation than some other techniques, resulting in a more consistent system performance regardless of geographic location with respect to reference stations. Specifically, SBAS calculates separate errors for the following:

- The ionospheric error
- GPS satellite timing errors
- GPS satellite orbit errors

Figures C-1 and C2 show the ground segments of the WAAS and EGNOS systems, respectively. In 2007, a total of 13 monitoring stations have been added to the existing WAAS network, increasing the ionospheric coverage for this SBAS constellation. The location is shown in red in Figure C1: 4 in Alaska, 4 in Canada and 5 in Mexico.

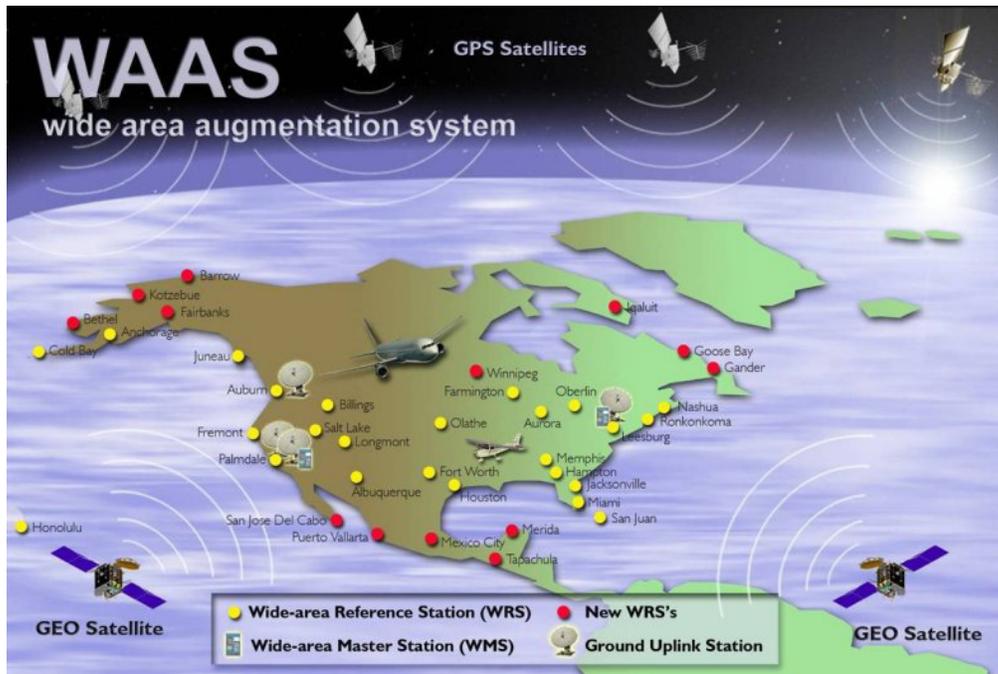


Figure C-1 WAAS Ground Segment (end of 2007)

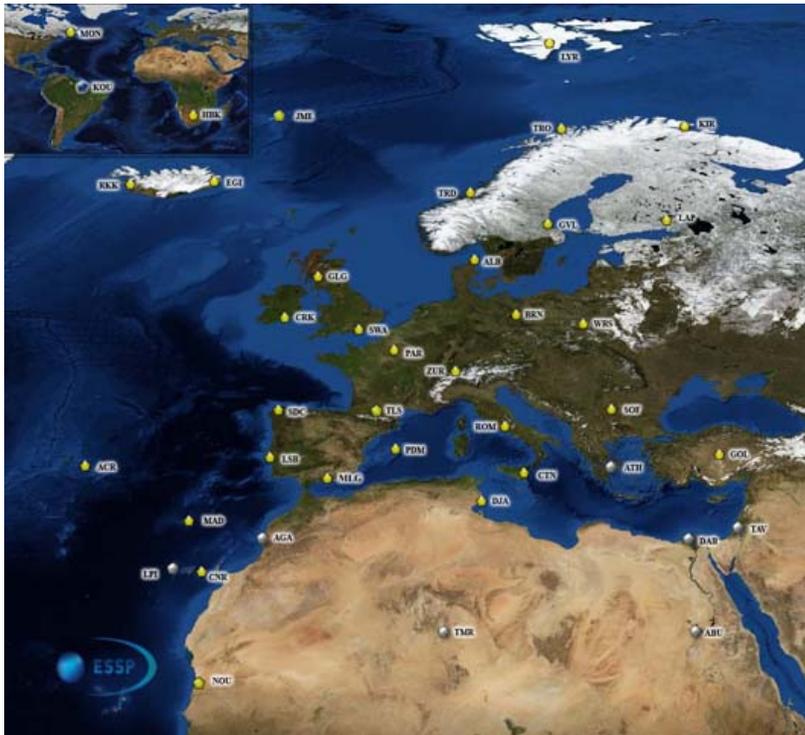


Figure C-2 EGNOS Ground Segment (2010)

Provided that a GPS satellite is available to the SBAS reference station network for tracking purposes, orbit and timing error corrections will be available for that satellite. Ionospheric corrections for that satellite are only available if the signal passes through the ionospheric map provided by SBAS (ex. the WAAS ionospheric map covers the entire Central and North American region). As an example, if a satellite is South of your current location at a low elevation angle, the pierce point of the ionosphere will be considerably South of your location since the ionosphere is at an altitude of approximately 60 km. There must be sufficient ionospheric map coverage beyond your location in order to have ionospheric correctors for all satellites.

To enhance the information provided by SBAS, the iSXBlue/SXBlue II GNSS has a unique ability to extrapolate the ionospheric information beyond the broadcast information. This feature increases the usable geographic coverage area of a SBAS system.

Signal Information

A SBAS transmits correction data on the same frequency as GPS from a geostationary satellite (the space segment), allowing the use of the same receiver equipment used for GPS. Another advantage of having SBAS transmit on the same frequency is that only one antenna is required.

Reception

Since SBAS broadcast in the L-band, the signal requires a line of sight in the same manner as GPS to maintain signal acquisition. Let's select WAAS for an example. Currently, two communication satellites are transmitting WAAS data for public use. Due to their location, these satellites may appear lower on the horizon, depending on your geographic position on land. In regions where the satellites appear lower on the horizon, they may be more prone to being masked by terrain, foliage, buildings or objects, resulting in signal loss. The further that you are away from the equator and the satellite's longitude will cause the satellite to appear lower on the horizon. Fortunately, the COAST Technology helps alleviate this problem by maintaining system performance when SBAS signal loss occurs for extended periods of time. More information on COAST is provided in Section 2.5.

When using SBAS correction data, the iSxBlue/SXBlue II GNSS is able to provide you with the azimuth and elevation of the SBAS available satellites via a NMEA command to aid in determining their position with respect to the built-in antenna. See Section 4.4 for more information on the \$JGEO command.

Worldwide SBAS Coverage

Figure C-3 depicts the current world SBAS coverage. This figure is only an approximation of signal coverage by each of the SBAS constellation. Although there is geographic coverage at higher latitudes, practical usage of SBAS will be limited to environments where a relatively consistent line of sight to the satellites from the iSxBlue/SXBlue II GNSS system is available.

Figure C-3 Worldwide SBAS Coverage

Figure C-4 shows the ionospheric coverage for each of the SBAS constellations. For WAAS, EGNOS, MSAS and GAGAN the grids shown are actual typical grids recorded with an SXBlue III GNSS receiver (with no extrapolation).

Figure C-4 Worldwide SBAS Ionospheric Coverage

Table C-1 lists all the PRN numbers allocated to each of the SBAS Constellations

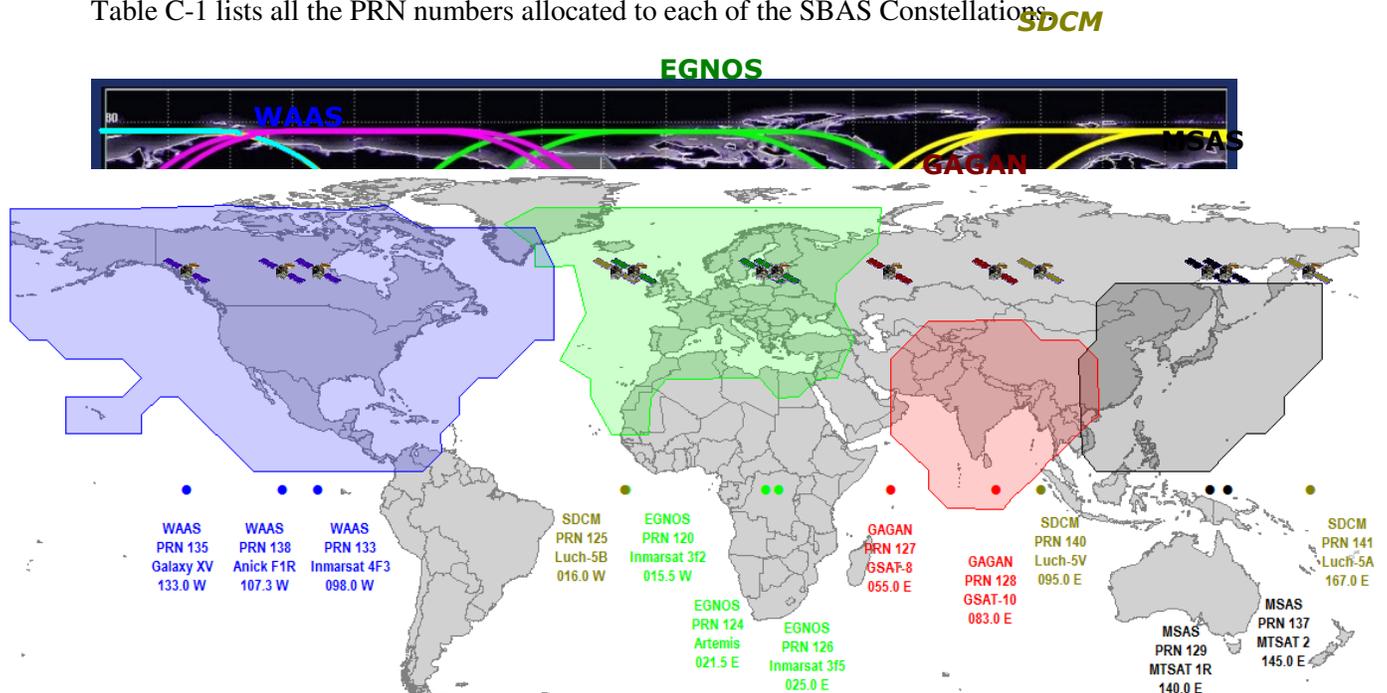


Table C-1 Worldwide SBAS Constellation (December 2012)

SBAS Constellation	PRN Number	NMEA Number	Satellite Name	Longitude
WAAS	133	46	Inmarsat 4F3	98.0° W
WASS	135	48	Galaxy XV	133.0 W
WAAS	138	51	Anik FIR (Telesat)	107.3° W
EGNOS	120	33	Inmarsat 3F2 (AOR-E)	15.5° W
EGNOS	124	37	ESA (Artemis)*	21.5° E*
EGNOS	126	39	Inmarsat 3F5 (IND-W)	25.0° E
MSAS	129	42	MTSAT 1R	140.0° E
MSAS	137	50	MTSAT 2	145.0° E
GAGAN	127	40	GSAT-8	55.0° E
GAGAN	128	41	GSAT-10	83.0° E
SDCM	125	38	Luch-5B**	16.0° W**
SDCM	140	53	Luch-5V**	95.0° E**
SDCM	141	54	Luch-5A**	167.0° E**

* EGNOS PRN 124 normally used to perform industry tests, is currently set to test mode.

** SDCM is not operational. Luch-5B might be repositioned to a more eastern location. Luch-5A is currently at 95.0°E and will be moved to 167.0°E. Luch-5V launch is planned for Q1 2014.

Note - The satellite elevation angle lowers with increasing distance away from the equator and from the satellite's longitude. Although a good amount of signal coverage is shown in Northern latitudes for both WAAS and EGNOS, it may not be usable due to its low elevation angle and the potential for it to be obstructed. Ideally, testing of the system in the area of its use is recommended to ensure that the signal is sufficiently available.

Note - The SBAS signal coverage may be present in some areas without either sufficient ionospheric map coverage or satellites with valid orbit and clock correctors. In such a case, differential positioning with SBAS may not be desirable or possible, as four or greater satellites (with correctors) must be available to compute a DGPS position. The next section provides further information on the ionospheric map features of SBAS and the iSXBlue/SXBlue II GNSS.

SBAS Ionospheric Map Extrapolation

To improve upon the ionospheric map provided by SBAS, the iSXBlue/SXBlue II GNSS receiver extrapolates a larger ionospheric map from the broadcast coverage map, extending its effective coverage. This allows the iSXBlue/SXBlue II GNSS to be used successfully in regions where competitive products may not. For example, the extrapolation provides enhanced coverage through the northern part of South America for WAAS, through the northern part of Africa for EGNOS, etc.

Please note that the process of estimating ionospheric corrections beyond the SBAS broadcast map would not be as good as having an extended SBAS map in the first place. This difference may lead to minor accuracy degradation. As an example, Figure C-5 depicts the broadcast WAAS and EGNOS ionospheric map extent and the extrapolated version. As can be seen, the extrapolated grid extends further in all directions than the broadcast one, enhancing usable coverage.

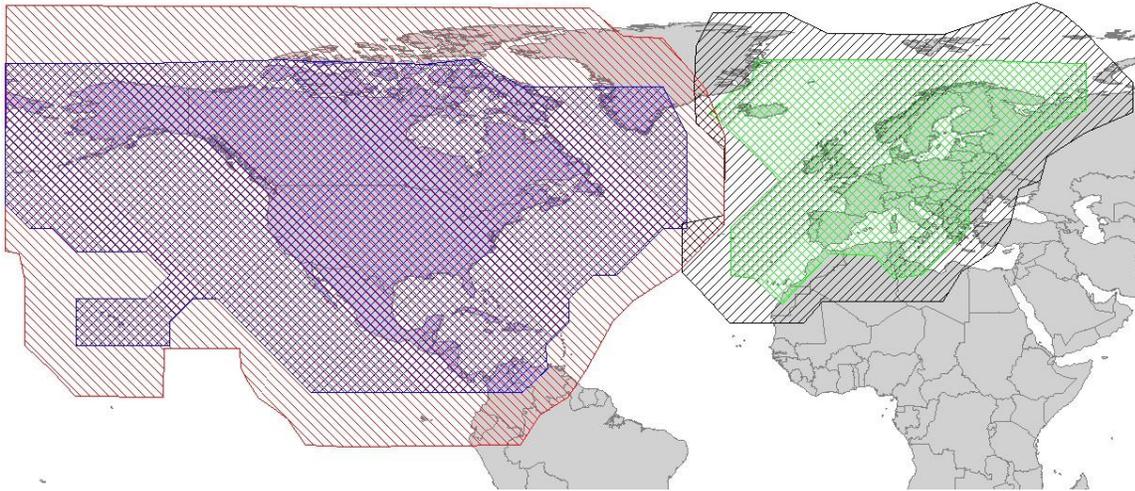


Figure C-5 Broadcast and Extrapolated Ionospheric Correction Map

Appendix D - Resources

Reference Documents

National Marine Electronics Association, [National Marine Electronics Association \(NMEA 0183\) Standard for Interfacing Marine Electronic Devices](#), Version 2.1, October 15, NMEA 1995, PO Box 50040, Mobile Alabama, 36605 USA, Tel: +1-205-473-1793, Fax: +1-205-473-1669

Radio Technical Commission for Maritime Services, [RTCM Recommended Standards for Differential NAVSTAR GPS Service](#), Version 2.2, Developed by Special Committee No. 104, RTCM 1998, 1800 Diagonal Rd, Suite 600, Alexandria, VA, 22314-2840 USA, Tel: +1-703-684-4481, Fax: +1-703-836-4429

Radio Technical Commission for Aeronautics, [Minimum Operational Performance Standards \(MOPS\) for Global Positioning System/Wide Area Augmentation System Airborne Equipment](#), Document RTCA DO-229A, Special Committee No. 159, RTCA 1998, 1828 L Street, NW, Suite 805, Washington, DC, 20036 USA, Tel: +1-202-833-9339

ARIC Research Corporation, Interface Control Document, [Navstar GPS Space Segment / Navigation User Interfaces](#), ICD-GPS-200, April 12, 2000, 2250 E. Imperial Highway, Suite 450, El Segundo, CA 90245-3509, www.navcen.uscg.gov/gps/geninfo/default.htm

Geneq Web Site

This following address is the iSXBlue/SXBlue II GNSS Web site which provides detailed information on the various receivers manufactured by Geneq: www.sxbluegps.com

GPS General Resources

NAVSTAR GPS Joint Program Office:
<http://www.losangeles.af.mil/library/factsheets/factsheet.asp?id=5311>

US Coast Guard Navigation Center: <http://www.navcen.uscg.gov>

FAA WAAS Web Site

This site offers general information on the WAAS service provided by the U.S. FAA.
http://www.faa.gov/airports_airtraffic/technology/waas/

GNSS Services:
http://www.faa.gov/about/office_org/headquarters_offices/ato/service_units/techops/navservices/gnss/

For realtime WAAS satellite corrections and performance:
<http://www.nstb.tc.faa.gov/index.htm>

To subscribe to the SatNav newsletter notification:
<http://www.faa.gov/help/subscribe/>

ESA EGNOS Web Site

This site contains information relating to past performance, real-time performance, and broadcast schedule of EGNOS.

ESA main page: <http://www.esa.int/esaCP/index.html>

EGNOS User Support: http://egnos-user-support.essp-sas.eu/egnos_ops/index.php

EGNOS for Professionals: <http://www.egnos-pro.esa.int/index.html>

MSAS Information

Kobe Aeronautical Satellite Center in Japan provides some info on MSAS on the following page:
<http://www.kasc.go.jp/english/index.htm>

International Association of Marine Aids to Navigation and Lighthouse Authorities (IALA)

<http://www.iala-aism.org/>

OmniSTAR Web Site

<http://www.omnistar.com>

Finding Satellite Elevations

The following web page allows computing elevations of satellites above horizon from any location in the world: <http://www.lyngsat.com/> (Java in browser should be enabled)

WAAS PRN 133: <http://www.lyngsat.com/tracker/galaxy19.html> (same location as...)

WAAS PRN 135: <http://www.lyngsat.com/tracker/galaxy12.html> (same location as...)

WAAS PRN 138: <http://www.lyngsat.com/tracker/anikf1r.html>

EGNOS PRN 120: <http://www.lyngsat.com/tracker/inmar3f2.html>

EGNOS PRN 126: <http://www.lyngsat.com/tracker/inmar3f5.html> (same location as...)

EGNOS PRN 124: <http://www.lyngsat.com/tracker/artemis.html>

MSAS PRN 129: <http://www.lyngsat.com/tracker/mtsatl1r.html>

MSAS PRN 137: <http://www.lyngsat.com/tracker/mtsatl2.html>

GAGAN PRN 128: <http://www.lyngsat.com/tracker/in4a.html> (same location as...)

Datum Information

US National Geodetic Survey FAQ's: <http://www.ngs.noaa.gov/faq.shtml>

Online HTDP Reference Frame Transformation tool:
<http://www.ngs.noaa.gov/cgi-bin/HTDP/htdp.prl?f1=4&f2=1>

Solar and Ionospheric Activity Web Sites

The following sites are useful in providing details regarding solar and ionospheric activity:

<http://iono.jpl.nasa.gov//index.html>

<http://www.spaceweather.com>

<http://www.n3kl.org/sun/noaa.html>

GPS, GIS and Survey Related Magazines

GPSWorld Magazine: <http://www.gpsworld.com/>

GPSWorld Survey/Construction News: <http://sc.gpsworld.com/gpssc/>

GIM International: <http://www.gim-international.com/>

POB Magazine: <http://www.pobonline.com/>

Direction Magazine: <http://www.directionsmag.com/>

GeoWorld: <http://www.geoplace.com>

Geoconnexion International Magazine: <http://www.geoconnexion.com/>

Index

\$

\$GPGGA, 95, 96
\$GPGLL, 96
\$GPGSA, 97
\$GPGST, 97
\$GPGSV, 98
\$GPRMC, 98
\$GPRRE, 99
\$GPVTG, 99
\$GPZDA, 100
\$J4STRING, 70
\$JAPP, 58
\$JASC,GP, 67
\$JASC,RTCM, 75
\$JBAUD, 59
\$JBIN, 66
\$JCONN, 60
\$JDIFF, 60
\$JGEO, 74
\$JK, 61
\$JOFF, 69
\$JPOS, 62
\$JQUERY,GUIDE, 62
\$JRAD,1, 85, 88, 91
\$JRAD,1,P, 85, 87
\$JRAD,2, 86, 88
\$JRAD,3, 86, 88
\$JRD1, 74
\$JRESET, 62
\$JSAVE, 63
\$JSHOW, 64
\$JT, 65
\$JWAASPRN, 73, 76, 77, 78, 79, 80

A

Accuracy, 23, 130, 132
Applications
 activating, 45
 available, 43
 subscribing to, 43
Auto-Dif, 29, 51, 84, 114, 118

B

Base Station Installation, 52
Battery
 charger, 3
 contact, 3
 fuel gauge, 3
 pack, 3
Baud Rate, 35, 124, 125, 126
Binary, 34, 37, 104
Bit Error Rate (WAAS), 24
Bluetooth, 34

Bluetooth Communication, 7
Bluetooth Connectivity, 34

C

Carrying Case, 19
COAST, 114
COAST Feature, 27, 28
Commands, 41
 Auto-Dif, 84, 87
 General, 54
 GPS, 67
 Local Differential, 89
 RAIM, 102
 SBAS, 72
Communication, 33
Connectivity, 34, 124, 125
Customer Service, xiv

D

Date Codes, 46
Default Application, 5
Default GPS NMEA Message Output, 6
Default Parameters, 5, 6
Default Port Settings, 6
DGPS Errors, 130
 Age of Correction, 131
 Geometry, 132
 Latency, 131
 Multipath, 132
 Proximity, 130
Differential Correction Operations, 47
Differential Corrections, 129
Differential GPS (DGPS), 129

E

EGNOS, 133

F

Features, 23
Field Data Collection
 configuration, 21
 guidelines, 21
Frequently Asked Questions, 114

G

GAGAN, 133
GPS, 129
GPS Performance, 32

H

Humidity, 35
HyperTerminal, 39

I

ICD-GPS-200, 129
Installation
 Connecting to External Devices, 34
 Environmental Considerations, 35
 Placement, 33
Interface, 33, 124
Ionospheric Map, 138

L

LED, 120
LED Indicators
 definition, 19
Local-Base, 31, 89
Local-Dif, 31, 52, 89
Local-RTK, 31, 52, 89

M

MSAS, 133
Multipath, 132

N

NMEA 0183, 33, 37, 54, 95
NMEA 0183 messages, 54

O

Output Data Messages, 95

P

Performance, 23, 118
Post Processing, 31
Precision Antenna, 4

R

Real-Time Differential Options, 28
RTCM SC-104, 37, 129

S

SBAS, 24, 114, 118, 127, 132
SBAS Coverage, 136
SBAS Performance, 24
Selective Availability (SA), 128
Serial Port, 34
SNAS, 133
System Overview, 1

T

Temperature, 35
Troubleshooting, 115, 120
Tune Mode
 WAAS Automatic Tracking, 24

U

Update Rates, 24
USB, 34
USB Drivers, 17

W

WAAS, 133
 Bit Error Rate, 24
 Receiver Performance, 24
WGS-84, 127

Revision history:

Rev 1.1 March 2008

- Updated SBAS information in Appendix C

Rev 1.2 November 2008

- Section 4.6 updated with proper Auto-Dif command sets
- Updated GAGAN information in Appendix C
- New default Baud rate for Bluetooth now set to 57600 (sec 1.3.1, 1.4.3.1, 4.2.7, 4.3.6, 6.4)
- Update datum info SBAS to use updated ITRF2000 (sec 1.4.3.1)
- Update RTK commands. Add note to turn off NMEA message on base/rover radio ports. Activate only \$JASC,DFX on base and set rover to \$JDIF,RTK.

Rev 1.3 April 2009

- EGNOS Inmarsat 4f2 to replace 3f5 on PRN 126 (PRN 124 set to broadcast). (Update Fig C4 and Table C1 of AppC)
- Change link to Lyngsat Tracker for PRN 126 (AppD)
- New EGNOS RIMS added (change AppC Fig C-2)
- Add EGNOS user support link (Update EGNOS web site AppD):
<http://194.224.177.81/Webportal/Egnos/Pages/Home.page>

Rev 2.0 December 2010

- SXBlue II-B GPS and SXBlue II-L GPS receivers added
- SBAS information updated in Appendix

Rev 2.1 October 2011

- Page 83, OmniSTAR frequency table shows frequencies in KHz
- Added 90 days clause warranty for Li-Ion battery

Rev 2.2 January 2012

- Modified sections 4.7 and 4.8.6 for the Auto-Diff commands