



A NovAtel Precise Positioning Product

GrafNav / GrafNet  
GrafNav Static

User Guide

OM-20000147

Rev 3

November 2014

---

---

# GrafNav / GrafNet User Guide

**Publication Number:** OM-20000147

**Revision Level:** 3

**Revision Date:** November 2014

This manual reflects GrafNav / GrafNet software version 8.60.

## Warranty

NovAtel Inc. warrants that its GNSS products are free from defects in materials and workmanship, subject to the conditions set forth on our web site: [www.novatel.com/products/warranty/](http://www.novatel.com/products/warranty/) and for the following time periods:

Software Warranty	One (1) Year
Computer Discs	Ninety (90) Days

## Return instructions

To return products, refer to the instructions on the Returning to NovAtel tab of the warranty page: [www.novatel.com/products/warranty/](http://www.novatel.com/products/warranty/).

## Proprietary Notice

Information in this document is subject to change without notice and does not represent a commitment on the part of NovAtel Inc. The software described in this document is furnished under a licence agreement or non-disclosure agreement. The software may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license or non-disclosure agreement.

The information contained within this manual is believed to be true and correct at the time of publication.

NovAtel, Waypoint, GrafNav/GrafNet, Inertial Explorer, SPAN, OEM6, OEMV, OEM4 and AdVance are registered trademarks of NovAtel Inc.

All other product or brand names are trademarks of their respective holders.

# Table of Contents

<b>Software License</b>	<b>7</b>
<b>Foreword</b>	<b>9</b>
<b>Chapter 1 Introduction and Installation</b>	<b>11</b>
1.1 Waypoint Products Group Software Overview .....	11
1.2 Installation .....	11
1.2.1 What You Need To Start .....	11
1.2.2 CD Contents and Installation .....	12
1.2.3 How to Upgrade Your Hardlock Key .....	12
1.2.4 How to Activate Your FlexNet License .....	14
1.2.5 How to Manually Activate/Return Your FlexNet License .....	14
1.3 Processing Modes and Solutions .....	17
1.4 Overview of the Products .....	18
1.4.1 GrafNav .....	18
1.4.2 GrafNet .....	18
1.4.3 GrafNav Static .....	18
1.4.4 Moving Baseline Features .....	18
1.4.5 Inertial Explorer .....	18
1.5 Utilities .....	19
1.5.1 <i>Concatenate, Slice and Resample</i> .....	19
1.5.2 Copy User Files .....	19
1.5.3 Download Service Data .....	19
1.5.4 GPB Viewer .....	19
1.5.5 GNSS Data Converter .....	19
<b>Chapter 2 GrafNav</b>	<b>21</b>
2.1 GrafNav and GrafNav Static Overview .....	21
2.2 Start a Project with GrafNav .....	22
2.3 File Menu .....	23
2.3.1 New Project .....	23
2.3.2 Open Project .....	24
2.3.3 Save Project .....	24
2.3.4 Save As .....	24
2.3.5 Print .....	24
2.3.6 Add Master File(s) .....	25
2.3.7 Add Remote File .....	27
2.3.8 Add Precise Files .....	27
2.3.9 Load .....	29
2.3.10 Convert .....	34
2.3.11 GPB Utilities .....	34
2.3.12 Remove Processing Files .....	36
2.3.13 Recent projects .....	36
2.3.14 Exit .....	36
2.4 View Menu .....	37
2.4.1 Project Overview .....	37
2.4.2 GNSS Observations .....	37
2.4.3 Forward and Reverse Solutions .....	38
2.4.4 Processing History .....	39

2.4.5 Processing Summary .....	39
2.4.6 Features .....	40
2.4.7 Objects .....	42
2.4.8 ASCII File(s) .....	44
2.4.9 Raw GNSS .....	44
2.4.10 Current CFG File .....	44
2.5 Process Menu .....	45
2.5.1 Process GNSS .....	45
2.5.2 Combine Solutions .....	57
2.6 Settings Menu .....	58
2.6.1 Coordinate/Antenna .....	58
2.6.2 Moving Base Options .....	59
2.6.3 Datum .....	59
2.6.4 Grid .....	60
2.6.5 Manage Profiles .....	61
2.6.6 Compare Configuration Files .....	61
2.6.7 Preferences .....	62
2.7 Output Menu .....	66
2.7.1 Plot Results .....	66
2.7.2 Common Plots .....	68
2.7.3 Plot Multi-Base .....	73
2.7.4 Plot Master / Remote Satellite Lock .....	73
2.7.5 Export Wizard .....	74
2.7.6 View Coordinates .....	78
2.7.7 Build HTML Report .....	78
2.7.8 Export to Google Earth .....	78
2.7.9 Export Binary Values .....	79
2.7.10 Export to DXF .....	80
2.7.11 Show Map Window .....	81
2.7.12 Processing Window .....	82
2.8 Tools Menu .....	85
2.8.1 Zoom In, Zoom Out & Zoom Reset .....	85
2.8.2 Distance & Azimuth Tool .....	85
2.8.3 Move Pane .....	85
2.8.4 Find Epoch Time .....	85
2.8.5 Datum Manager .....	86
2.8.6 Geoid .....	87
2.8.7 Grid/Map Projection .....	88
2.8.8 Convert Coordinate File .....	89
2.8.9 Time Conversion .....	89
2.8.10 Favourites Manager .....	90
2.8.11 Download Service Data .....	92
2.9 Window Menu .....	97
2.9.1 Cascade .....	97
2.9.2 Tile .....	97
2.9.3 Next and Previous .....	97
2.9.4 Close Window .....	97
2.9.5 Close All Windows .....	97
2.10 Help Menu .....	98
2.10.1 Help Topics .....	98
2.10.2 Check for update .....	98
2.10.3 Download manufacturer files .....	98
2.10.4 NovAtel Waypoint Products .....	98
2.10.5 About GrafNav .....	98

---

<b>Chapter 3 GrafNet</b>	<b>99</b>
3.1 GrafNet Overview	99
3.1.1 Types of Networks	99
3.1.2 Static Solution Types	100
3.1.3 Computing Coordinates	101
3.2 Start a Project with GrafNet	102
3.2.1 Fix Bad Baselines	104
3.3 File	105
3.3.1 New Project	105
3.3.2 Open Project	105
3.3.3 Save Project	105
3.3.4 Save As	105
3.3.5 Print	105
3.3.6 Add / Remove Observations	106
3.3.7 Add / Remove Control Points	107
3.3.8 Add / Remove Check Points	107
3.3.9 Add Precise Files	107
3.3.10 Remove Processing Files	107
3.3.11 Import Project Files	107
3.3.12 View	108
3.3.13 Convert	108
3.3.14 GPB Utilities	108
3.3.15 Recent projects	108
3.3.16 Exit	108
3.4 Process Menu	109
3.4.1 Processing Sessions	109
3.4.2 Rescanning Solution Files	112
3.4.3 Ignore Trivial Sessions	113
3.4.4 Unignore All Sessions	114
3.4.5 Compute Loop Ties	114
3.4.6 Network Adjustment	115
3.4.7 View Traverse Solution	118
3.4.8 View Processing Report	118
3.4.9 View All Sessions	118
3.4.10 View All Observations	118
3.4.11 View All Stations	118
3.5 Options Menu	119
3.5.1 Global Settings	119
3.5.2 Sessions Settings (Shown in Data Manager)	119
3.5.3 Datum Options	119
3.5.4 Grid Options	119
3.5.5 Geoid Options	119
3.5.6 Preferences	120
3.6 Output Menu	121
3.6.1 Export Wizard	121
3.6.2 Output to Google Earth	121
3.6.3 Export to DXF	121
3.6.4 Export to STAR*NET	121
3.6.5 Build HTML Report	121
3.6.6 Show Map Window	121
3.6.7 Show Data Manager	122
3.6.8 Baselines Window	126
3.7 Tools Menu	126
3.8 Help Menu	126

<b>Chapter 4 File Formats</b>	<b>127</b>
4.1 Overview of the File Formats.....	127
4.2 CFG File .....	127
4.3 GNSS Data Files .....	127
4.3.1 GPB File.....	127
4.3.2 STA File .....	128
4.3.3 EPP File .....	129
4.4 Output Files .....	130
4.4.1 FML, RML, FSL and RSL Files .....	130
4.4.2 FSS & RSS Files.....	132
4.4.3 FWD, REV, CMB, FSP, RSP and CSP files .....	135
4.4.4 FBV & RBV Files.....	136
<b>Chapter 5 Utilities</b>	<b>137</b>
5.1 Utilities Overview .....	137
5.2 GPB Viewer Overview .....	137
5.2.1 File .....	137
5.2.2 Move .....	139
5.2.3 Edit.....	139
5.3 Concatenate, Slice and Resample Overview .....	142
5.3.1 Concatenate, Slice and Resample GPB Files.....	142
5.4 GNSS Data Converter Overview .....	143
5.4.1 Convert Raw GNSS data to GPB.....	143
5.4.2 Pre-processing Checks .....	144
5.4.3 Supported Receivers.....	146
<b>Appendix A WPGCMD</b>	<b>167</b>
<b>Appendix B Output Variables</b>	<b>181</b>
<b>Appendix C Antenna Measurements</b>	<b>185</b>
<b>Glossary</b>	<b>187</b>
<b>Index</b>	<b>189</b>

# Software License

**BY INSTALLING, COPYING, OR OTHERWISE USING THE SOFTWARE PRODUCT, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE WITH THESE TERMS OF USE, DO NOT INSTALL, COPY OR USE THIS ELECTRONIC PRODUCT (SOFTWARE, FIRMWARE, SCRIPT FILES, OR OTHER ELECTRONIC PRODUCT WHETHER EMBEDDED IN THE HARDWARE, ON A CD OR AVAILABLE ON THE COMPANY WEB SITE) (hereinafter referred to as "Software").**

1. **License:** NovAtel Inc. ("NovAtel") grants you a non-exclusive, non-transferable license (not a sale) to use the software subject to the limitations below. You agree not to use the Software for any purpose other than the due exercise of the rights and licences hereby agreed to be granted to you.

2. **Copyright:** NovAtel owns, or has the right to sublicense, all copyright, trade secret, patent and other proprietary rights in the Software and the Software is protected by national copyright laws, international treaty provisions and all other applicable national laws. You must treat the Software like any other copyrighted material and the Software may only be used on one computer at a time. No right is conveyed by this Agreement for the use, directly, indirectly, by implication or otherwise by Licensee of the name of NovAtel, or of any trade names or nomenclature used by NovAtel, or any other words or combinations of words proprietary to NovAtel, in connection with this Agreement, without the prior written consent of NovAtel.

3. **Patent Infringement:** NovAtel shall not be liable to indemnify the Licensee against any loss sustained by it as the result of any claim made or action brought by any third party for infringement of any letters patent, registered design or like instrument of privilege by reason of the use or application of the Software by the Licensee or any other information supplied or to be supplied to the Licensee pursuant to the terms of this Agreement. NovAtel shall not be bound to take legal proceedings against any third party in respect of any infringement of letters patent, registered design or like instrument of privilege which may now or at any future time be owned by it. However, should NovAtel elect to take such legal proceedings, at NovAtel's request, Licensee shall co-operate reasonably with NovAtel in all legal actions concerning this license of the Software under this Agreement taken against any third party by NovAtel to protect its rights in the Software. NovAtel shall bear all reasonable costs and expenses incurred by Licensee in the course of co-operating with NovAtel in such legal action.

#### 4. **Restrictions:**

You may not:

- (a) use the software on more than one computer simultaneously;
- (b) distribute, transfer, rent, lease, lend, sell or sublicense all or any portion of the Software without the written permission of NovAtel;
- (c) alter, break or modify the hardware protection key (dongle) thus disabling the software copy protection;
- (d) modify or prepare derivative works of the Software;
- (e) use the Software in connection with computer-based services business or publicly display visual output of the Software;
- (f) implement DLLs and libraries in a manner that permits automated internet based post-processing (contact NovAtel for special pricing);
- (g) transmit the Software over a network, by telephone or electronically using any means (except when downloading a purchased upgrade from the NovAtel web site); or
- (h) reverse engineer, decompile or disassemble the Software.

NovAtel retains the right to track Software usage for detection of product usage outside of the license terms.

**You agree to keep confidential and use your best efforts to prevent and protect the contents of the Software from unauthorized disclosure or use.**

5. **Term and Termination:** This Agreement and the rights and licences hereby granted shall continue in force in perpetuity unless terminated by NovAtel or Licensee in accordance herewith. In the event that the Licensee shall at any time during the term of this Agreement: i) be in breach of its obligations hereunder where such breach is irremediable or if capable of remedy is not remedied within 30 days of notice from NovAtel requiring its remedy; then and in any event NovAtel may forthwith by notice in writing terminate this Agreement together with the rights and licences hereby granted by NovAtel. Licensee may terminate this Agreement by providing written notice to NovAtel. Upon termination, for any reasons, the Licensee shall promptly, on NovAtel's request, return to NovAtel or at the election of NovAtel destroy all copies of any documents and extracts comprising or containing the Software. The Licensee shall also erase any copies of the Software residing on Licensee's computer equipment. Termination shall be without prejudice to the accrued rights of either party, including payments due to NovAtel. This provision shall survive termination of this Agreement howsoever arising.

6. **Warranty:** NovAtel does not warrant the contents of the Software or that it will be error free. The Software is furnished "AS IS" and without warranty as to the performance or results you may obtain by using the Software. The entire risk as to the results and performance of the Software is assumed by you. See product enclosure, if any for any additional warranty.

7. **Indemnification:** NovAtel shall be under no obligation or liability of any kind (in contract, tort or otherwise and whether directly or indirectly or by way of indemnity contribution or otherwise howsoever) to the Licensee and the Licensee will indemnify and hold NovAtel harmless against all or any loss, damage, actions, costs, claims, demands and other liabilities or any kind whatsoever (direct, consequential, special or otherwise) arising directly or indirectly out of or by reason of the use by the Licensee of the Software whether the same shall arise in consequence of any such infringement, deficiency, inaccuracy, error or other defect therein and whether or not involving negligence on the part of any person.

8. **Disclaimer and Limitation of Liability:**

(a) **THE WARRANTIES IN THIS AGREEMENT REPLACE ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NovAtel DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES. IN NO EVENT WILL NovAtel's LIABILITY OF ANY KIND INCLUDE ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOST PROFITS, EVEN IF NOVATEL HAS KNOWLEDGE OF THE POTENTIAL LOSS OR DAMAGE.**

(b) NovAtel will not be liable for any loss or damage caused by delay in furnishing the Software or any other performance under this Agreement.

(c) NovAtel's entire liability and your exclusive remedies for our liability of any kind (including liability for negligence) for the Software covered by this Agreement and all other performance or non-performance by NovAtel under or related to this Agreement are to the remedies specified by this Agreement.

9. **Governing Law:** This Agreement is governed by the laws of the Province of Alberta, Canada. Each of the parties hereto irrevocably attorns to the jurisdiction of the courts of the Province of Alberta.

10. **Customer Support:** For Software UPDATES and UPGRADES, and regular customer support, contact the NovAtel GPS Hotline at 1-800-NOVATEL (1-800-668-2835) for US and Canada only, or 1-403-295-4900 for international access, e-mail to support@novatel.com, or website: www.novatel.com

# Foreword

## Congratulations!

Congratulations on purchasing a Waypoint® Products Group's (Waypoint) software package. GrafNav / GrafNet® is a Windows®-based suite of programs that provide GNSS (Global Navigation Satellite System) data post-processing. Whether you have bought GrafNav / GrafNet or GrafNav Static, this manual will help you install and navigate your software.

## Scope

This manual contains information on the installation and operation of Waypoint's GrafNav / GrafNet and GrafNav Static software packages. This information allows you to effectively navigate and post-process GNSS data. It is beyond the scope of this manual to provide details on service or repair. See *Customer Service* on page 10 for customer support.

## How to use this manual

This manual is based on the menus in the interface of the GrafNav / GrafNet or GrafNav Static software. It is intended to be used in conjunction with the corresponding version of Waypoint's GrafNav / GrafNet or GrafNav Static software.

## Prerequisites

To run Waypoint software packages, your personal computer must meet or exceed this minimum configuration:

### Operating System

Windows Vista®, 7, 8 or 8.1.

### Processor

A Pentium or Xeon processor is required. Simultaneous forward/reverse processing is possible on dual CPU (Central Processing Unit) and Xeon systems. At least 256 MB of RAM is also required.

Although previous experience with Windows is not necessary to use Waypoint software packages, familiarity with certain actions that are customary in Windows will assist in using the program. This manual has been written with the expectation that you already have a basic familiarity with Windows.

## Conventions

This manual covers the full performance capabilities of GrafNav / GrafNet GNSS data post-processing software. The conventions include the following:

- 
- ☒ This is a note box that contains important information before you use a command or log, or to give additional information afterwards.
- 

The term “master” refers to the reference station and the base station.

The term “remote” refers to a rover station.

This manual contains shaded boxes on the outside of the pages. These boxes contain procedures, screen shots and quick references.

## Customer Service

If the software was purchased through a vendor, contact them for support. Otherwise, for software updates and customer service, contact Waypoint using the following methods:

Call: 1-800-NovAtel (1-800-668-2835) for North American access  
1-403-295-4900 for International access

Email: [support@novatel.com](mailto:support@novatel.com)

Web: [www.novatel.com/](http://www.novatel.com/)

## 1.1 Waypoint Products Group Software Overview

NovAtel's Waypoint Products Group offers GNSS post-processing software packages including GrafNav (a static/kinematic baseline processor) and GrafNet (a static baseline processor/network adjustment package). Both of these products have a Windows based Graphical User Interface (GUI) and use the same precise GNSS processing engine. This processing engine has undergone years of development effort and has been optimized to give the highest precision with the least amount of operator intervention.

This chapter contains a description of the hardware requirements, installation instructions and lists the CD contents. This chapter also provides an overview of the product packages (see *Table 1, Product Capabilities* on page 18).

## 1.2 Installation

Waypoint software supports USB licensing as well as software-based licensing. Installation instructions for both are provided in the shaded box.

### 1.2.1 What You Need To Start

#### Sentinel USB Key or FlexNet Activation ID

A software license (USB or software-based) is required to convert raw GNSS data<sup>1</sup>, use the Download Service Utility and to process.

In either case, the license must be detected locally on the computer running the software. Remote desktop connections are only supported in a GrafNav term license. If interested in GrafNav term licensing, contact your local NovAtel sales representative or [support@novatel.com](mailto:support@novatel.com) for more information.

#### Installation file

You will receive an installation CD as part of your purchase. If you upgrade from a previous version, you will be provided with a link to Waypoint's FTP site where you can download the new setup file.

If you are restricted from connecting to FTP sites for security reasons, the 8.60 setup files are also available on a password protected website.

See *Prerequisites* on page 9 for the hardware requirements.

1. No license is required to convert NovAtel data to Waypoint format.



### How to install Waypoint software

1. If you have a previous version of Waypoint software installed, we do not recommend uninstalling it prior to installing a new version. This is because any user created content, such as favourites, processing profiles, customized grids or conversions etc., can be copied over to the new version. This is only possible if the new version is installed prior to uninstalling the old version.

Separate installation files are provided for the USB and software-based versions of software. It is important to download the appropriate installation file for the type of licensing purchased.

All installation files are provided on both an FTP site and a password protected website. Contact [support@novatel.com](mailto:support@novatel.com) with your USB license number or your FlexNet activation ID for login instructions if these are required.

2. Launch the setup and follow the on-screen instructions.
3. If you are upgrading from a previous major version, such as 8.50, you will need to upgrade your USB hardlock key or FlexNet license. For USB hardlock upgrade instructions, see *Section 1.2.3, How to Upgrade Your Hardlock Key* on page 12. For FlexNet upgrade instructions, see *Section 1.2.4, How to Activate Your FlexNet License* on page 14 or *Section 1.2.5, How to Manually Activate/Return Your FlexNet License* on page 14.
4. To copy customized settings from a previously installed major version (i.e. 8.50), access the *Copy User Files* program within version 8.60. This can be accessed from *Start | Programs | Waypoint GPS 8.60 | Utilities | Copy User Files*.

## 1.2.2 CD Contents and Installation

GrafNav / GrafNet is distributed on a CD. The latest version is also kept on our 8.60 FTP site and a password protected web page. Contact [support@novatel.com](mailto:support@novatel.com) to obtain login information if required.

There are a number of folders on the CD and the FTP site that contain additional programs and data. These include the following:

### Data

This directory contains sample GNSS data for GrafNav and GrafNet. Browse through the subdirectories to see what data is available. To process, copy the contents of directories to the hard disk.

### Geoids

This directory contains geoid files for the U.S. (Geoid03, Geoid09, Geoid12 and Geoid12A), Mexico97, Australia (AusGeoid93 and AusGeoid98) and the world (EGM96, EGM2008). It also contains geoid files for other regions. These files allow mean-sea-level (orthometric) heights to be computed using GrafNav and GrafNet. Files are in the WPG (Waypoint Geoid) format. Contact [support@novatel.com](mailto:support@novatel.com) for more information about geoid availability for other regions.

All Waypoint geoids are also available for download directly on our website: [www.novatel.com/support/waypoint-support/waypoint-geoids/](http://www.novatel.com/support/waypoint-support/waypoint-geoids/)

### Doc

Contains this manual in Adobe Acrobat PDF format.

## 1.2.3 How to Upgrade Your Hardlock Key

This section applies to customers who are:

- using the hardlock-protected version of Waypoint's software
- upgrading to a newer version of the software (i.e. Version 8.50 to 8.60)
- upgrading to a new software package (i.e. GrafNav to Inertial Explorer)
- upgrading from a demo code to a full license
- applying a demo code to their key (i.e. time-limited trials)

1. Plug the USB Hardlock Key into an available port on your computer.

☒ The hardlock-protected version of the software only supports Sentinel USB keys. If you have a parallel port key, contact your NovAtel sales representative to have it exchanged.

2. Install the software that you intend to use. The Sentinel drivers will be installed if it is your first time using Waypoint software or if your current drivers are out-of-date.
3. From the Start menu, navigate to the *Utilities* folder within the software's program group and open the *Hardlock Upgrade Utility*.

☒ Check that the version number in the title bar is at least 8.30. Older versions of the utility will not work if you are upgrading to Version 8.30 or newer.

4. Click the *Read Key* button to view the information that is currently written to your hardlock key. This helps to ensure that the key has been detected and is communicating properly.

5. Copy the 16-character code that was provided to you by Customer Support.

6. Paste the code into the *Hardlock code* box and verify that the information that appears in the *Hardware Key Info* area is correct.


If the window does not populate, double-check that you have entered the code correctly and that there are no trailing spaces.


7. When the information appears properly, click the *Upgrade* button.

Click the *Yes* button on the *Update Key* confirmation dialog box.

If everything is successful, you will receive the *Update Key Success* dialog box.

You are now ready to use the software. You can verify that the code was properly written by clicking the *Read Key* button again.

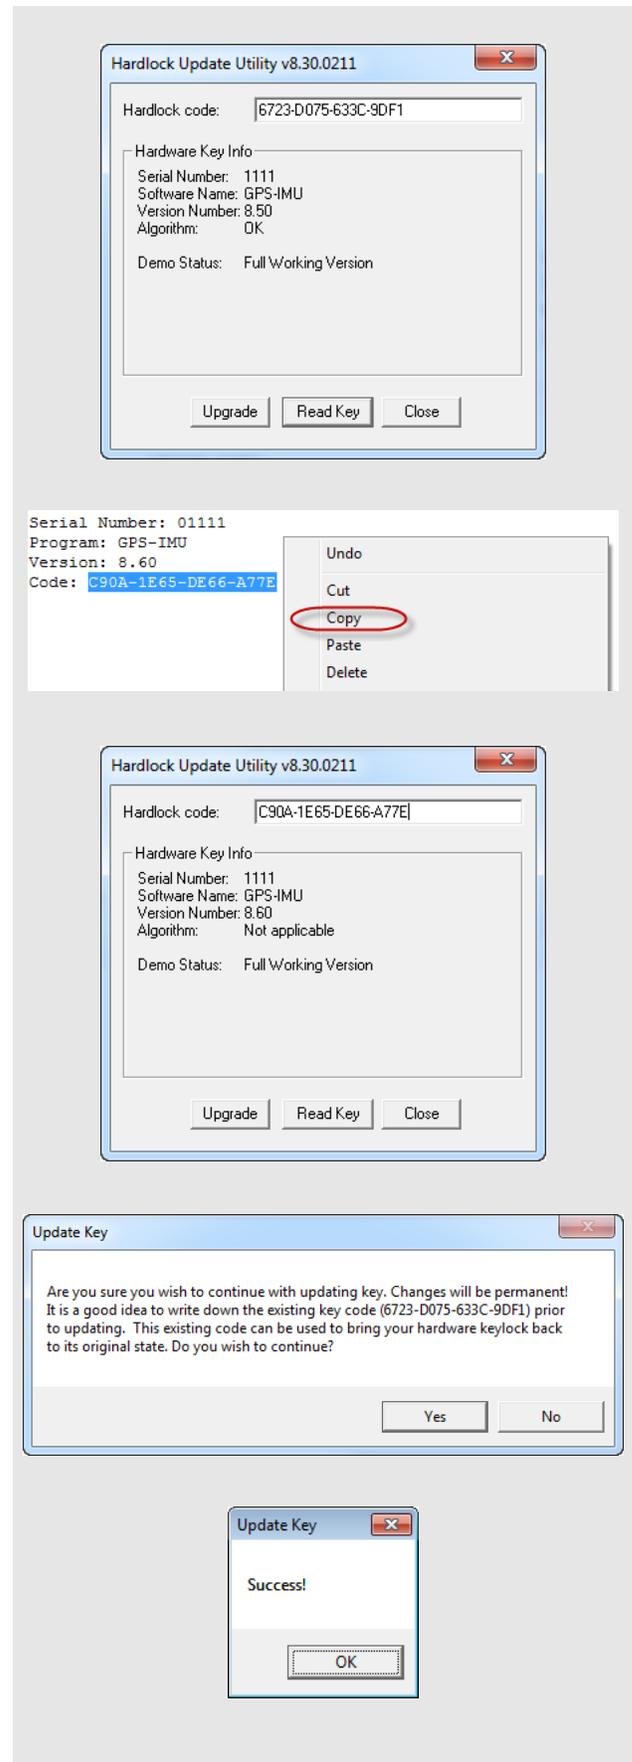

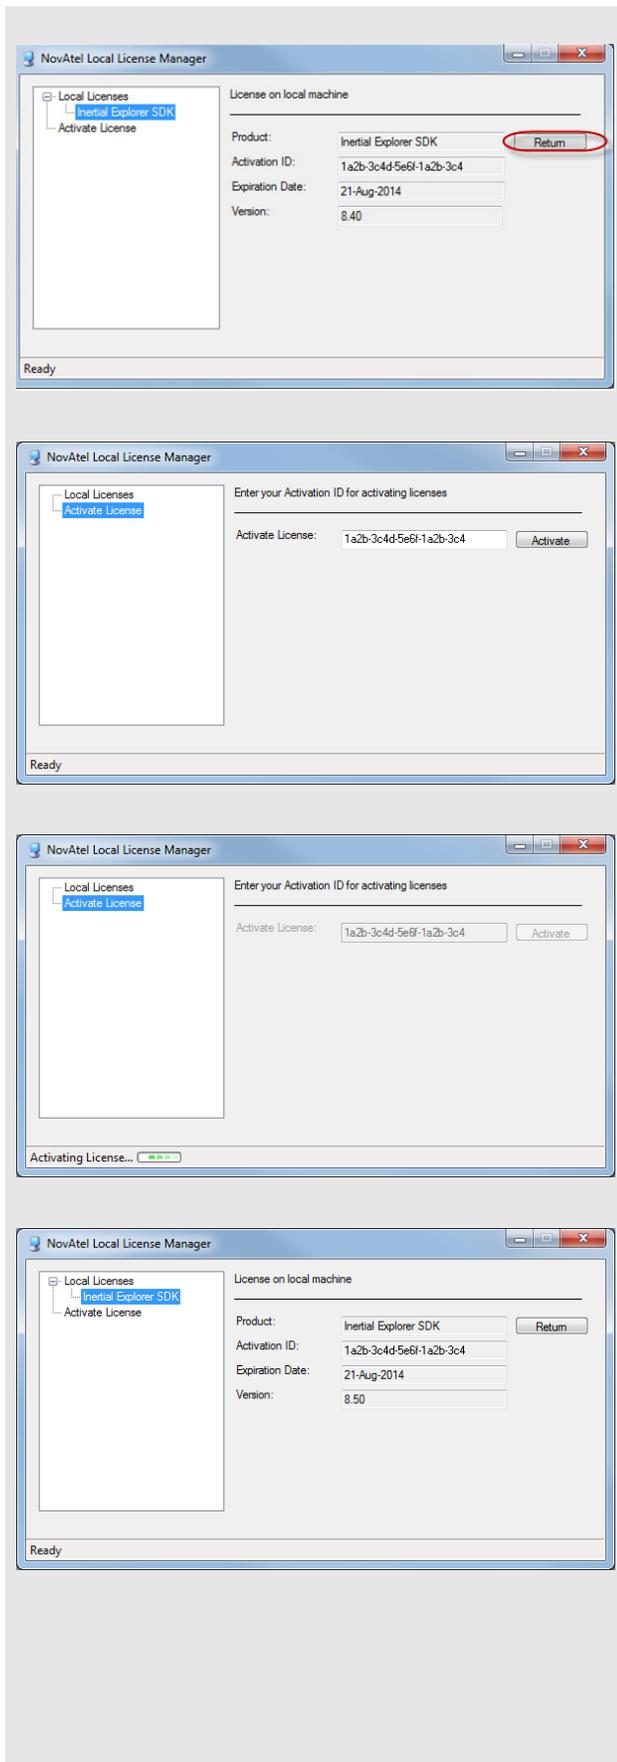

## 1.2.4 How to Activate Your FlexNet License

This section applies to customers who wish to activate a new FlexNet license or upgrade an existing license in order to use Waypoint software.

- 
- ☒ This procedure requires an Internet connection. If you do not have an Internet connection, skip to *Section 1.2.5, How to Manually Activate/Return Your FlexNet License* on page 14.
- 

1. Install the Waypoint software that you intend to use. Contact Customer Support if you need help locating the setup file on the FTP server.
2. From the Start menu, navigate to the *Utilities* folder within the software's program group and open the *Local License Manager*.  
  
Alternatively, you can navigate to the software's installation folder on your computer and open the *LLMForm.exe* file.
3. If you are upgrading an existing license, you will first need to return the original license. Do this by selecting your existing license under *Local Licenses* and then clicking the *Return* button.
4. Copy the alpha-numeric Activation ID that was provided to you by Customer Support and paste it into the box under the *Activate License* branch.
5. After the Activation ID has been entered, click the *Activate* button.
6. If the license was successfully activated, you will see it appear under the *Local Licenses* branch. Click on the license to see the relevant information.

If you have activated a term license, then the expiration date will be displayed here.

If the activation fails, contact Customer Support ([support@novatel.com](mailto:support@novatel.com)).

## 1.2.5 How to Manually Activate/Return Your FlexNet License

The section describes how to activate and/or return a FlexNet license when no Internet connection is available or you are unable to access NovAtel's license server.

- 
- ☒ If you are upgrading an existing license, your original license will need to be returned prior to activating the upgrade (see the instructions in *Manual Return Process* on page 16 first).
-

## Manual Activation Process

1. Open a console window and navigate to the software's installation folder (e.g. C:\NovAtel\InertialExplorer860).
2. Enter the following command to generate a Manual Activation Request.

```
llmform -am ActivationID OutputFile
```

Where:

*ActivationID* is the alpha-numeric Activation ID provided to you by Customer Support

*OutputFile* is the output XML file that will contain the request

Sample usage:

```
llmform -am 1a2b-3cf4-5e6f-1a2b-3c4d-5e6 c:\temp\activate_req.xml
```

3. Send the output file that was generated in the previous step to NovAtel Customer Support ([support@novatel.com](mailto:support@novatel.com)). Note that this file is simply an ASCII XML file.
4. Customer Support will send back a new file containing the response. To process this response, navigate back to the installation directory and enter the following command:

```
llmform -p InputFile
```

Where:

*InputFile* is the file that was sent back to you by Customer Support

Sample usage:

```
llmform -p c:\temp\activation_response.xml
```

5. If this is the first manual activation on a machine, the license will not be activated on the machine at this point, because the first response file is simply a configuration response. You will need to repeat steps 1 - 4 in order to re-submit the request and complete the activation.
6. The license should now be activated. To check, enter the following command:

```
llmform -v
```

Or open the *Local License Manager* and look under the *Local Licenses* branch.

## Manual Return Process

1. Open a console window and navigate to the software's installation folder (e.g. C:\NovAtel\InertialExplorer850).
2. Enter the following command to generate a Manual Return Request:

```
llmform -rm ActivationID OutputFile
```

Where:

*ActivationID* is the alpha-numeric Activation ID provided to you by Customer Support

*OutputFile* is the output XML file that will contain the request

Sample usage:

```
llmform -rm 1a2b-3cf4-5e6f-1a2b-3c4d-5e6 c:\temp\return_req.xml
```

3. Send the output file that was generated in the previous step to NovAtel Customer Support ([support@novatel.com](mailto:support@novatel.com)). Note that this file is simply an ASCII XML file.
4. Customer Support will send back a new file containing the response. To process this response, navigate back to the installation directory and enter the following command:

```
llmform -p InputFile
```

Where:

*InputFile* is the file that was sent back to you by Customer Support

Sample usage:

```
llmform -p c:\temp\return_response.xml
```

5. The license should now be returned. To check, open the *Local License Manager* and look under the *Local Licenses* branch to ensure that the license is no longer listed.

## 1.3 Processing Modes and Solutions

The types of solutions are described in the shaded box. The following are the types of processing modes:

### Static

Static processing involves the determination of a single coordinate for an entire static session. There are two types of static solutions supported by GrafNav: float and fixed solutions. They are discussed in the shaded box.

### Kinematic

When processing kinematic data, it is of interest to optimize the entire trajectory. This is in contrast to static processing, which solves one coordinate for the entire session.

In order to quickly achieve cm-level accuracy in kinematic processing environments, ARTK is used to resolve integer carrier phase ambiguities. This is discussed in the shaded box.

## Processing Solutions

### ARTK solution

AdVance RTK<sup>®</sup> is NovAtel's industry leading RTK engine which provides rapid centimetre level positioning. ARTK is used in Waypoint products to resolve integer carrier phase ambiguities.

With short baseline lengths (several kilometres), open sky conditions and dual frequency data, ARTK often requires only several seconds of data. Although ARTK needs at least 5 satellites to resolve, in practice it is most robust when 7 or more satellites are available. ARTK may resolve at baseline lengths as long as 70 km, however it is most reliable at distances of 30 km and less provided dual frequency data.

### Fixed static solution

The fixed static solution uses ARTK with static constraints to resolve integer carrier phase ambiguities. When ARTK returns a successful fix it is automatically re-engaged. A history of ARTK solutions over the static session is kept and GrafNet allows you to choose which is accepted as the final solution based on estimated error, lowest RMS, highest reliability, or an average of all fixes.

### Float solution

Float solutions, unlike fixed static and ARTK solutions, do not resolve carrier phase ambiguities as integers. As such, they are associated with lower accuracy applications than fixed solutions. Provided good data, float solutions improve with time and can still achieve sub decimetre accuracy, depending on other factors such as baseline length, number of satellites and geometry, raw measurement data quality, etc.

**Table 1: Product Capabilities**

Capabilities	GrafNav Static	GrafNav/GrafNet
Float Static	✓	✓
Float Kinematic		✓
Fixed Integer Static (Fixed Solution)	✓	✓
Fixed Integer Kinematic		✓
Dual Frequency	✓	✓
GPS, GLONASS and BeiDou Support	✓	✓
Multi-Base Processing		✓
PPP	✓ (Static only)	✓
Moving Baseline		✓
Azimuth Determination		✓
Remote Desktop Compatibility		✓ <sup>a</sup>
Batch Processing <sup>ab</sup>	✓ (Static only)	✓
IMU Processing <sup>c</sup>		

a. Available only if a term license is purchased.

b. For more information about batch processing, see *Appendix A, WPGCMD* on page 167.

c. Refer to the *Inertial Explorer User Manual* available on our website at [www.novatel.com](http://www.novatel.com).

## Moving Baseline Features within GrafNav

### Relative Processing

All of the same advanced GrafNav processing features including ARTK, a robust Kalman filter, and forward/reverse processing are also supported in moving base processing. The only restriction is that only one base station can be used when processing the relative vector.

For applications where both antennas are mounted on the same vehicle, the surveyed distance between the antennas can be entered to assist ambiguity resolution. Heading can also be computed for these applications.

### Relative Vector Output

After processing, the included Export Wizard profiles are available to output the relative vector in local level or ECEF format.

### Relative Velocity

In addition to relative position information, GrafNav uses Doppler measurements to compute instantaneous relative velocity between two moving antennas.

## 1.4 Overview of the Products

### 1.4.1 GrafNav

GrafNav is a kinematic and static GNSS post-processing package. Included with GrafNav is a Precise Point Positioning (PPP) module, support for multi-base applications, and support for moving base applications. See *Chapter 2, GrafNav* on page 21 for more information.

### 1.4.2 GrafNet

GrafNet is a batch static baseline processor and network adjustment package. It is often used to check or establish base station coordinates for later use within GrafNav or to survey static networks. See *Chapter 3, GrafNet* on page 99 for more information.

### 1.4.3 GrafNav Static

GrafNav Static includes GrafNav and GrafNet, however only static data can be processed. See *Chapter 2, GrafNav* on page 21 for more information.

### 1.4.4 Moving Baseline Features

GrafNav features a moving baseline module that processes GNSS data between two moving antennas. Heading can also be computed if the two antennas are mounted on the same vehicle.

### 1.4.5 Inertial Explorer

Inertial Explorer shares a similar interface with GrafNav and provides both GNSS and INS processing capabilities. Inertial Explorer is powerful and feature rich, including support for both loosely and tightly coupled processing, multi-pass processing, a backsmoother, automatic processing profile detection and many other features.

See [www.novatel.com/products/software/inertial-explorer/](http://www.novatel.com/products/software/inertial-explorer/) for more information.

## 1.5 Utilities

The following utilities are installed automatically with GrafNav and can be accessed from *Start | Programs | Waypoint GPS 8.60 | Utilities*.

### 1.5.1 Concatenate, Slice and Resample

This utility is most often used for combining multiple GPB files together and resampling GPB files to higher intervals. There are many other uses of this utility however and a full description can be found in *Concatenate, Slice and Resample Overview* on page 142.

### 1.5.2 Copy User Files

This utility is intended for those upgrading from a previous version (such as 8.50). It copies any user created content from a previous version to the new version. Examples of user created content include custom datum and grid definitions, Export Wizard profiles and user defined favourites.

---

☒ It is for this reason we do not recommend uninstalling previous versions prior to installing version 8.60.

---

### 1.5.3 Download Service Data

This utility allows you to search for freely accessible base station data provided by government organizations. The utility fully supports GPS, GLONASS and BeiDou and will download, convert, and if necessary resample and concatenate the downloaded data so that it is ready to be used within your project.

The download utility can also be used to obtain precise satellite clock and ephemeris data, almanacs and alternate broadcast ephemerides.

### 1.5.4 GPB Viewer

This utility allows you to view converted GNSS data as well as perform certain functions, such as changing the static/kinematic processing flag. See *Chapter 5, Utilities* on page 137 for more information.


### 1.5.5 GNSS Data Converter

This utility converts raw GNSS data files into Waypoint's own format. See *Table 2, Supported Data Formats for Post-Processing* for supported receivers and formats. Also, see *Section 5.4, GNSS Data Converter Overview* on page 143.

**Table 2: Supported Data Formats for Post-Processing**

Make	Model
NovAtel	All Models
Javad	All Models
Leica	System 500 System 1200 GX1230
NavCom	SF-20x0 SF-30x0 Sapphire
RTCM	3.0
Septentrio	SBF
Ashtech/ Thales/ Magellan	Real Time B-file
Trimble	DAT <sup>a</sup>
U-Blox	Antaris
RINEX	2.x 3.x

a. Decoding of only GPS data from Trimble DAT files is supported.



*IMU Data Converter* also appears under the utilities group when you install. Also, depending on which version (USB or FlexNet) you installed you will either see the *Hardlock Upgrade* utility or a *Local License Manager*.

## 2.1 GrafNav and GrafNav Static Overview

### GrafNav

GrafNav is a full-featured kinematic and static GNSS post-processing package that uses a proprietary GPS, GLONASS and BeiDou processing engine. It supports single and multi-baseline (MB) processing, moving baseline processing, Precise Point Positioning, and directly supports many different receiver formats. For any receiver formats not currently supported, RINEX files can be imported. See *Table 2, Supported Data Formats for Post-Processing* on page 19 for more information.


This chapter describes how to get started with GrafNav and goes through each menu of its interface. Step-by-step instructions for first-time users are also included.

### GrafNav Static

This chapter also describes the features of GrafNav Static.

GrafNav Static provides the same processing features as GrafNav, but only for static baselines.

See *Table 1, Product Capabilities* on page 18 for a capability comparison between GrafNav and GrafNav Static.

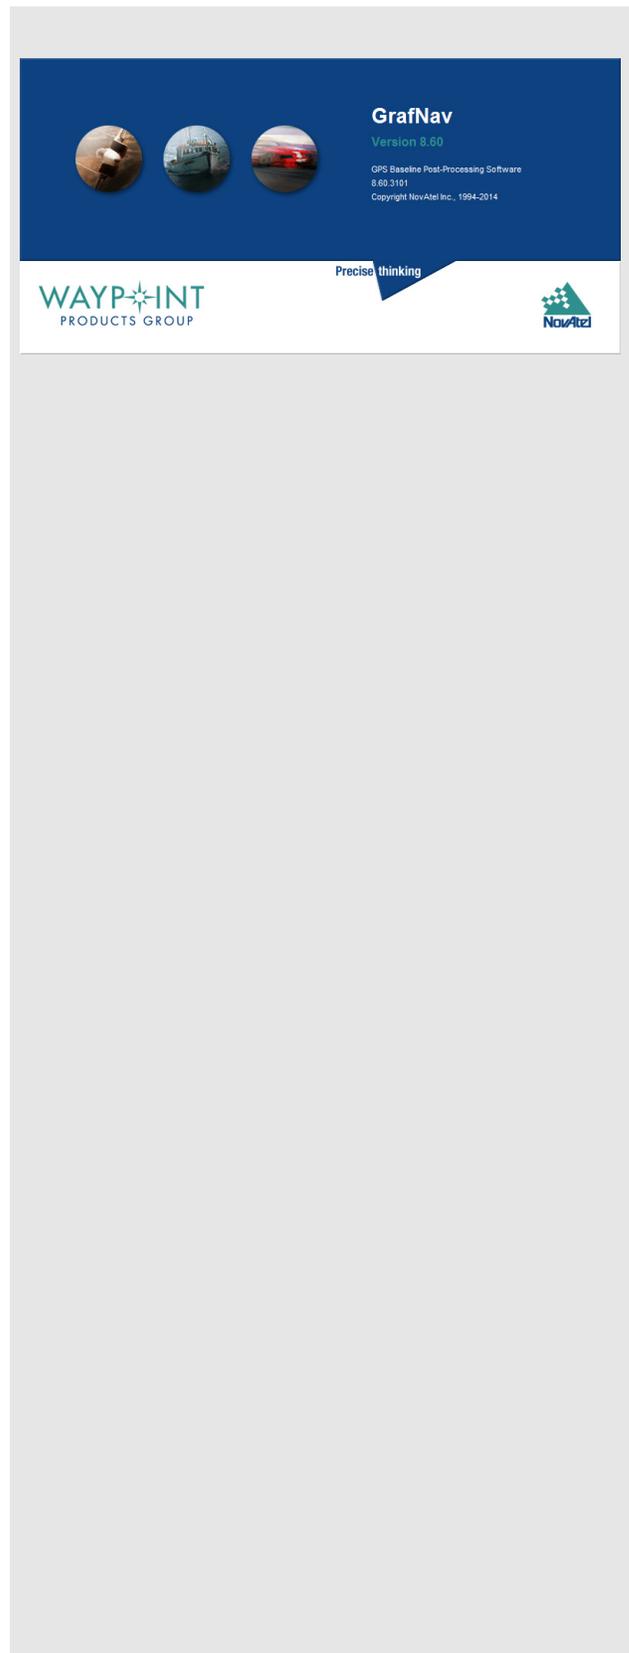

## 2.2 Start a Project with GrafNav

New users will find it easiest to create a new project with the New Project Wizard. The Wizard takes you through all the steps of creating a GrafNav project, including data conversion and downloading base station data (if needed). The only requirement for using the Wizard is that you have a raw GNSS data file downloaded to your computer. Access the Wizard through *File | New Project | Project Wizard*.

After you have become familiar with the GrafNav interface, you may prefer to create new projects using the *Empty Project* method. When creating an empty project, you need to first convert your data using the Raw GNSS conversion utility and download any base station data using the Download Service Utility. See *Section 5.4, GNSS Data Converter Overview* on page 143 for a description of the Convert Utility, and *Section 2.8.11, Download Service Data* on page 92 for instructions on the Download Utility.

Before you start a project in GrafNav, you need to verify installation, convert data and download any required data.

### Install Software

Verify that the installation was successful by ensuring that you have a *Waypoint* program group on your computer. If this program group is not there, see *Chapter 1, Introduction and Installation* on page 11 for installation instructions.

### Convert Data

Raw GNSS data files must be converted into Waypoint's GPB format. If creating a project through the New Project Wizard, there is no need to convert your data first. If creating an empty project, the Raw GNSS Converter must be used before creating a project. See *Section 5.4, GNSS Data Converter Overview* on page 143 for a complete description of the *Convert* utility.

### Download Service Data

If no data was logged from a reference station, you have the option of downloading free GNSS data from the Internet.

A reference station can also be added directly from a list. See *Section 2.8.11, Download Service Data* on page 92 for these instructions as well as a complete description of the *Download* utility.

## 2.3 File Menu

### 2.3.1 New Project

To process a survey for the first time, start a new project. When you start a new project, choose between *Project Wizard* and *Empty Project*.

The Project Wizard is recommended for new users as it will guide you through all the steps of getting started, including data conversion and downloading base station data (if needed). After you are more familiar with GrafNav's tools and workflow, you may prefer to use the *Empty Project* option.

This section discusses these options and gives step-by-step instructions once you have decided on the method for starting your project.

#### **Project Wizard**

The Project Wizard offers you a guided step-by-step way of creating a project. The *Project Wizard* steps are listed in the shaded box

#### **Project Wizard Steps**

1. Create and name the project.
2. Add rover data to the project.

---

The rover data can be in Waypoint's GPB format, or in the receiver's raw format, in which case the Wizard converts it to GPB for you.

---

3. Add base station data to the project.

---

You can add your own local base station data (in raw or GPB format) or you can have the Wizard download free service data from the Internet.

If you plan to process with PPP, you can skip adding base station data and download the precise satellite clock and orbit files from the Internet

---

### How to create a new project using *Empty Project*

1. Select *File | New Project | Empty Project*.
2. Enter the name and where you would like to save your project.
3. Select *File | Add Master File(s)* to load master files. Select the GPB files collected at the base station(s) and click *Open*.
4. Enter the base station coordinates, datum and antenna information when prompted.
5. Select *File | Add Remote File*. Select the GPB file corresponding to the data that was collected at the remote.
6. Enter the antenna information for the remote when prompted.
7. Select *Process | Process GNSS*.
8. Ensure an appropriate processing profile is selected prior to processing.

### How to open a project

1. Choose *File | Open Project*. A dialog box appears that asks you to select the name of an existing project (CFG file).
2. Choose the name of the project and click the *OK* button.

### How to save a project

1. Choose *File | Save Project*.

### How to save a project “as”

1. Choose *File | Save As*.
2. Enter the name, file format and where you would like to save your project.

Entering the name of a project that already exists overwrites the file contents.

### How to print

1. Select *File | Print*. A dialog box appears.
2. Choose the printer.
3. Choose the item you would like to print.
4. Set the page orientation, color and any other settings you need.
5. Click the *OK* button.

### Empty Project

Creating an empty project is not recommended for new users as all steps involved with project creation must be done manually. Specifically, the remote GNSS data must be converted to GPB format using the GNSS Data Converter utility and any base station service data must be downloaded through the Download Service Data Utility.

The Project Wizard is best for new users as it guides you through each step involved with starting a project. Creating an empty project is usually preferred by advanced users. This is because, for someone familiar with GrafNav's workflow, it may be possible to get started more quickly creating an empty project as opposed to going through each step of the Wizard. The steps involved with creating an empty project are in the shaded box.

#### 2.3.2 Open Project

This option allows you to open existing projects.

#### 2.3.3 Save Project

When this option is selected, all project settings are saved to a GrafNav configuration (.cfg) file. GrafNav saves the project automatically when processing and thus accessing the save option from the file menu is not typically necessary.

#### 2.3.4 Save As

Use the *Save As* command under the *File* menu to create a new project that has identical processing options as the current project. This allows you to change the options in the new project and process the data without losing the solution computed by the original configuration.

#### 2.3.5 Print

This option allows you to print various items including windows, plots and text files.

### 2.3.6 Add Master File(s)

Steps for how to add a master station are in the shaded box.

#### Master Station Position

When loading a master station, the coordinates that appear in the master coordinate dialog may come from two different sources.

If loading data converted from RINEX, as is the case when obtaining base station data through the Download Service Data Utility, the coordinates that appear initially are scanned from the RINEX header. The coordinates provided in the RINEX header may be precise or approximate, this will depend on the individual RINEX data provider.

If loading base station data converted from any other source, the coordinates that appear initially are likely averaged from the unprocessed position records decoded in the raw GNSS data file. The accuracy of this position is typically no better than approximately 2 metres horizontally and 5 metres vertically. If you select the *OK* button using averaged coordinates, a warning dialog appears to ensure you are aware the coordinates may not be accurate enough for your application.

Regardless of the source of your base station data, it is important that accurate coordinates are loaded. In differential processing, a vector is solved between the base station antenna and the remote antenna. Any error in the base station position is directly transmitted to the remote position.

To assist in loading precise coordinates, it is recommended that coordinates be selected from the favourites list through the *Select from Favourites* option. Coordinates for select base station networks, such as CORS and IGN, are regularly maintained and accessible through Favourites.

The *Compute from PPP* option can be used to easily check or survey base station data using GrafNav's Precise Point Processor. When using this option, the difference between the loaded and computed coordinates is displayed. Note that PPP accuracy is largely dependent on the length of the survey.

#### Datum Selection

In differential processing, a vector is solved between the base station and the remote. Your project datum is thus not controlled by what you select as your processing datum, but rather the actual base station coordinates entered.

Regardless, it is important to ensure you have correctly set the processing datum after entering the base station coordinates. This is partly because the processing datum is documented in the header of all export files generated by

#### How to add a master file

1. Select *File | Add Master File(s)*.
2. Select the base station file(s) from the list of available GPB files. Up to eight base stations can be added to a GrafNav project. Click the *Open* button.
3. Enter the coordinates of each base station when prompted.
4. Verify that the coordinates match your selected processing datum.
5. Enter the antenna model and height information and click the *OK* button.

the Export Wizard. If it is incorrectly set, your results could be interpreted by another person as being in the incorrect datum.

### Antenna Height

The antenna height entered in this box applies primarily to kinematic trajectories and static sessions. If exporting camera marks/features, you are provided the opportunity to apply an offset during export. As such, if you are interested primarily in exporting camera events, we recommend entering an antenna height of zero as measured to the Antenna Reference Point (ARP).

### Antenna Models

The purpose of an antenna model is to:

- Correct for the vertical offset between where GNSS observations are observed (the electronic phase center) and the bottom of the antenna (Antenna Reference Point, or ARP).
- Correct for any difference between the L1 and L2 electronic phase centers, which can be a factor in the success or failure of ambiguity resolution.
- Apply small elevation based corrections (mm level)

GrafNav 8.60 supports absolute antenna models as provided by the NGS. If the antenna model is not known at your remote, it is recommended that the *Generic* profile be applied, which does not apply any corrections. In that case, the processed position is referenced to the antenna L1 phase center. However, the correct antenna model should be selected for best results.

When selecting an antenna model, the *Applied height* reflects the vertical offset between the L1 phase center and the ARP (which is the bottom of the antenna). This value comes directly from the antenna model and reduces the processed position from the phase center to the bottom of the antenna. This value should match any diagram that appears directly on your antenna, presuming it is an absolute antenna calibration. Antenna heights can be measured to the antenna reference point, phase center, or computed from a slant measurement.

When loading a base station converted from RINEX, the antenna name and radome (if provided) are scanned from the RINEX header and used to automatically load the appropriate antenna profile. It is good practice to ensure the correct antenna model is loaded prior to processing.

### 2.3.7 Add Remote File

The remote file contains the raw GNSS measurements that are processed together with data from known base station(s). The remote file must be converted to GPB prior to loading. When adding a remote GPB file, you are prompted to enter the antenna information. See *Antenna Models* on page 26 for more information.

### 2.3.8 Add Precise Files

#### Broadcast Ephemeris

The ephemeris file contains Keplerian orbital parameters used to compute satellite positions. Presently, the line of sight component of satellite positions can be computed within an accuracy of approximately 2 metres (RMS) using the broadcast ephemeris.


Orbital error is largely removed in differential processing, as the line of sight component of orbital error is heavily correlated at short and medium baseline lengths. Therefore, the accuracy of the broadcast orbits is completely sufficient for most projects. A discussion on precise orbits is found in the next section.

Generally, the GNSS receiver includes broadcast ephemeris data with its raw data files. The decoder converts these files into EPP format. Receivers typically output ephemerides at startup, as satellites rise into view, or approximately every two hours.

Prior to processing, GrafNav combines all ephemeris information collected at the base station(s) and remote. This minimizes the chance of missing broadcast ephemerides.


In version 8.50 and earlier, if a GPS broadcast ephemeris was missing the satellite could not be used regardless of whether or not a precise ephemeris file had been added to the project. Version 8.60 is less dependent on the presence of GPS and BeiDou broadcast ephemerides and any missing broadcast values can be fixed by adding a precise ephemeris to the project. The same is not true for GLONASS, broadcast ephemerides are required regardless of whether a precise ephemeris has been added to the project.

The Download Service Data utility can be used to download a global broadcast ephemeris file in EPP format as well as to download precise ephemerides.

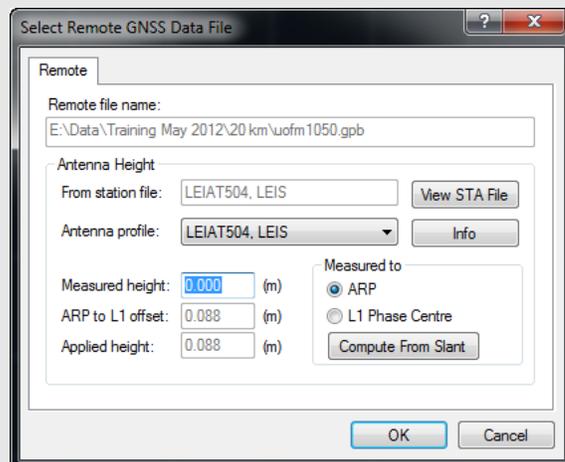

#### How to add a remote file

1. Select *File | Add Remote File*.  
From the list of available GPB files, choose the file collected at the remote station.
2. When prompted, enter the remote station antenna information.

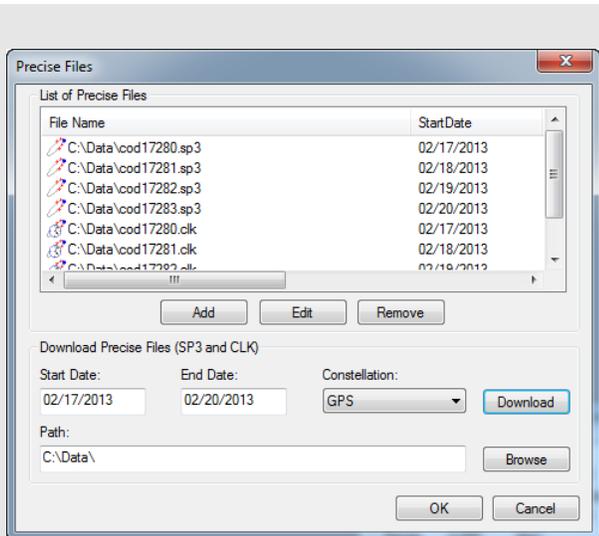

## How to download precise ephemeris files

1. Select *File | Add Precise Files*.

The project start and end date are automatically scanned from the GNSS data loaded into the project. This should not need to be set manually.

2. Select *Browse* in order to choose any precise orbits (.sp3) that have previously been downloaded.

If no files have been downloaded, select *Download* and the precise orbit (.sp3) and clock (.clk) data will automatically be downloaded and added to your project. This requires an internet connection.

- ✉ If your project includes GLONASS or BeiDou data make the appropriate selection under the *Constellation* pull down menu prior to downloading. The default search location for precise products contains only GPS data.

## Precise Ephemerides

Precise ephemerides are computed from data collected by ground reference stations around the world. These files are produced by various agencies, including CODE (Center for Orbit Determination), the IGS, and many others. The different precise ephemeris products vary in their latency, with presently supported products ranging from approximately 6 hours to 2 weeks. The difference in accuracy between rapid and final products is very small, generally within the noise of either differential or PPP kinematic solutions.

Presently, precise ephemerides reduce the line of sight component of satellite position error to approximately 2 cm RMS (as compared with approximately 2 m RMS for broadcast orbits). As orbital error is largely cancelled in differential processing, adding precise ephemerides to a differential project will only produce observable differences where the baseline length is very large (150-200 km). For this reason, adding precise orbits to a differential project is generally considered optional.

Precise ephemerides can be downloaded through the Download Service Data utility or directly through the GrafNav interface. The latter method is described in the shaded box. Adding a precise ephemeris file will compensate for any missing broadcast ephemeris data for GPS and BeiDou satellites. A broadcast ephemeris for each GLONASS satellite observed is required regardless of the presence of a precise ephemeris.

## IONEX Files

IONEX (Ionosphere Map Exchange) files contain a model of the TEC (Total Electron Content) of the ionosphere. These files can be applied to assist long distance L1 only processing. As such, these corrections are not of interest to the majority of GrafNav users. These files are ignored if dual frequency ionospheric processing is engaged.

## Satellite Clock Files

Presently, using the data available in the broadcast ephemeris, satellite clock errors can be predicted within an accuracy of approximately 2 m RMS. Satellite clock error is completely removed in differential processing, as this error is exactly the same at the base and the rover. Thus adding precise clock files to a differential project will have no effect.

Satellite clock files can be downloaded through the Download Service Utility or from *File | Add Precise Files*.

### 2.3.9 Load

#### ***GNSS Solution***

After processing, forward and reverse solutions are automatically combined if available. Thus the trajectory output to the map window, and all generated plots, are usually relative to a combined forward/reverse solution. The title bar of the map window and plots clearly indicate which solution is loaded.

If the processing results from a particular direction (forward or reverse) are of interest, individual solutions can be loaded using this feature.

#### ***PPP Solution***


GrafNav's differential and PPP trajectory files have, by design, different file extensions. This allows both differential and PPP trajectories to be processed within the same project without overwriting each other. If both types of solutions have been processed, you can control which type of solution is loaded through the *GNSS Solution* and *PPP Solution* options.


#### ***Any Solution***

This option allows any GrafNav readable trajectory to be loaded into a project. The only requirement is that the trajectory cover the same time range as the data within your existing project. An example of when this feature may be used is when loading a real time trajectory produced from the GNSS decoder.

#### ***Single Point Solution (from .gpb file)***

This option ensures the trajectory displayed to the map window reflects the unprocessed positions in the remote GNSS data. This trajectory typically represents the real time solution as computed on board the receiver during data collection.



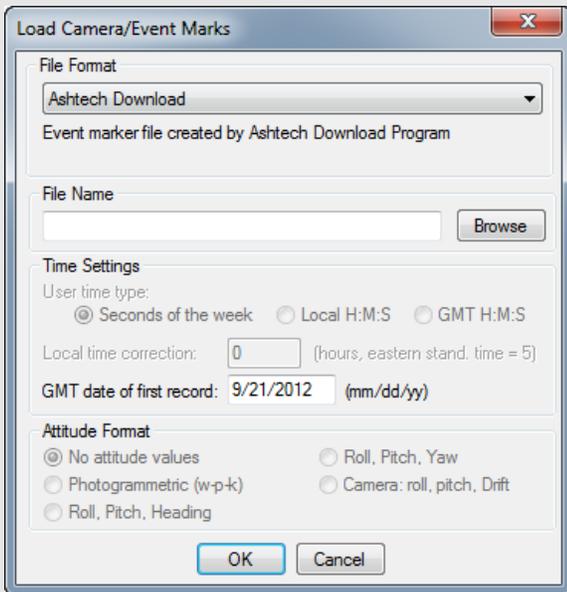

## How to load camera event marks

1. Under *File*, select *Load | Camera Event Marks*.
2. Choose the file format that matches your input file.
3. Under *File Name*, use the *Browse* button to select the file of interest. The file name depends on the receiver format and is explained in *Section 2.3.6, Add Master File(s)* on page 25.

- ☒ If the files formats you use are User1- User6, use *Time Settings* to select the time formats. UTC time cannot be loaded and the correction has to be applied externally.

## Loading Camera Event Marks

Use this feature to load external time-tagged events from an ASCII file. When you load these events, they must be referenced to GPS time and not UTC (coordinated universal) time. The source of the events can come from an aerial camera, sounding equipment or other real-time devices. The GPS receiver must support a mark or pulse input for this feature to work.

Most events are automatically stored in the station file (.sta) during the conversion to GPB format and appear when the remote is added to the project. For user events, and a few receivers such as Ashtech or B-file, this feature must be used.

### File Format

#### *STA File*

Many new converters save the camera event marks directly to the station file. The marks load when you add the GPB file to the project. If they do not load, then use the *File | Load | Station File* feature.

#### *MRK File*

Leica SR receivers save event marks into a EVT file, which is converted into a MRK file by the Leica decoder. The MRK file can be loaded using this option. Numbering is performed by the converters.

#### *Ashtech Download*

Ashtech receivers with internal memory usually output a PHOTO.DAT file after the receiver data has been downloaded using HOSE or another corresponding utility. Newer variants might be under the format M????.###. Either file can be loaded using this option. The GMT date of the first event mark must be entered if it is not detected. Events are automatically numbered starting at 1.

#### *Leica GeoSystems*

EV0 and TDU files are produced by the Leica software and can be imported using this option. This file might contain time in the local time zone. If not, enter the time zone offset as zero. The time zone correction and the GMT date of the first mark must be entered. Events are automatically numbered starting at 1.

#### *LH-Systems Ascot*

LH Systems ASCOT (RC-30) has a format very similar to EV0 except that it contains the relative angles of the camera mount, which can be used to apply a 3-D offset for the antenna/camera difference.

#### *User#*

These formats allow you to import the time and name of each event mark. Optional variables include line number (description) and altitude information.

**File Name**

The file name depends on the receiver format. Examples include the following:

- NovAtel is MRK
- Ashtech is PHOTO.DAT
- Trimble is SUM
- Leica is EVO

**Time settings*****User time type:***

*Seconds of the week* – GPS time ranging from 0 to 604800.

*Local H:M:S* – Local hours, minutes and seconds (HH:MM:SS.SSSS).

*GMT H:M:S* – GMT hours, minutes and seconds (HH:MM:SS.SSSS).

***Local time correction:***

This is necessary for both Leica and User# formats using *Local H:M:S*. This is the offset, in hours, from GMT. For the Eastern Standard Time zone, this number is 5. For the Pacific Standard Time zone, this number is 8. During daylight savings time, these numbers are reduced by one. An incorrect entry causes the camera marks to be displayed incorrectly or not be displayed at all.

***GMT date of first record:***

This is necessary for Leica, Ashtech and User# formats implementing H:M:S time-tagging. Enter the date of the first exposure record in month/day/year format. It is not the date in local time, which may differ towards the end of the day. An invalid date results in the marks not being displayed.

**Attitude Format**

For *User5* and *User6* formats that include attitude information, a definition of how the angles are defined is required. Currently, the following attitude formats are supported:


***Photogrammetric (w-p-k):***

These angles are defined as omega primary, phi secondary and kappa tertiary (ground-to-air).

***Camera (roll, pitch, drift):***

These angles are the relative ones between the frame of the camera and that of the aircraft.

If the raw GPS receiver data logs position records, there are small circular event marks on the trajectory map in bright blue. These also appear if the data has been processed. If no event marks are present after processing, then it is likely that the time tags are wrong or no event

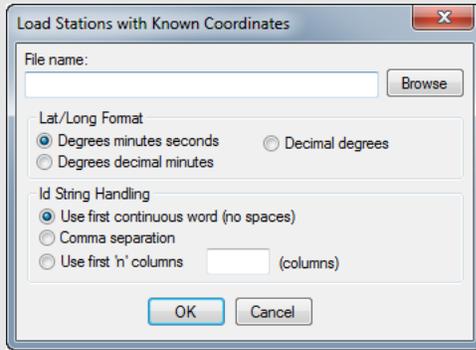

## How to load Stations with known latitude and longitude

1. Select *File | Load | Stations with Known Lat/Long*.
2. Choose the file, under *File Name*, that contains the station information in one of the formats from the *Lat/Long Format* option list.
3. Choose the format, under the *Lat/Long Format*, that the coordinates from the file are in.
4. Choose an option under *Id String Handling* to tell the program how to separate the ID from the coordinates. The first column usually contains the station IDs.

marks have been loaded. To determine what has been loaded, use the *Feature Editor* by selecting *View | Features*.

### Station File (.sta/nst)

GrafNav automatically loads the station file (.sta) associated with the remote GPB file. This file is produced during conversion and contains, among other information, any camera events. If properly loaded, these camera events are displayed to the map window.

The program automatically loads the STA station file as long as the filename is the same as that of the remote GPB file. If the station file has a different filename than the GPB file, then load the file separately. Most decoders produce station files.

### RTK Dat File (.sta/nst)

This option loads converted RTK solution files and then uses the Export Wizard to re-format them for output.

### Stations with Known Lat/Long

This option allows you to load and display a file that contains stations with known coordinates. The coordinates are displayed with pink triangles.

#### Lat/Long Format

This is a list of formats that the coordinates from the file are in. These formats include the following:

##### *Degrees Minutes Seconds*

For example: 51° 03' 28.3214"

##### *Degrees Decimal Minutes*

For example: 51° 03.4720'

##### *Decimal Degrees*

For example: 51.0579°

#### Id String Handling

The settings under this option tell the program how to separate the ID from the coordinates.

##### *Use first continuous word (no spaces)*

To be used if the station names are separated from their coordinates by a space.

##### *Comma separation*

Use this option if commas separate the IDs from the coordinates.

##### *Use first 'n' columns*

If you know which column the coordinates start in, you can enter the number for the program to begin at. Each character is a column.

**Leica IDEX File (.idx)**


Time-tagged points created with Leica 5 data collectors can be given a name, position and antenna height. However, firmware versions 3.0 and greater do not store the station names within the TTP file. These names are stored within the database structure (control.db) and cannot be accessed directly by the software. The point information contained within the database has to be converted to ASCII, which is done by creating an IDEX file using Leica's Ski software.


Once an IDEX file has been created, it can be loaded into GrafNav. You should see a message indicating how many IDEX points were matched to TTP points. After processing at least one direction, the TTP points should be visible and numbered sequentially. These have been loaded from the STA file.

Points are matched via their times. Often, there are fewer matched points than the original number of TTP points due to several reasons, including the deletion of points in the field, and/or the addition of static session marks.

**Ashtech OUT File (.out)**

This type of file is created by Ashtech's Seismark surveying system and can be loaded into a project.



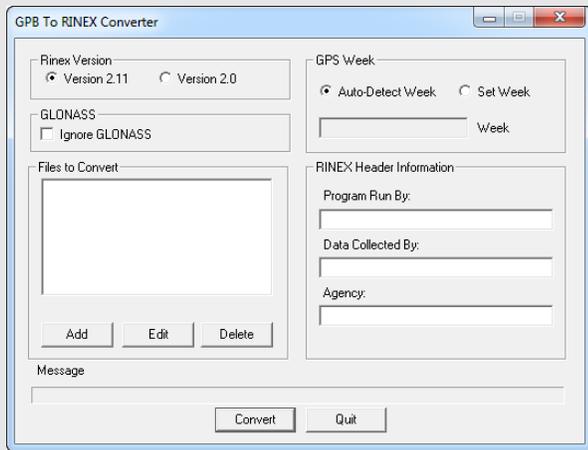

### Convert GPB to RINEX

This utility converts a GPB file into a standard RINEX file, version 2.0 or 2.11.

#### Rinex Version

Choose between *Version 2.11* and *Version 2.0* format.

#### GLONASS

If present, GLONASS measurement data writes to the observation file, while the ephemerides write to their own navigation file. This option can be enabled to create GPS-only RINEX files.

#### Files to Convert

Allows you to select the files that are to be converted.

#### GPS Week

Sets the week number in which the observations were made. If the *Auto-Detect Week* button is selected, then the program determines the week number from the EPP file. Sometimes, an incorrect week number is output to the EPP file during the conversion from a raw data format. In such a case, you must manually enter the week number via the *Set Week* button.

#### RINEX Header Information

Several fields are available here for editing. This information is used only for the purpose of being written to the header of the RINEX observation file.

- ☒ Multiple files can be added for conversion. For each file added, you are prompted for a station name, an antenna height, and, if needed, an alternate ephemeris file.

### 2.3.10 Convert

The two conversion utilities that are available are the following:

#### Raw GNSS to GPB

You must convert your raw GNSS data files to GPB prior to creating an empty project. It is not necessary to convert your raw GNSS data prior to creating a new project if using the New Project Wizard. See *Section 5.4, GNSS Data Converter Overview* on page 143 for more information regarding this utility.

#### GPB to RINEX

GNSS manufacturers typically provide a utility to convert their native data format to RINEX. It is therefore unusual to convert from GPB to RINEX, as an intermediate step would be involved (converting to GPB) when often the native receiver data can be converted directly to RINEX.

Nonetheless, RINEX 2.11 and 2.0 files can be generated from GPB files using this utility. See the shaded box for more information.

### 2.3.11 GPB Utilities

The GPB Utilities are available for use with GPB files and includes the following:

#### Concatenate, Slice and Resample

See *Section 5.3, Concatenate, Slice and Resample Overview* on page 142.

#### View Raw GNSS Data

See *Section 5.2, GPB Viewer Overview* on page 137.

## Insert Static/Kinematic Markers

Each epoch in the remote GPB file has its own static/kinematic flag, which is set during data conversion. The conversion options for each receiver can be adjusted within the *Global Options* of each receiver type.

The static/kinematic flag can also be changed after data conversion, either through the GPB Viewer or through this utility. Using this utility is preferred over other methods (adjusting the conversion options or through the GPB Viewer) only if it is desired to input multiple static sessions into a single file. This is because this utility supports reading start and end times from a file.

### GPB File Name

Specifies the GPB file to modify.

### Operation to Perform

Select *Make all epochs static* or *Make all epochs kinematic* to set the mode for every epoch in the GPB file. Select *Use user generated file to define static periods* to define specific time ranges as being static. This enables the *User File Settings* section on the window.

### User File Settings

Converts user-defined time ranges to static mode. The input file containing the definitions of the static periods must contain the space-delimited fields listed in the shaded box.

### File name

Click the *Browse* button to locate the input file. The *View/Edit* button allows for the revision and modification of the file.

#### ***Begin time offset***

The number of seconds added to all user-defined *StartTime* values in the input file.

#### ***End time offset***

The number of seconds to subtract from all user-defined *EndTime* values in the input file. Only the epochs lying between these adjusted times are converted to static mode. This is to ensure that no kinematic data is incorrectly set to static.

#### ***Minimum session time***


The minimum number of seconds that a static session must contain to be converted to static mode.

#### ***Antenna height***

If the *Create station file* option has been enabled, this value is written to the station file for all user-defined static sessions.

#### ***Create station file***

Writes all static sessions to the station file (STA), regardless of whether an antenna height has been entered.

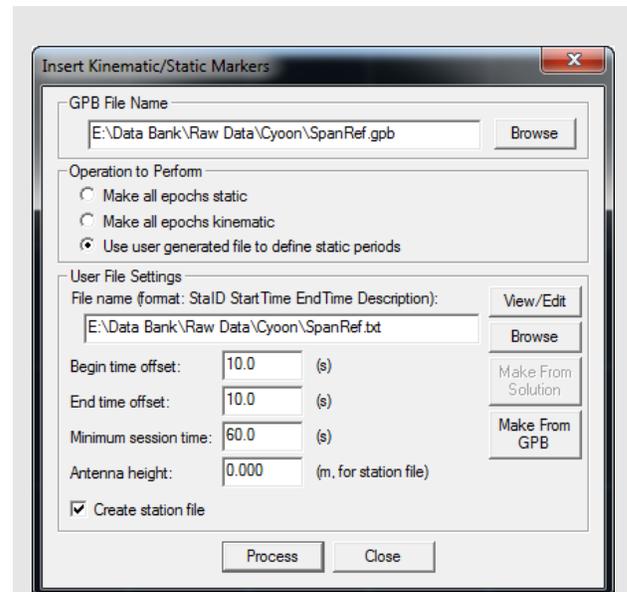

### Space-delimited fields

- StationID
- StartTime
- EndTime
- Description

**Files affected by each Remove Processing Files option****Project(s) to Remove**

Allows you to select what project(s) you want to delete processing files from.

**Current project**

Only removes the selected files that are associated with the project that is currently loaded.

**All files in**

Allows you to select the folder from which you want the selected files deleted.

**Selected projects**

Allows you to select a specific project whose associated files you want to delete.

**Files to Remove**

Allows you to select the files to remove from the specified project or folder.

**Trajectories**

Contains the solutions computed during processing.

**Additional processing**

Includes message logs, static summaries and binary files.

**Processing history**

Contains information regarding any earlier processing run performed in the project. See *Section 2.4.4, Processing History* on page 39 for more details.

**Project files**

Contains project configurations and processing options.

**Html/GE files**

Deletes everything in the *HTML* sub-folder for a project. This includes any bitmaps, HTML reports or Google Earth output files.

**2.3.12 Remove Processing Files**

When processing GNSS data, GrafNav's processor generates many different file types, both ASCII and binary. Many of these files are required by the Export Wizard to export the combined post-processed solution.

After the data processing and export is complete, you can choose to delete some or all of the intermediate processing files generated by GrafNav in order to save hard drive space. All of GrafNav's processing files can be easily be regenerated, if needed, provided the project file (.CFG).

This utility can be used to see how much disk space is being used by different types of files generated by GrafNav, and also to delete them. More information is provided in the shaded box.

**2.3.13 Recent projects**

Provides a list of recent projects for quick access.

**2.3.14 Exit**

Exits Waypoint software.

## 2.4 View Menu

### 2.4.1 Project Overview

This window provides a summary of the data in the current project. From here, you can view information regarding the base and remote files, including receiver/antenna types, time coverage, and data gaps.

### 2.4.2 GNSS Observations

These options are available via *Master* or *Remote*:

#### View Raw GNSS Data

Opens the master file in *GPB Viewer*.

#### View Ephemeris File

Opens the EPP file in the internal viewer.

#### View Station File

Opens the STA file in the internal viewer.

#### Insert Static/Kinematic Markers

Launches another dialog that can be used to change the static/kinematic flags in the data. This is a convenient way of inputting multiple static sessions if you have the start/end times of each session marked in a text file.

#### Resample/Fill Gaps using the following options

##### *File Interval*

Fills any gaps but does not resample to a higher rate than the file was originally collected at.

##### *Processing Interval*

Fills gaps and matches the data rate in accordance with the specified processing interval.

##### *Remote File Times*

Produces a GPB file with epoch times that match the remote file. Any data gap present in the remote file is also present in the new master GPB file. This method of resampling removes unneeded data logged before, and after, the observation time period at the remote.

- 
- Resampling base station data to a lower interval will add noise to the processed trajectory. This noise is negligible if resampling from an original rate of 5 seconds or less, but can add as much as 1-2 cm if resampling from 30 second data.
- 

#### Disable

Disables the selected master station from being used for processing. You may want to disable individual baselines from a multi-base project when troubleshooting poor multi-base processing results.

#### Remove

Removes the master file completely from the project.

### Types of messages written to the message log files

- Times at which ARTK was engaged and the reasons for its engagement. These messages are preceded by +++.
- Any satellites with no ephemeris information.
- Epochs of less than 4 common satellites between the master and remote.
- Periods of extremely poor satellite geometry.
- The occurrence of cycle slips. This log gives a time and record of these slips that mean problems in kinematic data.
- Data errors that cause filter resets or the rejection of satellites. These messages are preceded by \$\$\$.
- Entering static and kinematic modes.
- Events resulting from significant changes in the satellites' geometry. These include changes in the base satellite and the rising or falling of satellites above or below the elevation mask.
- The omission of satellites, baselines or time periods from processing.

### Static/ARTK summary report items

- Final solutions for all static sessions, as well as the type of solution obtained.
- Time and place at which ARTK engaged successfully, as well as the corresponding statistics. Such information is useful for evaluating whether or not ARTK resolved ambiguities correctly.
- Master station coordinates, antenna summary for base and rover, and the processing mode.
- Satellite usage information pertaining to static sessions.
- Slope, horizontal and corrected ellipsoidal distances for all static sessions.
- Program completion information.

## 2.4.3 Forward and Reverse Solutions

### GNSS / PPP Message Log

These files display all messages generated by the processing engine. GrafNav outputs a forward message log (.fml) and a reverse message log (.rml). Possible messages reported in these logs are listed in the shaded box.

### GNSS Summary

These summary files display some basic processing settings and the statistics for ARTK fixes and static sessions. Other items reported in this summary are listed in the shaded box. See *Section 4.4.1, FML, RML, FSL and RSL Files* on page 130 for an example of this summary file.

### GNSS / PPP Trajectory

GrafNav generates a host of information for each processed epoch. Examples include position, velocity, local level vector, measurement residuals, etc. All of this information is written to the trajectory files. GrafNav produces a trajectory file for each processing direction as well as a combined trajectory file that is automatically produced after processing both directions.

Most of the Q/C plots accessible within GrafNav, as well as the Export Wizard, draw on the information provided in the trajectory files. It is therefore not common to view the contents of these files directly. For an example of a trajectory file, see *Section 4.4.3, FWD, REV, CMB, FSP, RSP and CSP files* on page 135.

### 2.4.4 Processing History

This feature displays the processing history in a chronological list. It contains the date and time when each run was performed, as well as the user's initials if this was provided when processing. It also contains a description of the run, including the directions being processed, the processing settings and the return status.


The processing history can be used to restore settings from a previous run and compare processing settings between processing runs. A limited list of plots is also available for each processing run. View options in the *Process History* box are listed in the shaded box.

### 2.4.5 Processing Summary

This file provides a statistical summary of the processing results. It can be used for reporting and quality checking purposes. A list of the items reported in this file include:

- Solution type (forward/reverse/combined)
- Summary of the number of epochs processed, missing, and epochs with poor measurement residuals
- Phase, code and Doppler RMS
- The RMS of the forward/reverse position separation, including separate statistics where both solutions are fixed.
- Breakdown of quality number percentages
- Percentages of standard deviations that fall within given intervals
- Percentage of epochs with very poor satellite geometry (DD\_DOP > 10)
- Baseline distance summary

The *Processing Summary* can be added to the end of an output text file created through the *Export Wizard*. See *Section 2.7.5, Export Wizard* on page 74 for information about the *Export Wizard*.

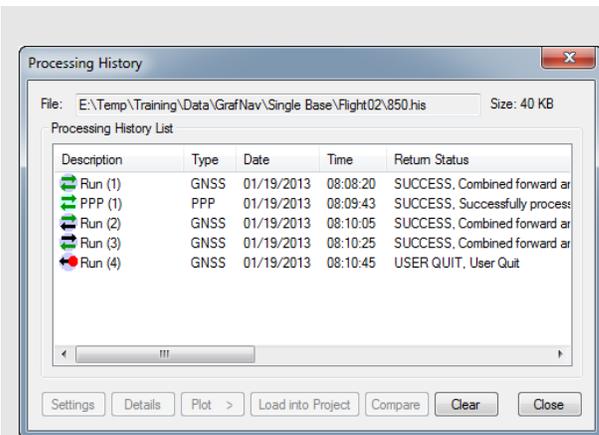

### Processing history view options

#### Settings

Accesses the processing settings used for the selected run.

#### Details

Displays more information about the selected run, including the following option for the configuration file.

#### Plot

Accesses the *Combined Separation*, *Estimated Position Accuracy*, *Quality Factor* and *Float/Fixed Status* plots for the selected run. Be aware that if processing was not performed successfully in each direction, certain plots can be unavailable or incomplete. This feature is very useful for comparing different runs.

#### Load into Project

Loads the processing settings for the selected run into the current project. You are prompted to back-up the current project to a BAK file.

#### Compare

Compares two configuration files that are selected by holding down the *Ctrl* key. This feature is useful for determining the difference between the settings used for two runs.

#### Clear

Deletes the entire processing history.

### Displayed in the *Features Editor* window

#### Name

The name of the feature. The symbol next to the name indicates the type of feature loaded. Examples include camera marks and stations. The symbol appears grey if the feature has been disabled.

#### Time

This is the feature's GPS capture time. To show the time in HH:MM:SS, select *Show HMS*.

#### Q

Reports the quality number. Quality numbers range from 1 to 6.

- 1 represents a fixed integer solution with good satellite geometry
- 2 & 3 represent either fixed integers with marginal geometry or converging float solutions
- 4 & 5 indicate qualities similar to DGPS
- 6 represents a C/A only solution

The quality number is only meant to communicate, at a high level, the overall processed data quality. For more information, access GrafNav's quality control plots.

#### Std(m)

Combined standard deviation of the north, east and height components, including additive PPM based error.

#### Fix

Shows the ambiguity status of the feature's solution:

Y = fixed integer      N = float solution

#### Azimuth

Azimuth, in degrees-minutes-seconds, from previous feature to current feature.

#### Dist(m)

Distance, in metres, from previous point to current point.

#### Dt(s)

Time difference, in seconds, between current and previous point.

#### Height

Height, in metres, of the feature. This is normally an ellipsoidal height, but if the master station height was entered as orthometric then this height is more orthometric. Use the *Export Wizard* to get the exact orthometric height. For stations, like STA and GIS, with antenna heights, this height is of the monument and not the antenna.

#### AntHgt

The height of the antenna above the monument. Camera marks do not have an antenna height and so *N/A* is displayed.

#### Desc/Info

Describes the feature or line information for the camera mark.

## 2.4.6 Features

The *Feature Editor* window lists all of the features loaded into the project. If the data has been processed, a summary of processing quality is also displayed. In addition to viewing features, the feature editor can also be used to:

- Edit station feature names, time-tags, as well as antenna heights and models. For camera marks, the line number can be inserted into the *Desc/Info* field.
- Re-number stations and camera event marks.
- Disable features so that they are not displayed or exported.

The shaded box has a list of the columns that are displayed.

- 
- Changes made to stations are saved automatically to an NST file. To revert back to the original station information, use *File | Load | Station File*.
-

The shaded box contains a list of the options that are available with the buttons on the right-hand side of the *Features Editor* window.

### Options in the *Features Editor* window

#### Remarks

Remarks field.

#### Add Station

Lets you manually add a station. Also add stations by right-clicking on epochs in the map window. You might want to add stations to static sessions that have none because static sessions cannot handle a varying antenna height and a station can.

#### Remove

Removes the selected stations. Multiple stations can be selected and removed. You might consider disabling a feature instead of deleting it.

#### Edit

Edits the station name, time-tag, description and antenna height of the selected feature.

#### Select All

Selects all features.

#### View Info

Shows processing information for any selected feature enabled during processing.

#### Global Edit

Make changes to multiple selected features. Modifications can be made to the antenna heights, descriptions, camera line information, remarks and drift/crab angles.

#### Re-Number

Re-number a selection of stations. Numbering can be performed starting from the bottom or the top of the list. You can specify the starting number and the increment value. To decrease numbers, use a negative number.

#### Move to Static

This feature is used to assist in the quality control of surveys where multiple short static sessions are collected in challenging GNSS signal environments. When used, it allows you to see the difference between the forward and reverse solution for each static session in your survey when exporting from the Wizard.

An example of an application that may use the Move to Static feature is seismic surveying. Move to Static requires that a station mark be present within each static session.

---

✉ *Global Edit, Re-Number and Move to Static* work with multiple features selected. To select a continuous block, hold down the *Shift* key while clicking on features. To select individual features, use the *Ctrl* key.

---

## Options available in the *Objects Menu* window

### View

Brings up the *Object Info* message box for the selected object.

### Edit

Edits the station name, description and remarks for the current selection. If a master station is selected, this allows you to edit the coordinates and antenna height.

### View/Edit GPS

Displays the following list of options. You must have selected an epoch to use these options.

#### **View Raw GNSS Data**

Opens the master file in GPB Viewer.

#### **View Ephemeris File**

Opens the EPP file in the internal viewer.

#### **View Station File**

Opens the STA file in the internal viewer.

#### **Insert Static/Kinematic Markers**

Opens a menu to insert static/kinematic markers in the file.

#### **Remove**

Removes the master file from the project.

### Add as Station

Lets you manually add a station. The station's time is automatically set to the time of the selected object.

### Initialize Remote

Lets you fix the remote's position at the time of the selected object. This will only work on objects with valid solutions.

### Engage ARTK

Forces the software to engage ARTK at the selected object's time.

### Add to Favourites

Adds the object's solution to the list of *Favourites*.

### Set Start Time

Uses the selected object's time as the start time for GPS processing.

### Set End Time

Uses the selected object's time as the end time for GPS processing.

### Find on Map

Finds the selected epoch on the map window.

### Go to FML

Searches the forward GNSS differential message log for a record closest to the time of the selected object.

### Go to RML

Searches the reverse GNSS differential message log for a record closest to the time of the selected object.

## 2.4.7 Objects

Select *View | Objects | All* to access the *Object Menu* window. This window provides access to ARTK fixes, static sessions, features/camera marks, epochs, master stations and RTK data if present. The *Object Menu* can also be activated by right-clicking on an epoch in the map window. This displays the features and epochs around the selected epoch.

The options that are available with the buttons on the right-hand side of the window are listed in the shaded box.

### Static Sessions

A remote GPB file may contain multiple static sessions. These can either be separated by data gaps, if the receiver is turned off when moving to a new station, or kinematic marks if a "stop and go" style of survey is being performed.

By default, if GrafNav detects a data gap larger than 120s between static sessions, they are treated as separate occupations. This is a setting that can be controlled within GrafNav's *Fixed Static* tab.

The default antenna height and model applied to every static session in the file is the same as that entered within the *Remote* tab when creating a project. Antenna models and heights can be adjusted for individual static sessions by accessing the *ARTK/Static* component of the Object Menu. This can be accessed through *View | Objects | ARTK/Static*.

## Edit Static Sessions

Select a static baseline from the *Object Menu* and click the *Edit* button to display the *Edit Static Session* window. The options in this window allow you to change the station name, antenna height, antenna model and fixed static processing options for the static session.

### Time Range

Displays information regarding the static session.

#### *Start/End*

Displays GPS seconds, GPS week number, GMT time and date (*mm/dd/yyyy*) for the beginning and end of the static session.

#### *Length*

Displays the difference between the start and end time.

### Point Name and Antenna Height

Displays information regarding the observed point name and antenna height.

#### *Automatic determination*

Applies the antenna height and point name from the global remote settings.

#### *Override with these values*

Allows you to manually enter the parameters that are listed in the shaded box.

### Fixed static settings

Customizes the conditions and settings for the use of a fixed static solution.

#### *Fixed solution usage*

Allows you to override the global tolerances for distance and length within the *Fixed Static* tab. More information about these options is in the shaded box.

#### *Use global fixed static options*

Allows you to customize the fixed static processing options for the static session.

## Override values

### Point Name

Allows you change the station's name.

### Antenna Information

To edit the antenna height and/or antenna model for the static session, click the *Change...* button.

## Fixed solution usage settings

### Never

A float solution is used for the static sessions.

### Always

A fixed integer solution is attempted for the static sessions.

### Only if distance and time OK

A fixed integer solution is attempted if the baseline distance and session length are within the tolerances applied in the *Fixed Static* tab of the GNSS processing options.

### 2.4.8 ASCII File(s)

The *View ASCII File(s)* option allows you to view any of the ASCII files generated by the software using GrafNav's ASCII file viewer. Examples of these files include the following:

- Epoch Solutions (FWD, REV and CMB)
- Message Logs (FML and RML)
- Static Summaries (FSS and RSS)
- Station Files (STA)
- Ephemeris Files (EPP)
- Configuration Files (CFG).

### 2.4.9 Raw GNSS

This option launches the GPB Viewer. The GPB viewer allows the viewing and editing of raw GNSS data that has been converted to Waypoint's format. This viewer is also launched from *File | View | Raw GNSS Data*, or by double clicking a converted GPB file within Windows Explorer. See *Section 5.2, GPB Viewer Overview* on page 137 for more information.

### 2.4.10 Current CFG File

This option opens a GrafNav project file (.cfg) within GrafNav's ASCII viewer. The CFG file contains all of the processing settings in a project.

## 2.5 Process Menu

### 2.5.1 Process GNSS

The Process GNSS dialog is intended to provide a one page startup where the processing method (differential and PPP), processing direction, and processing options can all be conveniently accessed.

#### Processing Method

##### Differential GNSS

Differential processing can be selected if base station(s) have been added to the project. This method of processing provides access to ARTK, where carrier phase ambiguities are fixed for high accuracy applications.

##### Precise Point Positioning (PPP)

PPP is an autonomous positioning method where data from only one receiver is used. If base station data has been added to the project, it will not be used when processing PPP. By design, both differential and PPP trajectories can be processed within the same project without over-writing each other.

GrafNav's PPP processor requires dual frequency data as well as precise orbit and clock files. GrafNav will automatically attempt to download precise orbits and clocks if the *Process* button is selected prior to adding this data to the project.

#### Processing Direction

See the shaded box for a complete description of the processing directions available.


#### Processing Settings

##### Profile

Processing profiles are available for aerial, ground vehicle and marine applications. These profiles load processing settings that have been found to work well for each application, including changes to the default elevation mask, ARTK options, measurement weighting and more.

Processing profiles are particularly helpful for new users, as adjusting individual processing settings from the *Advanced* options are often unnecessary in order generate a high quality result. For advanced user's, processing settings can be created or customized.

During decoding, GrafNav's pre-processing checks use the unprocessed position decoded in the raw GNSS data to detect the processing environment (aerial, ground vehicle or marine). The detected environment is written to the header of the GPB file, allowing GrafNav to automatically load a processing profile the first time you access the

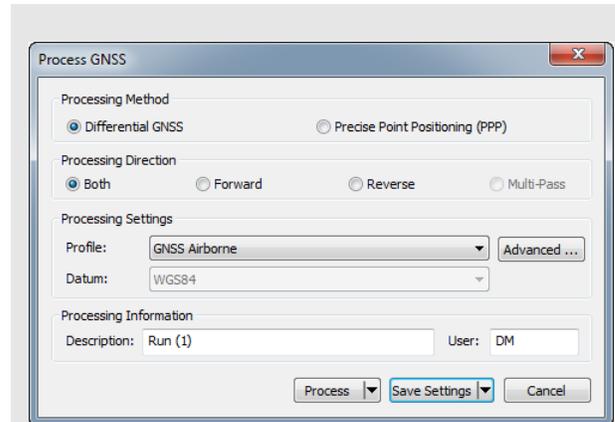

#### Process direction options

##### Both

When processing *both* directions, independent forward and reverse solutions are processed and automatically combined. This method of processing is the default for differential processing.

Combining forward and reverse solutions maximizes solution accuracy and assists in quality control.

Depending in part on baseline length, satellite geometry and number of satellites available, forward and reverse solutions may achieve different solution types (fixed/float) for different parts of the survey.

When both directions are combined automatically after processing, GrafNav applies inverse variance weighting to ensure the direction with the lower estimated errors receives the most weight in the final trajectory.

Position differences between forward and reverse directions can be accessed from the *Combined Separation* and *Combined Separation (fixed)* plots after processing. The latter plot shows the differences in positions only where both have fixed integer solutions. This plot will help detect incorrectly fixed ambiguities.

##### Forward and Reverse

Changing the processing direction to *forward* or *reverse* is normally done only if a problem is detected after processing *both* directions. The *Advanced* dialog can be accessed to customize processing options prior to reprocessing. Forward and reverse solutions are automatically combined when processing either forward or reverse.

*Continued on following page...*

**Multi-Pass**

This method of processing is available only for PPP. This is because it is a method of processing designed to maximize float solution convergence. This is not normally a consideration in differential processing due to ARTK, where carrier phase ambiguities are fixed.

When choosing multi-pass processing, forward and reverse solutions are not independent. Rather, the data is processed three times sequentially (forward, reverse and forward again). After each direction finishes processing, the converged Kalman filter error states are applied to the next processing direction. The benefit of this method of processing is that float ambiguity convergence is maximized, producing in some cases near fixed integer solution quality. This method of processing is most effective on shorter surveys (less than four hours).

*Process GNSS* dialog. This is done to help new users generate a high quality result with as little user intervention as possible.

**Advanced...**

Depending on the processing method selected (differential or PPP), selecting *Advanced* provides access to all available processing settings.

**Datum (PPP processing only)**

The processing datum is directly accessible from the *Process GNSS* dialog for PPP processing only. In differential processing, base station coordinates and the project datum should be set when adding base station data to the project.

PPP is however an autonomous positioning method which does not use base station data. Thus, the processing datum is treated like a processing option.

GNSS data can be processed in any global datum such as WGS84, ITRF, ETRS89, and NAD83. If you require results in a different datum, a datum transformation can be applied within the Export Wizard.

**Processing Information****Description**

The processing description automatically appears as *Run (1)* for the first differential processing run or *PPP (1)* for the first PPP processing run. In order to distinguish each processing run within the processing history (accessible from *View | Processing History*), the counter within the parentheses automatically increases each time a processing run is performed. The description of the processing runs can be edited (optional).

**User**

You can enter your name or initials here. This is shown in the processing history (*View | Processing History*) and can be helpful if multiple users will be processing the same data on the same computer.

## General (Differential Settings)

### Process Data Type

Defines the type of data used for processing.

#### *Automatic*

Detects dual frequency, single frequency or code only receiver data. As only common data can be processed between the remote and base station(s), dual frequency carrier phase will be applied only if all data is detected to contain dual frequency measurements.

#### *C/A code only*

Only C/A code measurements are applied in this method of processing which is associated with accuracies on the order of several metres.

#### *Dual frequency carrier phase*

Dual frequency processing uses L1 and L2 data for the highest possible post-processed accuracies. Ambiguity resolution is much faster, more reliable and possible at longer baselines lengths than single frequency processing. For long baselines (>7 km by default), ionospheric processing is automatically engaged, helping to preserve post-processed accuracy with increasing baseline length.

#### *Single frequency carrier phase (Differential GNSS processing only)*

Single frequency processing uses L1 measurements only. While ambiguity resolution can still be successful on very short baseline lengths, this method of processing is generally associated with decimetre level applications. As the ionospheric error cannot be directly measured and removed, as in dual frequency processing, post-processed accuracy quickly degrades with increasing baseline length.


### Processing Interval and Time Range (SOW)

The data rate of the remote GPB file is used as the default processing interval. However as only common data between the base station and remote can be processed, you will need to ensure the base station(s) were also logged or resampled to the same interval in order to output a trajectory at this interval. GrafNav's pre-processing checks will output a warning if the master data rate is detected to be less than the remote.

By default, all common data between master and remote is processed but a specific time range in GPS seconds of the week can be entered here. The start and end processing times can also be set by right clicking on the GrafNav Q/C plots.

### Signal Pre-filtering

These options are listed in the shaded box.

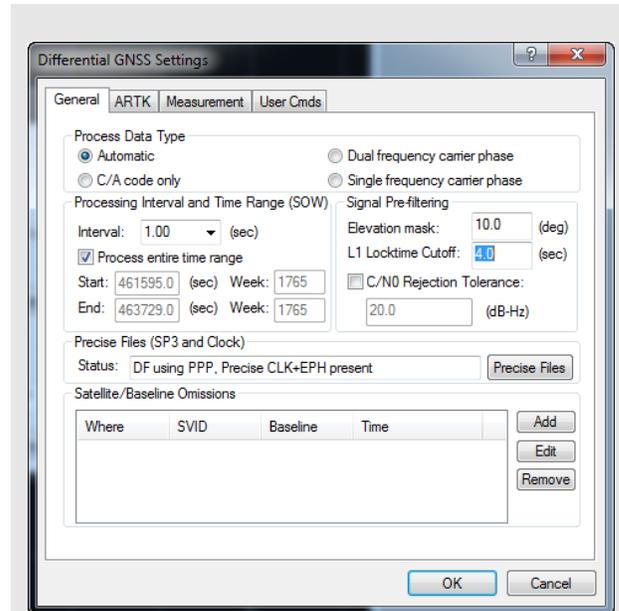

## Signal Pre-filtering Options

### Elevation Mask

Satellites below this elevation (relative to the horizon) are ignored. Common elevation masks for differential kinematic processing are 10-12 degrees. Static processing generally benefits from a higher elevation mask. 15 degrees is suggested.

Low elevation signals are more affected by multipath and tropospheric error, and are more likely to be affected by cycle slips due to signal blockages and/or signal attenuation by the antenna. Thus, pre-filtering low elevation signals is generally beneficial to post-processed accuracy.


### L1 Locktime Cutoff:

This is the number of seconds that continuous carrier phase tracking is required before measurements will be used. Lowering this value will help to maximize GNSS position availability following a total loss of carrier phase lock. However, using low values increases the likelihood of an incorrect ambiguity fix. This is because the quality of carrier phase measurements may be suspect within the first few seconds the receiver achieves carrier phase lock.

### C/N0 Rejection Tolerance

Most often, pre-filtering GNSS signals by elevation mask and L1 locktime cutoff is effective. For specialized applications, introducing additional pre-filtering based on the signal to noise ratio can also be effective.

This option is not engaged by default as not every receiver provides a C/N0 value, and different receivers may output this value at different stages of signal processing. Care should be used if applying this option.

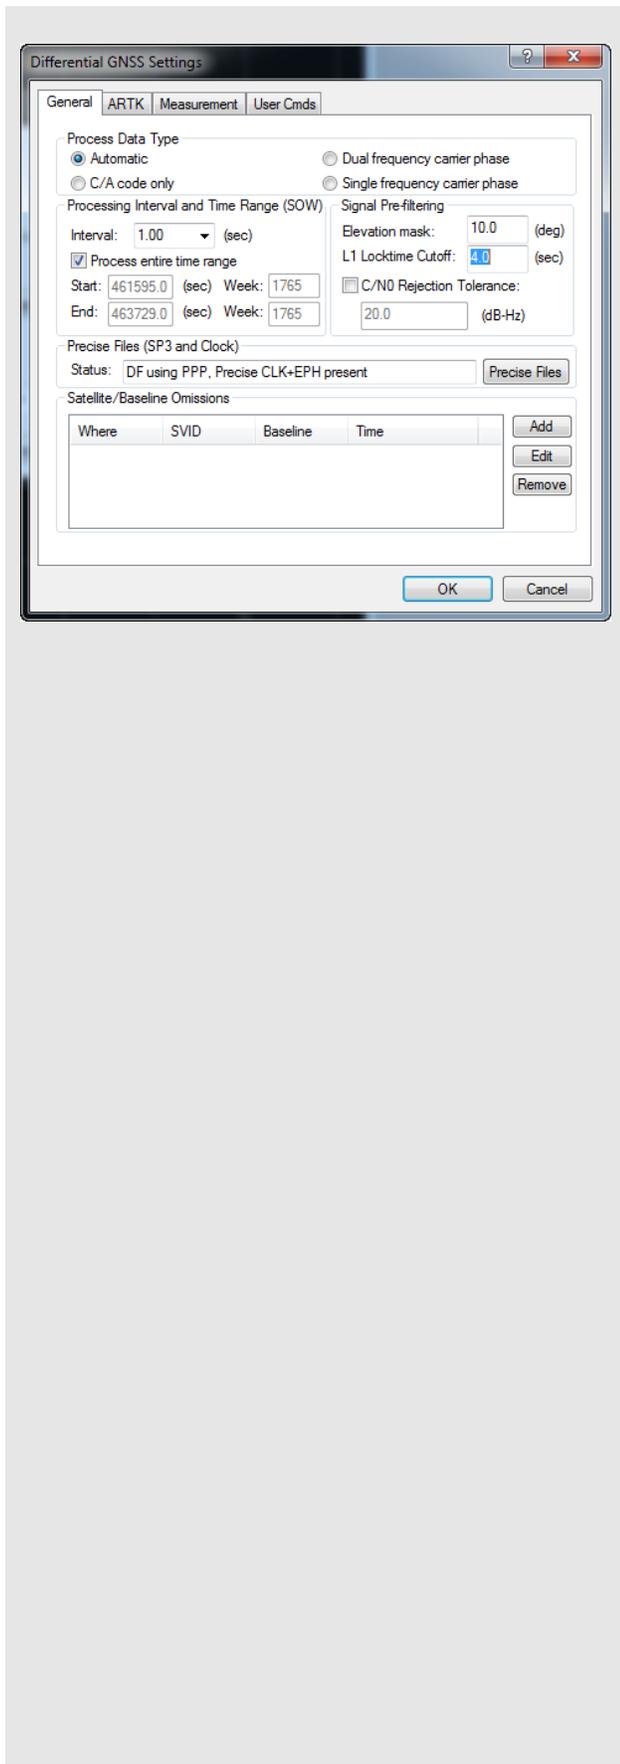

### Precise Files (SP3 and Clock)

Precise clock and orbit files can be downloaded by accessing the *Precise Files* button. Adding a precise ephemeris file will help mitigate residual orbital error on long baselines. Precise clock files are not needed in differential processing as this is an error that completely cancels, however as both files are required should the advanced tropospheric state be engaged or if a Precise Point Positioning (PPP) solution is later computed, both precise files can be added here.

### Satellite/Baseline Omissions

GrafNav's pre-filtering options will often remove noisy or problematic data prior to the processing stage. During processing, GrafNav's automatic outlier detection routines work to automatically fix errors when large measurement residuals are detected. Failing all of this, if a problematic measurement or satellite can be identified, usually from examining the forward or reverse message log files, the *Omit Satellite Info* dialog can be accessed to manually enter satellite omissions.

#### Satellites to Omit

##### *All Satellites*

Disables all satellites from being used.

##### *Only specified satellite*

Disables individual satellites.

#### Baselines to Omit

##### *Omit satellite for all baselines*

Applies the satellite omission to all baselines in the project.

##### *Only selected baseline*

Applies the satellite omission only to the specified baseline (applies to multi-baseline projects only).

#### Time Period

##### *Omit for entire data set*

Applies the omission to the entire processing time range.

##### *Use specified time range*

Applies the omission to a specific time period, entered in GPS seconds of the week.

#### Where to Omit

##### *From processing*

Applies the omission to all types of processing.

##### *From ARTK/Fixed-Static only*


Applies the omission only during ambiguity resolution.


### General (PPP Settings)

The options found in the General tab of the PPP processing settings are explained in the Differential General tab. See *General (Differential Settings)* on page 47. The one exception is *Allow processing without precise files*.

#### *Allow processing without precise files*

This option will not require precise clock and orbit files prior to processing PPP. While this will significantly limit the accuracy of the PPP solution, it can be a useful mode of processing should precise clock and orbit files be unavailable and all that is required is a quick check on the collected data.

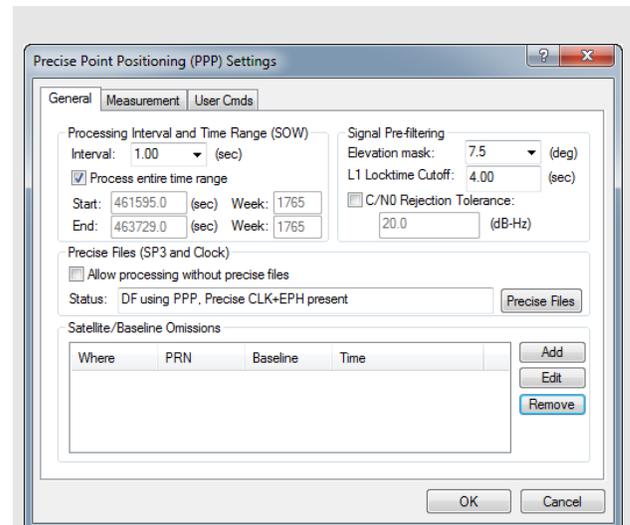

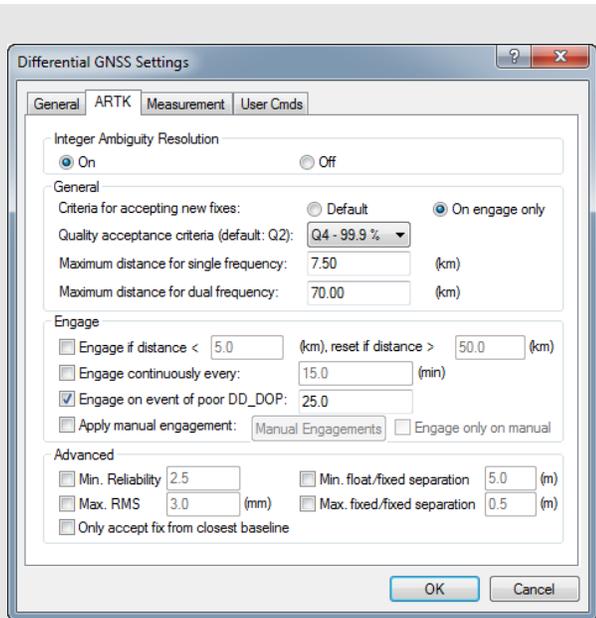

## Integer Ambiguity Resolution processing option settings

### On

Engages ARTK for both single and dual frequency data processing.

### Off

Disables ARTK. This will produce a float solution.

## Criteria for accepting new fixes

### Default

When ARTK is used in default mode, it is constantly re-checking its solved ambiguities when the satellite geometry changes (i.e. when new satellites come into the solution or when individual satellites are lost). New fixes are accepted if they are different by a minimum of 1.2 cm + 0.8 PPM. Thus it is possible, even under open sky conditions where no loss of lock occurs, that ARTK will reengage itself several times as new satellites come into the solution or as the satellite geometry changes.

Using ARTK in default mode is thus mostly preferred for ground vehicle applications, as this method provides a high level of solution accuracy over the entire length of a trajectory. As it is likely ARTK re-engages many times during a survey, even where no loss of lock occurs, the likelihood of small position jumps when new fixes are accepted is high. This is not however a problem for the majority of ground vehicle applications. Loading the *GNSS Ground Vehicle* processing profile ensures that ARTK is used in *Default* mode.

*Continued on the next page...*

## ARTK Options (Differential GNSS processing only)

ARTK (AdVance RTK) is NovAtel's method of resolving integer carrier phase ambiguities in kinematic mode. ARTK should be engaged in high accuracy applications, whenever centimetre level results are required.

Dual frequency ARTK provides fast, reliable and robust performance. However, in high multi-path environments or where the satellite geometry is relatively poor, the possibility of an incorrect ambiguity fix exists. This is why it is important to access GrafNav's quality control plots which will help detect errors.

- 
- ☒ Both single and dual frequency ARTK require at least 5 satellites, but 6 or more are preferable.
- 

### General

#### *Criteria for accepting new fixes*

ARTK can be used in *Default* or *On engage only* modes. These modes are described in the shaded box.

#### *Quality acceptance criteria*

This is the confidence level required in residual testing for an ARTK fix to be accepted. Using lower quality acceptance criteria increases both the likelihood of achieving a fix and the possibility the fix may be suspect. Conversely, increasing the quality acceptance criteria helps reduce the likelihood of incorrect ambiguity fixes, but also the chance that no fix is achieved when conditions are marginal for ambiguity determination.

The default criteria applied is Q2 (99%). This is considered a good starting value for all applications. In general, aerial applications benefit from more strict tolerances as the GNSS signal conditions are not challenging. Using too strict a tolerance in ground vehicle applications can result in float solutions only for a large percentage of the trajectory

The quality acceptance criteria provides a level of control over ARTK performance, however advanced users can also apply additional thresholds such as the minimum reliability, maximum RMS, and other thresholds listed in the *Advanced* section.

#### *Maximum Distance*

The distance tolerance for engaging ARTK in both single and dual frequency can be defined here. The default values applied are high, and therefore are more often lowered than increased.

If your project involves a long flight to or from the project area, and your base station is operating in the project area, it is generally beneficial to lower the distance threshold to 30 km or less. This will prevent ARTK from engaging itself unnecessarily far from

your project area, which increases the likelihood of an incorrect ambiguity fix.

### Engage Options

These options control when ARTK is engaged.

#### ***Engage if distance < tolerance1, reset if distance > tolerance2:***

The first tolerance is used to automatically re-engage ARTK on approach to any new base station. The remote must exceed the second tolerance for ARTK to re-engage when re-approaching the same base station. This option, specifically the first tolerance, is useful in multi-base projects where there are multiple project areas.

#### ***Engage continuously every:***

Engages ARTK at regular intervals. This option does not check other criteria, such as baseline length or data quality. Thus, it should not be used for aerial applications. It is intended for use in slow moving or monitoring applications.

#### ***Engage on event of poor DD\_DOP:***

It is possible to maintain a fixed integer solution through an event which causes poor satellite geometry, provided carrier phase lock is maintained on four or more satellites.

However, it is good practice to re-engage ARTK following the event. When satellites are re-acquired, their carrier phase ambiguities are not automatically re-established as fixed integer solutions. Thus, it is possible that following a period of poor geometry, more satellites in the solution have float ambiguities than fixed. This will not necessarily result in degraded accuracy, but re-establishing all satellites with fixed ambiguities is generally beneficial to maintaining high accuracies.

#### ***Apply Manual Engagement***

A manual ARTK engagement forces GrafNav to re-establish carrier phase ambiguities. Introducing a manual engagement is one technique to recover from an incorrect or drifting ambiguity fix. These instances (incorrect or drifting ambiguity fixes) can be identified from the forward/reverse separation plots. If the *Engage only on manual* setting has not been enabled, GrafNav will compute a float solution only until a manual ARTK engage time is reached, at which point GrafNav will attempt to resolve integer carrier phase ambiguities.


### Advanced

These options provide advanced users more control over ARTK performance and more tools when reprocessing problematic surveys. Each of the advanced options are off by default, however can be individually enabled if needed.

#### **On engage only**

This method ensures ARTK engages only at startup, when a complete loss of lock occurs, or after a period of very poor satellite geometry. This method is generally preferred for aerial applications as it ensures that new ambiguity fixes are not accepted in the middle of a flight line, where position jumps can be problematic.

A new option in version 8.60, the *fixed/fixed separation threshold* found in the *Advanced* section, allows control of the maximum allowable position jump when ARTK accepts a new fix.

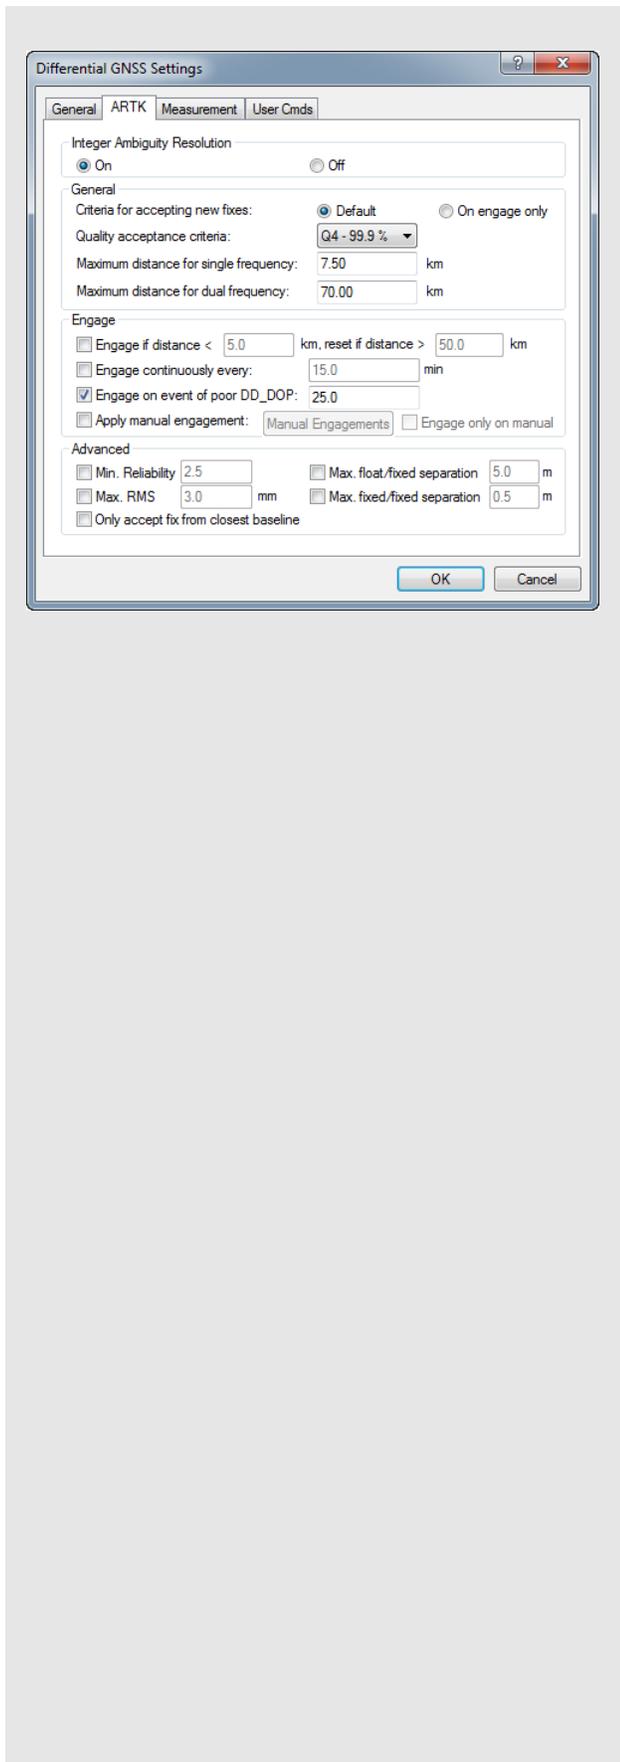**Min. Reliability:**

The reliability of an ARTK fix is the ratio of the second best RMS and the best RMS. It indicates how much better the best solution is from the second best solution. High reliability values indicate the best RMS is significantly better (lower) than the second best RMS, and thus a high degree of confidence can be placed in the solution. This option provides direct control over the minimum reliability ARTK will accept as a pass.

**Max. RMS:**

An RMS is computed for every possible ARTK fix within a given search area. This RMS, output by GrafNav in units of mm, represents the mathematical fit of the solution or how well the carrier phase measurements agree with each other. Low values (mm level or sub-mm) represent well fitting solutions, or measurements that agree very closely. Large values (several mm or cm level) indicate poorer fitting solutions that are more suspect. This option provides direct user control over the maximum allowable RMS for an ARTK fix to be considered a pass.

**Max. float/fixed separation:**

Using this option forces the float solution to converge within a specified distance prior to a fix being accepted. It is recommended to keep this value high (10 m to 15 m) for ground vehicle applications as often only several seconds are used to establish an ambiguity fix. In these applications, large differences are expected between float and fixed solutions.

However in aerial surveys, this option can essentially limit the speed at which ARTK engages. Aerial surveys do not benefit in the same way as ground vehicle surveys in regards to fast ambiguity resolution. That is, aerial surveys often have the luxury of using more data, or taking more time, to ensure the ambiguity fix is correct. In most aerial surveys, correct ambiguity resolution is much more important than fast ambiguity resolution and this option can be used to ensure a certain level of convergence prior to accepting a fix.

**Max fixed/fixed separation:**

This option is of significance when ARTK is used in *Default* mode. In this mode, ARTK is constantly re-checking its carrier phase ambiguities as the satellite geometry changes. If a new set of ambiguities are solved that produce a position difference greater than 1.2 cm + 0.8 PPM relative to the current set of fixed integer carrier phase ambiguities, it is accepted. This option provides an advanced user the ability to limit the allowable size of the position jump when accepting new fixed ambiguities.

## Measurement

### Measurement Standard Deviations

Sets the measurement standard deviations applied to code, carrier and Doppler measurements.

#### Code

Controls the measurement weighting applied to the double differenced C/A measurements. Regardless of what value is entered here, if ARTK is used to fix integer carrier phase ambiguities, the C/A measurement standard deviation will not impact results. This is because when ambiguities are fixed, the strength of the solution comes from the carrier phase. The C/A measurement weighting can affect float solution convergence and is one of the most effective setting available for optimizing float trajectories.

#### Carrier phase


Controls the measurement weighting applied to the double differenced carrier phase measurements. This value is automatically adjusted upwards if ionospheric processing is engaged. Also, an additive PPM value is applied to account for increased noise on long baseline lengths. In general it is recommended to leave this value at the default of 2 cm. However, it may need to be increased in certain applications (such as, when ionospheric activity is particularly high).


#### Doppler

Doppler is the instantaneous rate of change of the carrier phase signal as measured in the receiver. Doppler is used to calculate instantaneous velocity. GrafNav assigns a conservative measurement weighting of either 1.0 m or 0.25 m depending on the receiver manufacturer. GrafNav uses a very conservative weighting as the quality of Doppler measurements vary significantly from one receiver manufacturer to another.

#### Outlier Detection/Rejection

GrafNav attempts to automatically reject satellites or measurements when large measurement residuals are detected. If a large residual is detected, GrafNav systematically rejects each satellite individually and recalculates the position and residual. If the new residual is significantly lower than the original residual, the satellite is automatically removed from the solution at that epoch. GrafNav's sensitivity to high measurement residuals is controlled through this setting.

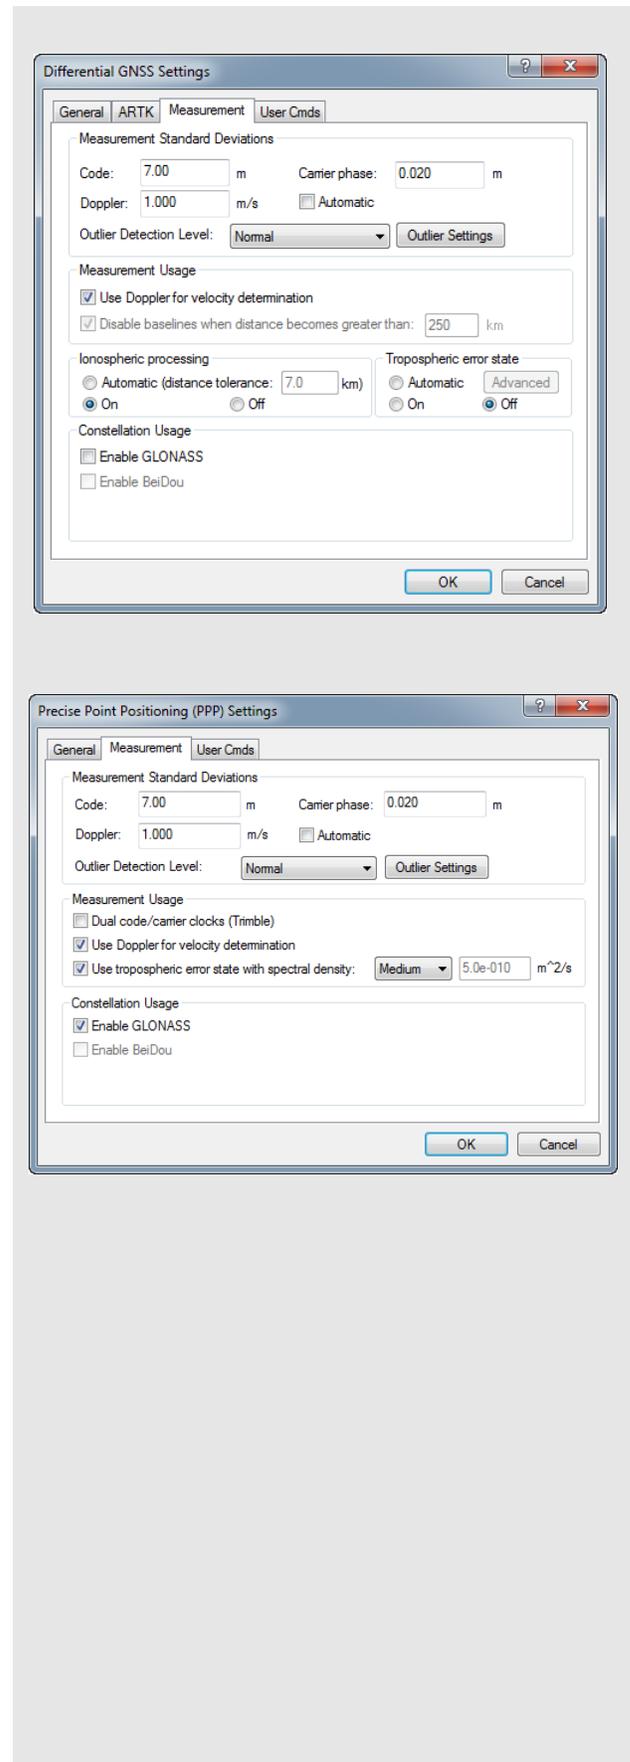

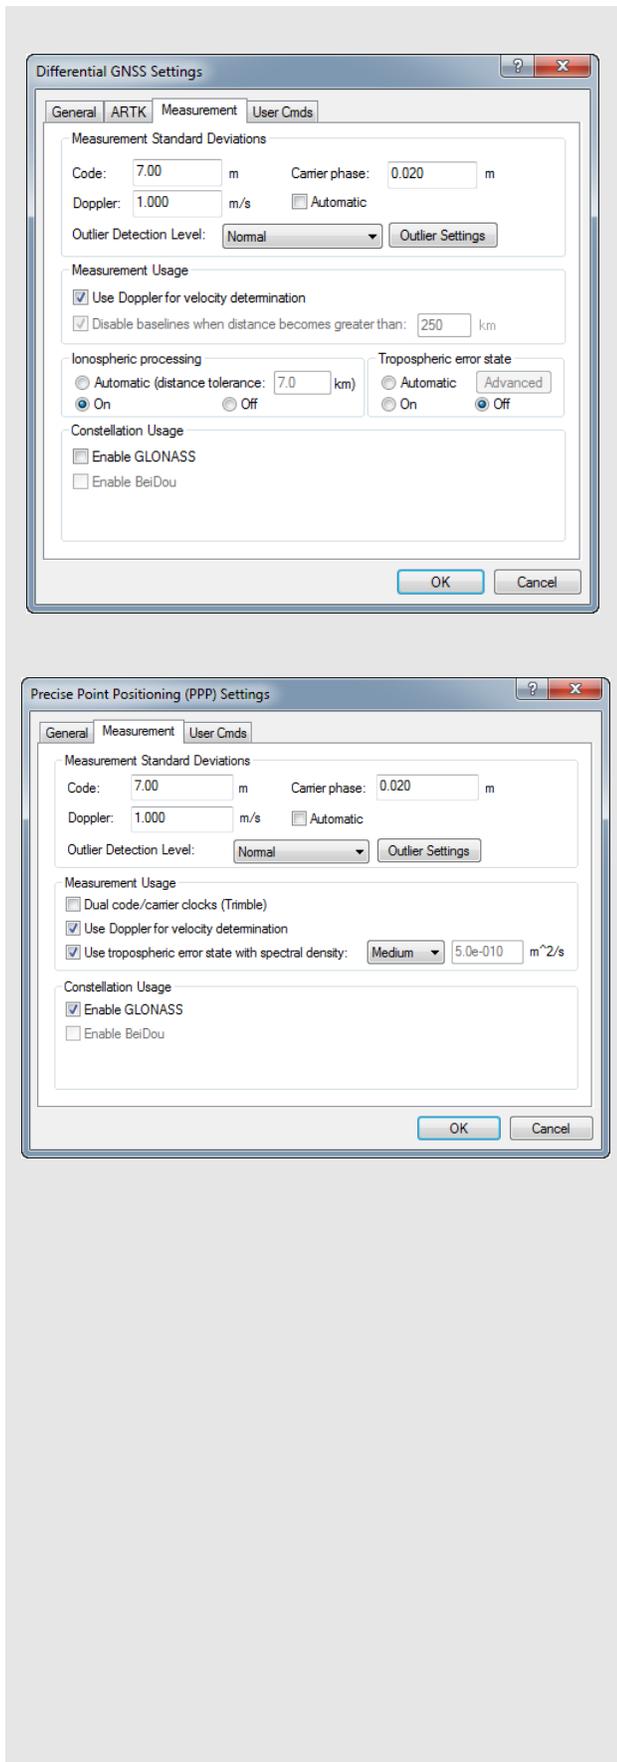

## Measurement Usage

### *Dual code/carrier clocks (PPP only)*

This option engages the use of separate clock states for the code and carrier measurements. Whether this option should be engaged is completely dependent on receiver design. It is most often needed for Trimble receivers, so this option is automatically engaged if the remote receiver is detected to be a Trimble. If this option is not used when needed, the typical result is Kalman filter resets even if the data is of very high quality.

### *Use Doppler for velocity determination*

If engaged, Doppler is used to derive instantaneous velocity. If many Doppler measurement errors are output to the GrafNav processing dialog, it may indicate the Doppler measurement quality of your receiver is very poor. In this case, it is recommended you disable this option and calculate the velocity using a carrier phase model.

### *Multi-Base Distance Tolerance (Differential processing only)*

This option is used to automatically disable base stations according to baseline length. This is an effective means of managing base station data use in very large scale aerial projects.

### *Use tropospheric error state (PPP processing only)*

As no base station data is used to reduce correlated errors, such as tropospheric delay, this must be solved as an additional state within the PPP filter. The tropospheric spectral density controls how fast GrafNav allows the tropospheric state to change. *Medium* is suitable for most projects, but *High* may work better if very fast and frequent changes in elevation are expected in your survey. *High* allows the tropospheric conditions to change more rapidly within the filter.

## Ionospheric Processing

Ionospheric processing requires dual frequency data. It helps to maintain GNSS positioning accuracy with increasing baseline length. The ionosphere can be a significant error source for L1 only processing as it is highly unpredictable and can change rapidly.

Ionospheric processing essentially removes the ionospheric delay as an error source, however does so at the cost of higher measurement noise. Thus, best results are achieved on short baseline lengths when ionospheric processing is disabled. However when the baseline distance becomes large, the benefits of correcting for the ionosphere out-weigh the increased noise and best results are achieved when enabling this option.

In order to handle both scenarios, GrafNav has an *Automatic* setting that will engage, or disable, ionospheric

processing depending on the length of the baseline detected in the project. Prior to processing, the unprocessed positions in the remote GPB file are compared with the base station position. If more than 10% of the trajectory exceeds the distance tolerance, ionospheric processing is engaged.

In addition to *Automatic*, ionospheric processing can also be explicitly turned *On* or *Off*.

### Tropospheric Error State

Unlike ionospheric error, tropospheric error cannot be directly observed and removed using dual frequency measurements. This is because the troposphere is non-dispersive at GPS frequencies and affects L1 and L2 equally. GrafNav uses a Saastamoinen model to estimate the tropospheric delay at the base and remote. However regardless of what model is applied, tropospheric error is largely removed in differential processing as it is a correlated error on short baseline lengths.

As the baseline length increases (to ~150 km or more) and/or where there is a significant height difference between the base and remote (~10,000 ft), residual tropospheric error can easily become the largest error source; reaching magnitudes as much as 30 cm in some cases.

In order to reduce the tropospheric error under these conditions, GrafNav leverages the ability of the Precise Point Positioning engine to observe the actual tropospheric delay at the base station. In PPP, tropospheric error is observed as an additional Kalman filter state. Hence, GrafNav first solves the actual tropospheric delay at the base station and then, as a second step, applies this information in differential processing.



The advanced tropospheric state can reduce residual tropospheric significantly, further preserving GNSS post-processing accuracy as baseline length increases.


The *Automatic* setting will automatically engage this option if 10% or more of the unprocessed positions are over 150 km from the base station OR if 10% of the survey is detected as being flown in excess of 3000 m, or 10,000 feet above the base stations. In both cases, a minimum of two hours of data is required for this option to automatically engage, as it can perform poorly on short data sets where there is insufficient data to provide a well converged solution.

In addition to *Automatic*, the tropospheric error state can be explicitly turned *On* or *Off*.

### Constellation Usage

GrafNav 8.60 supports GPS, GLONASS and BeiDou. Use of GPS data cannot be turned off, however the enabling or disabling of GLONASS and BeiDou constellations can be controlled here. If no measurements from GLONASS or BeiDou are detected, the constellation will appear disabled.

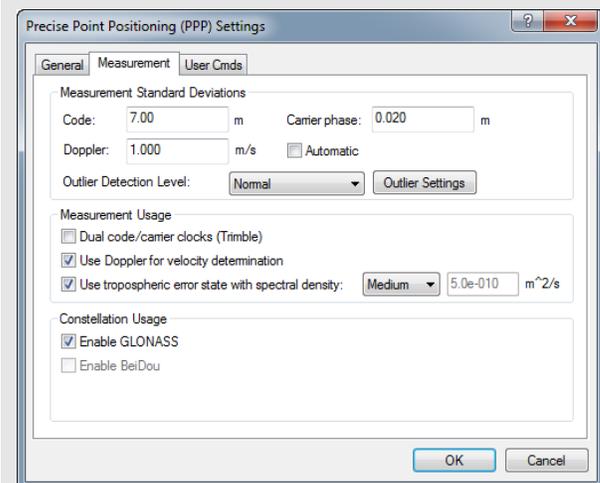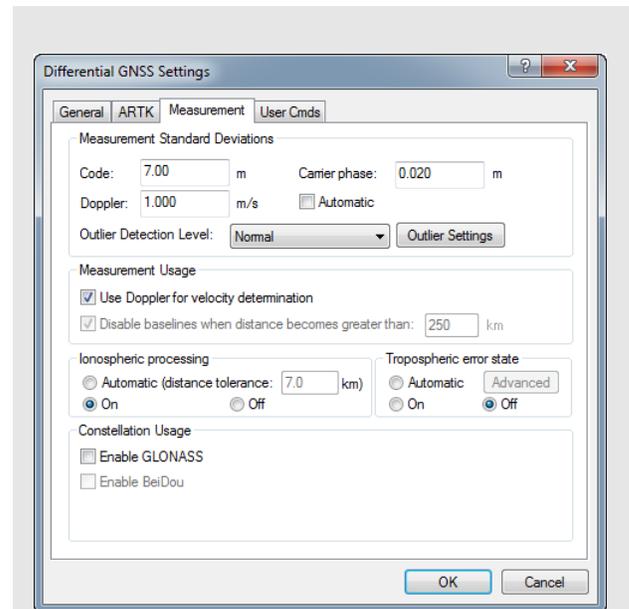



### **User Cmds**

This changes any command that is passed to GrafNav. It can be used to change commands that are set by the other option tabs, or set commands that are not handled by the other option tabs.

When a configuration file is loaded, all commands that are not handled by the other option tabs appear here. This includes commands that are not supported in the version of GrafNav being used. These commands can easily be deleted here.

## 2.5.2 Combine Solutions

After processing, forward and reverse solutions are automatically combined. This helps maximize solution accuracy through inverse variance weighting. The combined solution will much more heavily weight each solution when one has a low estimated error (for example, a fixed integer solution) and the other has a relatively high estimated error (such as is the case with a float solution).


Thus, the combined separation should contain the best of both forward and reverse solutions and an average of the results where the estimated errors are approximately equal.

The *Combine* dialog is accessed through *Process | Combine*. Since the forward and reverse solutions are automatically combined in GrafNav, the *Combine* dialog does not need to be used following forward/reverse processing. It should only be used if you have identified specific time ranges from forward or reverse processing that you want to omit from the combined trajectory. An example of this is where an incorrect ambiguity was obtained in one direction, which could not be remedied by changes to the processing options.

This dialog is more frequently used when comparing different modes of processing. For example, a GrafNav project can contain both PPP and differential solutions as each type of solution writes trajectory files with different extensions. This ensures differential and PPP solutions can exist in the same project without overwriting each other.

An easy way of comparing the combined differential and the combined PPP solution within the GrafNav environment is to load and combine both of them into the project at once. This is done by choosing the *Any two solutions* option and then *Combine*. You will be prompted to choose which two solutions to combine. If you choose the .cmb file and the .csp file, you will be combining the differential combined results (.cmb) and the PPP combined results (.csp). After combining, you can plot the difference in the solutions by viewing the *Combined Separation Plot*, which is accessible under *Output | Plot Results*.

However, before exporting ensure that either the differential (.cmb) or the PPP (.csp) solution is loaded, as the Export Wizard accesses whichever solution is presently loaded. One way of re-loading combined results is to choose *Differential GNSS Solutions* or *PPP GNSS Solutions* from this dialog and clicking the *Combine* button.

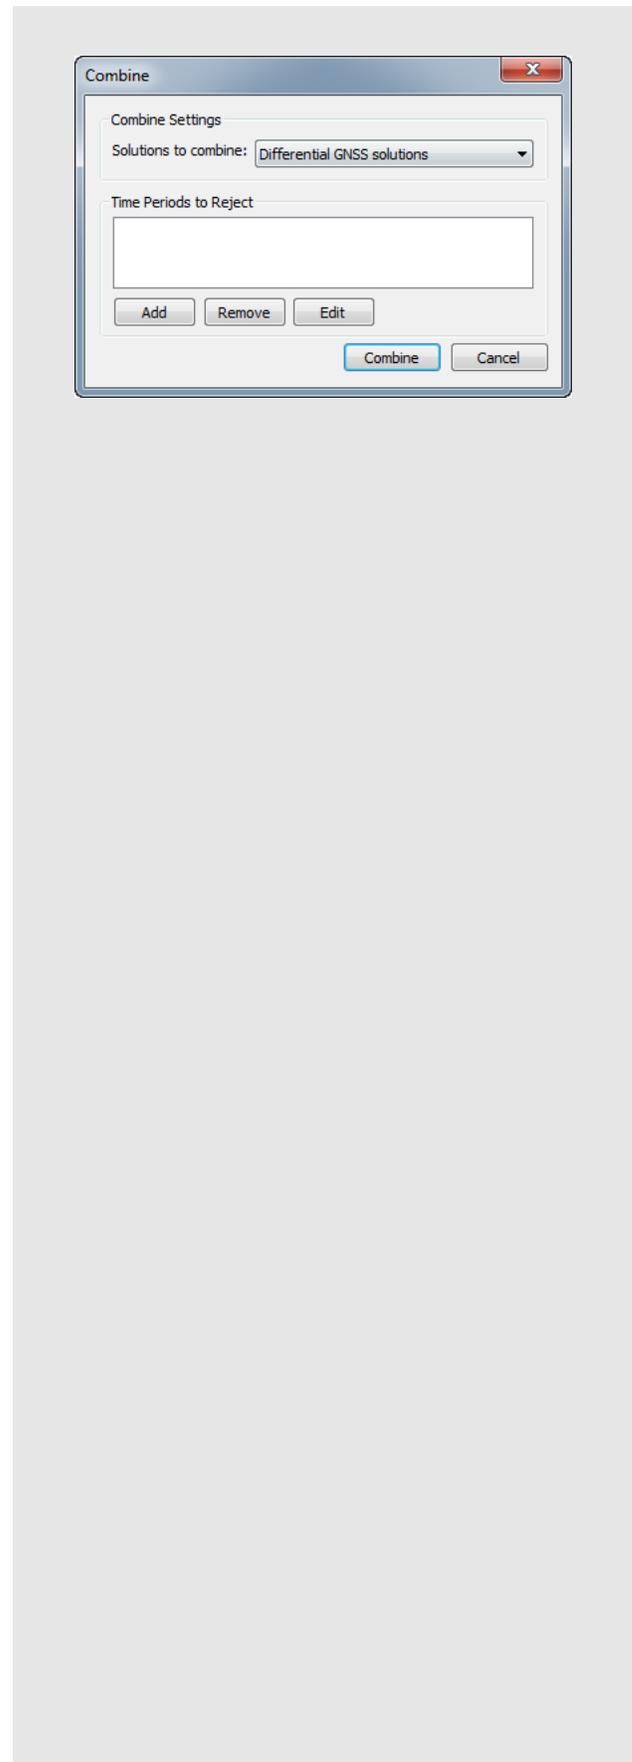

Station ID	Group	Distance	Datum
1LSU	CORS(IGS08)	0.1m	IGS08
1LSU	CORS(2011)	1.7m	NAD83(2011)
1LSU	CORS(CORS96)	1.7m	NAD83(CORS96)

## Select From Favourites

Precise coordinates for CORS, IGN and IGS stations are regularly maintained within GrafNav's manufacturer files. If downloading base station data from one of these networks, you can load the published coordinates using the *Select From Favourites* button in the master coordinate dialog. This returns a list of the closest stations to the coordinates loaded.

When selecting a station from favourites, be sure to note the available *Attributes to Apply* at the bottom of this dialog. This provides the ability to copy not only the position and datum information from the favourites, but also the station name, antenna properties (if available) and station velocities. If velocity is selected, the published velocities are applied to the published coordinates to update them to the epoch of data collection.

## 2.6 Settings Menu

### 2.6.1 Coordinate/Antenna

#### Master Station Settings

This option lets you modify the master station coordinates. Coordinates, datum and antenna information can be entered manually or loaded from the *Select From Favourites* button. The *Compute from PPP* button processes the base station data through GrafNav's precise point processor and reports the difference in coordinates between the values on the screen and the computed values. This can be an effective means of checking base station coordinates or in some cases establishing them. See [Section 2.3.6, Add Master File\(s\)](#) on page 25 for more information of the settings available.

#### Remote Settings

This option lets you customize the remote's antenna information. See [Section 2.3.7, Add Remote File](#) on page 27 for additional information.

## 2.6.2 Moving Base Options

Enable moving baseline processing if your base station is on a moving platform and you are interested in either a post-processed azimuth between the antennas and/or the local level vector.

Moving base applications may involve both antennas on the same vehicle or separate moving vehicles. Azimuth determination is typically of interest for the former, whereas the local level vector (relative position and velocity) is generally of interest in the latter.

When moving baseline processing is enabled, GrafNav cannot fix the base station position. Every processing epoch uses a different base station position, which is read from the GPB file. The absolute positioning accuracy of each instantaneous base station position is thus limited to the autonomous positioning accuracy of the receiver used. This is generally no better than 2 m horizontal and 5 m vertical.

Although the absolute positioning accuracy in moving base mode is poor, this is not of interest to most moving base applications. Only the relative position difference and/or azimuth between the antennas is typically required. When ARTK resolves carrier phase ambiguities in moving base mode, the relative positioning accuracy between base and remote is the same as in stationary base mode.

If moving base is enabled, choose from one of the four Azimuth determination options explained in the shaded box.

## 2.6.3 Datum

### Project Options

The processing datum is normally set from the master coordinate dialog when entering base station coordinates. If your base station coordinates are provided in a local datum however, such as NAD27, it is advisable to convert the base station coordinates to a global datum prior to processing, as only global datums should be used as processing datums.

The *Project Options* tab is used to convert input coordinates from one datum to another prior to processing. Note that the processing datum is relatively unimportant provided a global datum is used. This is because a datum transformation can also be applied when exporting results.

### Azimuth Determination Options

#### Off, no azimuth determination

Use this option if both antennas are on separate moving platforms and the azimuth between the antennas is not of interest (i.e. only the relative position and/or velocity).

#### On, use distance constraint in ARTK and engage ARTK if out of tolerance


Use this option if both antennas are fixed to the same moving platform and a post-processed azimuth is required. This option requires that you input the surveyed distance between GNSS antennas as it is used as a distance constraint in ARTK.




#### On, but compute only (don't use distance constraint at all)

Use this option if the surveyed distance between the antennas is not known, or is known to change significantly during the survey.

#### On, but only use distance constraint to engage ARTK if out of tolerance.

When this option is used, the distance constraint is not applied when resolving carrier phase ambiguities. Rather, it is used only to re-engage when the computed distance disagrees with the surveyed distance significantly (based on the standard deviation applied to the distance constraint).

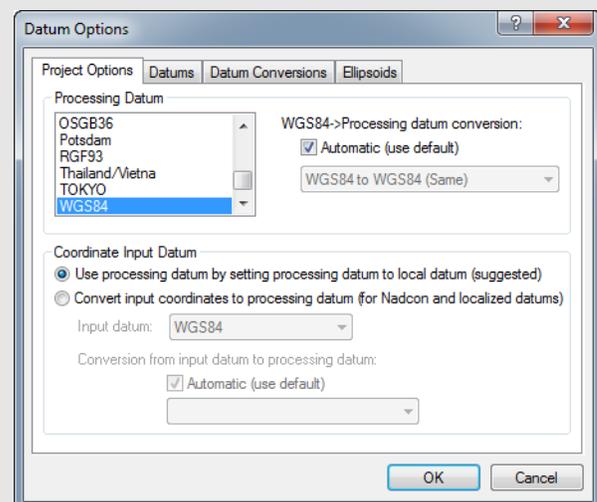

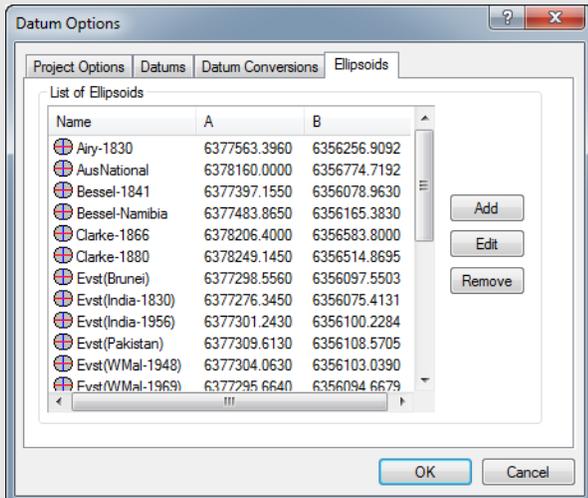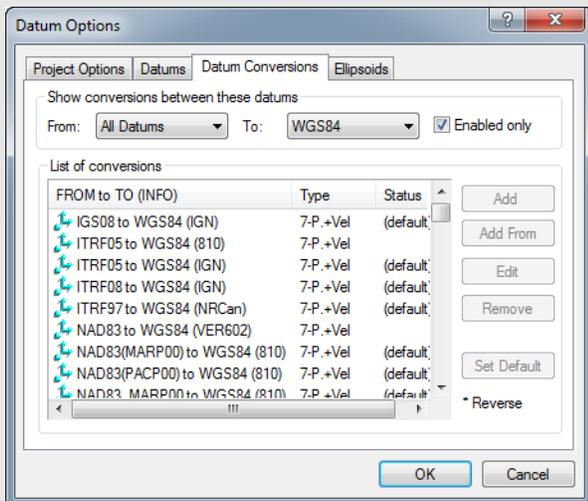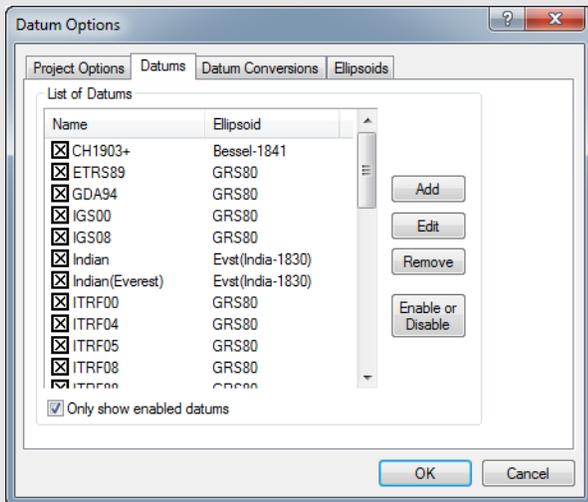

## Datums

This feature allows custom datums to be added, or existing datums to be enabled or disabled.

## Datum Conversions

This tab allows you to view, edit or add conversions between datums.

## Ellipsoids

This page allows you to view the  $a$ ,  $b$  or  $1/f$  values for a particular ellipsoid. You can also add new ellipsoids.

## 2.6.4 Grid

GrafNav supports several international and regional grids, such as UTM, US State Plane, British Grid, Irish Grid etc. Custom grids can also be defined by selecting *Define Grids* within the *Grid Settings for Coordinate Input* dialog.

Defining a grid allows the grid to be accessed by the Export Wizard. Base station coordinates can also be added directly in grid format as well.

GrafNav projects store grid information. Set up a grid for the following reasons:

- Master coordinates can be entered directly in a supported grid.
- The *Map Window* can plot in grid coordinates. See *Section 2.7.11, Show Map Window* on page 81 for more details.
- *Export Wizard* can use a defined grid for coordinate output. See *Section 2.7.5, Export Wizard* on page 74 for details.

New grid definitions can be added by clicking *Define Grid* or via *Tools | Grid/Map Projections | Define*. See *Section 2.8.7, Grid/Map Projection* on page 88 for more information.

## 2.6.5 Manage Profiles

The profile manager allows new profiles to be created or existing profiles to be edited. The profile manager can also be used to edit the GrafNav default settings or restore the factory default settings.

### Project/Profile Tools

#### *New from Project*

Creates a new CFG profile using the current project's settings.

#### *Update with Project*

Updates the processing profile with the current project settings.

### CFG Profile Tools

#### *Edit GNSS/PPP/IMU*

Brings up the processing settings menu to allow the selected profile to be modified.

#### *Rename*

Allows the profile to be renamed.

#### *Delete*

Deletes the selected profile.


#### *Copy*


Creates a copy of the currently selected profile.

- 
- Modifications to pre-loaded profiles are lost if software is re-installed.
- 

## 2.6.6 Compare Configuration Files

This feature allows you to compare the settings applied in two different configuration files. This utility scans both of the CFG files and creates a report outlining the differences found. This report is displayed in GrafNav's ASCII viewer.

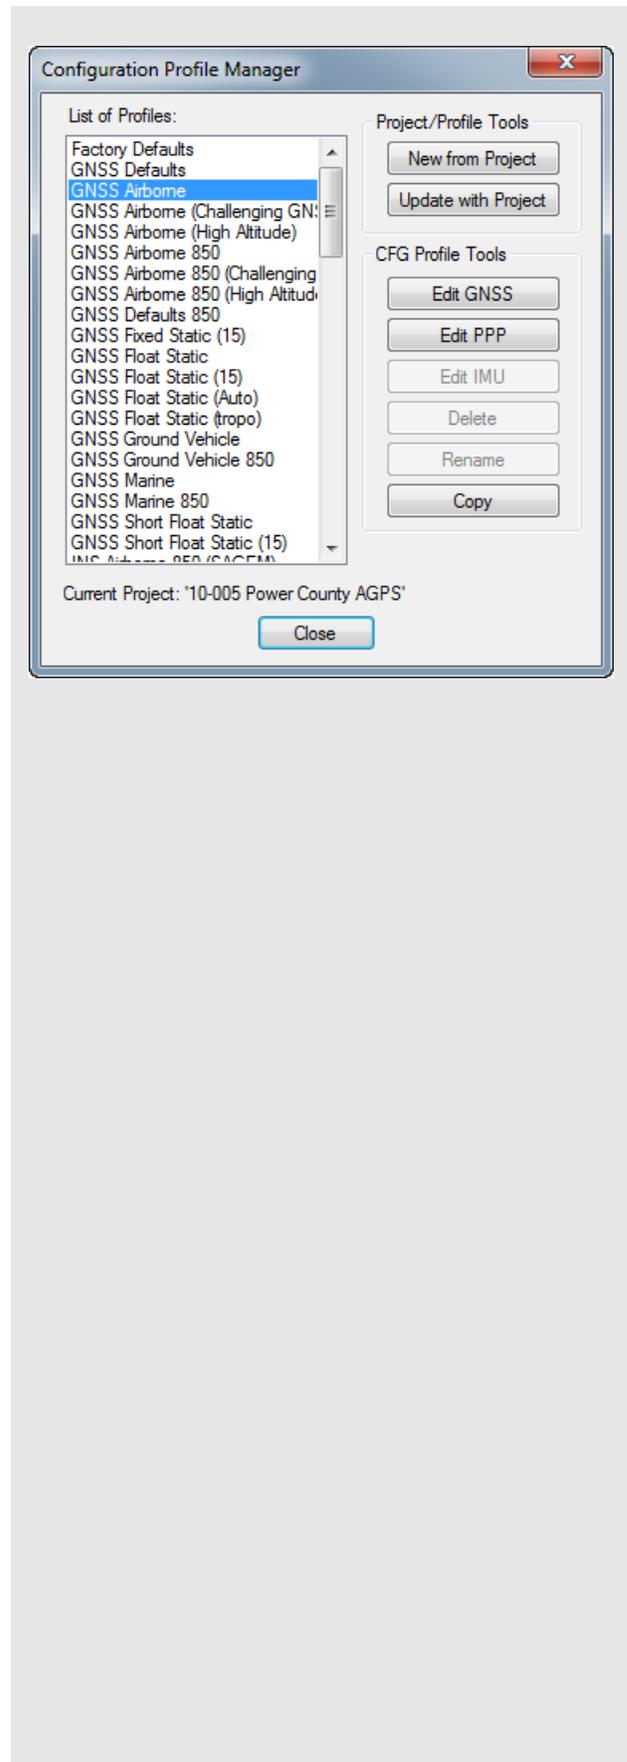

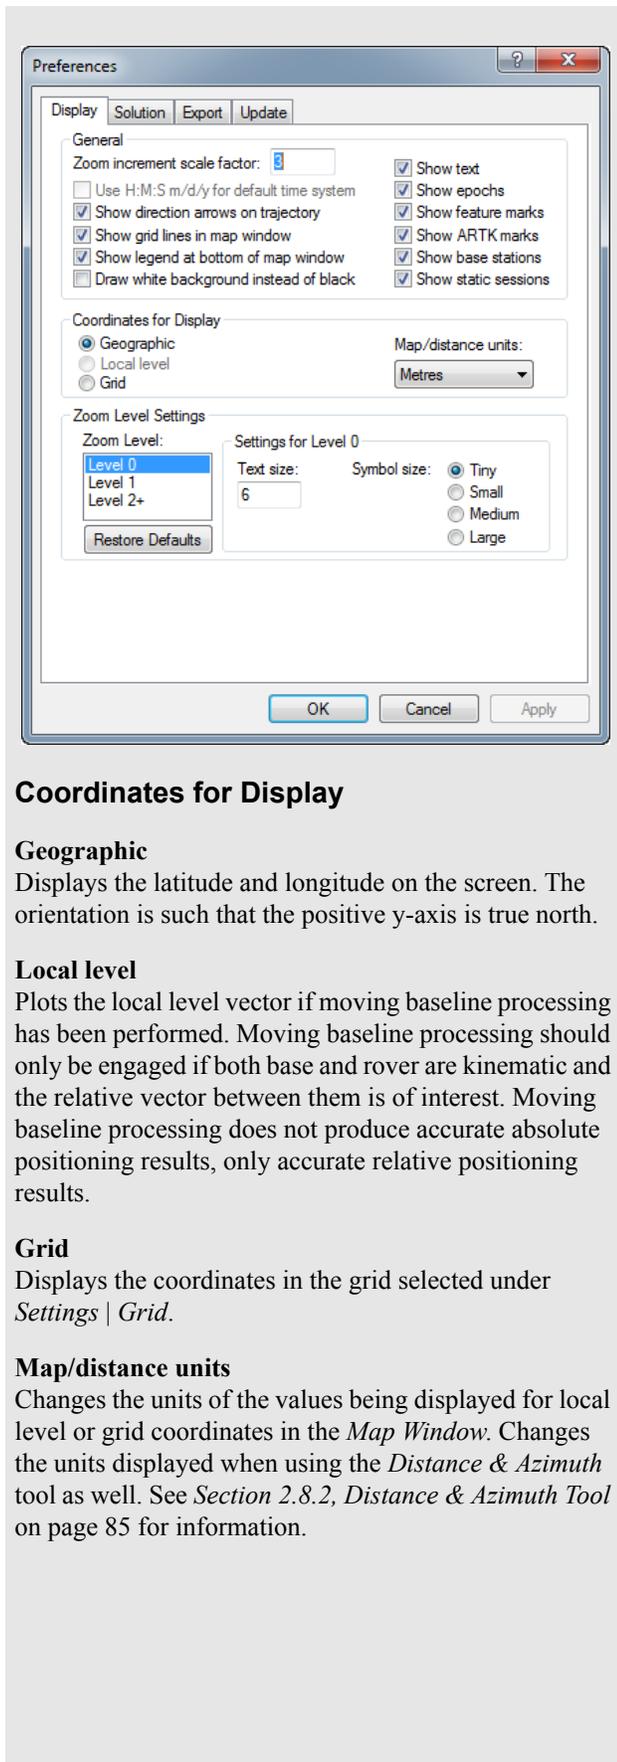

## Coordinates for Display

### Geographic

Displays the latitude and longitude on the screen. The orientation is such that the positive y-axis is true north.

### Local level

Plots the local level vector if moving baseline processing has been performed. Moving baseline processing should only be engaged if both base and rover are kinematic and the relative vector between them is of interest. Moving baseline processing does not produce accurate absolute positioning results, only accurate relative positioning results.

### Grid

Displays the coordinates in the grid selected under *Settings | Grid*.

### Map/distance units

Changes the units of the values being displayed for local level or grid coordinates in the *Map Window*. Changes the units displayed when using the *Distance & Azimuth* tool as well. See *Section 2.8.2, Distance & Azimuth Tool* on page 85 for information.

## 2.6.7 Preferences

### Display

This tab allows you to edit what is displayed on the *Map Window*.

#### General

The following settings are available:

#### *Zoom increment scale factor*

This setting affects the size of the displayed symbols and text when zooming. Higher values will result in smaller symbols and text.

#### *Show direction arrows on trajectory*

Shows arrows in the direction of travel on the map screen.

#### *Show grid lines in map window*

Displays grid lines. Grid lines help show the scale of the project. Depending on user preferences these can be disabled.

#### *Show legend at bottom of map window*

Toggles the display of the color-coded quality numbers legend.

#### *Draw White background instead of black*

Changes the background color of the Map Window from black to white.

Additionally, the display of all text, epochs, features, ARTK marks, base stations and static sessions can be enabled or disabled from the General tab.

#### Coordinates for Display

The settings are listed in the shaded box.

#### Zoom Level Settings

This set of options is based on the *Zoom Level* specified.

#### *Zoom Level*

**Level 0** is the main screen without being zoomed. Each level has its own set of default display options that can be changed to your preferences.

#### *Text Size*

Controls the font size. The *Show Text* option allows text to be seen on the screen.

#### *Symbol Size*

Controls the symbol display.

## Solution

### Solution Settings

#### ***Automatically load solution on project start***

Loads the combined trajectory when re-opening a project that has been previously processed.

### Processing

#### ***Default Datum***

Allows you to select a default processing datum for all GrafNav projects. This datum automatically appears when adding base station data in the *Master Coordinate* dialog, as well as within the *Process GNSS* dialog.

#### ***Antenna Correction Profile***

GrafNav 8.60 supports absolute antenna models. Absolute calibrations are provided by organizations such as the NGS (National Geodetic Survey) and IGS (International GNSS Service) in ANTEX format.

GrafNav installs ngs08.atx (provided by the NGS) to the *manufacturer* directory. See the *Update* tab within *Settings | Preferences* to locate this directory if needed. Absolute calibration files are regularly updated by the organizations that provide them, and thus Waypoint includes the latest version in regular updates to all of GrafNav's *manufacturer* files. Provided an internet connection, GrafNav will check the NovAtel server on a bi-weekly basis to ensure these files stay up to date.

Although GrafNav will only include, and will only maintain, ngs08.atx, a user can download any ANTEX files (such as IGS08.atx or IGS05.atx) required and add them manually to the *manufacturer* directory. Any file with a \*.atx extension is available for selection from this pull-down menu and if selected will become the source of absolute antenna models.

#### ***Process forward/reverse directions simultaneously***


This feature improves processing speed considerably for computers with dual core or Xeon processors.

#### ***Perform smoothing automatically***

This feature is disabled in GrafNav as it is applicable only to Inertial Explorer.

#### ***Verbose messaging mode***

Enabling this option will result in all processing messages being written to the processing windows. If disabled, only high priority messages, such as those concerning measurement errors and ARTK fixes will be displayed. It should be noted that all messages will be written to the Message Log files regardless of this setting.

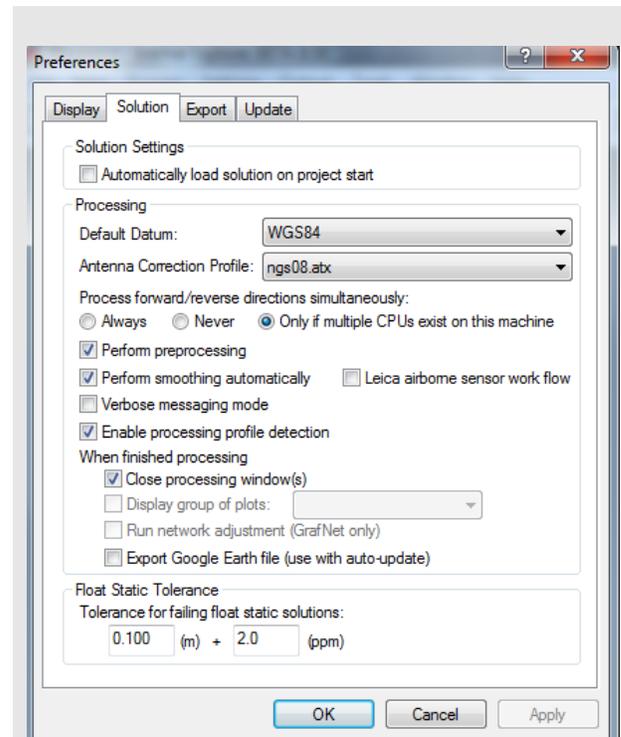

### When finished processing

#### ***Close processing window(s):***


Closes all processing windows after completion.

#### ***Display group of plots:***

If you have defined a group of plots under *Output | Plot Results*, then you may select it here for automatic display. See *Section 2.7.1, Plot Results* on page 66 for help creating a group of plots.

#### ***Export Google Earth file:***

The software writes a KML/KMZ file to the *HTML* folder, which is located in the project folder. If the *Output | Export to Google Earth | Create Auto-Update Entry* option has been used, then Google Earth updates the new trajectory.

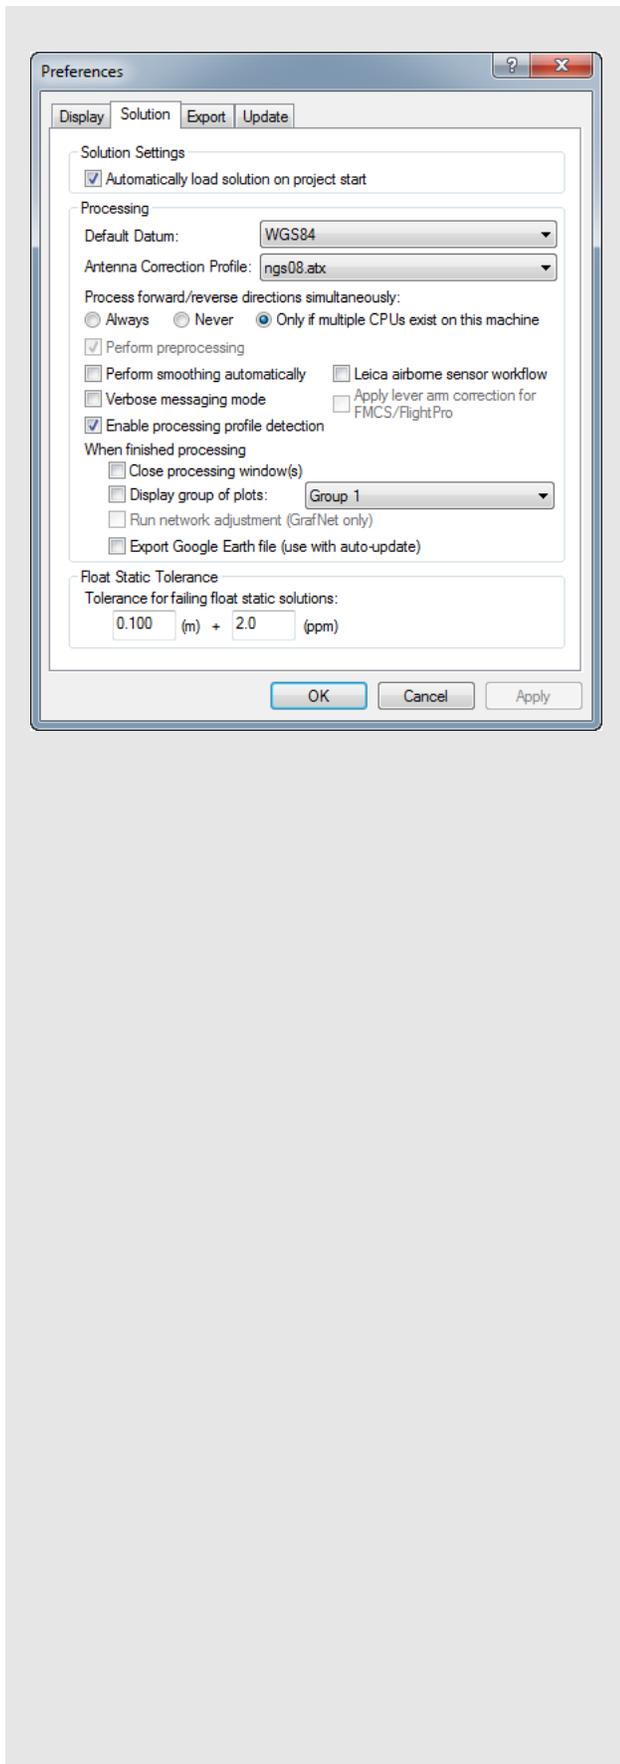

### ***Enable processing profile detection***

During the conversion of raw GNSS data to GPB, you have the option of having pre-processing checks performed. One of these checks includes trying to determine what type of application/environment the data was collected in. When this option is enabled, the software will use this information to automatically select the best processing profile. The profile can be overridden regardless of this setting.

### ***Leica airborne sensor work flow***

This option enables the Leica IPAS workflow within Inertial Explorer for FCMS and FlightPro users. Engaging this option affects the folder structure created during decoding and processing and will auto-generate a \*.sol file after processing.

### ***Apply lever arm correction for FCMS/FlightPro***

When using Leica airborne sensor workflow, lever arm correction is required with certain FCMS/FlightPro versions. When the *Leica airborne sensor work flow* check box is selected, Inertial Explorer detects the need for the correction based on the data from the flight and corrects the lever arm automatically, showing the corrected settings in the user interface. It is recommended to leave this check box selected.

### **Float Static Tolerance**

Allows you to adjust the pass/fail settings for float static solutions. These options can be adjusted for specific applications where high accuracies are not required or expected, such as when collecting static sessions in challenging GNSS signal environments.

## Export

### Google Earth

#### ***Hold epochs and events to ground***

This option plots the trajectory on the ground in Google Earth. This option is recommended for ground surveys.

#### ***Limit epoch output to interval***

You can reduce the density of the output trajectory by specifying an interval here. This helps reduce file size and loading times in Google Earth.

#### ***Compress KML to KMZ file***

Due to their ASCII nature, KML files can be quite large. The KMZ format allows for a much smaller file without losing any information.

#### ***Optimize output for trajectory comparison in GE***


By default, the software overwrites the same project KML/KMZ file, while using the Quality Number to determine the color of the epochs used for display purposes. However, if you wish to compare multiple solutions for the same trajectory, enable this option to ensure that a new output file is written. To make it easier to distinguish between each solution in Google Earth, each new output file is assigned its own specific color. That is, the Quality Number is ignored. In addition, a new folder is created if the *Run* descriptor has changed.

#### ***Use concise epoch description for lower memory usage***

The default output files written by the software contain a lot of additional information, which can really slow down Google Earth. If this information is not needed in the output file, a more concise output file can be written.

#### ***Output MSL height for better compatibility with GE elevation data, using***


Google Earth expects orthometric (mean-sea-level, MSL) height values. As such, if *Hold epochs and events to ground* is disabled, the plotted height may be below ground level (if the geoid undulation is negative) and the object is at ground level. Use the *Browse* button to locate the Waypoint Geoid (WPG) file. Other geoid formats are not supported. The EGM96 geoid, which covers the entire world, has sufficient accuracy for this purpose.

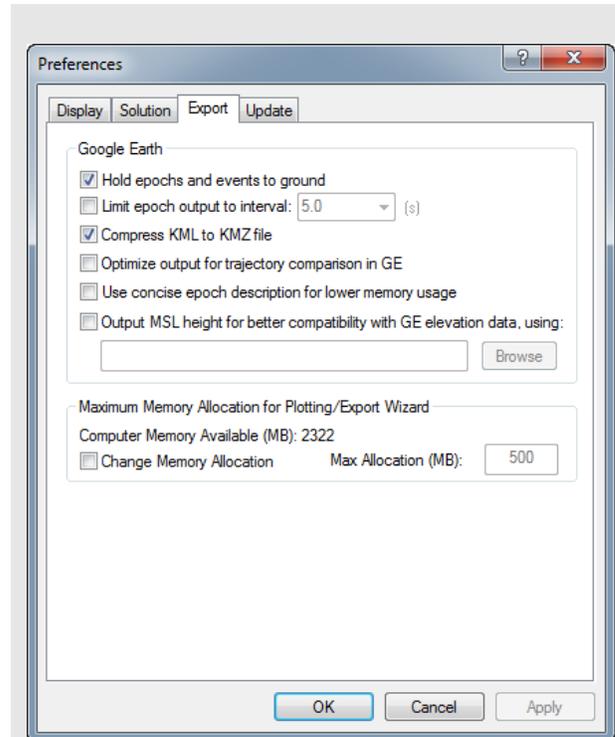

### Maximum Memory Allocation for Plotting/Export Wizard

#### ***Change Memory Allocation***

The software allocates memory up to the specified maximum based on the number of epochs in the project. This value is dependent on the length of the data collection as well as the data rate. If the software cannot allocate enough memory to accommodate the entire trajectory, it pages to disk when plotting or exporting and may degrade performance. Do not lower this value unless your computer lacks memory.

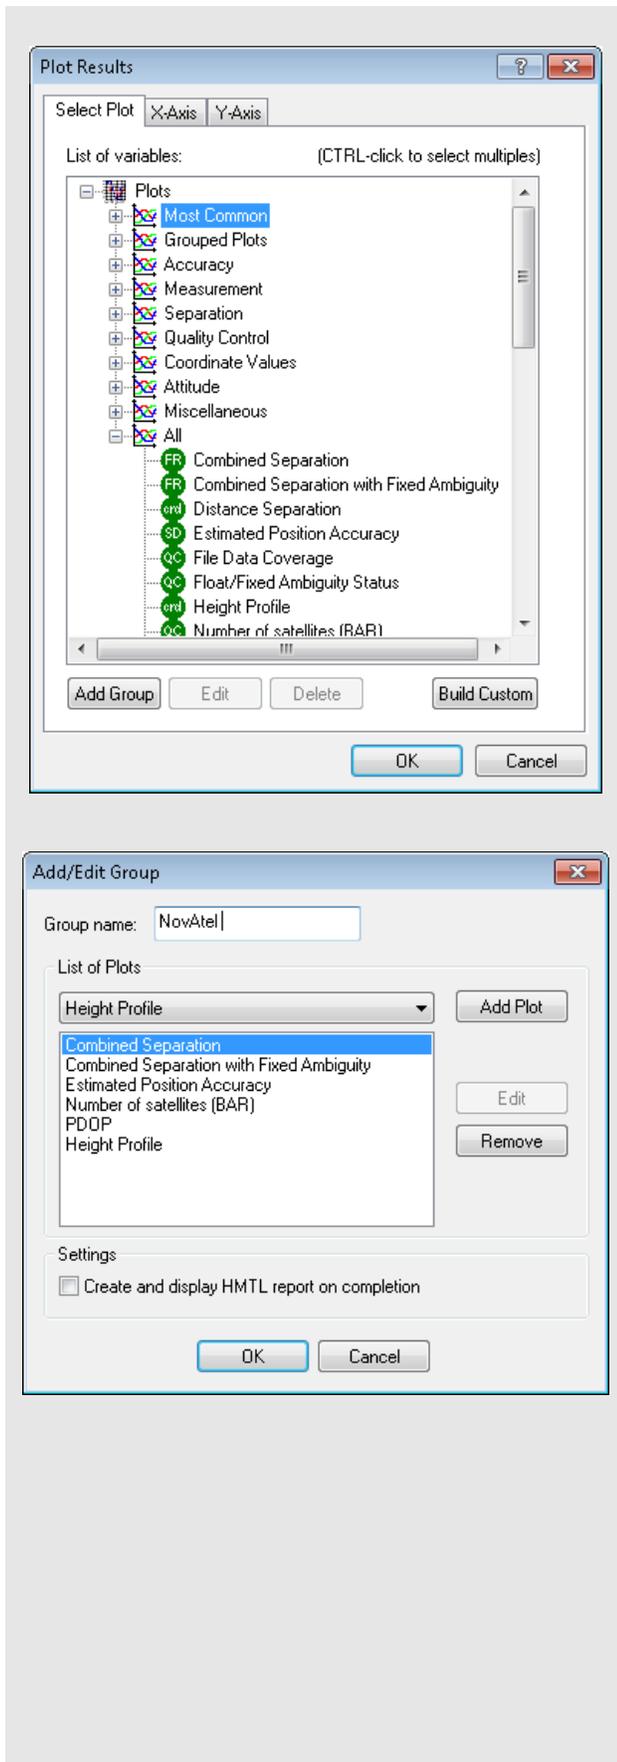

## 2.7 Output Menu

### 2.7.1 Plot Results

GrafNav provides access to over 40 plots that are helpful in quality control. When expanding the main *Plots* branch, you will see that the plots are sorted within sub-groups, such as *Accuracy*, *Measurement*, *Coordinate Values* and others. The *Most Common* group will appear empty immediately after you install the program for the first time, but over time will be populated with up to 10 of your most commonly accessed plots. To see all of GrafNav's plots, expand the *All* group.

Within each group, plots appear as one of three colors: green, blue or black. The green plots always appear above the blue plots, and the blue plots always appear above the black plots.

The color coding scheme is similar to a ski hill, where green plots indicate beginner, blue plots indicate intermediate, and black plots indicate advanced. These three main categories do not indicate the type of user that should access these plots. They indicate that the green/beginner plots are more frequently accessed than the blue/intermediate and so on. Therefore beginner and advanced users will more frequently access the green plots than any other.

Many plots support different units. For example, you can plot the *Combined Separation*, which shows the difference between forward and reverse solutions in metres or feet. The *Distance Separation*, or baseline distance, can be plotted in units of kilometres, miles or metres. In order to change units on a plot, first select the plot from the list and then access the *Y axis* tab. This tab has a *units* pull down list which shows supported units for the selected plot. After changing units, your preference is remembered for all projects.

Individual plots can be viewed by double clicking a plot in the list, or by selecting the *OK* button after selecting a plot. Multiple plots can be accessed simultaneously by using the *Ctrl* key prior to selecting the *OK* button. Further, if a group of plots has been created using the *Add Group* button, all plots within the group are plotted simultaneously.

#### Add Group

You may wish to add a group of plots for the purpose of plotting the entire group simultaneously. For example, if after processing you always want to see the *Combined Separation*, *Number of Satellites (BAR)*, *PDOP* and *Estimated Position Accuracy*, these four plots can be added to a custom group.

When you click the *Add Group* button, a second dialog appears that allows you to provide the group a name and add plots to your group. There is also an option for launching an HTML report that includes the grouped plots and the Map Window.

## Build Custom

This option allows plots to be added to the *Custom* group. Adding the plots you most commonly access here makes them more accessible than choosing them out of other groups, or from the *All* list.

The difference between creating a *Grouped plot* and adding plots to the *Custom* group is that grouped plots will all be plotted simultaneously, whereas plots to the *Custom* list can still be accessed individually.

## Plot Options

When you right click on a plot, a menu of options appears.

### Properties

Allows access to many settings, like X and Y axes ranges and the display format for the latter. The plot titles, along with the X and Y axes labels, can be edited here. Other options regarding the displaying of camera marks and the usage of thick plotting lines are available too.

### Copy

Copies the plot to the clipboard as a bitmap (BMP), allowing you to paste the image into another application such as Microsoft Word or Paint.

### Copy (without title)

Copies the plot to the clipboard as a bitmap (BMP) without the plot title.

### Save to HTML

Copies a BMP version of the plot into an HTML file, which opens upon completion. The HTML and BMP files are saved to the project folder under a directory called *HTML*.

### Refresh

Reloads the selected plot.

### X -Axis (Time)...

The options are described in the shaded box.

### Y-Axis (Value)...


The options are described in the shaded box.

### Go to Time...

Gives you the option of finding the nearest available time in the forward or reverse message logs, or finding the nearest epoch on the *Map Window*.

### Compute Statistics for...

Calculates many useful statistics for either the entire valid processed time range, or, if it has been adjusted, only the time range being plotted. Statistics include RMS, average, maximum and minimum. Note that this feature is only available for appropriate plots.

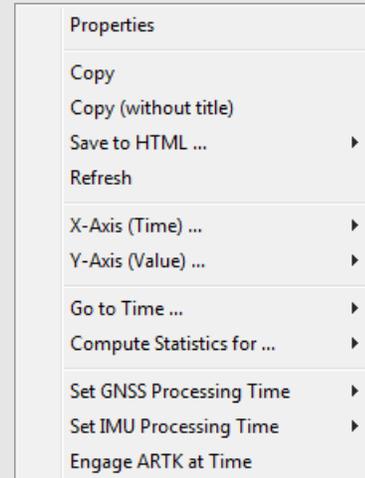

### X -Axis (Time)...

#### *Auto-scale*

Shows the entire time range of the data.

#### *Set Minimum*

Makes the current time the X-axis minimum.

#### *Set Maximum*

Makes the current time the X-axis maximum.

#### *Select X-Range*

Previously used settings of the X-axis are stored here.

#### *Apply to All*

Scales the X-axis of the other opened plots to facilitate analysis.

### Y-Axis (Value)...

#### *Select Y-Range*

Previously used settings of the Y-axis are stored here.

#### *Apply to All*

Scales the Y-axis of the other opened plots to facilitate analysis.

- In order to apply the Y-axis to all plots, the maximum and minimum values must be manually specified, that is, not auto-scaled.

#### *Auto-scale*

Shows the entire value range of the data.

#### *Set Minimum*

Makes the current value the Y-axis minimum.

#### *Set Maximum*

Makes the current value the Y-axis maximum.

**Set Start Processing Time**

Makes the selected time the start time for processing.

**Set End Processing Time**

Makes the selected time the end time for processing.

**Engage ARTK at Time**

Engages ARTK at the selected time.

**2.7.2 Common Plots**

Table 1, *Common Plots* contains a list of common plots that are available through the *Plot GPS* window.

**Table 1: Common Plots**

Plot	Description
<b>Accuracy</b>	
Estimated Position Accuracy	Plots the standard deviations of the east, north and up directions versus time for the solution. The total standard deviation with a distance dependent component is also plotted. View this plot for individual forward or reverse solutions and losses of lock.
<b>Measurement</b>	
RMS – C/A Code	Plots the RMS of the double differenced C/A residuals for all satellites used in the solution. Under good conditions, this indicates C/A measurement accuracy. High C/A residuals often indicate high multipath. Also plotted is the standard deviation applied to the C/A measurements within the Kalman Filter. This value comes in part by the a-priori value set in the <i>Measurement</i> tab. In dual frequency carrier phase processing, where ARTK is used to resolve integer carrier phase ambiguities, the C/A code does not heavily influence solution accuracy. Thus the standard deviation assigned to the measurements is not important, provided it is not overly optimistic. Adjusting the C/A measurement standard to a value more representative of the size of the actual residuals (while still being conservative) will benefit float solution convergence.
(Sheet 1 of 5)	

**Table 1: Common Plots (continued)**

Plot	Description
RMS – Carrier Phase	<p>Plots the RMS of the double differenced carrier phase residuals for all satellites used in the solution. Under good conditions and with a short baseline, it is a good indication of carrier phase measurement accuracy. Carrier phase noise increases as the baseline length grows due to factors such as residual ionospheric error. Further, if ionospheric processing is used, the carrier phase noise will increase noticeably (although it should still be cm level). Thus, while values at or below 1 cm may be typical for short baselines (1-2 km), values of 2-4 cm are typical for longer baselines (10-40+ km).</p> <p>If large differences are found in the <i>Combined Separation (fixed)</i> plot, the RMS of the carrier phase can be a very helpful plot in determining which direction (forward or reverse) the incorrect ambiguity occurred. When doing this, ensure to load each solution (forward and reverse) separately prior to plotting the carrier phase RMS, in order to ensure you are viewing the carrier phase residuals for each direction separately. Large ramping trends are strong indications of incorrect ambiguities.</p>
RMS-L1 Doppler	<p>Plots the RMS of the double differenced Doppler residuals for all satellites in the solution. GrafNav uses Doppler to compute instantaneous velocity.</p> <p>Also plotted is the measurement weighting applied to the Doppler measurements within the GrafNav Kalman filter. As the quality of the Doppler measurements varies very significantly between receiver manufacturers, GrafNav applies a conservative default measurement weight. Therefore it is common to see that the actual Doppler residuals are much lower (better) than the weight applied in our filter. This will only cause the estimated velocity errors to be much higher than the actual velocity accuracy.</p> <p>Some receivers output such noisy Doppler values (on the order of 5 m/s) that it will actually cause Kalman Filter resets, significantly degrading positioning accuracy. Thus if you see very large residuals in this plot, we recommend disabling Doppler from the <i>Measurement</i> tab of the GNSS processing options. When doing this, velocity is not derived from Doppler but rather through a carrier phase model.</p>

(Sheet 2 of 5)

Table 1: Common Plots (continued)

Plot	Description
Satellite Lock – Cycle Slips	<p>This plot launches a dialog that provides access to the L1 and L2 cycle slip plots for all GPB files within the project, or a user defined GPB file.</p> <p>Each satellite in the GPB file is plotted as a function of time and is color coded by elevation. See the bottom of the plot for a legend. Cycle slips for individual satellites are represented as a vertical red tick mark on the plot.</p> <p>It is normal for cycle slips to occur on low elevation satellites (&lt; 10 degrees) due to signal blockages or due to attenuation by the GNSS antenna.</p> <p>Cycle slips on high elevation satellites may be expected if surveying in a challenging GNSS signal environment and are thus not necessarily an indication of a problem. However, if the plot shows many cycle slips on L1 or L2 in aerial survey applications where good signal tracking is expected, it can help diagnose receiver or antenna problems that can significantly limit post-processing performance.</p> <p>If you are getting poorer than expected post-processing performance, checking the quality of L1 and L2 signal tracking at the remote and base stations is a good first step in determining the cause.</p>
Individual Satellite Statistics	Shows satellite code residuals, phase residuals, elevation angles and C/NO values for individual PRNs.
<b>Separation</b>	
Combined Separation	<p>Plots the north, east and height position difference between any two solutions loaded into the project. This is most often the forward and reverse processing results, unless other solutions have been loaded from the <i>Combine Solutions</i> dialog.</p> <p>Plotting the difference between forward and reverse solutions can be very helpful in quality checking. When processing both directions, no information is shared between forward and reverse processing. Thus both directions are processed independently of each other.</p> <p>When forward and reverse solutions agree closely, it helps provide confidence in the solution. To a lesser extent, this plot can also help gauge solution accuracy.</p> <p>Large differences in the combined separation plot may be a result of different levels of solution convergence and thus not indications of problems. Thus it is important to also consider solution status (fixed/float) when evaluating forward/reverse differences. This is why the <i>Combined Separation with Fixed Ambiguity</i> plot can sometimes be more helpful.</p>
(Sheet 3 of 5)	

**Table 1: Common Plots (continued)**

Plot	Description
Combined Separation with Fixed Ambiguity	<p>Similar to the <i>Combined Separation</i> plot, however only the position differences between forward and reverse processing are plotted where both solutions have fixed integer ambiguities.</p> <p>Fixed integer solutions are associated with high accuracies (cm, or cm-level accuracies depending on other factors). Knowing this, there is an expectation of cm level differences between forward and reverse fixed integer solutions. If large differences (decimetre or metre level) are obtained, an incorrect ambiguity was very likely obtained in one or both directions.</p> <p>In this event, loading each solution into the project individually and plotting the <i>RMS - Carrier Phase</i> can be useful in determining in which processing direction the problem occurred. See the description for the <i>RMS - Carrier Phase</i> plot for more information.</p>
<b>Quality Control</b>	
PDOP	<p>PDOP is a unit less number which indicates how favorable the satellite geometry is to 3D positioning accuracy. A strong satellite geometry, where the PDOP is low, occurs when satellites are well distributed in each direction (north, south, east and west) as well as directly overhead.</p> <p>Values in the range of 1-2 indicate very good satellite geometry, 2-3 are adequate in the sense that they do not generally, by themselves, limit positioning accuracy. Values between 3-4 are considered marginal and values approaching or exceeding 5 can be considered poor.</p> <p>If PDOP is very poor in your survey, try reprocessing with a lower elevation mask (however care should be taken when lowering this value below 10 degrees).</p>
Float/Fixed Ambiguity Status	<p>This plot indicates, on an epoch-by-epoch basis, whether a fixed solution was achieved or if only a float solution is available. If both forward and reverse solutions achieved a fix, the plot shows a value of 2. If either the forward or reverse achieved a fix, but not both, a value of 1 is plotted. If neither direction achieved a fix, a value of 0 is plotted.</p> <p>This plot can be helpful to view in conjunction with the <i>Combined Separation</i> plot, as it will help determine if large values in the forward/ reverse separation are expected or not, depending on solution status in each direction.</p>
Number of Satellites (BAR)	<p>Plots the number of satellites used in the solution as a function of time. The bar plot displays the total number of satellites (GPS and, if present, GLONASS and BeiDou). It does not distinguish between how many satellites are tracked from each constellation.</p>
(Sheet 4 of 5)	

**Table 1: Common Plots (continued)**

Plot	Description
Number of Satellites (LINE)	Plots the number of satellites used in the solution as a function of time. The number of GPS satellites, GLONASS satellites, BeiDou satellites and the total number of satellites are distinguished with separate lines.
File Data Coverage	Plots the coverage of each GPB file in the project, or a user specified GPB file, as a function of time. This plot indicates whether the data has been converted as static or kinematic (by different color codes) and shows the presence of any detected complete losses of carrier phase lock by vertical bars. This plot is useful in determining whether any base station data does not overlap with the time range collected by the remote receiver.
<b>Coordinate Values</b>	
Distance Separation	This plot shows the distance between the master and remote. For multi-base distance separation, see <i>Section 2.7.3, Plot Multi-Base</i> on page 73.
Height Profile	Plots the ellipsoidal height of the remote as a function of time.
Velocity Profile	Plots the north, east and up velocity. Also plots the horizontal speed.
(Sheet 5 of 5)	

### 2.7.3 Plot Multi-Base

Multi-base plots are available if more than one base station has been added to your GrafNav project. In this case, the multi-base plots are often more helpful than the main plots, as they distinguish results from each baseline.


The multi-base plots contain many of the same plots as the main plotting options and therefore only the plots unique to multi-base are described in the following table.


**Table 2: Common Multi-base Plots**

Plot	Description
<b>Separation</b>	
Carrier Separation	One common reason for poor multi-base results is biased base station coordinates from one or more base stations. This plot is helpful in determining which base station is the outlier, if only one exists. <i>Carrier Separation</i> plots the difference between the multi-base position as processed using data from all base stations and a least-squares based solution using the carrier ambiguities for each base station. If the measurements from one base station are affected by a bias, such as due to incorrect base station coordinates, it should be clearly shown in this plot.
Code Separation	Similar to <i>Carrier Separation</i> , however the position computed in the least squared solution, which is compared against the processed multi-base solution, is derived on code measurements only (not solved carrier phase ambiguities). Thus, this plot attempts to show the same thing as the carrier separation, but is often less helpful due to the accuracy difference between code and carrier measurements.
Effective Baseline Weighting	Plots the relative weighting applied to each baseline. This is largely dependent on the distance to each base station.
<b>Quality Control</b>	
Number of Baselines	Shows the number of base stations used as a function of time.

### 2.7.4 Plot Master / Remote Satellite Lock

This option displays both the L1 and L2 *Satellite Lock – Cycle Slips* plot for all the master and remote files in the project. See *Table 1, Common Plots* on page 68 for more information regarding this plot.

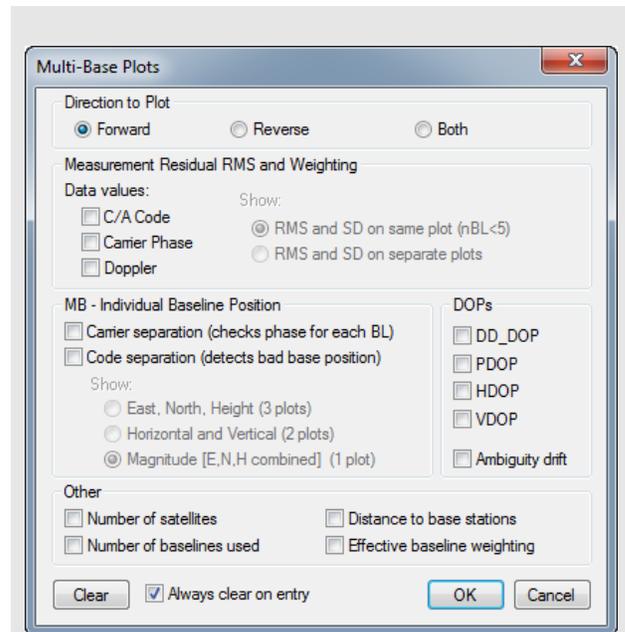

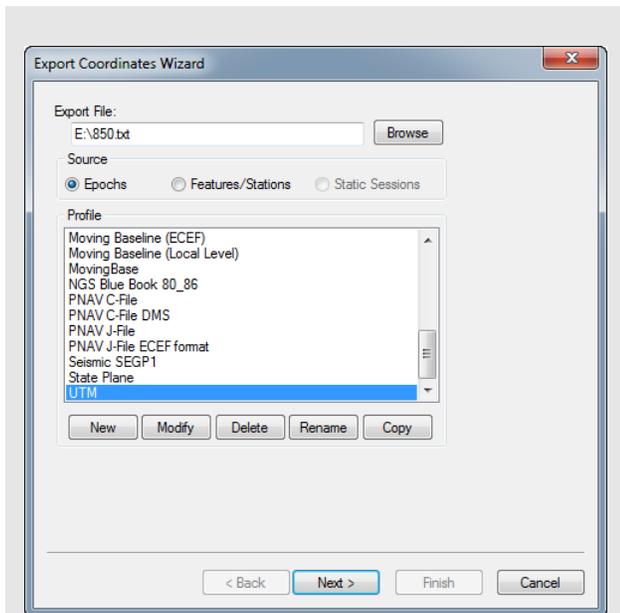


## How to create a new Export Wizard profile

1. Click the *New* button and type a unique name for the profile.  
Alternatively, it may be quicker to modify a copy of an existing profile that contains most of the variables required.

2. In the *Define Profile* window, add the desired variables from the *Source Variables* list. All source variables are organized under various headings from a pull down list.

After selecting a variable, click *Add* to add the variable to the bottom of the list or *Insert* to add the variable above the highlighted variable in the list. See *Table 7, List of Output Variables* on page 181 for a list of variables available for output.

3. After you are finished adding all the necessary components of the profile, click the *OK* button to save the profile.

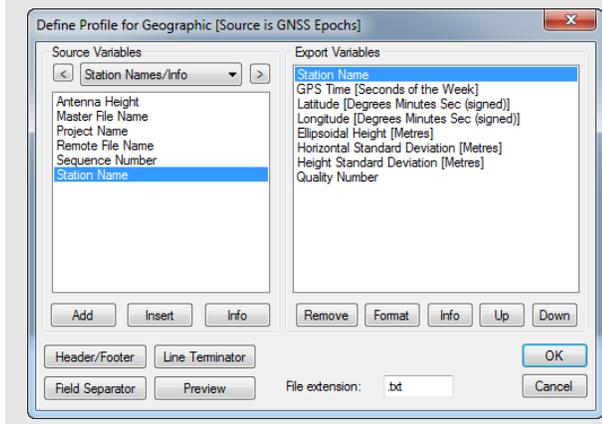

## 2.7.5 Export Wizard

GrafNav's Export Wizard facilitates customized ASCII exporting of processed results. Several manufacturer profiles are included with the installation, however they can be edited and new profiles can be created.

When creating or editing an export profile, you can choose from over 150 source variables. Units, precision, column width, field separators, and header/footer information can all be customized.

You can choose to export all processed epochs, interpolated results for features/stations (such as camera marks) or static sessions. GrafNav will try to auto-detect which *Source* to use given the data in your project. For example, if more than 80% of the remote file is static, the *Source* will default to *Static Sessions*. If more than a handful of features are loaded into the project, the *Source* will default to *Features/Stations* as this is presumably the data of interest.

### Tips for creating an export profile

- To create a profile that does not have spaces between variable entries and the record is based on column width, follow these steps:
  1. Go to the *Define Profile* window.
  2. Click the *Field Separator* button.
  3. Select *None* under *Separation Character* to remove any field separators in the file.

---

☒ The same procedure can be used to have the output be space or comma delimited.


---

- To change the file by adding a header/footer of a specific format, the *Header/Footer* button in the *Define Profile* window allows you to add headers/footers from a predefined text file. If specific characters are needed to designate the start and end of a text file, strings of characters can also be added to the beginning and end of the file.
- For formats that require no decimal points to be shown in the file, like SEGP1 and Blue Book, the decimal points can be removed by going into the chosen variable, clicking the *Format* button in the *Define Profile* window, and enabling the *Do not print decimal point* option.
- If you need a text string label to designate the type of record being printed/read, for example, \$--GLL, \*81\*, open up the *Miscellaneous* variable category and add the *User Text String* variable. Change the format of the string by entering the text needed for the label and select the *Fixed Width* option if the format is dependent on column width.
- Review the *Header/Footer* button. You can put in your own header file and display datum/projections information, column descriptions and titles. A special character can also be inserted at the start of each header line making it easier for other software to skip past the header. At the bottom of the file, you can add errors/warnings of any problems that were encountered and processing summary information.

---

☒ *Table 7, List of Output Variables* on page 181 describes the many variables that you can include your output profiles. Not all variables are available for use with each source.

---

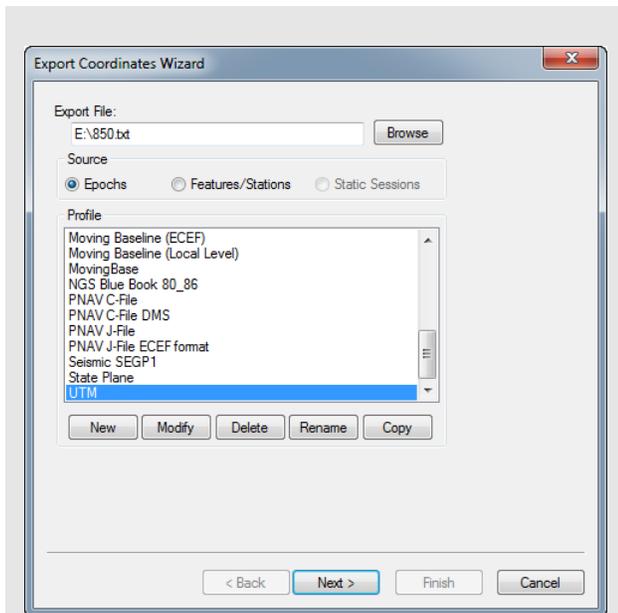

## How to use the Export Wizard

1. By default, the export file name is the same name and directory as the project file (.cfg), except with a .txt extension. The file name and directory of the export file can be changed using the *Browse* button.
2. Ensure the *Source* has been set correctly according to what you would like to export.

Choosing *Epochs* produces an output record for each common measurement epoch for the entire trajectory.

Choosing *Features/Sessions* exports results, linearly interpolated between the nearest two epochs, for any camera marks, features or stations loaded.

*Static Sessions* is accessible provided static sessions have been collected. Choosing this option exports the final post-processed (best converged) solution for each static session.

3. Choose an export profile and select *Next* to start the Wizard. Depending on the variables in the profile, the Wizard will prompt you for any needed information. For example, if the chosen export wizard profile contains orthometric heights, you will be prompted to locate a Waypoint geoid file (.wpg).
4. Click *Finish* on the last page of the Wizard. If *View ASCII output file on completion* was selected on the last page of the Wizard, the text file will open within GrafNav's internal ASCII viewer.

## Creating an Output File

The following is an example of the Export Wizard dialogs that appear when exporting *Epochs* using the *Geographic* profile.

Note that when exporting *Features* or *Static Sessions*, or when choosing a different export profile, you may see different dialogs. This is because the Wizard only prompts you for the required information according to your selections.

### Select Output Coordinate Datum

The first page of the Wizard provides an opportunity to apply a datum transformation during export. This is required if the datum you wish to export to is not the same as the processing datum.


### Filter Output/Estimated Accuracy Scaling


Results can be filtered using either GrafNav's quality numbers or combined (3D) standard deviation. An example of when it is useful to filter by quality number is when only fixed integer solutions are to be exported. In that case, apply a value of 1 for the quality number filter.

This dialog also provides an opportunity to scale the standard deviations output by GrafNav to a higher confidence interval. By default GrafNav outputs 1-sigma values. However due to the conservative measurement weighting applied in GrafNav to code, carrier, and Doppler measurements, they are not by nature overly optimistic.

### Select Epoch Sampling Mode

When exporting epochs, you can choose to export all processed epochs, reduce to a lower sampling rate, interpolate to a higher sampling rate, or even apply distance dependent sampling, if results are required at regular intervals.

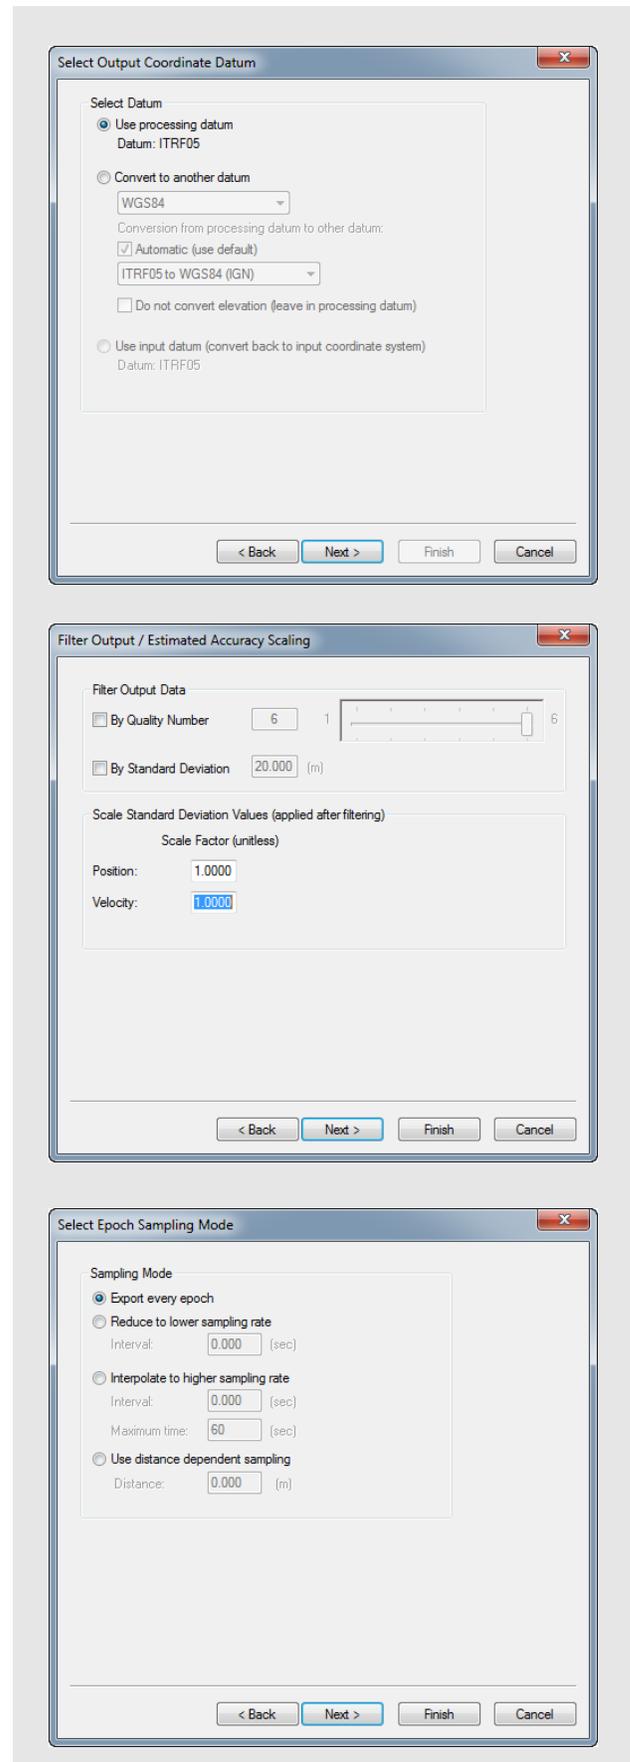

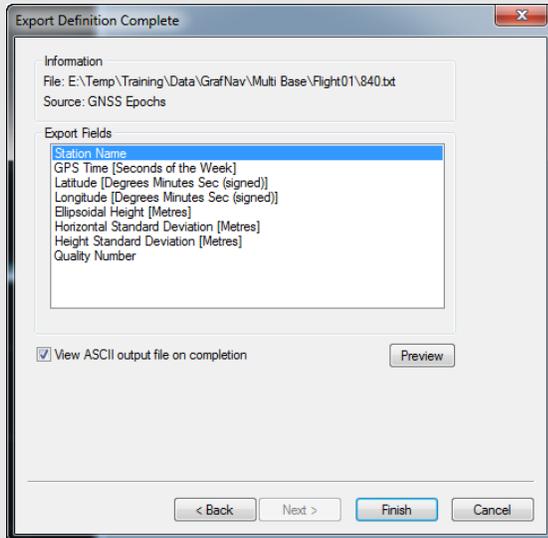

### Export Definition Complete

The last page of the Wizard provides a summary of the file name and path where the file will be written and the *Source* to be exported. The export variables within the profile are also summarized. Optionally, the output file can be viewed after export by selecting *View ASCII output file on completion*.

### 2.7.6 View Coordinates

Opens the last file generated by the Export Wizard in GrafNav's internal ASCII viewer.

### 2.7.7 Build HTML Report

Creates an HTML file containing a bitmap version of any plot that is currently open, including the Map Window. These HTML and BMP files are saved to the *HTML* folder contained within the project folder. The HTML file also contains information regarding the processing run(s) used to generate the plots.

### 2.7.8 Export to Google Earth

#### Export and View

Writes a KML/KMZ file to the HTML sub-directory and automatically opens it in Google Earth.

#### Export Only

Writes a KML/KMZ file to disk, but does not launch Google Earth.

#### Create Auto-Update Entry

Creates a network link within Google Earth which scans the project KML/KMZ file every 15 seconds for changes. This option can be used along with the *Export Google Earth file* option under *Settings | Preferences* to completely automate the writing and loading of KML/KMZ files. See *Export* on page 65 for more information.

For additional customizing of the Google Earth output files produced by the software, see *Export* on page 65.

## 2.7.9 Export Binary Values

When processing, GrafNav automatically writes a forward (.fbv) and reverse (.rbv) binary file which contains individual satellite statistics and other information. This data is not of interest to commercial users, but may be of interest in research or applications that involve specialized testing.

This option allows the contents of this file to be extracted from the binary file to text. It also provides the ability to extract data found in GPB files, such as the satellite elevation, signal to noise ratio and locktimes.

### Export Selection

#### *Type of data to export:*

Select whether values for each satellite should be exported or for each baseline (MB processing only).

#### *Processing direction:*

For processing values, forward or reverse values can be exported. For values found in the GPB files, such as satellite elevation, C/N0 and locktimes, the direction is unimportant.

#### *Time/Date format:*


A number of time outputs are possible. See *Section 2.7.5, Export Wizard* on page 74 for more information on each format


#### *File name:*

Displays the name of the file.

For GPB based values like *L1 C/N0* and *L1 Locktime*, select whether to export the data from the base or rover files.

See *Section 2.7.5, Export Wizard* on page 74 for a description of the available individual export values.

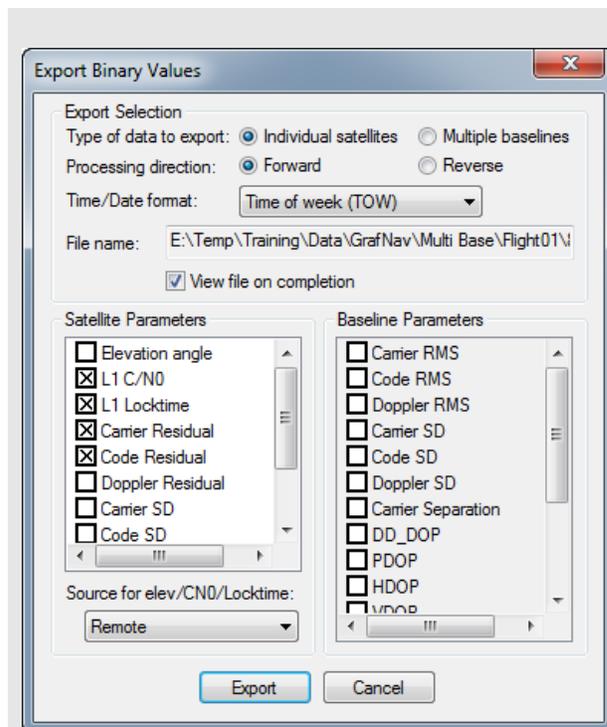

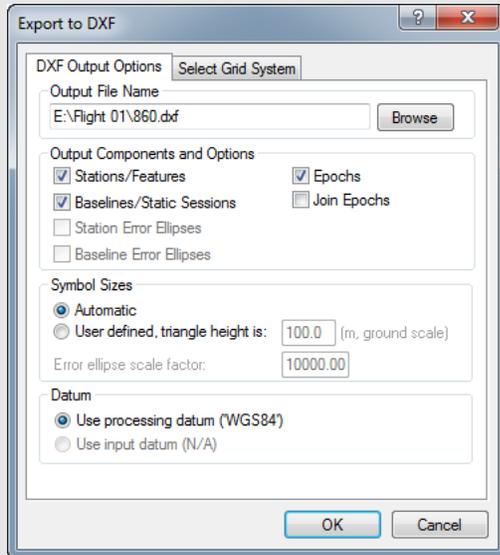

### 2.7.10 Export to DXF

DXF is a file format read by various CAD packages. This utility outputs the contents of the map window to DXF format.

#### Output File Name

Specify the name and path of the DXF to be created.

#### Output Components and Options

The following options are available:

##### **Stations/Features**

Outputs any stations or features loaded.

##### **Baselines/Static Sessions**

Outputs baselines between all the static sessions. The color of the baselines will be the same as it appears in GrafNav and is determined by the quality factor.

##### **Epochs**

Outputs the trajectory and is only useful for kinematic data. Color is determined by the quality factor.

##### **Join Epochs**

Adds a line between epochs.

#### Symbol Sizes

These settings govern the size of the features and stations in the DXF file. *Automatic* is suggested for a trial.

#### Datum

Allows you to choose between the processing datum or the input datum.

The grid options are available under the *Select Grid System* tab. For UTM, State Plane or any other zone-dependent grid, check that the zone number is correct because the default is likely wrong.

### 2.7.11 Show Map Window

Prior to processing, the Map window displays the unprocessed positions within the remote GPB file. These positions usually reflect the real time position as logged by the remote receiver.

After processing, the Map window displays the processed results, color coded by quality number. Quality numbers, which range from 1-6, are meant to convey only a general indication of solution quality. A description and the approximate accuracies associated with each quality number is provided in *Table 3, Quality Number Description*. GrafNav's Q/C plots should be accessed for a more detailed analysis of solution quality. See *Section 2.7.2, Common Plots* on page 68 for descriptions of commonly accessed plots.

The information displayed to the Map window is fully customizable from the *Display* tab within *Settings | Preferences*. Users can choose whether to display text, epochs, feature marks, ARTK marks, base stations and static sessions. Also, right clicking any processed epochs accesses the *Object* menu where a host of functions can be found.

---

☒ The accuracies given are only guidelines. Quality numbers are meant only to provide a high level indication of solution quality. We highly recommend accessing GrafNav's quality control plots for a more in-depth analysis.

---

#### Mouse Usage in Map Window

Positioning the cursor on a processed epoch and clicking with the left mouse button accesses a summary of the processing results for that epoch. The time, quality number, number of satellites, standard deviation, forward/reverse separation and other statistics are displayed.

Right clicking on a processed epoch accesses the *Object* menu, which can be used to perform a host of other tasks. See *Section 2.4.7, Objects* on page 42 for more information about the Object menu

If you have a scroll-wheel on your mouse, you can use it to zoom in and out by scrolling forwards and backwards over the area of interest.

Right-clicking on the Map window provides you with several options, including the ability to load a specific solution and to open the Feature Editor.

The *Save to HTML* option generates an HTML file containing a bitmap version of the Map window. These HTML and BMP files are saved to the *HTML* folder contained within the project folder.

See *Section 2.8, Tools Menu* on page 85 for additional interactive mapping tools.



**Table 3: Quality Number Description**

Quality	Color	Description	3D Accuracy (m)
1	Green	Fixed integer	0.00 – 0.15
2	Cyan	Converged float or noisy fixed integer	0.05 – 0.40
3	Blue	Converging float	0.20 – 1.00
4	Purple	Converging float	0.50 – 2.00
5	Magenta	DGPS	1.00 – 5.00
6	Red	DGPS	2.00 – 10.00
Unprocessed	Grey	Has not been processed	N/A

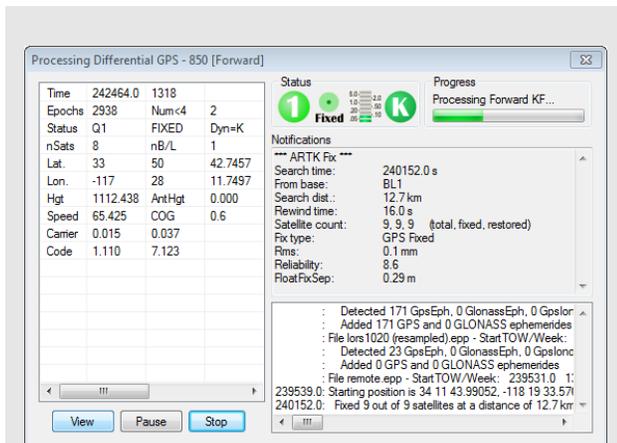


Table 4: Notifications Window Messages

Message	Description
Search time	Time at which ARTK engaged.
From base	Specifies which base station ARTK used to fix ambiguities. This will often be the closest base station in multi-base projects.
Search distance	This is the baseline distance when ARTK was first engaged.
Rewind time	When ARTK achieves a fix, GrafNav can (data quality permitting) apply the integer carrier phase ambiguities backwards in time to the moment ARTK was engaged. The rewind time reports the number of seconds ARTK was able to restore integer ambiguities backwards from the engage time.
Satellite Count	The number of satellites used by ARTK. The <i>total</i> , <i>fixed</i> and <i>restored</i> numbers are reported. <i>Total</i> represents the number used in the float solution. <i>Fixed</i> indicates the number which achieved fixed integers at the restore time. <i>Restored</i> indicates the number of satellites where GrafNav was able to restore backwards in time (see <i>Rewind time</i> )
Fix Type	Solution type used.
RMS	The RMS of an ARTK fix represents how well the carrier phase measurements fit together. Low RMS values (3 mm or less) represent very good fitting solutions. While this does not guarantee a correct solution, it is a good indication. High RMS values (above 5 mm) may still be correct but the chances of an incorrect fix are higher. Regardless, the <i>Combined Separation with Fixed Ambiguity</i> plot can be accessed to help identify incorrect ambiguity fixes.
Reliability	Reliability is a unitless value that indicates how much better the best ARTK fix is from the second best. This is determined by dividing the RMS of the second best fix by the RMS of the best fix. High reliability values (above 3) indicate a high probability the fix is correct as the best ARTK fix appears much stronger than the second best.
FloatFixSep	This is the distance between the fixed integer solution and the last float solution prior to achieving a fix. Large values (metre level) can be expected where ARTK uses only several seconds of data, as the float solution will not be well converged.

## 2.7.12 Processing Window

This window appears during processing and shows position, status, progress and any high priority messages output by the processing engine.

Click the *View* button to customize the fields displayed during processing. See *Table 7, List of Output Variables* on page 181 for descriptions of variables that can be monitored during data processing.

The Processing window is updated twice a second.

### Status

The Status section of the Processing window reports the quality number. Quality numbers are meant to provide a high level indication of solution quality and are further described in *Table 3, Quality Number Description* on page 81. The float/fixed ambiguity status is also indicated and as well as a *K* if the processing mode is kinematic or *S* if the processing mode is static.

### Progress

The Progress box graphically displays how much of the data has been processed and how much remains.

### View

In the left-hand window, various parameters are available for display via the *View* button. The list of available parameters is given in *Table 6, Processing Window Parameters* on page 83.

### Notifications

For kinematic processing, the *Notifications* window displays all information pertaining to the last ARTK solution. Descriptions of these messages are found in *Table 4, Notifications Window Messages*.

For static processing, the *Notifications* window displays all information pertaining to the fixed solution. Descriptions of these messages are shown in *Table 4, Notifications Window Messages*. Messages included in the *Notification Window* for static processing are in *Table 5, Notifications for Static Processing* on page 83.

**Table 5: Notifications for Static Processing**

Message	Information
RMS	Similar to the RMS computed for an ARTK fix, the RMS of a fixed static solution represents the fit of the carrier phase measurements.
Reliability	See <i>Reliability</i> for ARTK fixes in <i>Table 4, Notifications Window Messages</i> on page 82 for a definition. The reliability for long fixed static solutions may be reported as <i>N/A</i> , which indicates that only one fix was within the search area. Thus, there was no second best RMS in order to use in computing reliability.
Frequency	Reported as <i>single</i> or <i>dual</i> to indicate whether an L1 only or L1/L2 solution was computed.
Time	The length of time used by the fixed integer solution in hh:mm:ss format.
Type	Fixed static solution type used. <i>Continuous</i> looks for the best continuous block of cycle slip free data to use within the fixed integer solution. <i>NewFixed</i> (multi-sat) uses all of the data, although it may reject some sections of data for individual satellites.

**Table 6: Processing Window Parameters**

Parameter	Description
Acceleration Vector	Displays the east, north and height acceleration components in Local Level frame.
Baseline Data (MB)	Displays the distance, carrier phase RMS and number of satellites for each baseline.
Baseline Distance	Distance separation for projects containing only one base station.
Channel (Ambiguity)	Displays the ambiguities, as well as their standard deviation, for each satellite being tracked.
Channel (Az/Elev)	Displays elevation and azimuth for each satellite being tracked, in degrees.
Channel (Flag/Locktime)	Displays the status flag and locktime count for each satellite being tracked.
DOPs	Displays DD_DOP, PDOP, HDOP and VDOP.
Estimated Accuracy	The instantaneous north, east and height standard deviation of the remote position.
Geographic Position	Displays the instantaneous position and antenna height of the remote.
Local Level Vector	Local Level vector in metres.
Measurement RMS	The RMS of the code and phase measurements are displayed, together with their standard deviation (measurement weight) in the Kalman filter.

Parameter	Description
Speed/COG	Speed of the vehicle is displayed with the Course-Over-Ground (COG), computed between consecutive measurement epochs.
Status Flags	Solution quality information such as number of satellites, quality factor and ambiguity status.
Time/Epochs	Displays time in seconds of the week, as well as a continuous count of epochs processed. The GPS week number is also shown.
Velocity Vector	Components of velocity in the Local Level frame.
Channel Data B/L	Allows for selection of baseline for which to display channel information.

## 2.8 Tools Menu

### 2.8.1 Zoom In, Zoom Out & Zoom Reset

The *Zoom In* and *Zoom Out* tools adjust the viewing scope of the map, while the *Zoom Reset* brings the map back into the default view.

If you have a scroll-wheel on your mouse, you can use it to zoom in and out by scrolling forwards and backwards over the area of interest.

### 2.8.2 Distance & Azimuth Tool


The *Distance & Azimuth* tool can be used between epochs, base stations and feature/station marks that are displayed on the Map window. Left click on the feature or epoch that you wish to measure *from* and then right-click on the feature or epoch that you want to measure *to*. The *Distance and Azimuth* window reports the horizontal, surface, grid and spatial distances between the selected points. The azimuth and scale factor information are also displayed.


### 2.8.3 Move Pane

This tool is only accessible provided you have used the *Zoom In* tool to view a smaller portion of the Map window at greater magnification. This tool allows you to access different areas of the Map window without changing the zoom level.

### 2.8.4 Find Epoch Time

This feature makes it easy to find an epoch on the Map window provided the GPS time in seconds of the week. When used, it circles the epoch in red and if necessary changes the zoom level so that it is in the middle of the Map window.

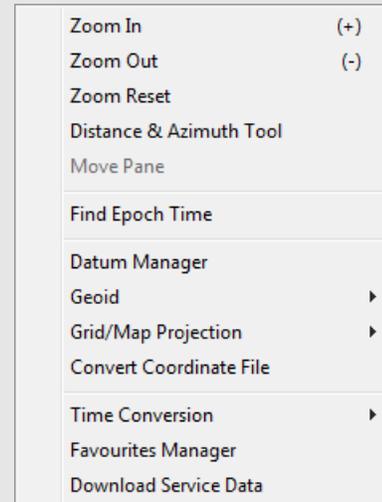

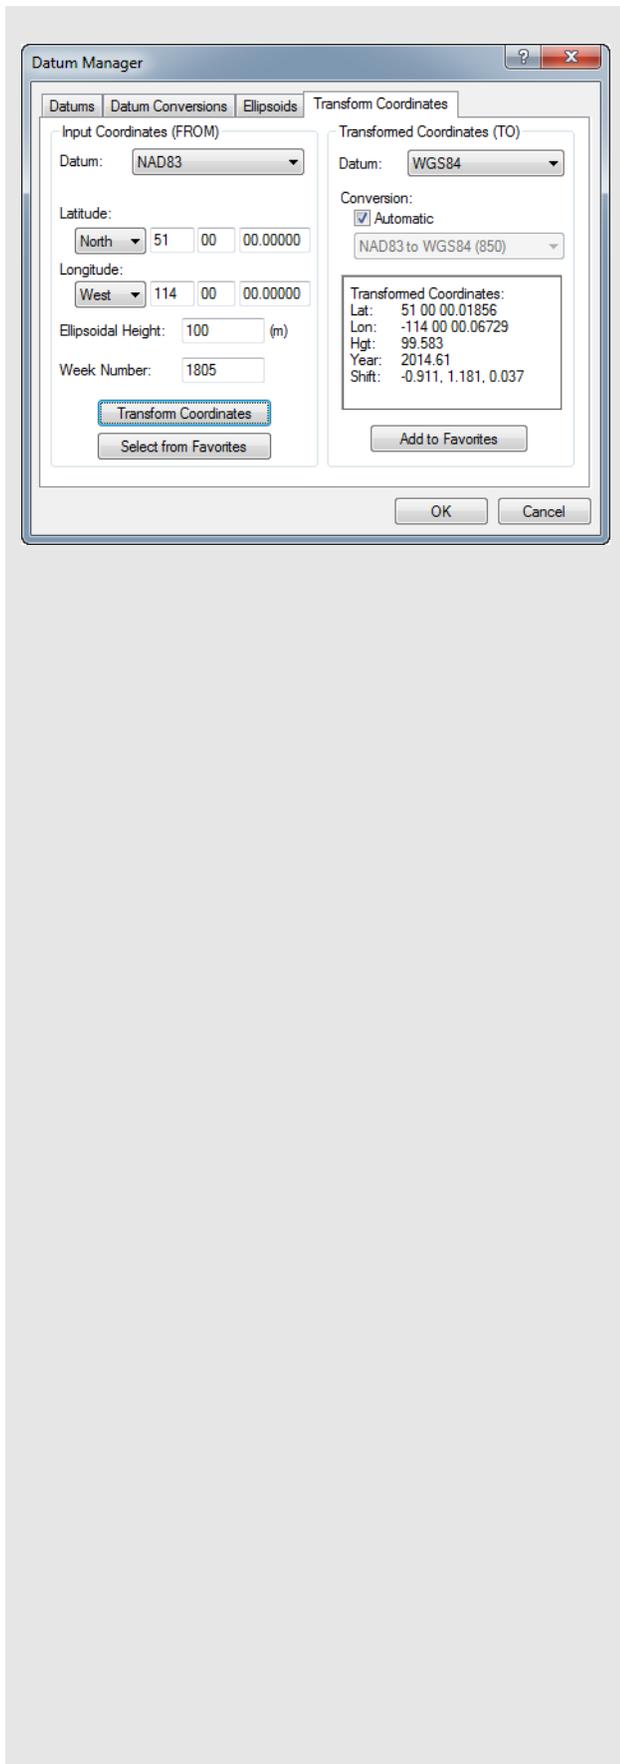

## 2.8.5 Datum Manager

See *Section 2.6.3, Datum* on page 59 for information regarding the first three tabs. The remaining tab is discussed here.

### Transform Coordinates

Use this tab to transform individual points from one datum to another. If you have a list of points to convert, use the *Convert Coordinate File* option. Points can also be loaded from favourites and after conversion saved back to favourites.

One reason to use this tab is to convert base station coordinates prior to processing. This is not strictly necessary however, as it may be easier to process in the same datum in which your base station coordinates are provided, and if required specify a datum transformation within the Export Wizard.

- 
- ☒ Specifying the week number of the coordinate effects the final result if using the conversion 14-parameter.
-

## 2.8.6 Geoid

Geoid files are required when exporting Mean Sea Level (MSL) heights. Geoid files contain a grid of undulation values that represent the difference between ellipsoidal and MSL height. To calculate MSL height from ellipsoidal height at any geographic position, GrafNav subtracts an interpolated geoid height (undulation value) from the ellipsoidal height. A Lagrange interpolation method is used.


Waypoint software supports a proprietary WPG geoid format. All publicly available geoids (in WPG format) that NovAtel is permitted to re-distribute can be found in the **Waypoint Geoids** section of the NovAtel website. We also provide utilities to create WPG files from ASCII files and other known formats in order to create custom or local geoids.


Every GrafNav project requires ellipsoidal base station heights. This is because the geoid is a complicated mathematical surface and all data processing needs to be performed relative to the ellipsoid. However, the *Enter MSL Height* feature on the *Master Coordinate* dialog permits you to work directly with MSL heights. This works by back-calculating an ellipsoidal height provided an MSL height and a geoid file.

Regardless of how you have entered your base station coordinates (i.e. if you have directly entered an ellipsoidal height or if you have used the *Enter MSL height* feature), the Export Wizard will prompt you for a geoid if your export profile contains MSL heights.

The *Information* feature can be used to access basic properties of a geoid in WPG format including the datum and geographic boundaries. When using a datum, be careful to ensure your processing datum is the same as the geoid datum.

The *Compute Geoid Height* feature allows you to calculate the geoid height for individual coordinates. If you have a list of coordinates to convert from ellipsoidal to MSL (or vice versa), use the *Convert Coordinate File* feature (see *Section 2.8.8, Convert Coordinate File* on page 89).

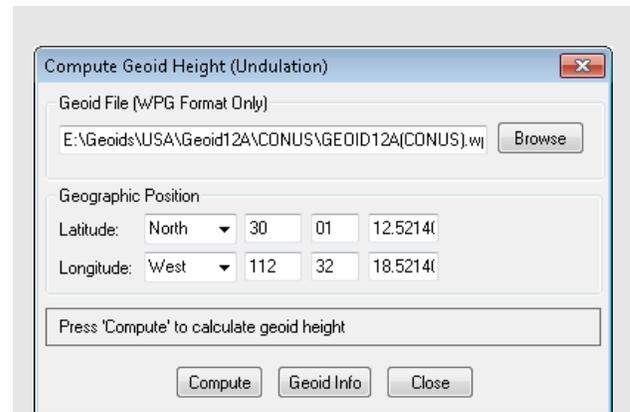

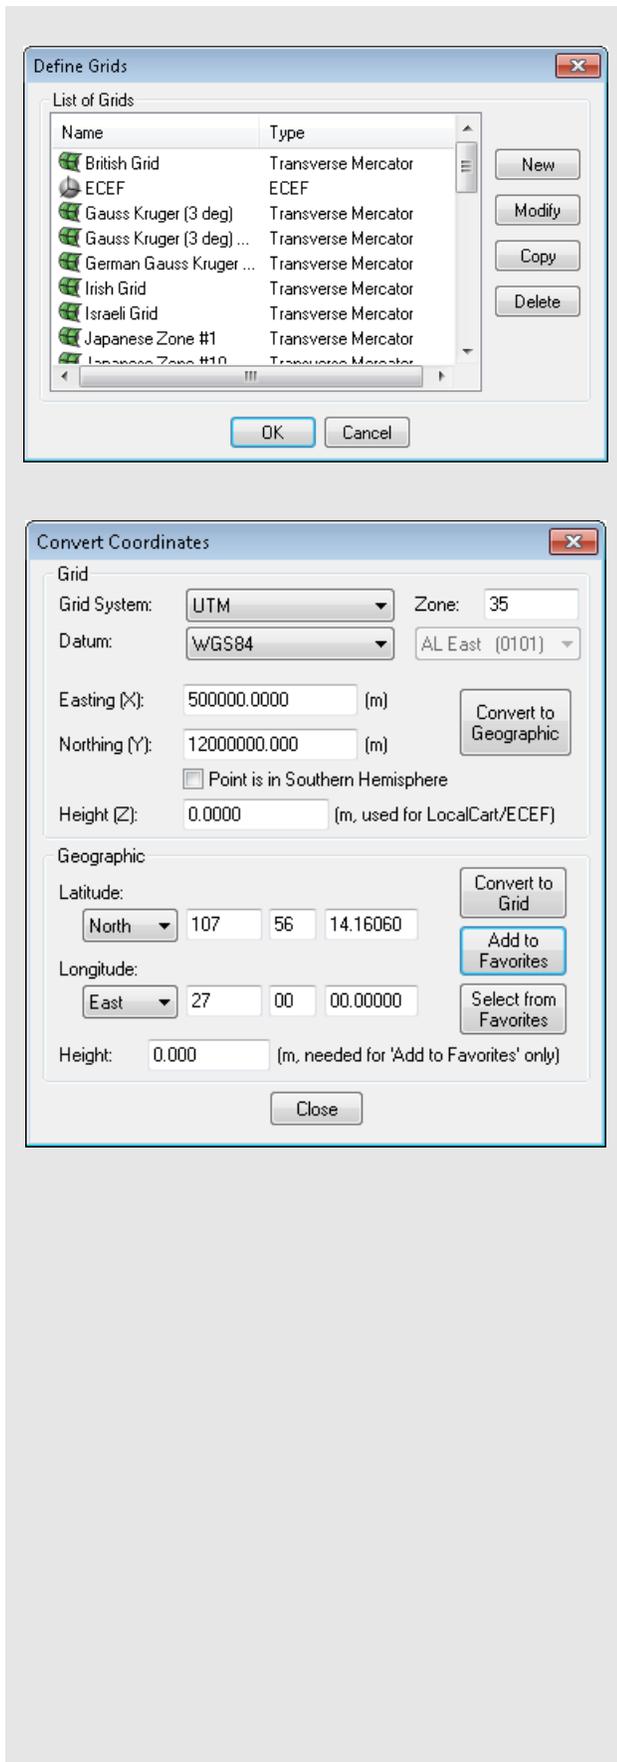

## 2.8.7 Grid/Map Projection

GrafNav supports grid/map projections in several ways including the following:

- The *Enter Grid Values* feature on the Master Coordinate dialog allows you to enter horizontal base station coordinates in any defined grid.
- You can output final coordinates in a map projection of your choice. See *Section 2.6.7, Preferences* on page 62 and *Section 2.7.11, Show Map Window* on page 81 for additional information.
- Several grids, like UTM, TM, Gauss Kruger, US State Plane and Lamber, have been pre-defined in the software. However, you can also add your own by selecting *New* within the *Define Grids* dialog as shown on the right.
- Use the *Transform Coordinates* tool under *Tools | Grid/Map Projection* to convert between geographic coordinates and grid coordinates.

### Transform Coordinates

This tool transforms coordinates for a single point from geographic to grid, or vice versa. When transforming TM projections, make note of the *Point is in Southern Hemisphere* option; it is disabled by default.

- 
- ☒ After a conversion from grid coordinates to geographic coordinates has been made, you may add them to your *Favourites*.
-

## 2.8.8 Convert Coordinate File

This tool takes an ASCII file containing a list of coordinates as an input and outputs an ASCII file to a different datum or format. You can use this utility not only to convert between datums, but also to change the format of a file. For example, you can convert an input list of coordinates from geographic to ECEF, or a list of coordinates with ellipsoidal heights or MSL.

The *Use first continuous word* option is the default. If the station names contain spaces, select *Use first 'n' characters*. The sign conventions used for geographic coordinates is positive for the northern and eastern hemispheres and negative for the southern and western hemispheres.

Additional options seen on the screen just before generating the output file include the following:

### Include column header

Conserves the header information from the input file.

### View output files after conversion

Automatically opens the output file after clicking *Finish*.

### Input grid coordinates in southern hemisphere

Only necessary if the input data has grid coordinates from a project area that is in the southern hemisphere.

### Do not apply datum transformation to height


This option is useful for outputting orthometric heights because no datum transformation are applied in this case.

## 2.8.9 Time Conversion

This tool converts GPS seconds of the week to hh:mm:ss format (GMT), provided a GPS week number. Alternatively, hh:mm:ss (GMT) can be converted to GPS seconds of the week, provided a month, day and year has been specified.

The screenshot shows the 'Input Coordinate File' dialog box with the following settings:

- Coordinate File and Datum:** File: G:\Geoids\USA\Geoid12A\CONUS\g2012au0.txt; Datum: WGS84
- Formatting:**
  - Coordinate type:  Geographic,  Grid,  ECEF
  - Height type:  Ellipsoidal,  Orthometric (MSL)
  - Coordinate order:  East, North,  North, East
- Angle Units:** Degrees Minutes Seconds
- Horizontal units:** Metres
- Vertical units:** Metres
- Point Naming:**  Use first continuous word,  Use first 'n' characters, where 'n' is: [ ]

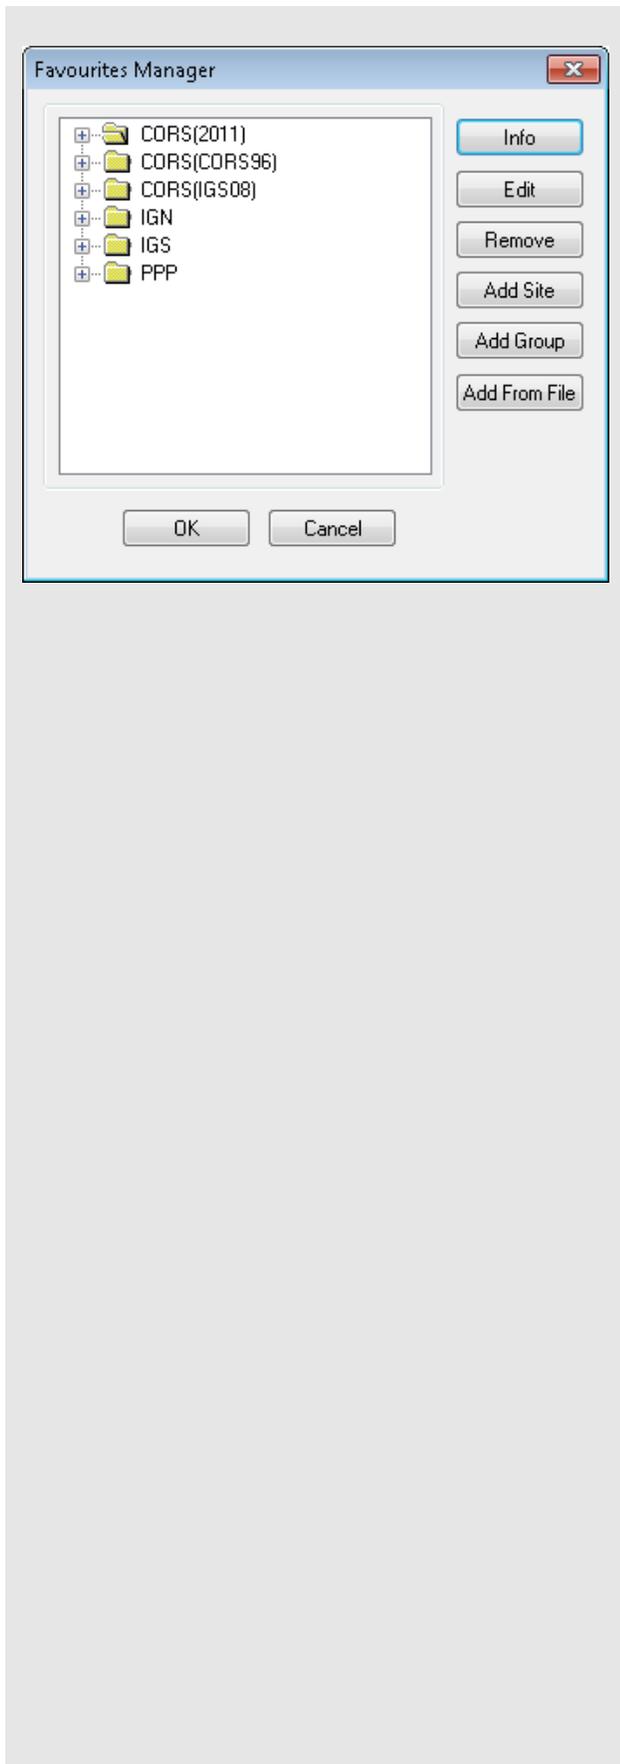

### 2.8.10 Favourites Manager

GrafNav's Favourites Manager is used to store known coordinates for GPS reference stations. This permits easy retrieval without the risk of data entry errors through the *Select From Favourites* feature of the master coordinate dialog.

GrafNav's Favourites Manager comes pre-loaded with coordinates for three GNSS networks. NAD83(2011), NAD83(CORS96) and IGS08 coordinates are provided for stations on the CORS network. CORS (Continually Operating Reference Stations) is a network of receivers managed by the National Geodetic Survey (NGS). CORS stations are most commonly found in the USA, although a relatively small number of stations operate in other countries as well.

Also found in the Favourites Manager are RGF93 coordinates for the IGN network. IGN stations are found in France.

Lastly, ITRF05 coordinates are stored for stations on the IGS network, which is managed by the Scripps Orbit and Permanent Array Center (SOPAC) and provides access to many different networks worldwide.

The Favourites Manager and the Download Utility are complimentary in the sense that the latter provides access to base station data through anonymous FTP and the former ensures precise coordinate and datum information is loaded into your GrafNav project.

Both utilities (the Favourites Manager and the Download Utility) are updated on a monthly basis by Waypoint support staff in order to ensure the list of stations (which is constantly growing) and coordinates is kept current. GrafNav will attempt to automatically download the latest manufacturer files on a bi-weekly basis to ensure they are kept up to date.

In addition to pre-loaded favourites for specific networks, users can create their own favourite groups in order to store their own surveyed base station locations.

The following options are available in the *Favourites Manager* via the buttons on the right-hand side:

### Info

If clicked while a group is highlighted, this returns the total number of sites contained within the group.

If clicked while an individual site is highlighted, the position, velocity and datum are displayed.

### Edit

Use this option to modify the information related to a station, including coordinates, antenna information and station velocities.

### Remove

Use this option to remove an individual site or an entire group.

### Add Site

Use this option to add a new site into any group. We recommend creating a custom group prior to adding your own sites.

### Add Group

Use this option to add of a new group.

### Add from File


Using this feature, a list of station coordinates can be directly loaded from an ASCII file, eliminating the need for manual entry. The file must contain the station names and coordinates in a comma or space delimited format. The *Input File Format* box at the bottom of the window provides a useful reference for those users who are unsure as to what their input file should look like.

---

Southern latitudes and western longitudes should be denoted by a negative sign.

---

Information regarding the stations' antennas can also be specified here. If the antenna model and/or heights are common to all the stations being added, then the *Enable global antenna properties* setting can be enabled to specify this information. If the information varies from station to station, then the *Prompt for individual station information* option should be enabled. This latter option is also needed if you wish to specify station velocities.

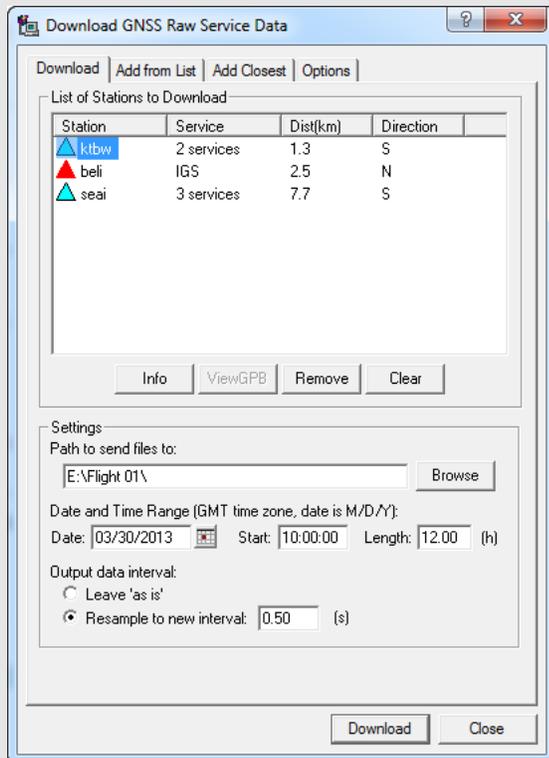

### 2.8.11 Download Service Data

The Download Service Utility facilitates downloading, converting, and if needed concatenating and resampling of GNSS base station data.

There are currently 18 supported networks, providing access to thousands of publicly available base stations worldwide. Waypoint provides a KML file for all supported networks within the **Waypoint Downloads** section of the NovAtel website.

The *Add Closest* tab can be used to search for base station data provided a converted GPB file that you wish to process. This function not only reports a chronological list of the nearest stations, but also automatically scans the date, start/end times, path to download the files to and sampling rate of the GPB file.

The download utility can be used not only to quickly retrieve GNSS base station data, but also to download precise ephemeris and clock files, almanac files, additional broadcast ephemeris data and other data (see the *Options* tab).

#### Download

##### List of Stations to Download

This displays a list of the stations that have been selected for download. The list is empty until you add to it using the *Add from List* or *Add Closest* tabs.

##### Settings

The *Path to send files to* field specifies where to save the downloaded files. The *Date and Time Range* parameters indicate the date and time range (GMT) of the data to be downloaded. If using the *Position from GPB file* option on the *Add Closest* tab, all of the parameters under *Settings* are scanned automatically.

Selecting *Leave 'as is'* will not perform any type of resampling on the downloaded data. Select this option if you are processing static data only (such as in GrafNet). Common sampling rates provided by GNSS networks are 1, 5, 10, 15 and 30 seconds. Some networks, such as CORS, only make high rate available for a limited period of time (such as 30 days) prior to archiving the data at a 30 second sampling rate. Therefore it is good practice to retrieve base station data within days of your survey when possible.

In differential processing, only common epochs can be processed between master and remote. Thus when processing kinematic data, it is required to resample base station data to the same interval as your remote prior to processing.

When resampling, additional noise is introduced in the resampled epochs. The magnitude of the added noise is dependent on the original sampling rate of the data. Waypoint has found that the amount of noise introduced when resampling from an original rate of 5 seconds is negligible. When resampling from 30 seconds however, 1-2 cm of noise (RMS) can be introduced. This may only be significant for very high accuracy applications.

### Add From List

#### List of Stations

This window provides an alphabetical listing of all services. Expand the list to show the individual stations within each service. The *Info* button provides an approximate coordinate, which is used when searching for base station data using the *Add Closest* tab. The *Add* button places the station on the *List of Stations to Download* under the *Download* tab.


#### Download Latest List


This connects to the Waypoint FTP site and downloads the most recently updated manufacturer's files for the version you are using. Waypoint updates the list of stations on a monthly basis.

### Add Closest

This tab supports two search modes: using a GPB file as input or a user defined position.

If inputting a GPB file, the download utility searches your file at regular intervals and will report the minimum distance to each base station at any point in the trajectory.

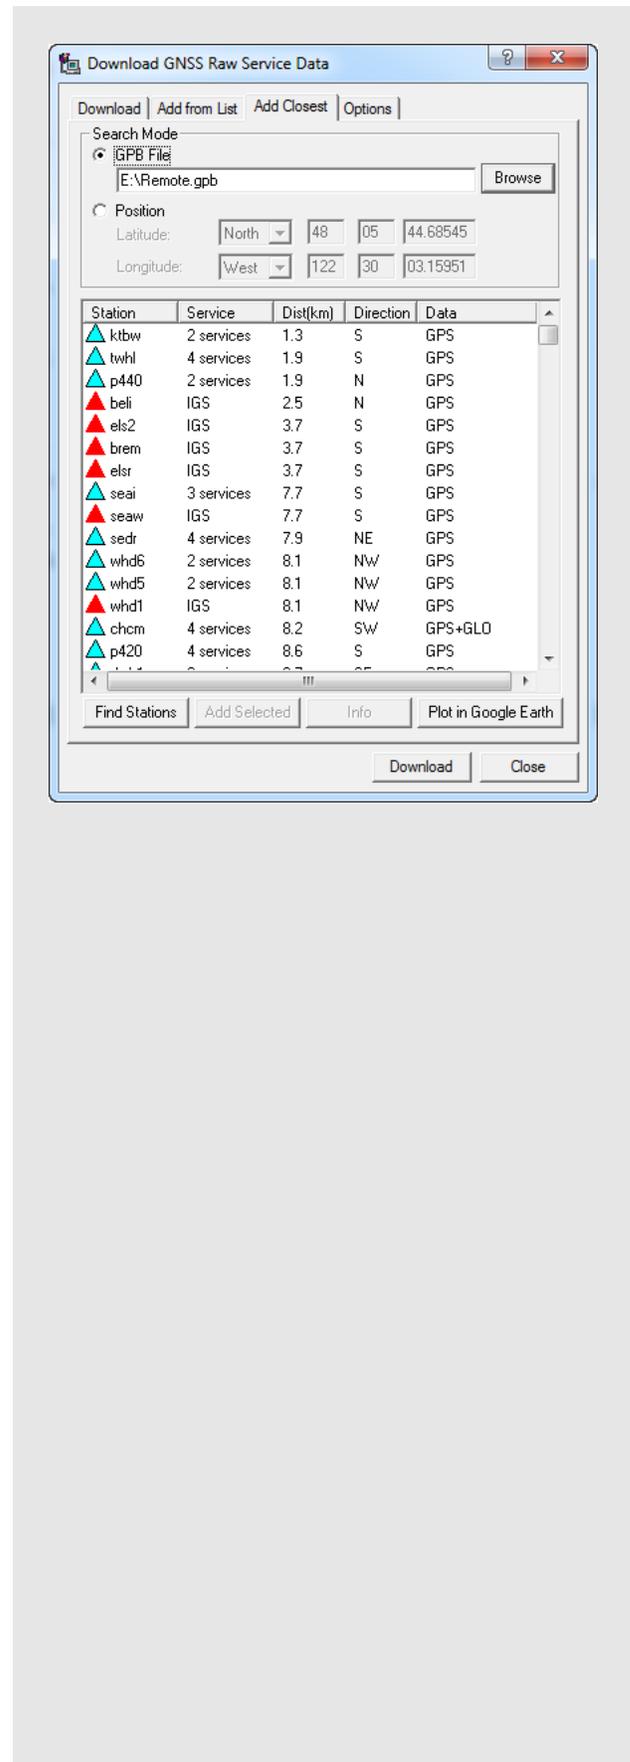

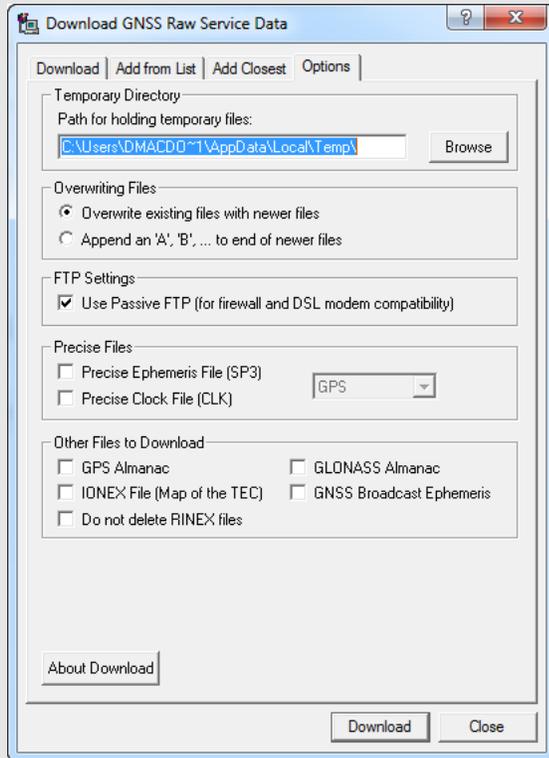

## Specified correction files

### IONEX File

Contains information regarding the total electron count (TEC) of the ionosphere. This is useful in single frequency processing to help reduce ionospheric error. IONEX data is not helpful to, and thus not applied, if dual frequency processing is used.

### GPS Almanac

Can be used in mission planning in order to predict GPS satellite geometry.

### GLONASS Almanac

Can be used in mission planning in order to predict GLONASS satellite geometry.

### GNSS Broadcast Ephemeris

Downloads a global RINEX file for the date(s) specified in the Download tab and converts to Waypoint's EPP file format. Can be used to supplement missing ephemeris data in a GrafNav project.

### Do not delete RINEX files

The Download Utility will automatically delete downloaded RINEX files after conversion to GPB. If you wish to keep the original RINEX data, select this option.

## Options

### Temporary Directory

The directory specified here temporarily stores RINEX files while they are being converted to GPB format.

### Overwriting Files

If a file already exists in the destination directory with the same name as the file being downloaded, this setting determines which action to take. *Overwrite existing files with newer files* replaces the file with the one being downloaded. *Append an 'A', 'B' to end of newer files* renames the new file to avoid conflict.

### FTP Settings

Users with a DSL connection, or behind a firewall, might have to enable *Use Passive FTP* for this utility to connect properly.

### Precise Files

Precise ephemeris and clock data can be downloaded here for GPS, GLONASS and BeiDou. Sources that provide GLONASS and BeiDou corrections also provide GPS corrections, although quality will vary from source to source.

Precise ephemeris and clock data are required for PPP processing in order to correct for metre level errors. Precise ephemeris data is optional in differential projects as much of the orbital error is cancelled, as the line of sight component of satellite orbital error is correlated with baseline length. Differential projects involving baseline lengths in excess of 150+ km may benefit from the inclusion of precise ephemeris.

### Other Files to Download

Any files selected here are downloaded for the day(s) specified on the *Download* tab. You can specify any of the correction files listed in the shaded box for download.

## Add Stations and Services

The services currently found within the download utility are supported because they provide public access to data and they are known to us.

If you know of another service which provides public FTP access to GNSS reference data, contact Waypoint support ([support@novatel.com](mailto:support@novatel.com)) as it may be possible to add the service to the software. This has the added benefit of making the service available to all other GrafNav users as well.

If you prefer to add your own custom service, create a *user.xml* file within your User directory (C:\C:\NovAtel\WayptGPS860\User).

Service and Station records must conform to the format in the shaded boxes on this page and the next page.

- 
- ☒ You might find it easier to copy a service and station record from the *manufact.xml* file and paste it into *user.xml* file for modifying.
- 

Adding a service requires knowledge of the FTP address at which the data is stored. The directory structure and file type must be known.

Service records must conform to the format in the shaded box. Refer to the *manufact.xml* file for examples of service and station records.

### Station record format

```
<station>
  <name></name>           Four-character station name
                           as saved on FTP server. See
                           Note 1 on page 96.

  <download>
    <appxlat></appxlat>   Latitude, in DMS, followed by
                           N or S to designate hemi-
                           sphere.

    <appxlon></appxlon>   Longitude, in DMS, followed
                           by E or W to designate hemi-
                           sphere.

    <appxht></appxht>     Ellipsoidal height, in metres.

  <serv>
    <name></name>         Name of service to which the
                           station belongs. See Note 1
                           and Note 3 on page 96.

  </serv>
</download>
</station>
```

### Service record format

```
<service>
  <name></name>           Name of service, up to a max-
                           imum of 8 characters. See
                           Note 1 on page 96.

  <data></data>
  <protocol></protocol>  Type of file transfer protocol
                           used by the service (FTP or
                           HTTP)

  <address></address>    Address of the FTP server.

  <username></username>  Required to log into non-
                           public sites. See Note 1 and
                           Note 4 on page 96.

  <password></password> Required to log into non-
                           public sites. See Note 1 and
                           Note 4 on page 96.

  <ofile></ofile>       Generic path to the observa-
                           tion file. See Note 6 page 96.

  <dfile></dfile>       Generic path to the com-
                           pressed observation file. See
                           Note 4 and Note 6 on
                           page 96.

  <nfile></nfile>       Generic path to the GPS navi-
                           gation file. See Note 6 on
                           page 96.

  <gfile></gfile>       Generic path to the GLON-
                           ASS navigation file.

  <hofile></hofile>     Generic path to the hourly
                           observation files. See Note 4
                           and Note 6 on page 96.

  <hdfile></hdfile>    Generic path to the com-
                           pressed hourly observation
                           files. See Note 4 and Note 6
                           on page 96.

  <hnfile></hnfile>    Generic path to the hourly
                           GPS navigation file. See Note
                           6 on page 96.
```

```

<hgfile></hgfile>      Generic path to the hourly
                        GLONASS navigation file.
<color></color>        Color to use for symbols in
                        utility's interface. See Note 4
                        and Note 5 on page 96.
</service>

```

### Station and Service record notes

- ☒ 1. This field is case-sensitive.
- 2. Only the Z, GZ, and ZIP formats of compression are supported.
- 3. The service name must match the *ServID* field of a service record, as defined in the *manufact.xml* file or, if the service is user-created, in your *user.xml* file. If the station is found on more than one service, enter a separate <name> entry for each service.
- 4. This field is optional and, thus, does not need to be present.
- 5. The color defined here is used in the interface to identify the stations belonging to this service. The following colors are available: red, green, blue, magenta, cyan, gray, wine, black, gold, darkgray, darkgreen, darkblue, lightcyan, and darkmagenta.
- 6. This field identifies the format of the directory structure used on the FTP site to organize the data. Any folders in the structure that are common to all data must be hard-coded into this field. The rest, however, must be defined using the following case-sensitive strings:

[JJJ]	<i>Julian Day</i>
[YYYY]	<i>Year</i>
[XXXX]	<i>Station ID</i>
[week]	<i>GPS week</i>
[wkrl]	<i>GPS week - 1024 - padded with leading zeroes</i>
[wkrn]	<i>GPS week -1024 - without padding</i>
[yy]	<i>Last two digits of the year</i>
[d]	<i>Day of the week (0 – 6)</i>
[MN]	<i>Month number</i>
[DM]	<i>Day of the month</i>
[H]	<i>Hour of the day, in upper case (A-X)</i>
[II]	<i>Hour of the day, numeric (00-23)</i>
[mmm]	<i>first three letters of month (Jan-Dec)</i>
[CITY]	<i>any custom string (such as the name of a city or region) contained within an FTP sites folder structure that varies for individual stations</i>

## 2.9 Window Menu

These menu options display the GrafNav windows in different ways.

### 2.9.1 Cascade

Cascades the windows from the top left to the bottom right of the screen.

### 2.9.2 Tile

Gives each window a section across the screen.

### 2.9.3 Next and Previous


Lets you view one window at a time.

### 2.9.4 Close Window

Closes one window at a time.

### 2.9.5 Close All Windows

Closes all windows except the Map window.

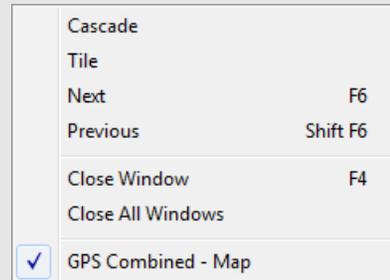

### List of files downloaded when manufacturer files are updated

#### **manufact.dcb**

List of the differential code biases, in nanoseconds, between the P1 and C/A code for each satellite. Used by PPP and applied to any receivers that track the C/A code on L1 (as opposed to P1).

#### **manufact.xml**

List of base stations available for the *Download* utility. This is usually updated monthly.

#### **manufact.dtm**

List of datums, ellipsoids and transformations between datums.

#### **manufact.fvt**

List of *Favourites* and the groups they are contained in.

#### **manufact.grd**

List of available grids such as UTM, US State Plane, Gauss Kruger and so on. See *Section 2.8.7, Grid/Map Projection* on page 88 for more details.

#### **manufact.svi**

A file that associates a PRN number with a satellite type (Block II, Block IIA and so on) for purposes of determining the center of mass of the satellite. Used by PPP.

#### **manufact.utc**

List of UTC leap seconds and dates they were introduced.

#### **manufact.adf**

Composite absolute antenna calibrations in ANTINFO (old NGS) format.

#### **ngs08.atx**

Composite absolute antenna calibrations in ANTEX (new IGS) format.

## 2.10 Help Menu

### 2.10.1 Help Topics

Opens an HTML version of this manual. This feature can be very useful as a quick and easily accessible reference.

### 2.10.2 Check for update...

Provided an internet connection, this feature checks the Waypoint server to see if any GrafNav updates are available. If so, they can be directly downloaded and installed.

### 2.10.3 Download manufacturer files

Provided an internet connection, use this option to download the latest manufacturer files from Waypoint's FTP site. The files downloaded are listed in the shaded box.

### 2.10.4 NovAtel Waypoint Products

This option opens the Waypoint Software page in your default web browser. From here, more information on Waypoint Products can be found, including information regarding the latest version, notices of training seminars, links to FAQ/training materials and technical reports.

### 2.10.5 About GrafNav

This window displays information about the software version, build dates, copyright information, hardware lock key information (if using USB version) and DLL information.

If using USB licensing, access the hardware key utility from this window by clicking *Key Util (Upgrade)*. This tool is useful if an upgrade needs to be performed on the hardware lock. The *Dependent Files* window displays a list of executables and DLLs associated with GrafNav. The date and time of the files are shown, as well as a quick description of the file. Other programs have this feature as well.

### 3.1 GrafNet Overview

GrafNet is a batch static baseline processor and network adjustment package. It is used to establish or check base station coordinates for later use within GrafNav, or survey entire static networks. GrafNet accepts GNSS data only, no terrestrial observations can be imported.

GrafNet is included with both GrafNav and Inertial Explorer, however it can also be purchased separately as *GrafNav Static*. This chapter includes examples of networks that are commonly processed in GrafNet, as well as step-by-step instructions for first time users.

#### 3.1.1 Types of Networks

##### Closed Loop Network

Surveyors often use this style of network because of increased reliability. Due to the closing of the loops, any baseline determination errors will show up as tie point errors. Such closure values can be seen via *Process | View Traverse Solution*. If just two GPS receivers are employed, then a method called “leap-frogging” can be used to collect the data. In this procedure, starting from a known point, the lead receiver is placed on the first point to be surveyed. After the first session is complete, the trailing receiver is moved ahead of the lead receiver so that it now becomes the lead. The next baseline is observed and this procedure is repeated until small (4-6) loops are closed.

##### Radial Network

Also referred to as *Single Base Station*. Applications where productivity is more important, like GIS, do not need the same degree of reliability as the closed loop network. For these situations, use open loop networks. An example of this a network is in the shaded box. For this method, one receiver is left stationary over a reference or control point. One of more remote GPS receivers are moved from point to point being surveyed.

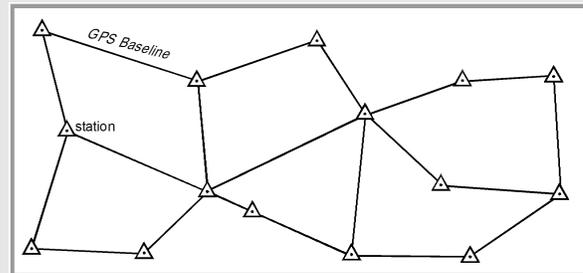


Figure 1: Closed Loop Network

- ✉ Antenna height measurement errors will often cancel with this method and should therefore be double-checked. Methods involving more than two receivers become quite complex, and are past the scope of this chapter.

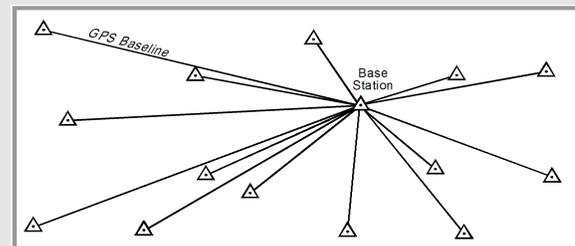


Figure 2: Radial Network

Table 11: Solution Types

Solution Type	Fixed Integer	Ionospheric Correction	Description
L1-Float	N	N	Single frequency float solution
L1-ARTK	Y	N	Single frequency fixed solution
L1L2-Float	N	N	Dual frequency float solution without ionospheric correction
L1L2-Float-Iono	N	Y	Dual frequency float solution with ionospheric correction
L1L2-ARTK	Y	N	Dual frequency fixed solution without ionospheric correction
L1L2-ARTK-Iono	Y	Y	Dual frequency fixed solution with ionospheric correction

### 3.1.2 Static Solution Types

GrafNet automatically forms sessions between any GPB files that have a minimum amount of overlapping data. The default value is 180 seconds, but this can be edited from the *Import Options* button when adding observations to a project. There are four modes of static processing, including the following:

#### Fixed Solution (ARTK)

In this mode of processing, integer ambiguity resolution is attempted using ARTK. If successful, fixed solution provides the best accuracy. Single frequency will fix reliably on baselines less than 4 km, while dual frequency will work well up to 30 km and potentially further. Longer baselines benefit from longer observation times in the event integer ambiguities cannot be solved.

#### Float Solution

This method does not attempt to resolve integer ambiguities and therefore, has no baseline length restrictions. Regardless, long single frequency baselines will have much poorer accuracies than their dual frequency iono-free counterparts. A float solution will automatically be returned if ARTK is unable to fix integer ambiguities.

#### Iono-free Solution

This is a float solution with the ionospheric effect largely removed by combining L1 and L2 in the iono-free combination. This option requires dual frequency data at both stations.

#### Automatic

GrafNet also offers an *Automatic* mode, which chooses between the three processing modes by examining baseline lengths and the type of measurements available. *Table 11, Solution Types*, in the shaded box, contains a list of solution types attainable in GrafNet.

### 3.1.3 Computing Coordinates


Once the processing is complete, there are two methods to produce coordinates for each station.

#### **Traverse Solution**

This solution automatically computes during processing. It starts from known stations and transfers positions to neighboring stations one baseline at a time. A tie or closure will be computed for stations that already have coordinates transferred.

#### **Network Adjustment**

This method takes all of the baselines into account into a single weighted least-squares adjustment. It spreads the errors out over the entire network and takes advantage of redundant baselines using covariance weighting to produce more accurate station coordinates. The network adjustment flags erroneous measurements in the sense that the residuals (calculated baseline vector minus observed value) will be unacceptably high. This is most obviously displayed by the PPM (parts per million) value.



### How to create a project:

1. Convert all raw data to Waypoint format prior to creating a GrafNet project.  
See *Section 5.4, GNSS Data Converter Overview* on page 143 for more information.
2. Open *GrafNet* from the *Waypoint GPS* program group in your Start menu.
3. Select *File | New Project*.
4. Find the directory where the project files will be located. GrafNet creates many files during processing so using a new directory makes things easier.
5. Give the project a name and click *Save*.

---

☒ Entering the name of a project that already exists overwrites the file contents.

---

### How to add observation files

1. When creating a new project, the *Add Observation* window launches automatically after giving your project a name.
2. Click *Get Folder* and select the directory containing the converted data.
3. Select the files that you want added or choose *Select All*. Select *Add* after all of the desired files have been added.
4. Verify the station name, antenna height and antenna model for each station loaded.
5. Click the *OK* button for each station loaded.
6. When finished loading all stations, select *Close* on the *Add Observations* window.  
Unprocessed vectors will then be displayed to the GrafNet map window.
7. Select *File | Save Project*.

---

☒ If a station has been observed more than once, the station ID should be the same for each observation. Otherwise, two separate stations will be formed and solved for.

---

## 3.2 Start a Project with GrafNet

The information in this section describes how to start a project and quickly process a static network using GrafNet. The individual menu items are discussed later in this chapter.

### Install Software

GrafNet is automatically installed when installing either GrafNav or Inertial Explorer. If you have not previously installed the software, see *Section 1.2, Installation* on page 11.

### Convert Data

To be processed, raw GNSS data files have to be converted into Waypoint's GPB format. See *Section 5.4, GNSS Data Converter Overview* on page 143 for information about how to convert these files.

### Create a Project

Follow the instructions in the shaded box.

### Add Observation Files to the Project

Follow instructions in the shaded box.

## Add a Ground Control Point

Follow the steps in the shaded box.

## Set the Processing Options

After adding at least one Ground Control Point (GCP) to your project, you will be able to access GrafNet's *Process Session* menu under the *Process* menu. Follow the steps in the shaded box to set the processing options.

## Process All Sessions

Follow the steps in the shaded box to process all sessions. After these steps are completed, error ellipses on each of the single session baselines and the processing window should both appear.

## Verify That All Baselines Have Passed

Passed baselines are plotted in green, failed baselines in red, purple or blue. Duplicate baselines appear yellow.

If it is a closed loop network and you feel that the solution is correct despite failing GrafNet's statistical tests, right click the baseline and select *Override Status* to override the status. The traverse will transfer coordinates using failed baselines, while the network adjustment will not.

## Run Network Adjustment

Follow the steps in the shaded box to run a network adjustment. After these steps are completed, the *Network Adjustment Results* opens, while error ellipses are plotted for each station on the *Map Window*.

## Export Station Coordinates

Follow the steps in the shaded box to export station coordinates.

## How to add a ground control point

1. Select *File | Add / Remove Control Point*.
2. Click the *Add* button.
3. Select the ID corresponding to the control point to be added.  
If the GPB file was converted from RINEX and coordinates were scanned from the RINEX header, these will be automatically loaded.
4. Enter or verify the coordinates and datum for that station.
5. Click the *OK* button.

## How to set the processing options

If you are processing a new project, it is recommended to use the GrafNet default options. GrafNet automatically chooses the type of solution to process based on the type of data available (single or dual frequency) and the baseline length.

If you wish to override any of the default processing settings, you can do so by editing the options available under the *Process Session* dialog prior to processing.

1. Select the desired static processing mode. These modes are described in *Section 3.1.2, Static Solution Types* on page 100.

## How to process all sessions

1. Select *All unprocessed* as the *Sessions to Process* under the *Process* tab.
2. Click the *Process* button.

## How to run a network adjustment

1. Select *Process | Network Adjustment*.
2. Click the *Process* button.

A network adjustment can be run automatically if *Run network adjustment on completion* is selected under the *On Completion* options of the *Process* tab.

## How to export a station coordinate

1. Select *Output | Export Wizard*.
2. Enter an output file name.
3. Select the source for the coordinates (usually *Network*).
4. Select a profile containing the desired output variables.

## How to fix bad baselines

### Fixed Static Solutions

If a fixed integer solution is not achieved, consider lowering the ARTK quality acceptance criteria to its lowest setting (Q0) and reprocessing. When doing so, it is important to check any loop, and check and duplicate tie points in the traverse report to ensure the quality of the solution.

If a fixed integer solution is still not achieved, check the baseline distance and plot the number of satellites, DOP and estimated carrier RMS in order to check if conditions are not favorable to integer ambiguity determination.

### Change the Processing Direction

Switch from Forward to Reverse processing. The reverse solution might pick a different base satellite and have a different solution that passes.

### Change the Elevation Mask

GrafNet by default uses a 15° elevation mask. This is because tropospheric, ionospheric and multi-path errors increase significantly on low elevation satellites. Lowering the mask to 10° allows more satellites into the solution, strengthening the geometry. The improved geometry may more than compensate for increased measurement errors.

### Change the Processing Time Range

The start / end times can be modified from within the *General* tab. Sometimes a data set will benefit if a problematic section is removed, such as an extended period where very few satellites are available (plot the Number of Satellites to check this).

### Satellite Omission

A bad satellite has many bad data warnings in the message log file (FML/RML). Omit this satellite with the *Advanced* tab options.

## 3.2.1 Fix Bad Baselines

The shaded box on this page contains ideas to try when attempting to fix bad (red) baselines in GrafNet.

## 3.3 File

### 3.3.1 New Project

To process a network for the first time, you must start a new project. This is done via *File | New Project*. GrafNet's project configuration files carry a GNT extension.

### 3.3.2 Open Project

To open an existing project, follow the steps in the shaded box.

### 3.3.3 Save Project

The program automatically saves the project file (GNT), *Session Report* (REP) and *Traverse Solution* (TRV) files before processing. Any changes made to the observations like name or antenna height are also saved.

### 3.3.4 Save As


Use the *Save As* command under the *File* menu to create a new project that has identical processing options as the current project. This allows you to change the options in the new project and process the data without losing the solution computed by the original configuration.

### 3.3.5 Print

This option allows you to print different windows.

### How to open a project

1. Select *Open Project* from the *File* menu.
2. Choose the name of the project from the dialog box that appears prompting you to select the name of an existing project (GNT file).
3. Click the *Open* button.

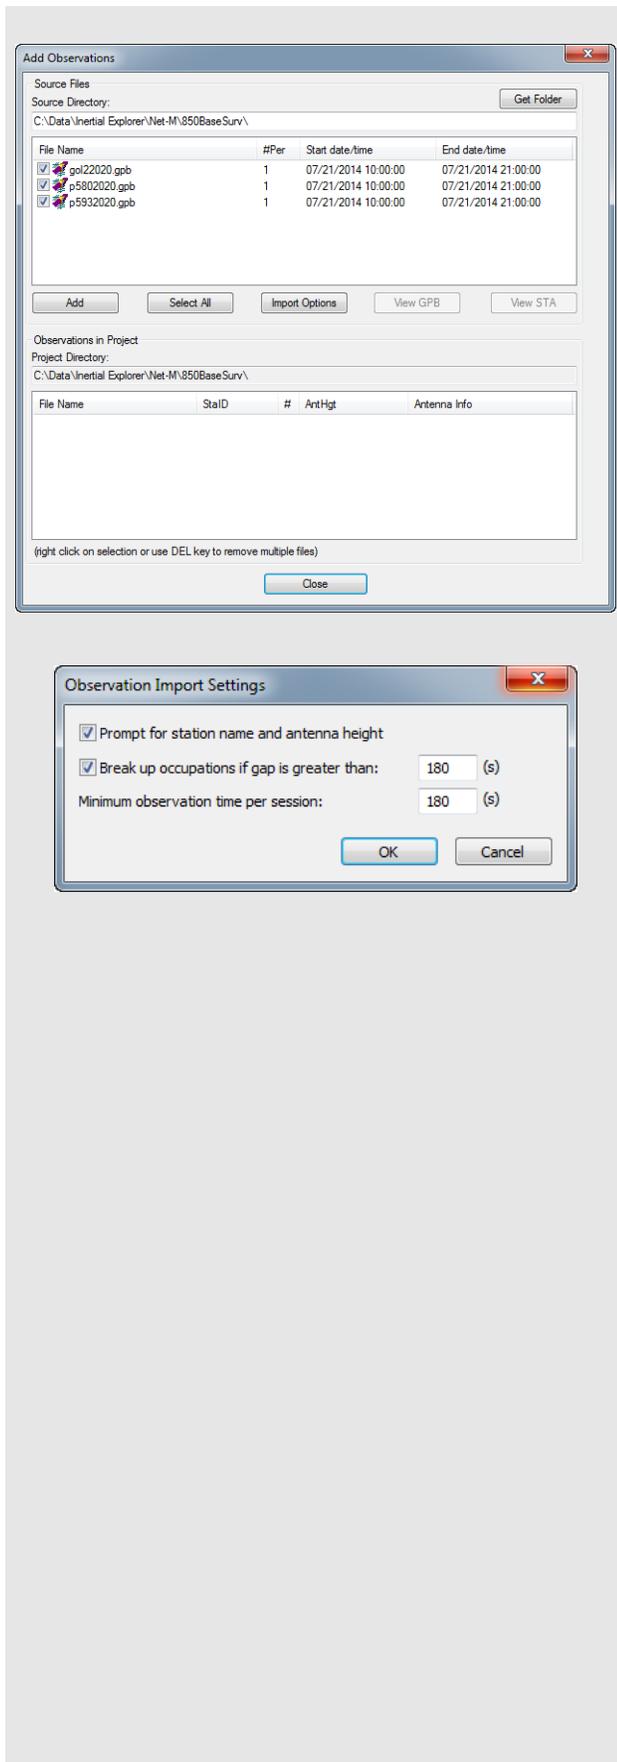

### 3.3.6 Add / Remove Observations

This feature adds observation files to GrafNet projects. These files must be converted to GPB files using *File | Convert | Raw GNSS to GPB*.

If the GPB file was converted from RINEX, the station name, antenna height and antenna profile may be loaded automatically when adding stations. Verify this information is imported correctly for each loaded station.

#### Import Options

Clicking the *Import Options* button provides access to the following options:

##### ***Prompt for station name and antenna height***

This option is on automatically as it is good practice to ensure the station name, antenna height and antenna model are correctly loaded into the project for each station. If however you are confident the data will be loaded correctly automatically and you are loading a large number of observations, consider disabling this option.

##### ***Break up occupations if gap is greater than: 180 (s)***

If a GPB file contains a data gap larger than this adjustable threshold, GrafNet will treat the data before and after the gap as separate sessions. The default value is 180 seconds. If more than one session is detected in your data and you are confident the station did not move, deselect this option when importing data.

##### ***Minimum observation time per session:***

GrafNet will not form sessions between stations that contain less than this adjustable threshold. The default value is 180 seconds. This is a good way of filtering out short and unintentional baselines from being included in your project.

### 3.3.7 Add / Remove Control Points

Add at least one 3D or horizontal ground control point before processing. Sessions will not be processed unless they are connected to a control point. The three types of control points include the following:

- 3D: constrained horizontally and vertically
- 2D: constrained horizontally
- 1D: constrained vertically

After selecting *Add / Remove Control Points* from the *File* menu, click *Add* to enter a new control point or *Edit* to adjust the station, position or Datum of a control point. Control and check points can also be added by right clicking on the stations in the GrafNet map window. When right clicking on a station, *Add as Check Point* and *Add as Control Point* are available menu items. The station ID should match that of the corresponding station.

Standard deviations can be entered at this stage. The default values are 5 mm for horizontal and 5 mm for vertical. Standard deviations are only taken into account in the network adjustment. They are useful for combining high and low accuracy control points and will control the extent to which the network adjustment adjusts control point positions.

### 3.3.8 Add / Remove Check Points

Check points are useful for gauging how well the network fits the existing control fabric. They are added in the same manner as control points, except that standard deviations are not applicable.

### 3.3.9 Add Precise Files



Adds additional precise or broadcast ephemeris files (SP3 / CLK and EPP files). See *Section 2.3.8, Add Precise Files* on page 27 for more information.

### 3.3.10 Remove Processing Files

This feature can be used to clean up a directory by removing files which can be re-generated by GrafNet. See *Section 2.3.12, Remove Processing Files* on page 36 for details.

### 3.3.11 Import Project Files

This feature imports stations and baselines from another GrafNet project into the current project.

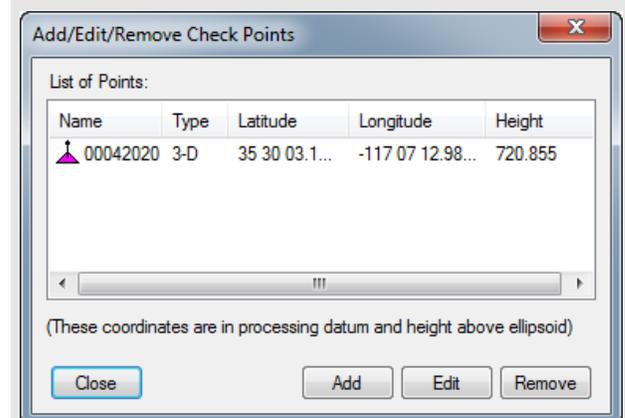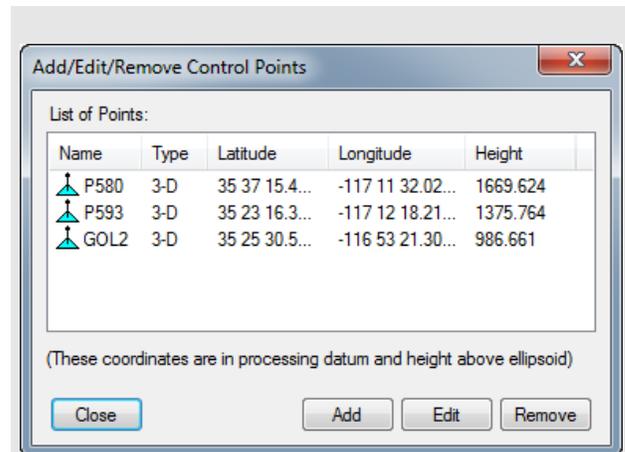

**Two conversion utilities available with *File | Convert*****Raw GNSS to GPB**

Users have to convert their raw data files to GPB format prior to processing. More information on this utility is available in *Chapter 5, Utilities* on page 137.

**GPB to RINEX**

Users who wish to produce a RINEX file from their GPB files may do so using this utility. This utility supports the creation RINEX 2.0 and 2.11 files. For additional information, see *Chapter 4, File Formats* on page 127.

**3.3.12 View****ASCII File**

See *Section 2.4.8, ASCII File(s)* on page 44 for information regarding this feature.

**Raw GNSS Data**

See *Section 2.4.9, Raw GNSS* on page 44 for information regarding this feature.

**3.3.13 Convert**

The two conversion utilities that are available with this option are listed in the shaded box.

**3.3.14 GPB Utilities**

A number of utilities are available for use with GPB files. See *Chapter 5, Utilities* on page 137 for information regarding any of these utilities.

**3.3.15 Recent projects**

Displays recent projects.

**3.3.16 Exit**

Exits the program.

## 3.4 Process Menu

### 3.4.1 Processing Sessions

This option brings up the *Process Sessions* window, where all processing options are accessed.


#### **Process**

##### **Sessions to Process**

Allows you to decide which session to process. The options are listed in the shaded box.

##### **Processing Settings**

Determines which processing settings to use for each baseline. The options are listed in the shaded box.

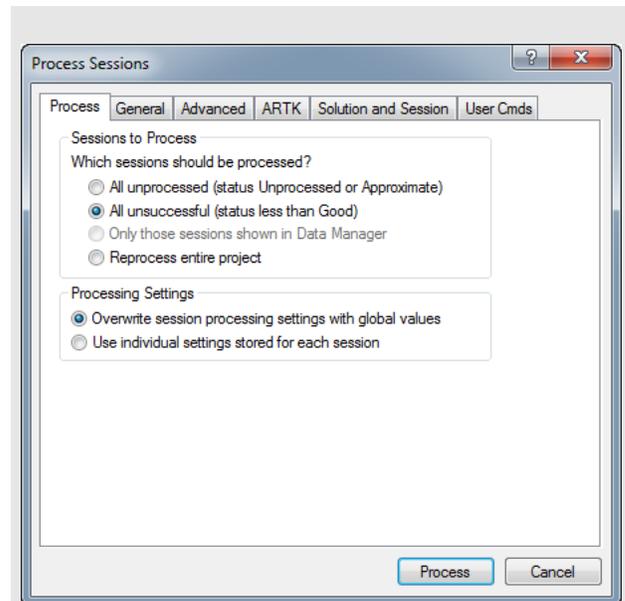

#### **Sessions to process**

##### **All unprocessed**

Processes all sessions listed as either *Unprocessed* or *Approximate*. These sessions are blue or purple in the *Map Window*.

##### **All unsuccessful**

Processes all sessions that do not have a *Good* status. This includes all sessions that are not green in the *Map Window*. Processing will start nearest to the control points and move outward.

##### **Only those session shown in Data Manager**

Process only the sessions that are presently listed in the *Data Manager* window.

##### **Reprocess entire project**

Reprocesses all solutions, regardless of status.


#### **Processing settings**

##### **Overwrite session processing settings with global values**

Applies the options set under *Options | Global Settings* to all baselines being processed. Any individual baselines whose settings were changed will have their settings overwritten.

##### **Use individual settings stored for each session.**

Uses the options as individually set for each baseline for processing.

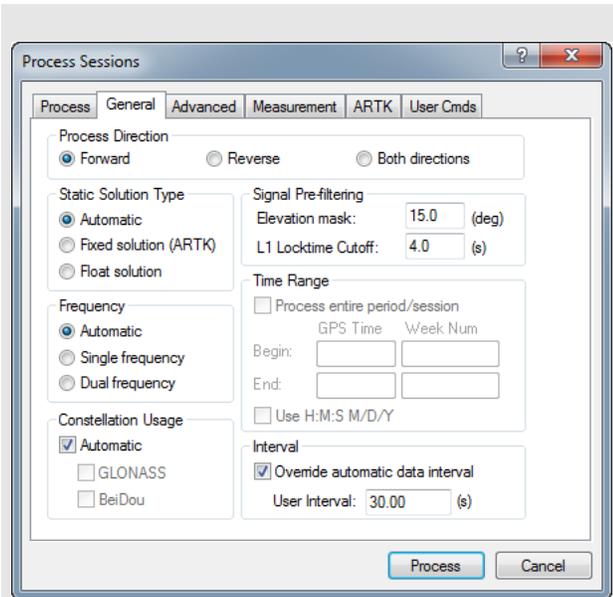

## Frequency

### Single frequency

Forces single frequency (L1 only) processing

### Dual frequency

Forces dual frequency processing. L1 / L2 data must be present in all observation files.

### Automatic

Chooses between single and dual frequency processing depending on the available data. Single frequency will only be applied if dual frequency data is unavailable at both base and remote. This is the default mode and should be used under most circumstances.

## Constellation Usage

### Automatic

All available data will be processed including GPS, GLONASS and BeiDou, if available.

### GLONASS

If disabled, GLONASS will not be used.

### BeiDou

If disabled, BeiDou will not be used.

## General Options

### Process Direction

The direction can be set to *Forward*, *Reverse* or *Both directions*. Whether GrafNet applies the last solution processed or a combination depends on your forward/reverse process direction handling in the Solution and Session options. The forward and reverse solution should provide similar solutions but in some circumstances, a reverse solution passes when a forward fails, or solutions may differ because of different base satellite selections.

### Static Solution Type

See *Table 11, Solution Types* on page 100 for information.

### Frequency

Defines the type of data used for processing. The options are listed in the shaded box.

### Constellation Usage

GrafNet supports GPS, GLONASS and BeiDou. By default, all common data will be processed, however GLONASS and BeiDou may be turned off here. The options are listed in the shaded box.

### Elevation Mask

Satellites below this mask angle will be ignored. The default value is 15°. Lowering this value allows more satellites to be used, possibly improving a solution with poor geometry.

### Time Range

This option is only available when processing sessions individually.

### Interval

Allows you to choose the processing interval. 30 seconds is the default processing interval as processing high rate data does not typically improve results and often results in overly optimistic standard deviations. Applying a higher data rate may be beneficial if the session length is very short (i.e. if only a few minutes of data was collected).

## Advanced Options

### Satellite Omissions

See *Satellite / Baseline Omissions* in the *Advanced Tab* on page 48 for more information.

### Ionospheric Options

See *Ionospheric Processing* on page 54 for a description of the Ionospheric Options.

### Forward/Reverse Process Direction Handling

#### *Use FWD/REV solution last processed*

Does not combine forward and reverse solutions if available, but rather uses the last solution processed in the traverse and network solutions. This setting is useful when reprocessing problematic baselines.

#### *Automatically combine FWD/REV solutions*

If both forward and reverse solutions are available they are combined statistically. This is the software default.

### GrafNav / GrafNet Interface Settings

If you export baselines to GrafNav for processing, the options below are available to specify how changes made to the processing settings in GrafNav affect those in GrafNet and how the two programs communicate.

- ☒ If you decide to have the processing settings in GrafNet updated to match those used in GrafNav, they will only be stored for the individual baseline that was exported. The global processing options for the GrafNet project are unaffected.

#### *Always update session settings*

Any changes made to the processing settings in GrafNav will be saved to that baseline's processing settings in GrafNet.

#### *Never update*



Any changes made in GrafNav will not be saved in GrafNet. As such, GrafNet will retain the settings that were used at the time of export.


#### *Prompt user before update*

You will be prompted after every processing run in GrafNav as to whether or not the processing settings used should be saved to GrafNet.

### Measurement Options

See *Measurement* on page 53 for information regarding the settings on this tab.

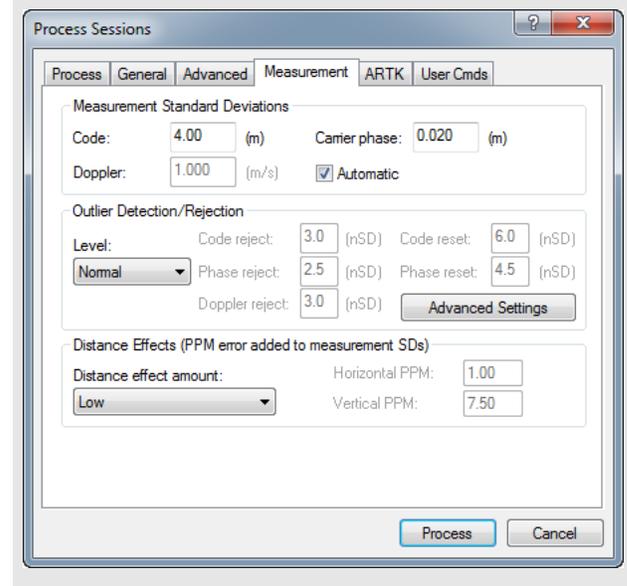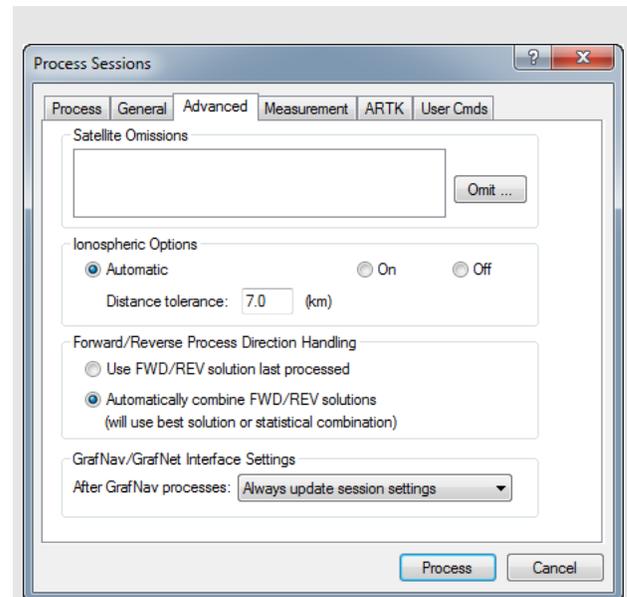

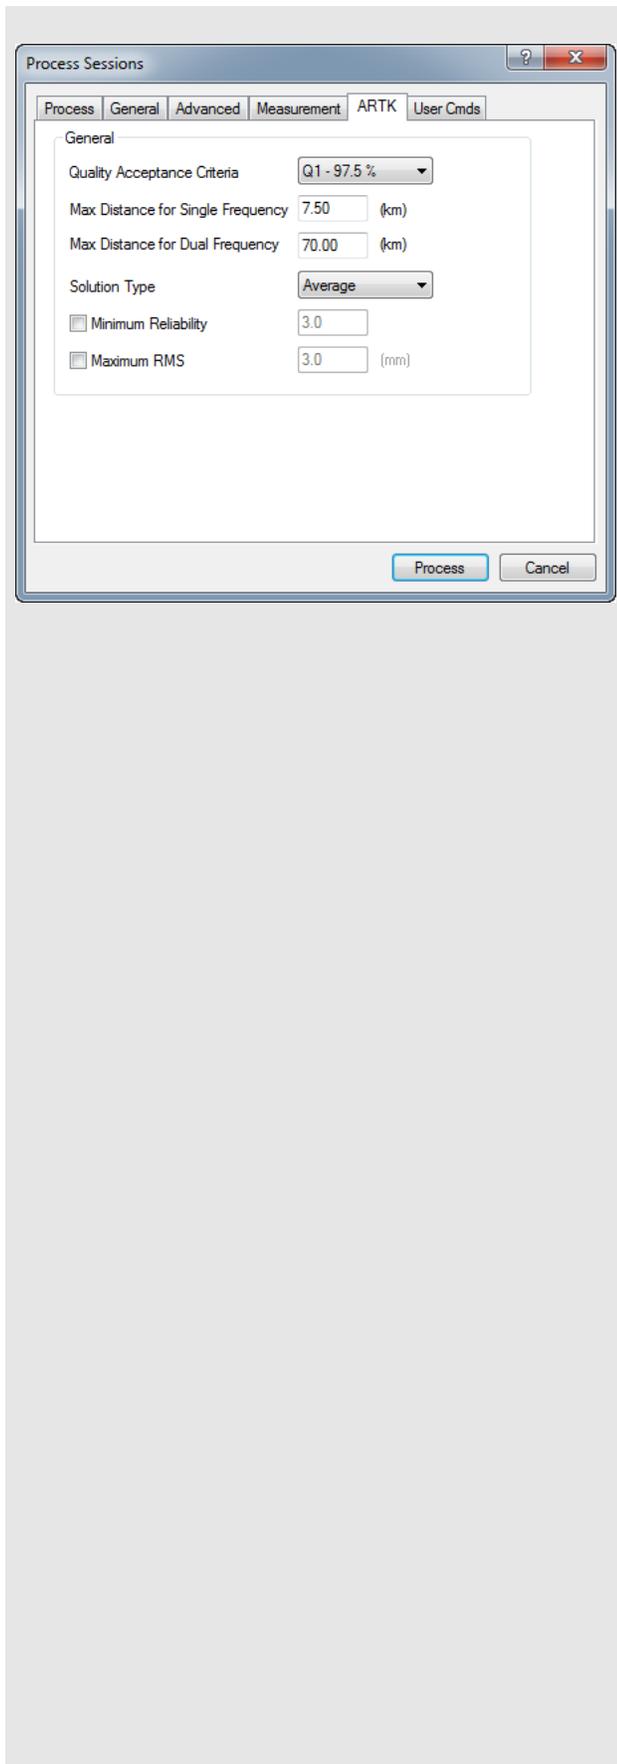

## ARTK Options

### *Quality Acceptance Criteria*

The criteria used in statistical testing in order to accept or reject an ARTK fix. In contrast to kinematic processing, static processing usually benefits from lower values (Q1 or Q0) and therefore the software default is Q1.

### *Maximum Distance for Single Frequency*

Controls the maximum distance at which a fixed integer solution will be attempted using ARTK for single frequency data.

### *Maximum Distance for Dual Frequency*

Controls the maximum distance at which a fixed integer solution will be attempted using ARTK for dual frequency data.

### *Solution Type*

Each time ARTK returns a successful solution, it is automatically re-engaged. At the end of a static session, numerous fixed solutions may be available. The solution GrafNet chooses is controlled by this option. The default is to average all available ARTK fixes but choosing the solution with lowest (best) variance, lowest (best) RMS or highest (best) reliability may help when troubleshooting a problematic baseline. In order to evaluate the effectiveness of each option, check the magnitude of the loop and check and duplicate ties in the traverse report.

### *Minimum Reliability*

ARTK will not return a successful solution unless the reliability of the ARTK fix meets this threshold. This option is off by default.

### *Maximum RMS*

ARTK will not return a successful solution unless the RMS of the ARTK fix meets this threshold. This option is off by default.

## **User Command Options**

See *User Cmds* on page 56 for more information on this tab.

### **3.4.2 Rescanning Solution Files**

This option rescans the FSS (forward static solution) and RSS (reverse static solution) files. This option will only have an effect if baselines have been processed outside of the GrafNet interface and GrafNet is not recognizing the updated processing results. Normally, this happens automatically but this is controlled through the GrafNav/GrafNet interface settings found in the Advanced tab of the GrafNet processing options.

### 3.4.3 Ignore Trivial Sessions

GrafNet defines trivial baselines as those that are unnecessary as a result of multiple receivers simultaneously running. The problem with this is that the baseline solutions computed by GrafNet are correlated, and so they are dependent. Removing trivial baselines reduces these dependencies, while still maintaining a closed loop. It also creates a network where the standard deviations reflect the actual errors more accurately.

Consider the network in *Figure 3, Trivial Baselines*. The six stations are surveyed with four receivers during two one-hour sessions. During the first session, stations A, B, C, and D are observed. During the second session, the points C, D, E, and F are observed.

This network can be divided in two sub-networks, formed by the first and second time periods. Before the trivial baseline removal, every baseline in these two sub-networks is dependent on the other baselines. These dependencies cause the loop ties to be low.

With four receivers or more collecting data at the same time, a sub-network is very over-determined. Using three GPS receivers, the network is still over-determined, but all baselines need to be included to form a closed loop. GrafNet removes these dependent or trivial baselines by creating a single loop that connects all of the points in the sub-network. *Figure 5, Network with Trivial Baselines Removed* illustrates that it is easy to remove these baselines.

With four receivers, there are two dependent baselines in each sub-network. GrafNet removes these trivial baselines for each sub-network. *Figure 4, Removal of Trivial Baselines* shows two possibilities of what GrafNet might do with the first sub-network.

GrafNet removes the trivial baseline by setting their session status to *Ignore*. It is possible to un-ignore any session by simply changing its status back to *Unprocessed*. GrafNet tries to keep the sessions that are of best quality. The following criteria is considered:

- The amount of time the baseline was surveyed.
- The frequencies used in the surveying of the session.
- The length of the baseline.
- The number of connecting baselines to the two end-points.

As shown in *Figure 5, Network with Trivial Baselines Removed*, GrafNet automatically excluded AC, BD, CE, and DF. It then forms a single loop for each of the time periods. DC is a baseline with a duplicate session.

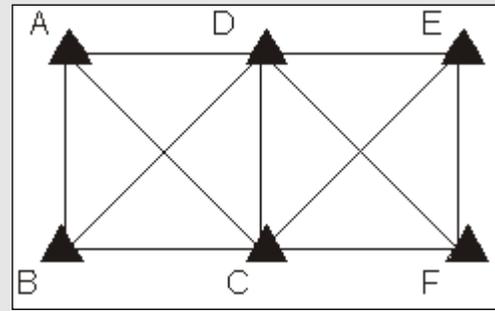


Figure 3: Trivial Baselines

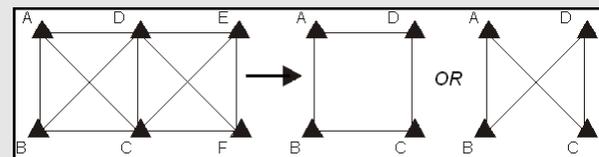


Figure 4: Removal of Trivial Baselines


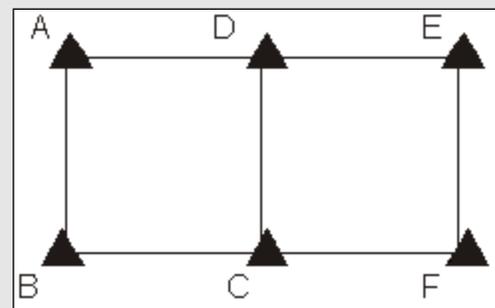


Figure 5: Network with Trivial Baselines Removed

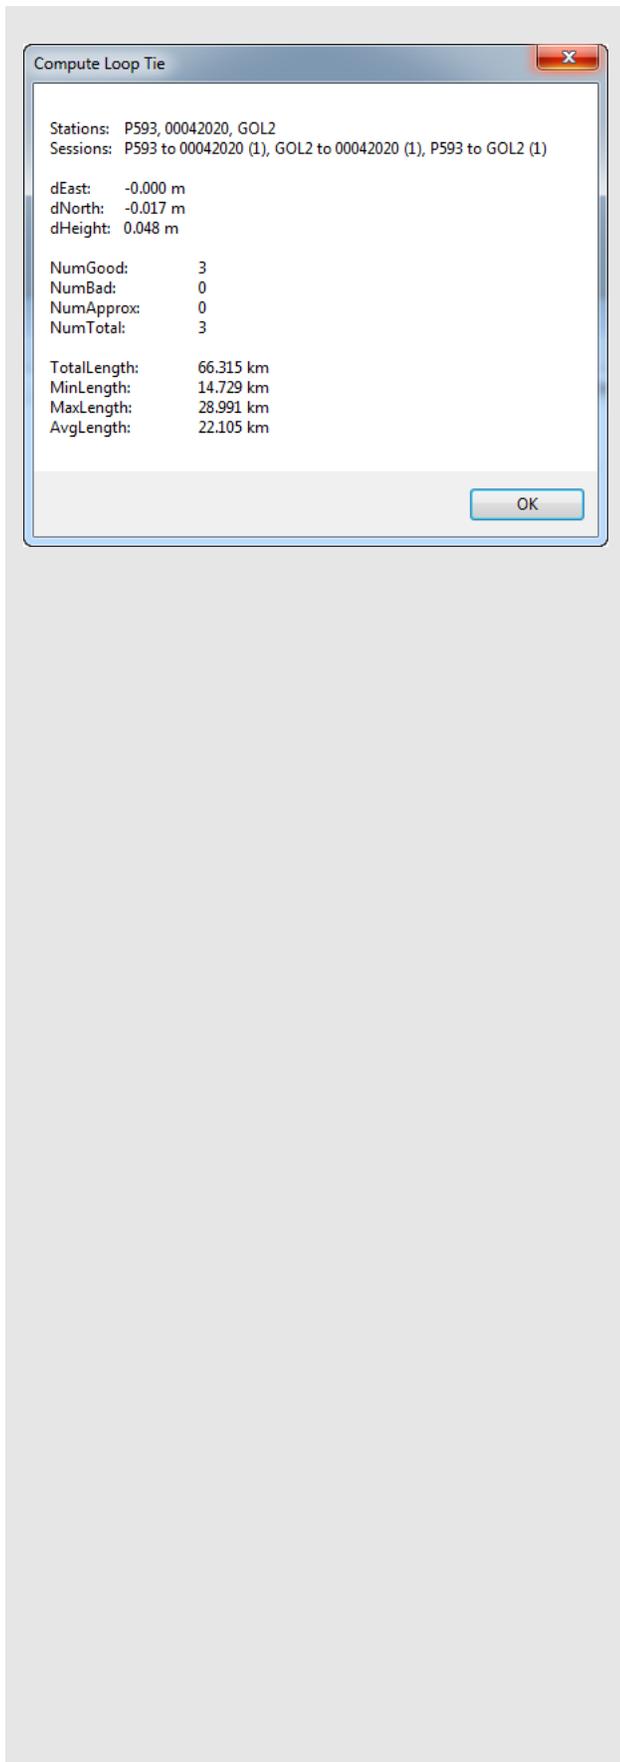

### 3.4.4 Unignore All Sessions

This feature changes the status of all ignored sessions from *Ignore* to the status they had previously.

### 3.4.5 Compute Loop Ties

In some cases, the Traverse or Network residuals show a poor fit. The first step is to ensure that the network is minimally constrained, which means that there should only be one 3-D control point, or one horizontal and one vertical control point. Convert any additional control points to check points. See *Section 3.3.8, Add / Remove Check Points* on page 107 or *Section 3.6.7, Show Data Manager* on page 122 for help.

For a constrained network, the poor fit indicated by large residuals can be caused by the following two issues:

- Incorrect antenna heights used for multiple occupations of a point
- Baseline solution is incorrect (by far the most common cause)

In some cases, it is obvious from the traverse output which baseline is the culprit, but often further investigation is required. The Compute Loop Tie feature makes such examinations much easier. By adding the vectors of a loop within the network, discrepancy values are formed in the east, north and height directions. For a loop without problems, these values should be near zero. If not, then one of the baselines forming the loop has an error. Loops can be formed in the following two ways:

- Selecting stations
- Selecting baselines forming loops

Make the selections on the map or select the stations or sessions in the *Data Manager* window. After selecting the first station or session, hold down the *Ctrl* key while selecting the remaining ones. Selection must be continuous, but it does not matter if the loop is formed in the clockwise or counter-clockwise direction. Once a complete loop is formed, select *Process | Compute Loop Tie* or right-click on one of the selections in the *Data Manager* window and select *Compute Loop Tie*. A window containing various statistics for the closed loop is displayed.

### 3.4.6 Network Adjustment

GrafNet contains a least-squares network adjustment that can be accessed through *Process | Network Adjustment*. External network adjustment programs, such as StarNet, also support GrafNet's output format.

Network adjustments are a means to more accurately compute each station's coordinates given the solution vectors computed for each session / baseline. Such an adjustment uses the X, Y and Z vector components and also utilizes the 3 x 3 covariance matrix which is the standard deviation values + coordinate-to-coordinate correlation. Using least squares, the errors are distributed based on a session's estimated accuracy. More weight is placed on sessions with lower standard deviations.

#### Advantages

In the traverse solution, each station's coordinates are determined using one session from one previous station. For networks with redundant measurements, which is usually the case, this will lead to sub-optimal determination of a station's coordinates. The network adjustment does a much better job of distributing errors. This makes it less sensitive to errors as long as a session's estimated accuracy is representative of actual errors. Thus, the network adjustment always produces the best station coordinates.

Another advantage of the network adjustment over the traverse solution is that it computes a standard deviation for each station coordinate, which is not possible in a traverse solution.

Before running the network adjustment, all baselines must have already been processed. Only good (green) baselines will be used, unless otherwise specified with the *Utilize sessions labeled 'BAD' in network adjustment* option.


#### Settings

##### **Scale Factor**

Error ellipses should appear on the stations in the *Map Window*. These ellipses are scaled by this option.

##### **Confidence Level**

The level of confidence (in percent) of the error ellipse can also be adjusted. This uses a statistical 2-D normal distribution. Changing this value does not alter the final coordinates, but it will scale the final standard deviations and covariance values. For example, 95% results in a standard deviation scale factor of 2.44.

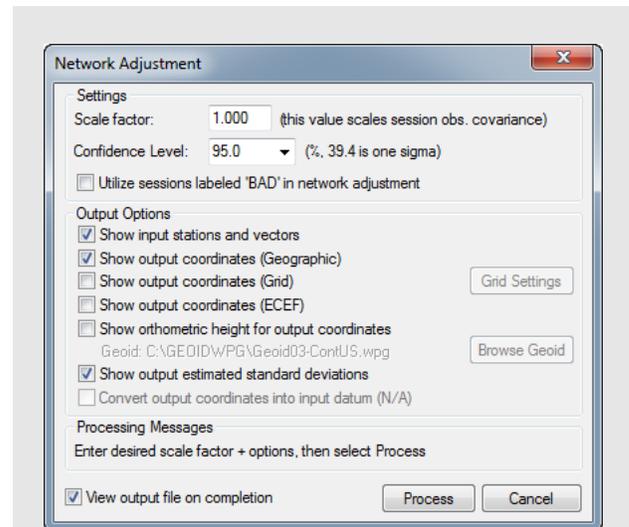

#### How to process with the Network Adjustment

1. After successfully processing all of the baselines within GrafNet, access the network adjustment via *Process | Network Adjustment*.

- ✉ The network adjustment only accepts session data flagged as *Good*. Other baselines will be ignored unless otherwise specified with the *Utilize sessions labeled 'BAD' in network adjustment* option.

For the initial run of the network adjustment, the scale factor should be set to 1.0. This will not scale the final standard deviations to match observed session vector residuals. See *Variance Factor and Input Scale Factor* on page 117 for more information.

2. Click the *Process* button to compute a network adjustment solution. Any errors encountered are displayed.
3. If there are any "hanging stations", which are stations that are not attached to the network or are attached by a *Bad* baseline, the adjustment will fail. It is possible to change the status of the baseline to *Good* from the *Sessions* window in *Data Manager*.
4. A .net file is created, which can viewed via *Process | View Network Adjustment Results*.

- ✉ The network adjustment must be re-run if you have reprocessed sessions or changed the station configuration.

## Interpreting the network adjustment report

The network adjustment output is an ASCII file that can be viewed and printed from GrafNet.

### Input Stations

This is a list of the control (GCP) and check points in the project. Their associated geographic coordinates and standard deviations are also shown.

### Input Vectors

This is the ECEF vector components for each session that has a *Good* status. The lower triangular of the ECEF covariance matrix is shown next to the vector components. The value in brackets is the standard deviation of the ECEF X, Y or Z axis in metres. The covariance values are not scaled by the Scale Factor entered at the start.

### Output Vector Residuals

This indicates how well the session vectors fit in the network. The residual values are shown in local level, where RE is the east axis residual, RN is the north axis residual and RH is the Z axis residual. These values are expressed in metres and should ideally be a few centimetres or less. Larger values may be acceptable for larger networks.

In addition to the residual values, a parts-per-million (PPM) value is shown. This indicates the size of the residuals as a function of distance. 1 PPM corresponds to a 1 cm error at a distance of 10 km. The baseline length is also shown in kilometres. Baselines less than 1 km can have large PPM values. This is because other errors such as antenna centering become an influencing issue. This might not indicate an erroneous session solution. The last value is the combined (east, north and up) standard deviation (STD).

### Check Point Residuals

If check points have been added, this section shows how well the known coordinates compare to those computed by the network adjustment.

### Control Point Residuals

This section shows the adjustment made to control point residuals. When just one control point is used, the adjustment will always be zero. With two or more points, the adjustment depends on the input control point standard deviation and the session vector standard deviations.

## Output Options

Controls what is output from the network solution.

### *Show input stations and vectors*

Outputs all the control and check points and their vectors. The coordinates are output in geographic form.

### *Show orthometric height for output coordinates*

Requires that you provide a geoid file, which can be selected with the *Browse Geoid* button.

Other output options include outputting the estimated standard deviations.

To process the network adjustment, click the *Process* button. This step must be performed each time a project is re-loaded.

### *View output file on completion*

Lets you view the ASCII solution file once the adjustment has been made.

## Using Multiple Control Points

When multiple control points are present, it is suggested to initially use only one. This prevents errors in the existing control from causing otherwise correct session vectors not to fit. Therefore, large tie errors in the traverse solution or large residuals in the network adjustment are attributed to GNSS processing and not poorly fitting base station coordinates.

The variance factor is only truly valid as a scale factor for a minimally constrained adjustment. See the shaded box for information about interpreting the output. Once satisfied with the quality of the GNSS data and the fit of the session vectors, you can add additional control points with *File | Add / remove Control Points* or by right-clicking on a station in the *Map Window* and selecting *Add as Control Point*.

Since the network adjustment is a least-squares adjustment, it will move control point coordinates to make the network fit better. This is an undesirable effect for many applications. To avoid it, give control points very low standard deviations. The default value is 5 mm, which might have to be lowered if the network fit is poor. Lowering the standard deviation to 0.0001 m forces the control point to “stay put”. A standard deviation of zero is not allowed. Change the standard deviation for control points via *File | Add and Remove Control Points*. Select the desired control point and click *Edit*.

## Using Horizontal and Vertical Control Points

GrafNet supports horizontal and vertical control points in addition to full 3-D control. To utilize either option, you must have available 1-10 m accurate coordinates for the unknown axes (that is, Z for horizontal control and latitude and longitude for vertical control). These coordinates can be obtained from the single point solution or from an initial network adjustment run using just one 3-D control point. The latter method is normally used.

## Variance Factor and Input Scale Factor

The variance factor is at the bottom of the network adjustment report. It is the ratio between the observed residuals errors and the estimated session (baseline) accuracies. Ideally, the variance factor should be 1.0. This indicates that the estimated errors correspond well to observed errors. A variance factor less than 1.0 indicates that the estimated errors are larger than the observed errors (that is, session standard deviations are pessimistic). Most often, a value greater than 1.0 denotes that observed errors are larger than estimated accuracies (that is, session standard deviations are optimistic) unless the GPS data is very clean. Thus, low variance factors are normally desired. Very large variance factors of 100+ normally indicate abnormally large session errors (that is, a very poor network fit), and you should try and investigate the source of the problem before using the coordinates produced.

The variance factor can also be used to scale the station standard deviations to more realistic values. The network adjustment is initially run with a unity scale factor. The resulting variance factor can then be inserted in the scale factor field from the first screen. After running the network adjustment with this new scale factor, you will notice larger or smaller standard deviations and that the new variance factor should now be ~1.0. This procedure will only work for a minimally constrained adjustment (that is, one 3-D control point, or one 2-D and one 1-D control point).

## Interpreting the network adjustment report cont.

### Output Station Coordinates


This shows the computed coordinates for each of the stations both in geographic and ECEF coordinate systems. The output datum is indicated by the Datum parameter at the top of this file.

### Output Variance / Covariance

This section shows the local level (SE, SN and SZ) standard deviations along with ECEF covariance values. The standard deviation values are scaled by both the input scale factor and the statistical (confidence) scale factor. The covariance values are only scaled by the input scale factor. If error ellipse parameters are desired, then the *Write Coordinates* feature should be used.

### Variance factor

See *Variance Factor and Input Scale Factor* on page 117 for information.

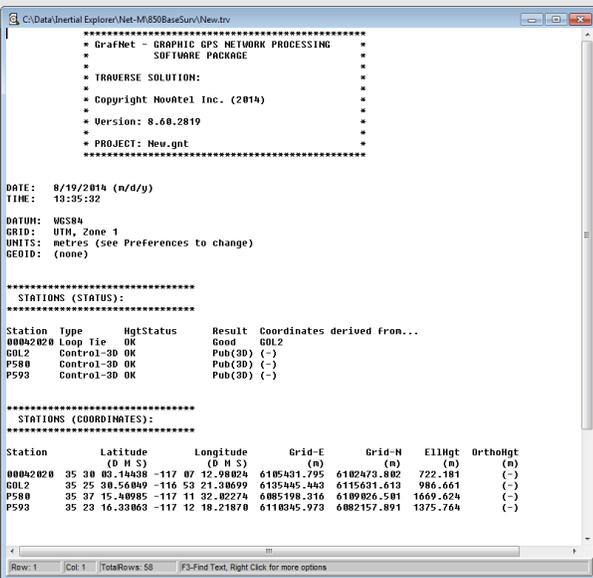

```

C:\Data\Inertial Explorer\Net-M830BaseSurv\New.trv
*****
* GrafNet - GRAPHIC GPS NETWORK PROCESSING
* SOFTWARE PACKAGE
*
* TRAVERSE SOLUTION:
*
* Copyright Novatel Inc. (2014)
*
* Version: 8.60.2819
*
* PROJECT: New.gnt
*****

DATE: 07/19/2014 (m/d/y)
TIME: 13:35:32

DATUM: WGS84
GRID: UTM, Zone 1
UNITS: metres (see Preferences to change)
GEOID: (none)

*****
STATIONS (STATUS):
*****

Station Type HgtStatus Result Coordinates derived from...
00042020 Loop Tie OK Good GOL2
GOL2 Control-3D OK Pub(3D) (-)
P580 Control-3D OK Pub(3D) (-)
P593 Control-3D OK Pub(3D) (-)

*****
STATIONS (COORDINATES):
*****

Station Latitude Longitude Grid-E Grid-N EllHgt OrthoHgt
(D M S) (D M S) (m) (m) (m) (m)
00042020 35 30 03.14438 -117 07 12.98824 6105431.795 6102473.802 722.181 (-)
GOL2 35 25 30.56849 -116 53 21.30699 6135485.443 6115631.613 986.661 (-)
P580 35 37 15.40985 -117 11 32.82274 6085198.316 6109026.501 1669.624 (-)
P593 35 23 16.33063 -117 12 18.21870 6110345.973 6082157.891 1375.764 (-)

Row: 1 Col: 1 TotalRows: 58 F3-Find Text, Right Click for more options

```

### 3.4.7 View Traverse Solution

GrafNet computes a traverse solution automatically after processing each session. The traverse report is written to a TRV file and opened automatically in GrafNet's internal viewer.

#### Traverse Solution

Prior to generating the network adjustment report, it is recommended that you view the traverse report. The traverse report contains useful information, particularly a report on any loop, check and duplicate ties in the project.

For stations that have more than two baselines connecting, a loop tie is computed. This means that there is more than one possible transfer of coordinates to this point. The first transfer is used for coordinate generation. Subsequent transfers are used to compute loop ties. The loop ties are good for locating erroneous baselines but they are an accumulated error of many baselines to that point. This means that the last baseline in that traverse leg may not be the erroneous one. These ties also give a good indication of the accuracy of the network, but the magnitude of the errors will be larger than the network adjustment residuals. The traverse method accumulates errors (closures) while the network adjustment spreads these errors across the whole network.

### 3.4.8 View Processing Report

This option displays the RPT file containing information about the stations, sessions, baselines and observations. It also gives a summary for each session processed.

### 3.4.9 View All Sessions

This option will display all sessions in the Data Manager.

### 3.4.10 View All Observations

This option will display all observations in the Data Manager.

### 3.4.11 View All Stations

This option will display all stations in the Data Manager.

## 3.5 Options Menu

### 3.5.1 Global Settings

This feature accesses the global processing options. The options set here are applied to all baselines in the project, overriding any settings that may have been customized for individual baselines. The processing settings for individual sessions can be customized by right-clicking on the session in the *Data Manager* and selecting *Options*.

### 3.5.2 Sessions Settings (Shown in Data Manager)

This feature allows you to set the processing options for only the sessions currently appearing in the *Data Manager*. In order to use this feature, the *Sessions* window of the *Data Manager* must be open.

### 3.5.3 Datum Options



See *Section 2.6.3, Datum* on page 59 for help with this feature.


### 3.5.4 Grid Options

See *Section 2.8.7, Grid/Map Projection* on page 88 for information regarding this feature.

### 3.5.5 Geoid Options

This feature lets you select the geoid for the project. The geoid selected is used as a reference when outputting orthometric heights in the *Traverse Solution* (TRV) file. It is also used as a default for orthometric height output when running the network adjustment.

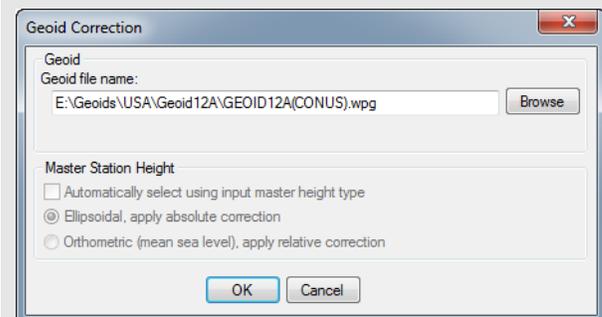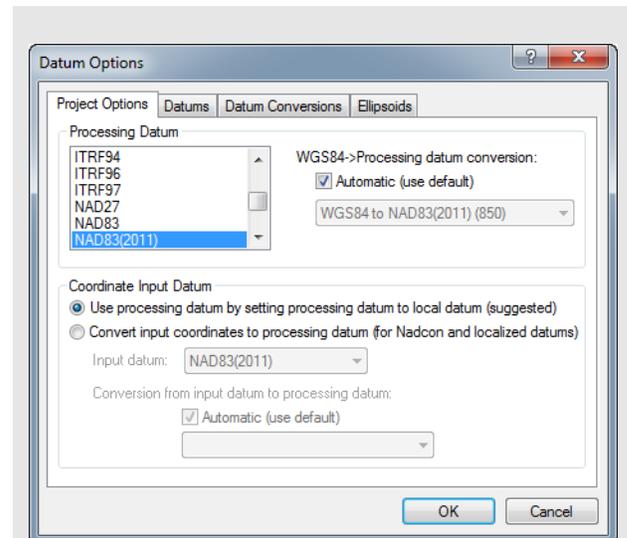

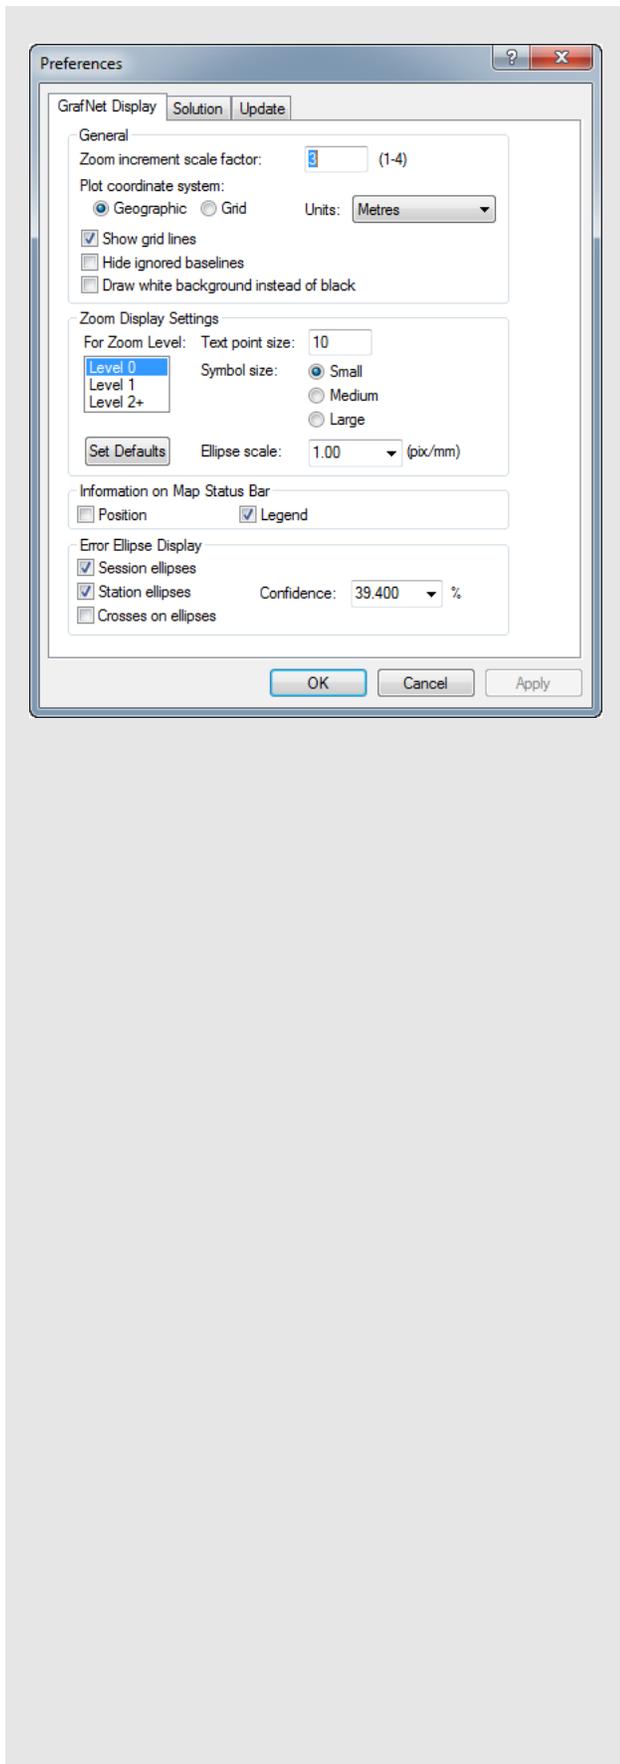

### 3.5.6 Preferences

#### GrafNet Display

See *Section 2.6.7, Preferences* on page 62 for information regarding any options not described here.

#### Zoom Display Settings

The *Ellipse scale* field changes the size of the error ellipses. Projects covering large areas might have large ellipses and decreasing the values for all three zoom scales (0, 1, and 2) will make the ellipses smaller.

#### Error Ellipse Display

Controls whether session and station ellipses are plotted. Station ellipses are only generated after a network adjustment. The *Crosses on the ellipses* option shows the axes of the error ellipses.

#### Solution

In addition to the options described in *Section 2.6.7, Preferences* on page 62, the *Solution* tab offers GrafNet users the ability to automatically run a network adjustment after processing has completed. When this option is selected, the network adjustment report (.net file) will open automatically in an internal ASCII viewer provided the *View output file on completion* option is enabled within the Network Adjustment options.

## 3.6 Output Menu

### 3.6.1 Export Wizard

See Section 2.7.5, *Export Wizard* on page 74 for information regarding this feature.

### 3.6.2 Output to Google Earth

See Section 2.7.8, *Export to Google Earth* on page 78 for information regarding this feature.

### 3.6.3 Export to DXF

Only the options specific to GrafNet are discussed here.

#### Station Error Ellipses

Displays the error ellipse around each station and is only available if a network adjustment has been completed.

#### Baseline Error Ellipses

Only the baselines were processed.

#### Error ellipse scale factor

The ellipse scale factor scales the ellipses so they will be visible if you do not see them in the DXF file.

### 3.6.4 Export to STAR\*NET

This feature creates an EXP file which is accepted as input to MicroSurvey's STAR\*NET network adjustment software.

### 3.6.5 Build HTML Report

See Section 2.7.7, *Build HTML Report* on page 78 for information on this feature.

### 3.6.6 Show Map Window

#### Map Window

If you have unintentionally closed the GrafNet Map window, it can be re-opened using this option.

#### Mouse Usage in Map Window

Either double-clicking or right-clicking on a station, gives you access to several options, which are described in Section 3.6.7, *Show Data Manager* on page 122.

- 
- Clicking on a station displays the station in the Stations window of the Data Manager, while clicking on a baseline will display that baseline and any duplicates in the Sessions window.
- 



Table 12: Station Color Legend

Color	Description
Cyan	<b>Control point</b> – A reference station with known coordinates
Dark Purple	<b>Check point</b> – Station has known coordinates available, but they will only be used as a check. Comparisons are found in the TRV file. The network adjustment output file (NET) also shows check point residuals.
Light Purple	<b>Tie point</b> – Two or more sessions are connected as remotes to this station via the traverse solution. The TRV file will show traverse ties.
Yellow	<b>Traverse point</b> – No tie information can be computed as there is only one avenue for establishing coordinates for this station.

## Columns in the Observation Window

### Name

Name of the station (entered or scanned during data import).

### AntHgt

Antenna height for the period at which the observations were made.

### AntType

Name of the absolute antenna model applied.

### File

File, path and name of the GPB observation file.

### #

If multiple observations periods are contained within one GPB file, this column indicates which of those observation periods is being referred to. Observation periods are numbered sequentially in the order they appear in the GPB file.

### Length

Length of the observation period in HH:MM:SS.

### Start Date

Date when the observation period started in MM/DD/YYYY.

### Start Time

Time of day at which the observation period started in HH:MM:SS.

### Receiver

Name of the receiver as decoded to the GPB file.

### Freq

Indicates whether data is single or dual frequency.

### Int(s)

Interval, in seconds, at which the data was logged.

## 3.6.7 Show Data Manager

### Data Manager

This interactive window allows for easy display and organization of all project data.

### Observations Window

The *Observations* window displays information regarding all the observation files (GPB) that are included in the project. The columns that are in the shaded box are displayed in the *Observations* window. The following options are available by right-clicking on an observation:

#### *View*

Displays the *Information* window for the observation file.

#### *Edit*

Opens the *Add / Edit Observation* window, in which the station name and antenna information can be corrected.

#### *Delete Observation*

Removes the observation period from the project.

#### *View GPB File*

Opens the observation file in *GPB Viewer*.

#### *View STA File*

Opens the station file for the associated GPB file.

#### *View Ephemeris File*

Opens the ephemeris file (EPP) for the associated GPB file.

#### *Plot Coverage*

Opens the *File Data Coverage* plot for all observations in the project. See *Table 1, Common Plots* on page 68 for information regarding this plot.

#### *Plot L1 Satellite Lock*

Launches the *L1 Satellite Lock / Elevation* plot. See *Table 1, Common Plots* on page 68.

#### *Plot L2 Satellite Lock*

Launches the *L2 Satellite Lock / Elevation* plot.

#### *Show Sessions using Observation*

Displays all sessions involving the observation period in the *Sessions* window.

Expanding the Observations branch in the Data Objects window on the left-hand side of the Data Manager allows the observations to be displayed individually in the Observations window. Expanding each observation in the Data Objects window displays the station that was observed.

### Stations Window

The *Stations* window displays information regarding all the points observed in the network. The columns listed in the shaded box are displayed in the *Stations* window. The following options are available by right-clicking on a station:

#### ***View Solution***

Displays the solution from traverse computation and network adjustment, if valid.

#### ***Add as Control Point***

Allows you to define the station as a control point.

#### ***Add as Check Point***

Allows you to define the station as a check point.

#### ***Edit Control / Check Point***

Allows for editing of the input coordinates of stations already defined as check or control points.

#### ***Toggle between Control / Check Point***

Switches status between control point and check point.

#### ***Add to Favourites***

Adds the station to the *Favourites* list, using the computed coordinates.

#### ***Remove Processing Files***

Removes all observation files logged at that station from the project.

#### ***Show Observations***

Displays all observation periods for that station in the *Observations* window.

#### ***Show Connecting Sessions***

Displays all sessions involving that station in the *Sessions* window.

Expanding the Stations branch in the Data Objects window on the left-hand side of the Data Manager allows for the stations to be displayed individually in the Stations window. Further expanding each station in the Data Objects window displays all observation files in which the station was observed.

### Columns in the Stations window

#### **Name**

Name of station.

#### **Type**

See *Table 12, Station Color Legend* on page 121 for information on station types.

#### **Latitude**

Latitude of the station.

#### **Longitude**

Longitude of the station.

#### **EllHgt**

Ellipsoidal height of the station.

#### **Source**

Indicates whether the station coordinates are from the traverse solution or the network adjustment.

#### **#Files**

Number of observations periods for that station.

#### **TotalLen**

Total observation time made at that station.

#### **A(mm)**

Semi-major axis of error ellipse at that station, as defined from the network adjustment.

#### **B(mm)**

Semi-minor axis of error ellipse at that station, as defined from the network adjustment.

#### **DH(mm)**

Estimated height standard deviation.

## Columns in the Sessions Window

### Name

Name of the session, which serves to indicate the direction of coordinate transfer.

### SD

Standard deviation, in mm, of the baseline as calculated by the Kalman filter.

### Reliability

Reliability of the fixed static solution, if available.

### RMS

RMS of the fixed static solution. Applies only to fixed baselines.

### SolType

Indicates solution type. See *Table 11, Solution Types* on page 100 for a full description.

### Time

Length of session, in *hh:mm* format.

### Dist

Baseline distance, in km.

### Status

Solution status. See *Table 11, Solution Types* on page 100 for descriptions.

### From

Indicates the *FromStation*.

### To

Indicates the *ToStation*.

### #

If multiple sessions exist for the same baseline, indicates which session is being referred to.

## Sessions Window

The *Sessions* window displays information regarding all the sessions in the network. The columns listed in the shaded box are displayed in this window. The following options are available by right-clicking on a session:

### View Results

Displays the results of forward or reverse processing, or the combined solution.

### View Information

Displays the *Information* box for the session.

### View File

Opens the message log, static summary, trajectory output or configuration files.

### Plot

Launches the plots discussed in *Table 1, Common Plots* on page 68.

### Options

Allows access to the processing settings so that they can be set individually for this session. See *Section 3.4, Process Menu* on page 109 for additional information.

### Override Status

Manually sets the status of the session. See *Table 11, Solution Types* on page 100 for information. Ignore redundant or troublesome sessions. You can assign a *Good* status to a failed baseline if the solution is, in fact, correct. Only do this on closed loop networks.

### Process

Processes the session independently of all others.

### GrafNav/IE

Launches the baseline into GrafNav. See *Section 2.5, Process Menu* on page 45 for additional information.

### Delete

Deletes all of the processing files related to that session, or deletes either the forward or reverse solution.

### Compute Azimuth / Distance

Displays the *Distance and Azimuth* box for the session. See *Section 2.8.2, Distance & Azimuth Tool* on page 85 for help.

### Show To / From Stations

Displays both stations in the *Stations* window. See *Stations Window* on page 123 for information.

### Show To / From Observations

Displays both station *Observations* windows. See *Observations Window* on page 122 for information.

Expand the *Sessions* branch in *Data Objects* of the *Data Manager* to display individual sessions in the *Sessions* window.

### Control / Check Points

The *Control / Check Points* window displays information regarding all the stations assigned known coordinates in the network. The columns listed in the shaded box are displayed in the *Control / Check Points* window.

The following options are available by right-clicking on a control or check point:

#### **View Info**

Displays the *Information* box for the point.

#### **Edit**

Allows for editing of known coordinates via the *Add / Edit Control Point* window.

#### **Toggle between Control / Check**

Switches status between control point and check point.

#### **Show Station**

Displays the station in the *Stations* window. See *Stations Window* on page 123 for information.

Expanding the Control or Check Points branches in the Data Objects window on the left-hand side of the Data Manager allows for the points to be displayed individually in the Control / Check Points window.

### Columns in the Control / Check Points Window

#### **Name**

Name of the station.

#### **Type**

Type of control or check point, which can be 3D, horizontal or vertical.

#### **Latitude**

Known latitude of the station.

#### **Longitude**

Known longitude of the station.

#### **EllHgt**

Known ellipsoidal height of the station.

#### **HzSD**

Standard deviation of the known horizontal coordinates. Applies only to 3D and horizontal control points.

#### **VtSD**

Standard deviation of the known vertical coordinate. Applies only to 3D and vertical control points.

#### **dE**

Easting residual between input coordinate and traverse solution at check point.

#### **dN**

Northing residual between input coordinate and traverse solution at check point

#### **dH**

Height residual between input coordinate and traverse solution at check point

Table 13: Baseline Color Legend

Color	Description
Blue	<b>Unprocessed</b> – Normally represents an unprocessed baseline. In some cases when processing quits prematurely, the color may remain blue. The return error message can be viewed by right-clicking the baseline in the <i>Sessions</i> window of the <i>Data Manager</i> and selecting <i>View Information</i> .
Grey	<b>Ignored</b> – Indicates a session that is to be ignored.
Yellow	<b>Duplicate</b> – Indicates a duplicate baseline, meaning that it has more than one session. Such baselines are plotted with two colors, with one being yellow. The second color represents the best solution among all the sessions for the duplicate baseline.
Purple	<b>Approximate</b> – Indicates that an error has occurred during the processing and only an approximate (1 to 5 metres) solution was extracted. Such a solution is only useful for transferring an approximate position from base to remote. This session should either be reprocessed or ignored.
Red	<b>Bad / Failed</b> – Represents a baseline where processing failed one or more tests and is thus deemed to be bad. Right-click the baseline in the <i>Sessions</i> window of the <i>Data Manager</i> and select <i>View Information</i> to determine the problem. If you are confident that the solution is okay, the status can be changed from the <i>Sessions</i> window as well. You can control when float solutions pass via the <i>Solution</i> tab under <i>Options   Preferences</i> .
Green	<b>Success</b> – Indicates a session that has passed all tests.

### 3.6.8 Baselines Window

The *Baselines Window* displays information regarding all the sessions in the network. See *Columns in the Sessions Window* on page 124 for a description of the columns displayed and the options available by right-clicking on a session.

Expanding the *Baselines* branch in the *Data Objects* window on the left-hand side of the *Data Manager* allows for the sessions to be displayed individually according to the baseline they are expanded from. Expanding each baseline in the *Data Objects* window allows for the display of any individual session in the *Sessions* window.

## 3.7 Tools Menu

See *Section 2.8, Tools Menu* on page 85 for information regarding the features available through this menu.

## 3.8 Help Menu

See *Section 2.10, Help Menu* on page 98 for information about these features.

## **4.1 Overview of the File Formats**

### **4.2 CFG File**

A CFG file is a GrafNav project file. This file is written by GrafNav when creating a new project and contains all processing options used in the project. The name of the CFG file defines the name of all ASCII and binary files written by GrafNav when processing.

### **4.3 GNSS Data Files**

The following files are produced by GrafNav's raw GNSS data conversion utility.

#### **4.3.1 GPB File**

Raw code, carrier and Doppler measurements are converted to a GPB file. These are the raw measurements required for post-processing. Also written to the GPB file is a position for each measurement epoch, date and time information and other information.

GPB files can be opened within GrafNav's *GPB Viewer*, which allows you to view the raw measurements collected and perform basic editing functions if needed. GPB files can also be converted to RINEX version 2.0 and 2.11 files using the GPB to RINEX utility. Requests for the GPB file format should be made to [support@novatel.com](mailto:support@novatel.com).

### 4.3.2 STA File

A station file contains any decoded camera marks, antenna heights and station names. It is read automatically by GrafNav when adding a GPB file to a project. The first line of a station file should contain \$STAINFO.

The station file may have a header record. The header is optional and will not be present in most cases. The following is a description of the header format.

```
Hdr {
  Proj:      "Name of Project"           Field project name
  User:      "User Name"                Name of field operator
  Time:      hh:mm:ss LOCAL/GMT         Start time
  Date:      mm/dd/yyyy                 Start date
  RxName:    Receiver                   Receiver type
  RxSub:     Model                       Receiver sub type
  Hi:        Hi_m VERT/SLANT             Antenna height, measured vertically or slanted
  Ant:       V_Offset H_Offset "Name"    Antenna info (vertical offset to phase center, horizontal distance to
                                          measurement mark, antenna model name)

  Pos:       phi lamda ht ELL/ORTHO      Computed position of antenna
  Mode:      SP/DGPS/RTFL/RTFX/RTK/FIX  Mode of solution (SP=single point, GPS=DGPS, RTFL=float,
                                          RTFX=fixed, RTK=float/fixed not known, FIX=known)
}
```

The following is the format for the stationary station marks:

```
Sta {
  *ID:       "Station ID"
  *GTim:     SecOfWeek [WeekNo]          GPS Time
  UTim:      SecOfWeek [WeekNo]          UTC Time could be used instead of GTim but this is not
                                          recommended and often not supported.

  Pos:       phi lamda ht ELL/ORTHO      Computed position of antenna
  Mode:      SP/DGPS/RTFL/RTFX/RTK/FIX  Mode of solution (SP=single point, DGPS=DGPS, RTFL=float,
                                          RTFX=fixed, RTK=float/fixed not known, FIX=known)

  Std:       SdE SdN SdH                 Standard deviation, in metres
  Hi:        Hi_m VERT/SLANT             Antenna height, measured vertically or slanted
  Ant:       V_Offset H_Offset "Name"    Antenna info (vertical offset to phase center, horizontal distance to
                                          measurement mark, antenna model name)

  OffR:      Range TrueAzimuth DH        Offset to actual point (2D range in metres, azimuth in degrees,
                                          height difference in metres)

  OffL:      DE DN DH                     Offset in local level frame, in metres
  OffB:      DX DY DZ                     Body frame offset, where X-RightWingPos, Y-ForwardPos,
                                          Z-UpPos

  Att:       roll pitch heading           Attitude, in degrees
  Desc:      "description"
  Rem:       "remarks"
  Nsv:       NumSats NumGPS NumGlonass
  Dop:       PDOP HDOP VDOP
  Rms:       L1Phase CACode
  Age:       Sec                           Age of last correction or RTK receipt
  Enable:    1/0                           Used in GrafNav
}
```

---

☒ \* indicates a required field.

---

The station file format also handles event marks. Saving a project with event marks loaded brings the event marks into the station file. The following is the event mark format.

```
Mrk {
  *Event:  Number                Event number or name (no spaces)
  Desc:    "Name"                 Roll name
  *GTim:   SecOfWeek [WeekNo]    GPS Time
  *UTim:   SecOfWeek [WeekNo]    UTC Time could be used instead of GTim but this is not
                                         recommended and often not supported

  Pos:     phi lamda ht ELL/ORTHO  Computed position
  Mode:    SP/DGPS/RTFL/RTFX/RTK/FIX Mode of solution (SP=single point, DGPS=DGPS, RTFL=float,
                                         RTFX=fixed, RTK=float/fixed not known, FIX=known)

  Std:     SdE SdN SdH             Standard deviation, in metres
  Vel:     VE VN VH               Velocity, in m/s
  Att:     roll pitch heading     Attitude, in degrees
  Rem:     "remarks"
  Nsv:     NumSats NumGPS NumGlonass
  Dop:     PDOP HDOP VDOP
  Rms:     L1Phase CACode
  Age:     Sec                    Age of last correction or RTK receipt
  Enable:  1/0                    Used in GrafNav
}
```

---

☒ \* indicates a required field.

---

Another data type handled in the station format is an RTK epoch, where every epoch can be recorded.

```
RTK {
  *GTim:   SecOfWeek [WeekNo]    GPS Time
  *UTim:   SecOfWeek [WeekNo]    UTC Time
  *Pos:    phi lamda ht [ELL/ORTHO] Computed position
  Mode:    SP/DGPS/RTFL/RTFX/RTK/FIX Mode of solution (SP=single point, DGPS=DGPS, RTFL=float,
                                         RTFX=fixed, RTK=float/fixed not known, FIX=known)

  Std:     SdE SdN SdH             Standard deviation in metres
  Vel:     VE VN VH               Velocity, in m/s
  Att:     roll pitch heading     Attitude in degrees
  Nsv:     NumSats NumGPS NumGlonass
  Dop:     PDOP HDOP VDOP
  Rms:     L1Phase CACode
  Age:     Sec                    Age of last correction or RTK receipt
  Enable:  1/0                    Used in GrafNav
}
```

---

☒ \* indicates a required field.

---

### 4.3.3 EPP File

Waypoint's software uses a custom ASCII file format for the ephemeris records. These records are created by the *Convert Raw GNSS data to GPB* utility. Duplicate records will be automatically ignored by the software. Requests for the EPP data format should be made to [support@novatel.com](mailto:support@novatel.com).

## 4.4 Output Files

This section discusses some of the output files created when processing with Waypoint software.

### 4.4.1 FML, RML, FSL and RSL Files

The *Forward Message Log* and *Reverse Message Log* files (FML and RML) contain all of the messages generated by the differential processing engine. FSL and RSL files contain all of the messages generated by the Precise Point Positioning engine. Some common messages are described here:

#### Reading ephemeris files...

**Processing ephemeris file 'C:\GPSData\rover\_.epp'**

**Detected 40 GpsEph, 0 GlonassEph, 0 GpsIono and 0 GpsAlmanac records**

This message is generated just prior to processing. GrafNav combines all ephemeris measurements at the base and rover before processing.

**Best base on BL1 is PRN 17 with 4 points and elevation of 62.1 degrees**

**Second best on BL1 is PRN 16 with 2 points and elevation of 51.7 degrees**

This message indicates the base satellite (and its elevation) selected after a base change or at outset. The second best base is also shown. Base satellite selection is based on a point system that includes a number of factors such as elevation above the horizon and whether it is rising or falling.

**Detected bad Phase measurement @ 9.1 sigma. Rms is 0.336 m (Worst Prn is 14 on B/L BL1 with residual of 0.465)**

This can be caused by undetected cycle slips or noisy measurements due to a challenging GNSS signal environment. GrafNav's outlier detection routines will attempt to fix the problem by rejecting individual measurements and recomputing the residual.

**+++ ARTK obtained a valid integer fix on BL BL1**

**Fixed 8 out of 8 satellites at a distance of 8.3 km**

**Residual RMS is 2.47 mm, Reliability is 3.8, Float-fix-sep. is 0.243 m**

**ARTK not engaged--rewind ignored**

**ARTK success!**

Message displayed for a successful ARTK fix

**Epoch rejected due to poor satellite geometry--DD\_DOP of 918.0 too large**

This message warns that an epoch has been rejected because of poor satellite geometry.

**Doppler L1 cycle slip on PRN 24 of 1575419.57 cycles on baseline BL1**

Indicates that a large change in carrier phase has been detected which is interpolated as a cycle slip.

**Locktime cycle slip on PRN 4 of -5.92 cycles on baseline BL1**

Cycle slip has been reported by base or remote receiver.

**Inserted L1 cycle slip due to locktime reset for PRN 4 on baseline BL1**

Receiver cycle slip counter reset at some time in the past but was not caught. Therefore, slip inserted now.

**Less than four satellites at startup--Will try next epoch(s)**

Software needs at least 4 satellites and good measurement quality at startup.

**Warning: Epoch with less than 4 good satellites (Cycle slips)**

This message warns about an epoch with less than 4 satellites.

**Locktime cycle slip on PRN 26 of -41.31 cycles on baseline BL1**

**Small L2 cycle slip on PRN 26 of 0.65 cycles on baseline BL1**

Both messages warn of cycle slips on L2. The DPH is an indicator of the size of the cycle slip. It shows the difference in phase. If the data contains many L2 cycle slips, it will make for a bad ionospheric-free solution. If there are many L2 cycle slips, try using the relative ionospheric solution.

**Prn 15 is below mask angle of 10.0 degrees**

This message indicates that a satellite has gone below the elevation mask.

**Satellite 7 is rising or re-appearing**

This message is usually caused from a satellite on the horizon.

**Prn 27 disappeared for 33.0 seconds on baseline BL1**

Indicates that as the satellite dropped out and is reappearing, a new ambiguity will be solved.

**Calculating fixed solution****Calculating RMS values**

**Continuous fixed solution reliability: 7.43 (PASSED), RMS: 0.0372 m (PASSED), STD: 0.0014 m**

**Continuous fixed solution position is: 39 01 23.54716, -84 36 21.25817, 259.7909 m**

**Computing New Fixed solution**

This message shows the results from the multi satellite fixed solution. The reliability is the ratio between the second best RMS and the best RMS. The minimum reliability for a pass is 1.35. The RMS is the RMS fit of the fixed solution. This number is in metres and the maximum value to pass is 0.025 m + 1PPM for dual frequency and 0.015 + 1PPM for single frequency.

**Warning: No precise ephemeris available for prn 21**

Message warns that a precise ephemeris is missing for a satellite. The user may want to try another SP3 file to better the results.

**\$\$\$ GPS data errors detected--will try and reject measurements, baselines or satellites**

Error messages starting with \$\$\$ indicate bad carrier or code measurements encountered. The above message should be following another message indicating what residuals are out-of-range and which satellite has the largest value. The indicated satellite may not be the actual problem one because the Kalman filter distributes the errors around. A number of tests will be performed to isolate the problem data and satellite. Therefore, this message is followed by the messages shown below.

**On code, worst PRN is 20, RMS is 1.46 m (PASS), reliability is 1.84 (FAIL)**

A further test on the combined code-carrier solution to ensure that the code is OK.

**On phase, worst PRN is 28, RMS is 0.0949 m (PASS), reliability is 1.19 (FAIL)**

This test will generally indicate if a missed cycle slip to other carrier phase problem was fixed by removing a particular satellite. The above message indicates that the problem could not be fixed, and will generally be followed by a filter reset message. See below. The reliability must be greater than 4.0 to be signaled as a pass. The user should investigate the clock offset information at this epoch via *GPBView* to see if the problematic epoch is due to an incorrectly computed clock shift.

**\$\$\$ Engaging filter reset--Accuracy is severely reduced**

This is printed when the filter reset is being engaged. It should be preceded by a message indicating why the filter reset was issued. A filter reset is when a cycle slip is issued to all satellites and the position is reset to startup values.

**(+) ARTK engaged due to occurrence of filter reset**

Following any filter reset, ARTK is re-engaged

**Locktime and doppler cycle slip on PRN 30 of -307.64 cycles on baseline BL1**

Indicates that a cycle slip has occurred and it has been detected by both the locktime and a large change in the carrier phase.

**%%% PRN 18 was omitted for time range 488400.0-488500.0 s on ALL baselines**

**%%% ALL satellites were omitted for time range 8000.0-8100.0 s on baseline mast**

'%%%' followed by a message indicates when and how long a baseline and/or PRN was omitted from processing.

### 4.4.2 FSS & RSS Files

Reported in the solution summary files is a summary of each ARTK fix and static session.

---

Configuration and processing settings

---

Project settings:

```

Master 1      : Name      GRN04-0107a   ENABLED
              : Antenna   SIMPLE_VERT  0.000 m
              : File      \\waypoint01\c\GPSData\Manual_Data\GRN04.gpb
              : Position  43 45 49.97515 -87 50 51.75271 198.262
Remote       : Name      Remote      ENABLED
              : Antenna   SIMPLE_VERT  0.000 m
              : File      \\waypoint01\c\GPSData\Manual_Data\air_rover.gpb
              : 0 static sessions
Direction    : FORWARD
Process Mode : Dual frequency carrier phase
Static Initial. : Float
Use AR       : Yes
Use Glonass  : Yes

```

The file may look different depending on whether static or kinematic processing was performed. When static processing, the output includes the final coordinates and various statistics associated with those coordinates. In kinematic processing, the ARTK summary record is the only output if ARTK resolved carrier phase ambiguities.

Following are the final coordinates that are output in a static solution. The difference between the fixed and float output is the fixed will have an RMS and reliability. The RMS represents the fit of the carrier phase measurements in the solution. The reliability is the ratio between the second best RMS and the best RMS.

-----  
 Final FIXED static position for Station STATIC, Base BL1  
 -----

```

Static {
  ToSta:          "STATIC"
  FromSta:        "BL1"
  IsBest:         Yes
  AntHgt:         0.486 m

  StartTime:      6240.00 1318 01:44:00.0 04/10/2005
  EndTime:        6375.00 1318 01:46:15.0 04/10/2005
  TimeLen:        2 minutes, 15 seconds

  Latitude:       -39 00 33.18453
  Longitude:      174 10 46.74393
  EllHeight:      63.8096
  SolType:        L1L2-ARTK
  IsFixed:        Yes
  RMS:            0.0040 PASS ; m
  Reliability:    10.3 PASS ; RMS ratio

  StdDev:         0.0063 0.0068 0.0147 ; m (e,n,h)
  EcefVec:        45.4059 -48.5693 -63.9423 ; m
  EcefCov1:       2.02423923e-004
  EcefCov2:       -5.94309046e-005 4.99990537e-005
  EcefCov3:       6.87795183e-005 -1.87233603e-005 5.03819486e-005
  AvgDDDop:       3.35
  AvgPDop:        2.12
  AvgNumSats:     7.0
  Quality         1

  SlopeDist:      92.246 ; m
  HorizDist:      92.235 ; m
  SurfaceDist:    92.235 ; m
  Azimuth12:      151 42 36.21749
  Azimuth21:      331 42 35.07388
}
  
```

The only output from kinematic processing is the ARTK summary record as shown below. Note that if kinematic processing is used without ARTK, no output will be shown in the FSS/RSS files.

; ----- ARTK Results -----

Kar {

ARTK: 1

EngageTime: 130770.00 1802 12:19:30.0 07/21/2014

RestoreTime: 153780.00 1802 18:43:00.0 07/21/2014

SearchTime: 153780.00 1802 18:43:00.0 07/21/2014

TimeSkipped: 23010.0 s

TimeUsed: 5280.0 s PASS

RMS: 0.5 mm PASS

Reliability: 1.9 PASS

FixFixSep: 0.01 m PASS

SearchDist: 14.73 km "GPS Fixed"

AvgDist: 14.73 km

AvgSats: 9.0

SearchSats: 10 "G07G07G07 G01 G04 G08 G11 G15 G17 G26 G28 G30"

RestoreSats: 10 "G07G07G07 G01 G04 G08 G11 G15 G17 G26 G28 G30"

RestoreDop: 1.5

RestorePos: 35 30 03.14304 -117 07 12.98110 722.151

}

### 4.4.3 FWD, REV, CMB, FSP, RSP and CSP files

FWD, REV and CMB files are created in differential processing whereas FSP, RSP and CSP files are created in PPP. A trajectory record is written for each processed measurement epoch.

```
$OUTREC Ver8.60.2819 NGPSMOV32 Forward Extended
; Processed by Unknown, description: Run (29)
; Time and date is: 15:14:22, 08/19/2014
; Waypoint Products Group, Copyright NovAtel Inc., 1992-2014
;Out { Tim: even_sec_time corrected_time WkNum      ; GPS seconds of the week, week number
;      Geo: latitude longitude height anthgt      ; Degrees minutes seconds, metres
;      Loc: d-east d-north d-height v-east v-north v-height ; local level pos+vel, metres, m/s
;      Sta: quality amb_drift dd_dop pdop hdop vdop ; 1-6, cycles/sec, dops
;      Rms: L1Rms CARms P2Rms D1Rms L1Std CAStd D1Std
;                                     ; m, m/s Rms=RMS of residual, Std=measured std-dev
;      Var: cee cnn czz cve cvn cvz cpos        ; Position + velocity variance + trace with ppm, m2, m2/s2
;      Flg: S/K L/F NumGps NumGlonass SolType    ; (S)tatic, (K)inematic, f(L)oat amb., (F)ixed amb.
;                                     ; SolType: (S)-SF carrier, (D)-DF carrier,
;                                     ; (I)-IonoFree, (R)-RelIono, (C)-C/A Only
;      Cov: cne cze czn cvne cvze cvzn        ; Position and velocity covariance
;      Ecf: dx dy dz                          ; ECEF base->remote vector
;      Acc: ae an au                          ; Local level accelerations (m/s2)
;      Bli: nBl Flg1(U,N,R) nS1 Wgt1 Dst1 Flg2 nS2 Wgt1 Dst1 Wgt2 Dst2 ...
;                                     ; nBl=#baseline, Flg: U=used, N=not-valid, R=Rejected,
;                                     ; nSats=# satellites used, Wgt=weight (0-1)
;                                     ; Dst=distance in km
;      Bls: iBl nSats Prn1 B/R/Amb1 Prn2 B/R/Amb2 Prn3 B/R/Amb3 ...
;      Bls: ...                               ; iBl=0,1,...,nSats=# sats, B=BASE,R=REJECTED,
;                                     ; Amb=DD Ambiguity
;}
```

A numerical example is shown below:

```
Out { Tim: 321665.000 321665.000000053 1690
      Geo: 39 59 13.03501 -83 04 07.44637 196.8868 2.110
      Loc: -1962.100 3020.551 11.551 0.016 -0.012 -0.088
      Sta: 6 1.000000 6.67 3.26 1.65 2.82
      Rms: 0.0000 1.690 0.000 0.008 0.0195 2.931 0.977
      Var: 3.69047e+000 2.39072e+000 2.50583e+001 4.10052e-001 2.65636e-001 2.78426e+000 3.11395e+001
      Flg: K L 6 0 D
      Cov: -5.22128e-001 -6.04875e+000 3.19914e+000 -5.80144e-002 -6.72084e-001 3.55460e-001
      Ecf: -2181.475 1679.322 2322.658
      Acc: 0.000 0.000 0.000
      Bli: 1 U 6 1.00 3.6
      Bls: 0 6 30 B 32 -5549212.283 20 -7678228.525 16 -26349873.378 23 -35794199.949 31 -3923372.058
;}
```

#### 4.4.4 FBV & RBV Files

*Binary Value* files contain individual satellite residuals and multi-base data which is not written to the standard output files. These files contain:

**For each baseline:**

- i. Code, carrier and Doppler RMS values
- ii. Code, carrier and Doppler SD values
- iii. Code and carrier phase separation values
- iv. DOP values
- v. Ambiguity drift
- vi. Effective weighting

**For each satellite:**

- i. PRN
- ii. Baseline
- iii. Rejection + base satellite flags
- iv. Code, carrier and Doppler residual values
- v. Code, carrier and Doppler SD values

Export these files to ASCII in GrafNav via the *Export Binary Values* feature. See *Section 2.7.5, Export Wizard* on page 74 for additional information.

## 5.1 Utilities Overview

This chapter describes the following utilities that are included with Waypoint's software:

- GPB Viewer
- Concatenate, Slice and Resample
- GNSS Data Converter

This chapter goes through each menu of their interfaces. Step-by-step instructions for first time users are also included.

## 5.2 GPB Viewer Overview

GPB files are in a binary format and cannot be viewed with a normal text editor. *GPBViewer* allows you to both view and edit your raw GNSS data.

### 5.2.1 File

#### 5.2.1.1 Open

Any GPB file can be opened with this feature.


- 
- ☒ If the GPB file is corrupt, *GPBViewer* prompts for permission to fix the file.
- 


#### 5.2.1.2 Close

This feature closes the GPB file without exiting from *GPBViewer*.

#### 5.2.1.3 Save As

If you are making modifications to a GPB file (such as the static/kinematic flag), this feature can be used to create a copy of your file prior to making any changes. An associated ephemeris file (.epf) will automatically be written when using the *Save As* feature.

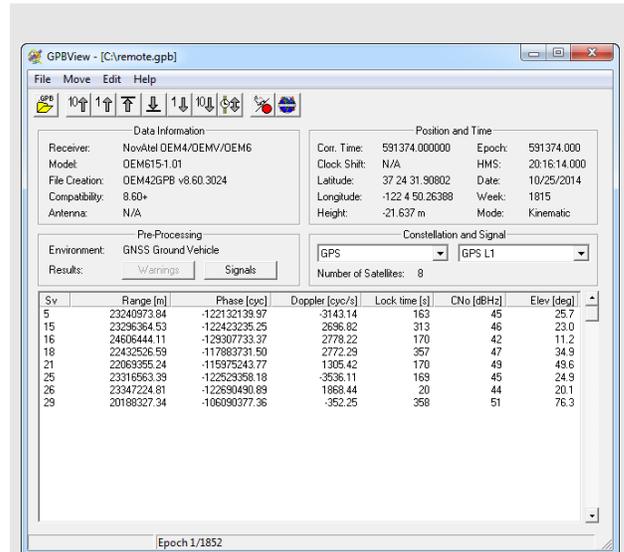

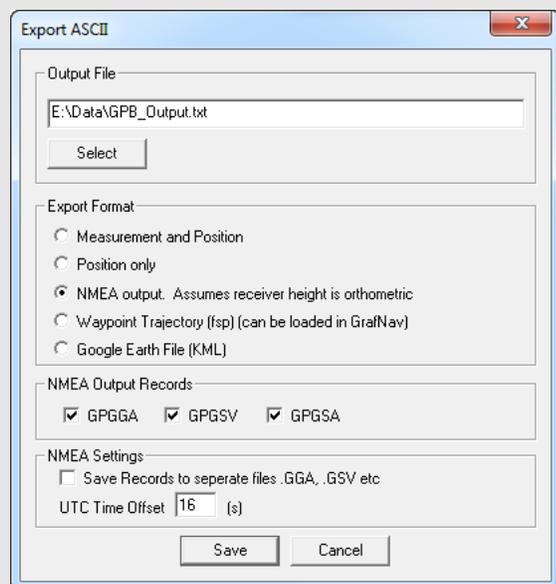

## ASCII formats for saving files

### Measurement and Position

Exports time, date, raw measurement data and position information for each epoch.

### Position only

Exports time, date and position information for each epoch.

### NMEA output

GPGGA, GPGSV and GPGSA strings are exported using this option.

### Waypoint Trajectory

Exports the data in Waypoint's single point trajectory (FSP) format. This trajectory file can then be loaded into GrafNav as a solution. See *Chapter 4, File Formats* on page 127 for a definition of the format.

### Google Earth

Exports position information into a KML file, which can then be opened within Google Earth.

## 5.2.1.4 Export ASCII

This feature saves data from the binary GPB file into various ASCII formats.

### Output File

This option allows you to name the output file. Be sure to provide a filename extension because the software will not automatically assign one.

### Export Format

The export formats available when saving a GPB file to ASCII are explained in the shaded box.

## 5.2.1.5 Load Alternate Ephemeris File

The GPB viewer uses ephemeris data to calculate and display satellite elevations at each epoch. If no ephemeris data was decoded, an alternate ephemeris file can be loaded here. Ephemeris data is required when performing certain editing functions within the GPB viewer.

GrafNav's *Download Service Data* utility can be used to download and convert GNSS broadcast ephemeris data. See *Section 2.8.11, Download Service Data* on page 92 for more information.

## 5.2.1.6 Exit

Exits the program.

## 5.2.2 Move

### Forward *n* and Backward *n*

Scrolls through *n* epochs in the direction indicated.

### Start of file and End of file

Moves to the first and last epoch in the file.

- 
- ☒ It is easier to scroll through the GPB file using the shortcut keys, specified under the *Move* menu beside each option.
- 

### Search

Moves to a specific location in the file. You can specify an epoch number or a time, in either GPS seconds of the week or GMT format.

## 5.2.3 Edit

Several options under this menu make permanent changes to the GPB file. Prior to doing so, you may wish to create a copy of the original file using the *Save As* option under the *File* menu.

### 5.2.3.1 Switch Static/Kinematic...

GrafNav's processing mode (static or kinematic) is determined by the static/kinematic flag decoded to the GPB file. This flag is normally set during decoding, however it can be altered after decoding using this option.

- 
- ☒ The static/kinematic flag is found in the *Position Information* section of the GPB Viewer.
- 

#### **Process Mode**

Specifies whether the mode is to be set to *Static* or *Kinematic*.

#### **Epochs to Convert**


Determines which epochs will be switched. See the shaded box for more information.

#### **Start Location**

Use in conjunction with *All epochs* and *Specified Epochs*, under *Epochs to Convert*. Determines the starting point of the conversion.

### 5.2.3.2 Week Number

Week numbers are extracted during conversion of raw GNSS data. In the rare event that a receiver does not output a week number or outputs an incorrect week number, GrafNav may not be able to post-process the data. This issue should ultimately be addressed with the GNSS receiver manufacturer, but it can also be fixed manually here in the GPB Viewer.

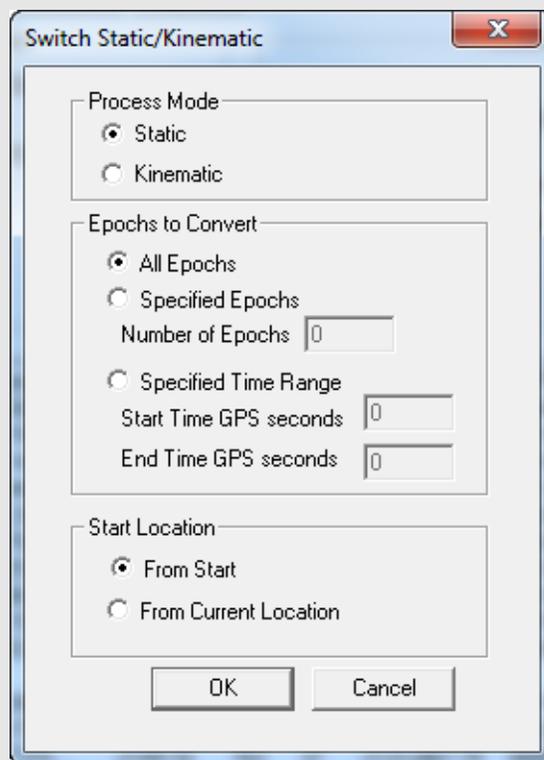


## Epochs to Convert options




### All Epochs

Switches all epochs from the start of the file onwards or from the current location onwards, depending which starting point is specified under *Start Location* options.

### Specified Epochs

Converts the specified number of epochs, subject to the chosen starting point. You can also convert a specific time range that is based on GPS seconds of the week.

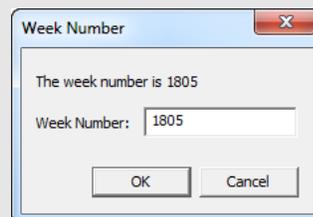

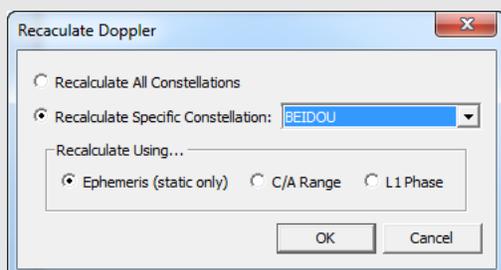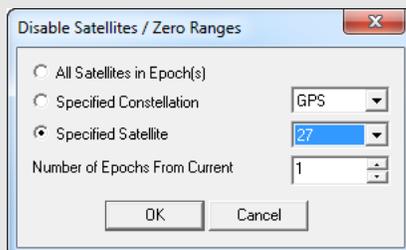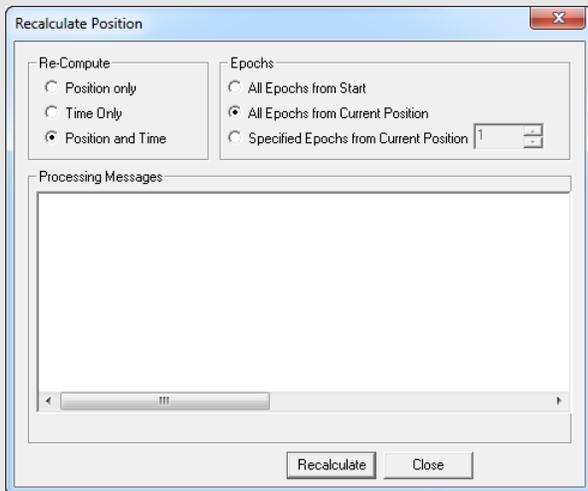

### 5.2.3.3 Recalculate Position and Time

If position records are requested when logging data, GrafNav's Raw GNSS Converter writes them to the GPB file. If no position records are logged, GrafNav's pre-processing functions will compute a single point C/A only solution during data conversion. This is done in order to plot the unprocessed trajectory to the Map window. More importantly, is also used to determine whether ionospheric processing should be engaged as the average baseline distance is checked prior to processing to determine whether ionospheric processing should be engaged.

GNSS ephemeris data is required should the pre-processing functions attempt to recalculate missing position records. If neither position records nor ephemeris data were requested when logging data, no position records will be written to the GPB file. If this is the case, recalculating position and clock data for a file can be done using this option. You may be required to load alternate ephemeris data (*File | Load Alternate Ephemeris*), should this be the reason no position data is present in your original file. See *Section 5.2.1.5, Load Alternate Ephemeris File* on page 138 for more information.

### 5.2.3.4 Disable Satellite(s)

Disabling satellites is normally done within the *Satellite/Baseline Omissions* section of GrafNav's processing options. See *Satellite/Baseline Omissions* on page 48 for more information. This is the recommended method of ignoring satellite data as more options are available; including using time ranges and specifying if the satellite should be completely excluded or only excluded from ARTK or the fixed solution.

Disabling a satellite through the GPB viewer cannot be undone, unless a copy of the original GPB file was saved using *File | Save As*, or by re-decoding the raw GNSS data. This is another reason we recommend implementing any satellite omissions within GrafNav's processing options, as they can easily be removed later if required.

### 5.2.3.5 Recalculate Doppler

Missing or erroneous Doppler measurements are normally fixed automatically by the converter's pre-processing functions. Therefore recalculating Doppler from the GPB Viewer is not a commonly needed function. Prior to version 8.40, when pre-processing functions were introduced, this feature was more commonly needed.


### 5.2.3.6 Edit GPS L2C Phase Correction


L2C measurements are affected by an offset relative to L2 P/Y signals. This offset is dependent not only upon the manufacturer of your GNSS receiver, but also the firmware version used. GrafNav's raw GNSS converter applies a default L2C offset for each supported data type, however this may need to be adjusted for your specific receiver.

The correct L2C offset is needed in order to correctly resolve integer carrier phase ambiguities. If the incorrect L2C offset is applied, integer ambiguity resolution will fail even in ideal conditions. That is, even with a short distance between base and remote antenna, low multi-path and unobstructed tracking of all available GNSS satellites, correct ambiguity resolution becomes impossible.

GrafNav's RINEX converter applies a default L2C offset of 0 cycles, as it is common for some receiver manufacturers to remove the L2C offset during conversion to RINEX. If this is the case, measurements will be decoded as L2C (due to a flag set within the raw GNSS data), however the correction needs to be zeroed as it has already been removed by third party software.

If converting RINEX data that is known to contain a non-zero L2C offset, or any receiver which requires a different L2C offset than is applied by default, the correct value can be entered either during conversion (see the receivers global conversion options) or after conversion using this feature. There are four possible L2C offset values regardless of receiver manufacturer or firmware version: -0.25, 0.25, 0.5 or 0.



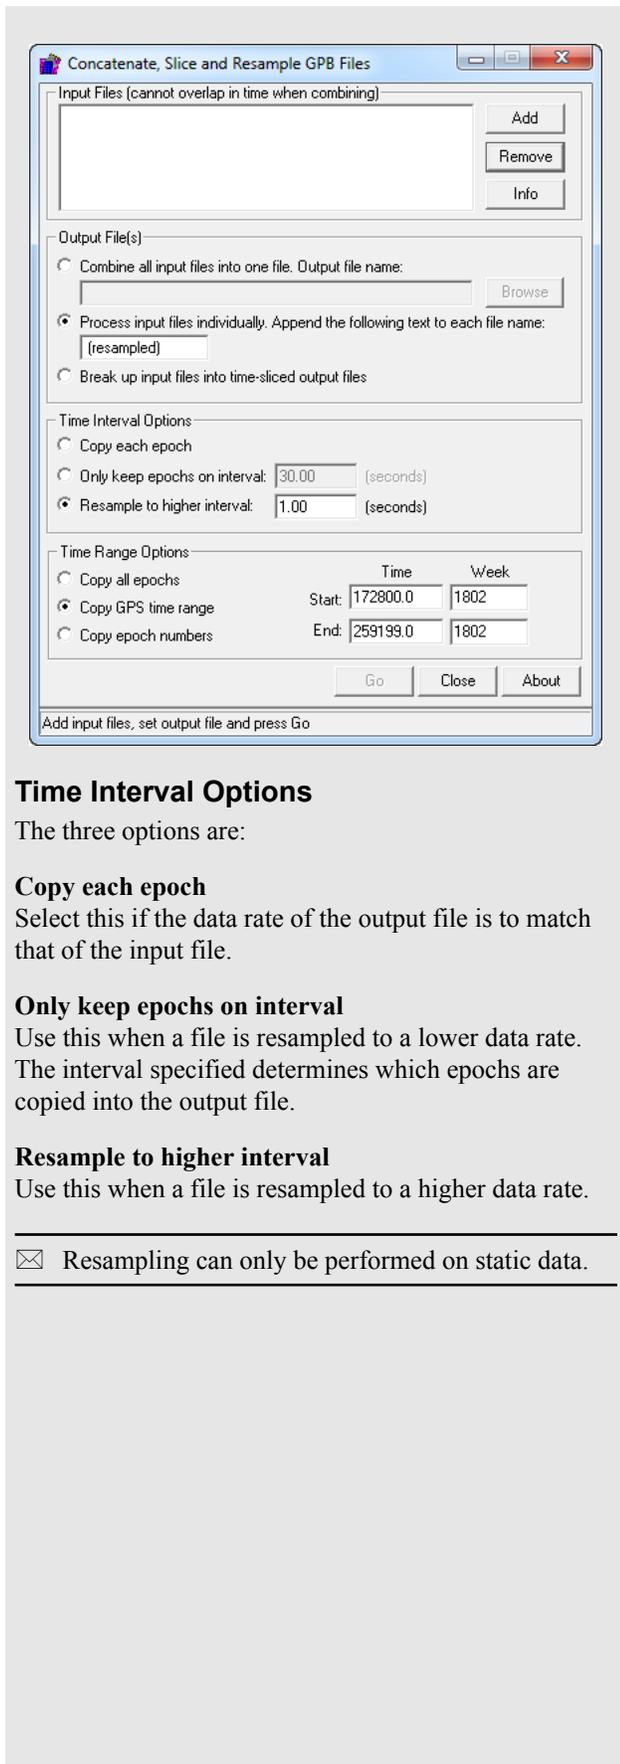

### Time Interval Options

The three options are:

#### Copy each epoch

Select this if the data rate of the output file is to match that of the input file.

#### Only keep epochs on interval

Use this when a file is resampled to a lower data rate. The interval specified determines which epochs are copied into the output file.

#### Resample to higher interval

Use this when a file is resampled to a higher data rate.

Resampling can only be performed on static data.

## 5.3 Concatenate, Slice and Resample Overview

This utility is available from *File | GPB Utilities*. This utility is used to:

- Combine multiple GPB files from the same receiver into one. This could be used to combine multiple hourly observations into a larger file prior to processing.
- Resample static data to a higher interval (1 Hz to 10 Hz), or reduce the sampling rate of any file (static or kinematic) to a lower rate (10 Hz to 1 Hz).
- Produce multiple time sliced output files from one larger file (e.g. produce 24 individual hourly files from a single 24 hour file).

### 5.3.1 Concatenate, Slice and Resample GPB Files

#### Input Files

Use the *Add* button to locate the input GPB file(s). To concatenate several files, add them all at once as they will be automatically sorted chronologically.

#### Output File(s)

Determines how the creation and naming of new files is handled. For concatenating files, use the *Combine all Input Files into one file* option and provide a name for the output GPB file. For resampling or splicing multiple files, use the *Process Input Files individually* option. The name of the created output files depend on the name of their respective input file and the suffix that is specified. To break up a file into multiple files of *n* minutes, enable the *Break up input files into time sliced output files* option.

#### Time Interval Options

See the shaded box for descriptions of these options.

#### Time Range Options

Determines the range of time that is to be used for the creation of the new file. *Copy all epochs* is generally for resampling purposes. Splicing a file requires the selection of either *Copy Time Range* or *Copy Epoch Numbers*.

## 5.4 GNSS Data Converter Overview

This utility converts raw GNSS data into GPB format. Supported receiver formats are documented in *Section 5.4.3, Supported Receivers* on page 146.

### 5.4.1 Convert Raw GNSS data to GPB

#### Receiver Type

Choosing a receiver type prior to conversion applies a file filter commonly associated with the receiver type. This causes only files with these extensions to be listed under *Source Files* within the current folder. You may add or modify the default filter for any receiver type.

After pointing to the folder containing GNSS data to be converted, it is generally recommended to leave the receiver type as *Unknown/AutoDetect* and use either the *Auto Add All* or *Auto Add Recursively* functions.

#### Global Options

To view decoding options for individual receiver types, choose the receiver type from the pull down menu and then select *Global Options*. Any changes made to the global options are remembered and applied in the future.

You may wish to access the global options of a particular receiver in order to change the static/kinematic decoding preference or the default L2C offset.

#### Info


Provides information on the version and status of the DLL file used for the conversion.

#### Folder

Use the *Get Folder* button to browse to a folder containing raw GNSS data.

#### Source Files

Lists the files in the folder with extensions matching those specified in the *Filter* field. The options available here are listed in the shaded box.

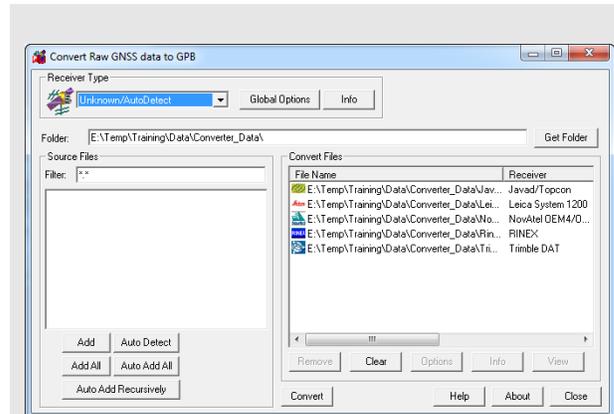

### Source file options

#### Add

When clicking *Add* after selecting an individual file under *Source files*, the converter attempts to auto-detect the receiver type if it has been left as *Unknown/AutoDetect*. If auto-detection succeeds, the file is added under the *Convert Files* section.

#### Add All

If a receiver type has been chosen from the pull down menu, all files are added for conversion under this receiver type. If *Unknown/AutoDetect* is selected as the receiver type, an auto-detection is performed on every file in the *Source Files* list.

#### Auto Detect

Auto-detects the selected file in the *Source Files* window for conversion.

#### Auto Add All

Auto-detects all the files in the *Source Files* list for conversion.

#### Auto Add Recursively

Auto-detects all files in the immediate folder and its subfolders. The maximum number of files that can be added is 256.

### Convert Files

This lists all the files to be converted. The icon displayed to the left of the filename indicates the detected receiver type. Once the files have been converted, the icon changes to either a green check mark if conversion succeeds or a red X if conversion fails. Options available here including the following:

#### **Remove**

Removes the selected file from the *Convert Files* window.

#### **Clear**

Removes all files from the *Convert Files* window.

#### **Options**

Displays the options associated with the receiver type of the selected file. Any changes are only applied to the selected file and will not be retained.

#### **Info**

Displays the file path, receiver type and conversion status of the selected file.

#### **View**


Opens the converted GPB file within the GPB Viewer.


## 5.4.2 Pre-processing Checks

After conversion to GPB, pre-processing checks are performed in order to help ensure the file is ready for post-processing. Functions performed by the pre-processing checks include:

- Ensuring positions are present in the GPB file. If no position records have been requested during data logging, pre-processing computes a code only single point solution. This computed position is then written to the GPB file. GrafNav uses this position to display the unprocessed trajectory and determine whether ionospheric processing will be automatically engaged. The latter option depends on the scanned baseline distance prior to processing.
- Ensuring an accurate clock shift has been decoded to the GPB file. This is needed in order for GrafNav to correctly process and export results relative to GPS time. If this value is incorrect by a large amount it can result in gross processing errors.
- Automatic rejection of impossibly large or small pseudorange observations, which can occur due to unusual receiver signal tracking issues. Also automatically rejected are any duplicate PRN numbers (which will cause a processing failure), duplicate epochs and other unusual raw data problems.

- Computing missing Doppler measurements. A common issue with some RINEX data is that Doppler measurements are provided as 0 for the entire file. As GrafNav uses Doppler for cycle slip detection, this would result in large processing errors if it is uncorrected. Pre-processing checks ensure any missing Doppler measurements are recomputed from the C/A code.
- Static/Kinematic detection. The pre-processing checks attempt to set the static/kinematic flag appropriately. For surveys with significant position changes from epoch to epoch (such as would be the case for a kinematic survey) data is converted as *kinematic*. Conversely, if no significant movement is detected from epoch to epoch, portions of the data may be converted as *static*. The ability of the pre-processing check to reliably detect static data largely depends on the noise level of the unprocessed (or computed) position data.
- Processing environment detection. The unprocessed position records are scanned in order to determine if the dynamics are characteristic of aerial, ground vehicle or marine surveys. The detected environment is written to the header of the GPB file, which allows GrafNav to automatically load an appropriate processing profile (*GNSS Airborne*, *GNSS Ground Vehicle*, or *GNSS Marine*) the first time the processing dialog is accessed for a project.



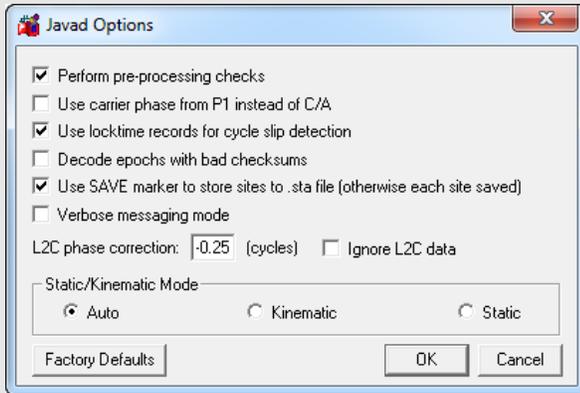

**Table 14: Records Supported for Javad & Topcon**

Record	Type	Comment
RC, rc	C/A Code Measurement Block	RC suggested.
1R	L1 P-Code Measurement Block	
3R	L2 C/A Code Measurement Block	
R2, r2, 2R, 2r	L2 P-Code Measurement Block	2R suggested.
PC, pc, CP, cp	L1 Phase Measurement Block	CP suggested.
P2, p2, 2P, 2p	L2 Phase Measurement Block	2P suggested.
3P, 3p	L2C Phase Measurement Block	
DC	L1 Doppler Measurements	Strongly recommended.
GE	GPS Ephemeris	Required.
NE	GLONASS Ephemeris	Required.
TO	Clock Offset	
TC	Locktime	
PO	Position	Recommended for GrafNet Users.
SI	PRN List	
RD	Receiver Date	

### 5.4.3 Supported Receivers

This section discusses the receivers that are currently supported by the *Raw GNSS Data to GPB* converter. This information includes the conversion options, as well as the supported formats and records for each receiver.

#### Javad and Topcon

- This converter supports GLONASS-enabled receivers.

Table 14, *Records Supported for Javad & Topcon* describes the supported records.

The following describes the options available for this converter:

#### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

#### Use carrier phase from P1 instead of C/A

If enabled and the 1R measurements are available, L1P is decoded to the GPB file in place of L1.

#### Use locktime records for cycle slip detection

Locktimes from the Javad receiver are used instead of those computed by the decoder. Enable this if Javad locktimes are problematic.

#### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

#### Decode epochs with bad checksums

If disabled, epochs containing records with failed checksums will not be decoded. Otherwise, only the affected data is ignored.

#### Use SAVE marker to store sites to .sta file

Markers are saved to an STA file.

#### Verbose messaging mode

Alerts you of warnings and errors that have occurred.

#### L2C phase correction

If your receiver logs L2C measurements, then the phase offset must be entered. If you are unsure, you can disable its usage.

#### Ignore L2C Data

If enabled, no L2C measurements are decoded and only L2, if available, is decoded.

## Leica System 500

This decoder handles data from the System 500 or SR530 receivers.

*Table 15, Records Supported for Leica 500* describes the supported records.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Combine multiple (.o00,.o01...) files into single GPB file

Leica SR530 receivers write all data into separate files from one session with different extensions. Enabling this option will combine files from one session into one GPB file

### Verbose message information output


Alerts you of additional warnings and errors that have occurred.

### Insert kinematic markers after gaps and stations

Ensures that static sessions are properly created.

**Table 15: Records Supported for Leica 500**

Record	Type	Comment
19	Measurements (compressed)	One of these records is required; record #20 needed if Doppler data is of interest.
20	Measurements (expanded)	
15	Ephemeris	Required.
10	Position	Recommended for GrafNet users.
13	Station/Event Mark	Written to STA file.
9	Antenna Height	Written to STA file.
108	Antenna Type	Written to STA file.

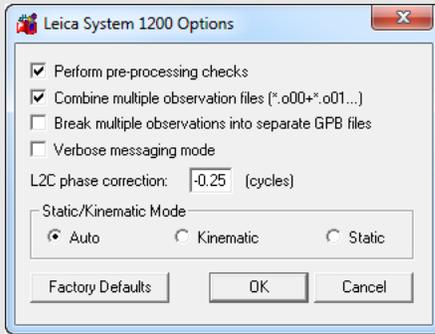**Table 16: Records Supported for Leica 1200**

Record	Type	Comment
119	Measurements	One of these records is required, but #120 is recommended
120	Measurements	
115	Ephemeris	Required.
110	Position	Recommended for GrafNet users.
109	Antenna Height	Written to STA file.
113	Event Mark	Written to STA file.

## Leica System 1200

Table 16, *Records Supported for Leica 1200* describes the supported records.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Combine multiple observation files

Leica receivers write data into separate files from one session with different extensions. This option combines files from one session into one GPB file

### Break multiple observations into separate GPB files

If you have logged data from multiple sessions and/or days, enable this option to create a separate GPB file for each.

### Verbose message mode

Alerts you of additional warnings and errors that have occurred.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

## NavCom

Table 17, *Records Supported for NavCom* describes the supported records.

### Perform pre-processing checks


If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Verbose messaging mode

Allows you to see additional warning messages.


### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

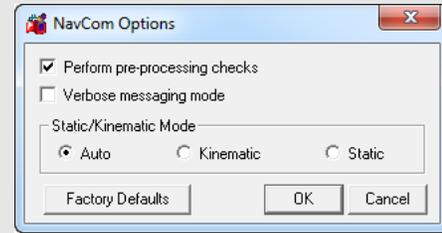

**Table 17: Records Supported for NavCom**

Record	Type	Comment
0xB0	Measurements	Required.
0x81	Ephemeris	Required.
0xB1	Position	Recommended for GrafNet users.
0xB4	Event Marker	Written to STA file.

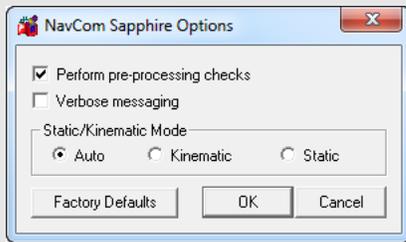

**Table 18: Records Supported for NavCom Sapphire**

Record	Type	Comment
MEAS1B	Measurements	Required.
EPHEM1B	Ephemeris	Required.
ALM1B	Almanacs	Required for GLONASS users.
PVT1B	Position	Recommended for GrafNet users.

## NavCom Sapphire

Table 18, *Records Supported for NavCom Sapphire* describes the supported records.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Verbose messaging

Alerts you of additional warnings and errors that have occurred.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

## BAE Systems / NovAtel CMC

This decoder handles data from the NovAtel CMC AllStar and SuperStar receivers. *Table 19, Records Supported for NovAtel CMC* describes the supported records.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Verbose messaging mode


Displays additional warning messages.

### Reject satellites with C/N0 below

Satellites with C/N0 values below the specified threshold will not be decoded.


### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

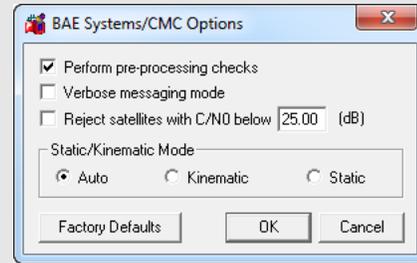

**Table 19: Records Supported for NovAtel CMC**

Record	Type	Comment
ID #23	Measurements	One of these records is required, but ID #23 is strongly recommended over the others.
ID #13	Measurements (old style)	
ID #14	Measurements (old style)	
ID #15	Measurements (old style)	
ID #16	Measurements (old style)	
ID #20	Position	Recommended for GrafNet users; should be requested last.
ID #22	Ephemeris	Required.

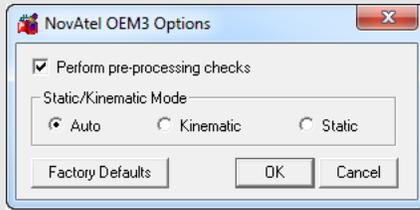

**Table 20: Records and Files Supported for NovAtel OEM3**

Record/File	Type	Comment
RGEb (ID #32)	Measurements (expanded)	
RGEc (ID #33)	Measurements (compressed)	One of these records is required, but RGEd (ID #65) is recommended.
RGEd (ID #65)	Measurements (compressed)	
REPb (ID #14)	Ephemeris	Required.
POsb (ID# 01)	Position	Recommended for GrafNet users.
MKTb (ID# 04)	Event Mark (time only)	Written to STA file.
MKPb (ID # 05)	Event Mark (time and position)	Written to STA file.
CLKb (ID# 02)	Clock Information	See <b>Notes</b> .

- ✉ 1. If using receivers with standard correlators, you should either request the CLKb record, or else re-calculate the position and clock information. The clock correction (offset) is needed for processing. This record is also suggested for users logging data right from power-up. Request the CLKb record before the measurement record.
2. Ensure that the baud rate is set high enough to properly handle 12 channels worth of measurement records, as well any additional records.
3. The GPS/GLONASS MiLLennium receiver has 24 channels.
4. Log MKTb or MKPb, but not both.

## NovAtel OEM3

This decoder handles data from the NovAtel OEM3 receivers. *Table 20, Records and Files Supported for NovAtel OEM3* describes the supported records and files.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

## NovAtel OEM / SPAN

Table 21, *Records Supported for NovAtel OEM/SPAN* describes the supported files.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Decode RANGE\_1B log

This is applicable only to SAASM receivers.

### Verbose messaging mode

Displays additional warning messages.

### Create separate file for each MARKNTIME record

Enabling this option decodes the event marks from multiple inputs into separate station files.

### Create trajectory file (\*.fsp) from following record

This option generates a separate FSP file for each supported position record that is logged. The files can be used to compare against the post-processed solution.

### L2C phase correction

This correction value is inserted into the GPB header and can be used by the post-processing engine. OEMV firmware versions 3.0 and 3.1 use a correction of 0.50, while firmware versions 3.2 and later will use either -0.25 or 0.00. Generally, this value should occur on the ¼ cycle.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.


### SPAN/IMU and

#### Distance Measurement Instrument (DMI)

These options are only for users of NovAtel’s SPAN technology and are only available in Inertial Explorer. Refer to *Inertial Explorer Version 8.60 User Guide* for details.

### Logging data

Table 21, *Records Supported for NovAtel OEM/SPAN* contains a full list of supported records, both for GNSS only and GNSS+INS (NovAtel SPAN) applications. Below are suggestions on how to request these logs from your NovAtel receiver or SPAN system.

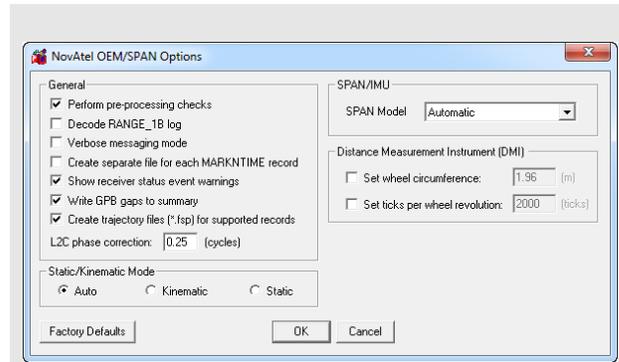

**Table 21: Records Supported for NovAtel OEM/SPAN**

Record	Type	Comment
VERSIONB (ID #37)	Version information for all components of a system	Optional
RANGEB (ID #43)	Measurements (expanded)	One of these records is required. Do not request more than one as duplicate measurements will result. RANGE_CMP2B is required if logging BeiDou data.
RANGEB_1	Measurements (expanded)	
RANGECMPB (ID #140)	Measurements (compressed)	
RANGECMP2B (ID #1273)	Measurements (compressed)	
RAWEPHEMB (ID #41)	GPS Ephemeris	Required
GLOEPHEMERISB (ID #723)	GLONASS Ephemeris	Required if logging GLONASS data
BDSEPHEMERISB (ID #1696)	BeiDou Ephemeris	Required if logging BeiDou data
ALMANACB (ID# 73)	Decoded Almanac	Optional. If present will be written to ephemeris (.epp) file. Can be used for Mission planning.
RAWALMB (ID #74)	Raw Almanac	
GLOALMANACB (ID #718)	GLONASS Almanac	
BESTPOSB (ID #42) RTKPOSB (ID #141) OMNIHPPOSB (ID #495) PSRPOSB (ID #47)	Position	Only required for comparison of real time trajectory to post-processed
MARKTIMEB (ID #231)	Event Mark Time	Written to STA file
MARKnTIMEB (ID #1 130, 616, 1075, 1076)	Event Mark Time	Written to STA file
IONUTCb (ID #8)	Ionospheric Parameters	Optional. If present will be written to EPP file. This will be applied in single frequency processing but ignored in dual frequency processing.

(Sheet 1 of 2)

**Table 21: Records Supported for NovAtel OEM/SPAN (continued)**

Record	Type	Comment
RAWIMUSB (ID #325) RAWIMUSXB (ID #1462)	IMU Measurements	SPAN users only. RAWIMUSXB is recommended. Only one of these is required, do not log both as duplicate measurements will result.
BESTLEVERARMB (ID #674)	IMU to GNSS Lever Arm	SPAN users only. IMUTOANTOFFS ETSB is recommended as both primary and (if applicable) secondary lever arms are logged. Lever arms must be set first through the SETIMUTOANTO FFSET and SETIMUTOANTO FFSET2 commands.
BESTLEVERARM2B (#1256)	IMU to secondary lever arm	
IMUTOANTOFFSETS (ID #1270)	Primary and secondary lever arms	
BESTGPSPOSB (ID #423) BESTGNSSPOSB (ID# 1429) IMURATEPVAB (ID #1778) IMURATEPVASB (ID #1305) INSPVAB (ID #507) INSPVASB (ID #508) INSPOSB (ID #265) INSPOSSB (ID #321)	Position, velocity and attitude	Optional for SPAN users only. Can be used to compare real time and post-processed solutions.
SETIMUTYPE (ID #569)	IMU Type	Optional for SPAN users only. Recommended if RAWIMUSB is logged, not needed if RAWIMUSXB is logged.
VEHICLEBODYROTATION (ID #642)	Angular offset between vehicle frame and SPAN frame	SPAN users only. Allows vehicle body rotation to be automatically read by Inertial Explorer
MARKnP (ID #1067, 1068, 1118, 1119)	Event Mark Time	Written to STA file
HEADINGB (ID #971)	Heading from dual antenna	Written to HMR file
SITEDEFB (ID #153)	Site definitions	
TIMEDWHEELDATAB (ID #622)	Odometer Measurements	SPAN users only. Written to DMR file.
WHEELSIZEB (ID #646)	Circumference of Wheel	SPAN users only. Written to DMR file.

(Sheet 2 of 2)

## GNSS-only receiver (base station and rover)


```
LOG VERSIONB ONCE
LOG RXSTATUSB ONTIME 60
LOG RXCONFIGA ONCE
LOG RAWEPHEMB ONCHANGED
LOG GLOEPHEMERISB ONCHANGED (if using GLONASS)
LOG BDSEPHemerISB ONCHANGED (if using BeiDou)
LOG RANGECMP2B1 ONTIME 1
LOG BESTPOSB ONTIME 1
LOG TRACKSTATB ONTIME 10
LOG SATVISB ONTIME 60
```

## GNSS+INS (NovAtel SPAN)

```
LOG VERSIONB ONCE
LOG RXSTATUSB ONCE
LOG RXCONFIGA ONCE
LOG RAWEPHEMB ONCHANGED
LOG GLOEPHEMERISB (if using GLONASS)
LOG BDEPHEMERISB (if using BeiDou)
LOG RANGECMP2B1 ONTIME 1
LOG BESTPOSB ONTIME 1
LOG BESTGNSSPOSB ONTIME 1
LOG HEADINGB ONCHANGED (if using ALIGN)
LOG HEAVEB ONNEW (if using W model for heave)
LOG RAWIMUSXB ONNEW
LOG INSPVASB ONTIME 1
LOG INSUPDATEB ONCHANGED
LOG INSCOVSB ONTIME 1
LOG IMUTOANTOFFSETS2 ONCE
LOG VEHICLEBODYROTATIONB3 ONCE
LOG SETIMUORIENTATION3 ONCE
```

1. RANGECMP2B is currently supported by OEM platforms 615, 628, 638, FlexPak6, and ProPak6. This record is newly supported in version 8.60 (not supported in previous versions) and supports all present and future signals and constellations. If not using one of the supported OEM platforms or if using Waypoint software older than version 8.60, request RANGECPMB instead.
2. Before logging SETIMUTOANTOFFSETS, the lever arm should first be set. Enter this within the vehicles enclosure frame (not Inertial Explorer's vehicle frame). An example is as follows:  
SETIMUTOANTOFFSET -0.072 -0.206 1.215 0.005 0.005 0.005
3. Prior to logging VEHICLEBODYROTATIONB and SETIMUORIENTATION, they should first be set through the SETIMUORIENTATION and VEHICLEBODYROTATION commands. An example is as follows for an IMU mounted Y-forward, X-right and Z-up:  
SETIMUORIENTATION 5  
APPLYVEHICLOBODYROTATION enable  
Please see the [SPAN on OEM6 Firmware Reference manual](#) (OM-2000144) for more information.

- 
- ☒ Although RXSTATUS, RXCONFIG, TRACKSTAT, SATVISB, INSPVAS, INSUPDATE and INSCOV records are not directly supported by our converter or required for post-processing, they contain information that will help NovAtel support troubleshoot in the event of a problem.
- 



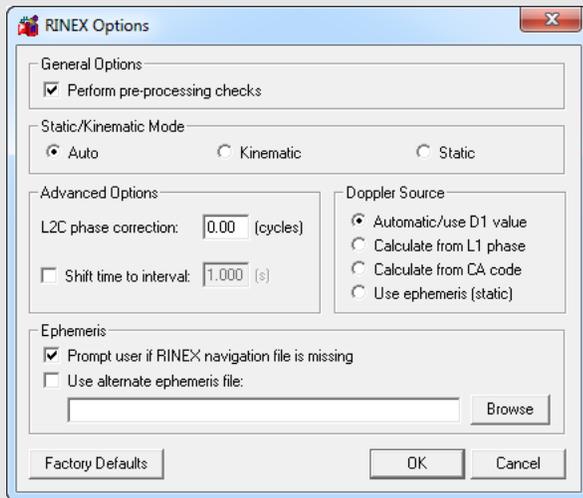


Table 22: Files Supported for RINEX

File	Type	Comment
*.yyo, *.obs, *.rxo	Measurements	One of these files is required.
*.yyd	Measurements (compressed)	
*.yyN, *.nav, *.rxN	GPS Ephemeris	Required.
.yyg	GLONASS Ephemeris	Required only if logging GLONASS data.
.yyc	BeiDou Ephemeris	Required only if logging BeiDou data.

✉ The yy in the file extensions found in the table above designate the last two digits of the year that the observations were collected in.

## RINEX

Receiver Independent Exchange (RINEX) data is a standard, manufacturer independent ASCII format for raw GNSS data. All GNSS manufacturers should provide tools to convert their native data to RINEX format. If your receiver type is not directly supported by GrafNav, first convert the data to RINEX using a utility supplied by the manufacturer and then import the RINEX data to GrafNav.

The following describes the options available for this converter:

### General Options

#### *Perform pre-processing checks*

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

### Advanced Options

#### *L2C phase correction*

If the RINEX file contains L2C measurements, then the phase offset must be set.

#### *Shift time to user interval*

The decoder will attempt to determine the data interval by reading the header or scanning the observation file. If this fails, enable this option to force an interval.

### Doppler Source

These options allow you to choose a method of obtaining Doppler measurements.

#### *Automatic/use D1 value*

Uses the D1 value, if present, from the RINEX file for Doppler. Otherwise, it uses *Calculate from CA code* for data intervals of 10 seconds or less, and *Use ephemeris (static)* for anything else.

#### *Calculate from L1 phase*

Select this option if the Doppler signal is missing or unstable.

#### *Calculate from CA code*

If the Doppler signal is missing or unstable, using the CA code will create fewer problems than using L1 phase, but velocity accuracies may be worse.

#### *Use ephemeris (static)*


Assumes static data and computes Doppler from satellite velocities.


**Ephemeris*****Prompt user if RINEX Nav file is missing***

If a navigation file is either missing or has a different name than the observation file, you will be prompted to select a navigation file.

***Use alternative ephemeris file***

You may define a path to the navigation file manually. This will override the previous option.



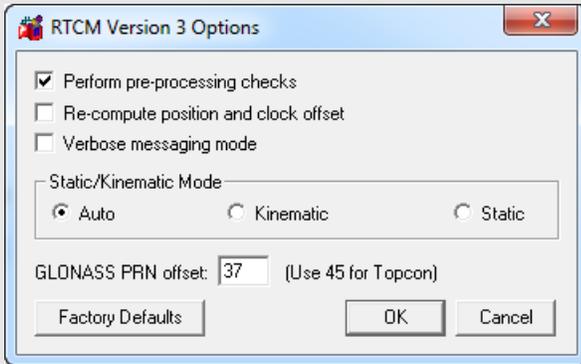

**Table 23: Records Supported for RTCM Version 3**

Record	Type	Comment
1002	L1 only measurements	One of these records is required, depending on the receiver's capabilities
1004	L1/L2 measurements	
1010	GLONASS L1 only measurements	If working with GLONASS, then one of these records is required, depending on the receiver's capabilities
1012	GLONASS L1/L2 measurements	
1019	GPS Ephemeris	Required
1020	GLONASS Ephemeris	Required for GLONASS users

## RTCM Version 3.0

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Re-compute position and clock offset

GrafNav requires valid clock shift data, while GrafNet requires position records. Enable this option if the clock shift data is corrupt, or if position records are not present. This option is not needed if pre-processing checks are enabled.

### Verbose messaging mode

Displays additional warning messages.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

### GLONASS PRN offset

Shifts the PRN numbers for GLONASS satellites. Offset must be greater than 32 to avoid conflict with the GPS constellation.

## Septentrio SBF

Table 24, *Records Supported for Septentrio SBF* describes the records supported.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Verbose messaging mode


Allows you to see additional warning messages.

### Extract multi-antenna data

For multi-antenna applications only.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

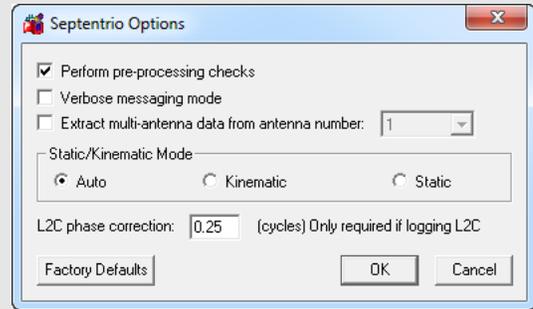

**Table 24: Records Supported for Septentrio SBF**

Record	Type	Comment
5889	Measurements	One of these records is required
5890	Measurements (compressed)	
5891	Ephemeris	Required
5904	Position	Recommended for GrafNet users
5924	Event	Written to STA file

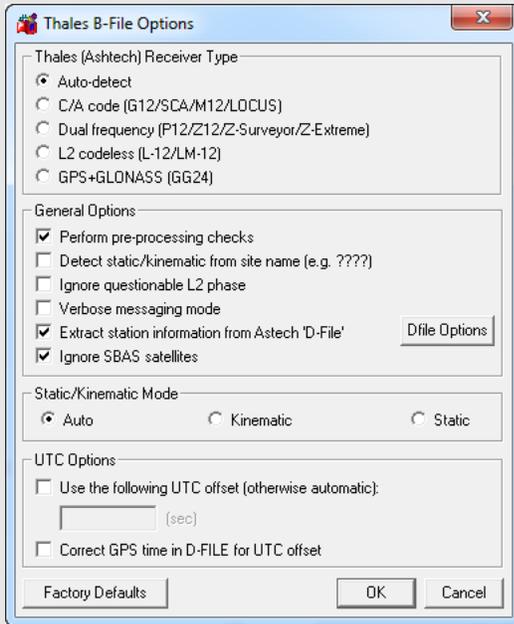


Table 25: Files Supported for Thales B-File

File	Type	Comment
BssssAyy.jjj	Measurements	Required.
EssssAyy.jjj	Ephemeris	Required.
SssssAyy.jjj	Static Station Information	Written to STA file.
DssssAyy.jjj	Kinematic Station Information	Written to STA file.
PHOTO.DAT	Event Mark	Read in directly by software.

- ✉ Thales files follow a strict naming convention. In the table above, ssss is the site name, yy is the last two digits of the year, and jjj is the day of the year.

Antenna heights may need to be edited within the feature editor if not kept constant, as the Thales format only allows for one value.

You might need to select the receiver type manually.

## Thales/Ashtech/Magellan B-File

This decoder handles Thales data that has been downloaded using the Thales utility. Log this data into internal receiver memory. *Table 25, Files Supported for Thales B-File* describes the supported files.

### Thales (Ashtech) Receiver Type

Selects the receiver used to collect the data. If auto-detect does not work, then select the receiver manually.

### General Options

#### *Perform pre-processing checks*

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

#### *Detect static/kinematic from site name*

Looks in B-file for data tagged as static or kinematic, using ??? site ID.

#### *Ignore questionable L2 phase*

Allows for processing of highest quality L2 data only. Should be enabled if ARTK is having difficulties.

#### *Verbose messaging mode*

Allows you to see additional warning messages.

#### *Extract stations information from Ashtech 'D-File'*

Various Thales hand-held controllers output a D-file containing features and antenna height information. Enable this checkbox to utilize this information.

#### *Ignore SBAS Satellites*

Newer versions of Thales firmware have resulted in the logging of raw data from SBAS satellites, which are not supported by the software. As such, this option should be left enabled to ensure the data is not written to the GPB file.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

### UTC Options

#### *Use the following UTC time*

Changes the GPS to UTC time offset from the current nominal value to a user-defined value. Normally used for GLONASS processing if no UTC is contained in the data.

#### *Correct GPS time in D-FILE for UTC offset*


D-files can have GPS or UTC time. This option changes time from UTC to GPS.


**Dfile Options*****Chain Repeated Station Marks into 1 Static Session***

Combines sessions that are repeated in the Seismark software into one session.

***Do NOT Chain Marks that are more than n seconds apart***

This value controls the time tolerance used in the previous setting. If two static periods are marked less than the amount apart, they will be combined.



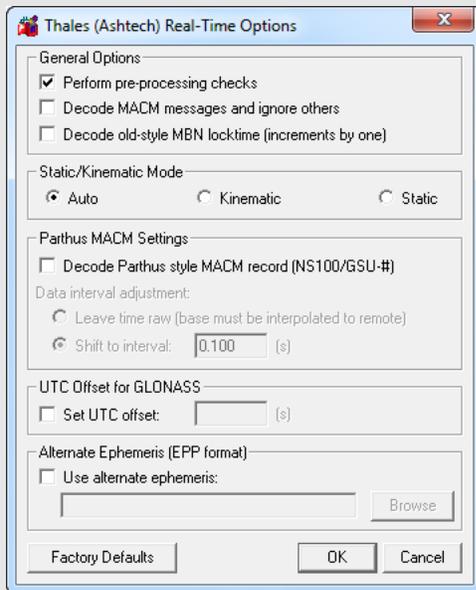

**Table 26: Records Supported for Thales Real-Time**

Record	Type	Comment
MBN	Measurements	One of these records is required; see <b>Note 1</b>
MCA	Measurements	
MPC	Measurements	
MCL	Measurements	
MACM	Measurements	
ITA	Measurements (C/A Code Only)	
CT1	Measurements (C/A Code Only)	
CT2	Measurements (C/A Code and L1 Phase)	
CT3	Measurements (C/A Code, L1 Phase and C/A Code)	
SNV	Ephemeris	Required.
SNG	Ephemeris (GLONASS)	Required for GLONASS users.
PBN	Position	See <b>Note 2</b> .

1. The MBN or MACM records are recommended for G12 receivers. The MACM record is designed for high-speed data output that is, 10Hz or 20Hz, under limited bandwidth conditions. The ITA record is for G8 receivers, while the MPC is for dual frequency receivers, such as those in the Z-series. The MCL record is an L2 codeless record.
2. Marks the end of the record. Recommended for GrafNet users.

## Thales/Ashtech/Magellan Real-Time

This decoder converts Thales Real-Time (DG16, G12, or Super C/A) data. The real-time data forms when data is logged externally from the receiver using a custom data logger. *Table 26, Records Supported for Thales Real-Time* describes the supported records.

### General Options

#### *Perform pre-processing checks*

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

#### *Decode MACM messages and ignore others*

If both MBN/MCA and MACM records exist, only the MACM will be decoded.

#### *Decode old-style MBN locktime*

Some older units (for example, Sensor II) output locktimes with a different resolution. Enable this option to output the locktime value.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

### Parthus MACM Settings

These settings are for logging MACM records:

#### *Decode Parthus style MACM record*

Parthus units (NS100, GSU-1, and GSU-2) utilize the MACM record. However, due to timing differences, its implementation is not compatible. Therefore, enable this option.

#### *Data interval adjustment*

The GSU-1 benefits greatly by having the correct data interval entered, while the GSU-2 is best processed using the raw time and having the base interpolated onto these times. See *Section 5.3.1, Concatenate, Slice and Resample GPB Files* on page 142 for help.

### UTC Offset for GLONASS decoding

The following option is available for those users logging GLONASS measurements:

#### *Use the following UTC offset for decoding*

Allows you to define your own UTC offset rather than using the nominal or detected value. Important for GLONASS processing.

### Alternate Ephemeris

#### *Use alternate ephemeris*

Enable this option if ephemeris data is missing (for example, Parthus, GSU-2) to specify an outside EPP file.

## Trimble DAT

This decoder converts data from Trimble 4000-5800 receivers. The Trimble data files (DAT) are formed when data is logged internally in the receiver. Only GPS data from Trimble DAT files can be directly converted to GPB. If logging GLONASS it is recommended to use a Trimble utility to convert your DAT files to RINEX prior to conversion to GPB.

The *Table 27, Files Supported for Trimble DAT* describes the supported files.

### Perform pre-processing checks


If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Ignore record 16, subrecord 43 "AutoAnt"

If this record is present, the station name extracted to the .sta file will always be "AutoAnt". Clear this option if this is not desired.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

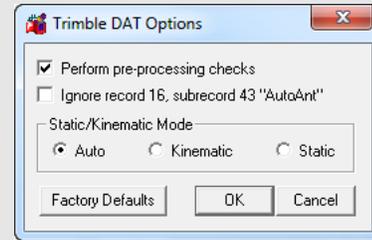

**Table 27: Files Supported for Trimble DAT**

File	Type	Comment
*.dat	Measurements, Ephemeris and Event Marks	Required.

**Table 28: Records Supported for Trimble Real-Time**

Record	Type	Comment
0x0	Measurement	Required.
0x1	Position	Recommended for GrafNet users.
0x2	Ephemeris	Required.

**Trimble Real-Time**

Data captured directly from a Trimble 4000-5800 receiver can also be converted to GPB using this decoder. If you receive a "Response 57h, Record Type 6 is not supported" error message from our converter when converting Trimble real-time data, this is a newer and unsupported record. The data will need to be first converted to RINEX using a Trimble utility prior to importing.

The *Table 28, Records Supported for Trimble Real-Time* describes the records supported.

**Perform pre-processing checks**

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

**Static/Kinematic Mode**

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

**Verbose messaging mode**

Displays additional warning messages.

## U-Blox

Table 29, *Records Supported for U-Blox* describes the supported records.

### Perform pre-processing checks

If enabled, data is scanned after conversion to correct potential issues. See *Section 5.4.2, Pre-processing Checks* on page 144 for more information.

### Static/Kinematic Mode

This option controls how the static/kinematic flags are set in the final GPB file. *Auto* will set the entire file static or kinematic according to the detected processing environment.

### Recompute position and time


GrafNav requires valid clock shift data, while GrafNet requires position records. Enable this option if the clock shift data is corrupt, or if positions records are not present. This option is not needed if pre-processing checks are enabled.

### Verbose messaging mode

Displays additional warning messages.

**Table 29: Records Supported for U-Blox**

Record	Type	Comment
ID #10	Measurements	Required.
ID #31	Ephemeris	Required.
ID #02	Position	Recommended for GrafNet users.
ID #22	Clock Information	Recommended.



This appendix provides information about the Waypoint GrafNav Command Line (WPGCMD). This feature is available with the purchase of a GrafNav term license.

## A.1 Commands

The following table presents the list of commands available for use:

**Table 3: List of Available Commands**

Command	Description
basefile#	Path to base station data file (raw or GPB) <sup>a</sup>
basetype#	Base station receiver type (NovAtel OEM6, Trimble DAT, etc) <sup>a</sup>
basecoord#	Coordinates of base station (latitude/longitude/height) <sup>a</sup>
baseant#	Base station antenna profile (using ATX format) <sup>a</sup>
baseht#	Base station antenna height <sup>a</sup>
remfile	Path to remote data file (raw or GPB)
remtype	Remote receiver type (NovAtel OEM6, Trimble DAT, etc)
remant	Remote antenna profile (using ATX format)
remht	Remote antenna height
remstatic	Convert remote in static mode
proccfg	Name of project CFG file to use for output
procmode	Processing mode (TC/ DGPS/PPP/etc)
procdata	Data processing type (C/A, L1, L1+L2)
procdir	Processing direction (both or multi-pass)
procdatum	Processing datum
procstatic	Static processing mode (float/ARTK or fixed static)
procprecise	Path to precise files (SP3/CLK)
procprofile	Name of processing profile
procglo	Turn ON/OFF the usage of GLONASS data
procmovbase	Turn ON/OFF moving baseline processing
procmovmode	Azimuth determination mode
procmovant	Distance between moving antennas
procmovantsd	Standard deviation of distance between moving antennas
procmsg	Write processing messages to disk
expprofile	Export Wizard profile
expfile	Export Wizard output file name
expsrc	Export Wizard source (epochs, static sessions, features)

---

**Table 3: List of Available Commands**

Command	Description
exputmzone	UTM zone number to use for export

- a. This command can be used up for up to 8 base stations; use the # designator to uniquely identify the base station (# = 1...8)

All commands must be preceded by a hyphen (-).

## A.2 Base Station Commands

The following commands are related to the base station and therefore are only applicable if you are doing differential processing (i.e. DGPS).

<b>COMMAND</b>	-basefile# [input]
<b>EXAMPLE</b>	-basefile1 "C:\My Data\base.gpb"
<b>DESCRIPTION</b>	Specifies the location of the GNSS base station data file.
<b>INPUT</b>	Full file path to the GPB or raw data file.
<b>NOTES</b>	If this file is not in GPB format, the command-line utility will convert it (see -basetype). Wrap the path in quotation marks if it contains spaces. The # designator must be 1...8 to uniquely identify the base station(s).
<b>REQUIRED?</b>	No. For differential processing, a base station file will be downloaded if this command is not present.

<b>COMMAND</b>	-basetype# [input]
<b>EXAMPLE</b>	-basetype2 GPS_LEICA1200
<b>DESCRIPTION</b>	Specifies the receiver/format used for the base station data.
<b>INPUT</b>	See <i>Table 4, List of Receiver Types (for -basetype and -remtype)</i> on page 170
<b>NOTES</b>	Check with Waypoint Support if your receiver type is not listed here. Only applicable if the -basefile command is used. The # designator must be 1...8 to uniquely identify the base station(s).
<b>REQUIRED?</b>	No. If the file specified by -basefile is not already in GPB format and this command is not used, then the utility will attempt to auto-detect the receiver type. Use this command if auto-detection fails.

<b>COMMAND</b>	-basecoord# [latitude] [longitude] [height]
<b>EXAMPLE</b>	-basecoord1 36.161066211 -121.137349121 101.484
<b>DESCRIPTION</b>	Specifies the coordinates of the base station.
<b>INPUT</b>	Latitude (decimal degrees), longitude (decimal degrees), ellipsoidal height (metres)
<b>NOTES</b>	These coordinates must be in the same datum specified by the -procdatum command. Only applicable if the -basefile command is used. The # designator must be 1...8 to uniquely identify the base station(s).
<b>REQUIRED?</b>	No. If the -basefile command is used but no coordinates are specified, the utility will automatically compute them using PPP.

<b>COMMAND</b>	-baseht# [input]
<b>EXAMPLE</b>	-baseht3 1.094
<b>DESCRIPTION</b>	Specifies the height of the base station antenna.
<b>INPUT</b>	Antenna height to ARP or absolute L1 phase center (metres).
<b>NOTES</b>	This vertical height is measured relative to the coordinates passed by -basecoord. Only applicable if the -basefile and -basecoord commands are used. The # designator must be 1...8 to uniquely identify the base station(s).
<b>REQUIRED?</b>	No. If not used, then the coordinates specified by -basecoord will be assumed to represent the ARP if the -baseant command is set, or else the absolute L1 phase center if the -baseant command is not set.

<b>COMMAND</b>	-baseant# [input]
<b>EXAMPLE</b>	-baseant1 LEIATX1230+GNSS
<b>DESCRIPTION</b>	Specifies the antenna profile to be used at the base station.
<b>INPUT</b>	Name of the antenna profile (IGS format for absolute antenna calibrations).
<b>NOTES</b>	Consult the NGS or IGS website to find the proper name of your antenna's profile. Only applicable if the -basefile and -basecoord commands are used. The # designator must be 1...8 to uniquely identify the base station(s).
<b>REQUIRED?</b>	No

**Table 4: List of Receiver Types (for -basetype and -remtype)**

RECEIVER TYPE	INPUT
NovAtel OEM/SPAN	GPS_NOVATEL_OEM4
NovAtel OEM3	GPS_NOVATEL_OEM3
NovAtel CMC	GPS_NOVATEL_CMC
Javad/Topcon	GPS_TOPCON_JAVAD
Leica System 500	GPS_LEICASR5
Leica System 1200	GPS_LEICA1200
NavCom	GPS_NAVCOM
NavCom Sapphire	GPS_NAVCOM_SAPPHIRE
RINEX	GPS_RINEX
RTCMV3	GPS_RTCM3
Septentrio	GPS_SEPTENTRIO
Thales B-File	GPS_THALES_BFILE
Thales Real-Time	GPS_THALES_REALTIME
Trimble DAT	GPS_TRIMBLE_DAT
Trimble Real-Time	GPS_TRIMBLE_REALTIME
Ublox	GPS_UBLOX

---

## A.3 Remote Data Commands

The following commands are related to the remote data and are applicable to all projects.

<b>COMMAND</b>	-remfile [input]
<b>EXAMPLE</b>	-remfile "C:\My Data\Rover.pdc"
<b>DESCRIPTION</b>	Specifies the location of GNSS remote file.
<b>INPUT</b>	Full file path to the GPB or raw data file.
<b>NOTES</b>	If this file is not in GPB format, the command-line utility will convert it (see -remtype). Wrap the path in quotation marks if it contains spaces. For NovAtel SPAN users, this file will contain GNSS, IMU and DMI (if applicable) data.
<b>REQUIRED?</b>	Yes

<b>COMMAND</b>	-remtype [input]
<b>EXAMPLE</b>	-remtype GPS_NOVATEL_OEM4
<b>DESCRIPTION</b>	Specifies the receiver/format used for the remote data.
<b>INPUT</b>	See <i>Table 4, List of Receiver Types (for -basetype and -remtype)</i> on page 170
<b>NOTES</b>	Check with Waypoint Support if your receiver type is not listed here.
<b>REQUIRED?</b>	No. If the file specified by -remfile is not already in GPB format and this command is not used, then the utility will attempt to auto-detect the receiver type. Use this command if auto-detection fails.

<b>COMMAND</b>	-remht [input]
<b>EXAMPLE</b>	-remht 0.957
<b>DESCRIPTION</b>	Specifies the height of the remote antenna.
<b>INPUT</b>	Antenna height to ARP or absolute L1 phase center (metres).
<b>NOTES</b>	By default, GNSS coordinates are computed at the L1 phase center. Using this command will result in a vertical shift in the computed trajectory. Inertial users should not pass this command (see -imula for information).
<b>REQUIRED?</b>	No

<b>COMMAND</b>	-remant [input]
<b>EXAMPLE</b>	-remant "ASH701941.B SCIS"
<b>DESCRIPTION</b>	Specifies the antenna calibration profile to be used for the remote.
<b>INPUT</b>	Name of the antenna profile (IGS format for absolute antenna calibrations).
<b>NOTES</b>	Consult the NGS or IGS website to find the proper name of your antenna's profile.
<b>REQUIRED?</b>	No

<b>COMMAND</b>	-remstatic [on/off]
<b>EXAMPLE</b>	-remstatic on
<b>DESCRIPTION</b>	Specifies whether or not the entire file should be converted as static.
<b>INPUT</b>	<b>on</b> to have the entire file converted in static mode. <b>off</b> to let pre-processing checks determine the mode automatically.
<b>NOTES</b>	This command is intended for customers performing static processing. It should be set to <b>on</b> if you are processing static baselines (see -procstatic) or doing static coordinate determination via PPP. It is only applicable if the remote file is being converted to GPB.
<b>REQUIRED?</b>	No. Default is <b>off</b> .

## A.4 Processing Commands

The following commands relate to data processing and are applicable to all projects.

<b>COMMAND</b>	-procmode [input]
<b>EXAMPLE</b>	-procmode dgps
<b>DESCRIPTION</b>	Specifies the type of processing to be performed.
<b>INPUT</b>	<b>dgps</b> for GNSS-only differential <b>ppp</b> for GNSS-only Precise Point Positioning (PPP)
<b>NOTES</b>	This command determines how the data will be processed. It also affects which commands are available for use. See <i>Table 5, List of Commands Supported for Each Processing Mode</i> on page 177.
<b>REQUIRED?</b>	Yes

<b>COMMAND</b>	-proccfg [input]
<b>EXAMPLE</b>	-proccfg "C:\My Data\Project.cfg"
<b>DESCRIPTION</b>	Specifies the project file to be created.
<b>INPUT</b>	Full file path and name of the CFG file to be created.
<b>NOTES</b>	This command will be used to determine the name of the project file and all other files generated during processing.
<b>REQUIRED?</b>	No. If this command is not used, the project files will be given the same name as the remote data file and saved to the same folder.

<b>COMMAND</b>	-procdata [input]
<b>EXAMPLE</b>	-procdata L1L2
<b>DESCRIPTION</b>	Specifies the type of data to be processed.
<b>INPUT</b>	<b>L1</b> for single frequency (L1) processing <b>L1L2</b> for dual frequency (L1 & L2) processing <b>CA</b> for code-only (C/A) processing
<b>NOTES</b>	Dual frequency processing is only available if L1/L2 measurements are available at the base station(s) and remote.
<b>REQUIRED?</b>	No. If not specified, the utility will scan the input file(s) to determine which data types are available for processing.

COMMAND	-procdatum [input]
EXAMPLE	-procdatum nad83
DESCRIPTION	Specifies the datum to be used for processing and output.
INPUT	The name of the datum.
NOTES	If this command is not used, the utility will use the default datum. The default can be set via <i>Settings</i>   <i>Preferences</i> within GrafNav or Inertial Explorer.
REQUIRED?	Only required if using -basefile and -basecoord.

COMMAND	-procdir [input]
EXAMPLE	-procdir both
DESCRIPTION	Specifies if data should be processed in <b>both</b> or <b>multi-pass</b> modes.
INPUT	<b>both</b> to process the data in the forward and reverse directions independently. <b>multi</b> to process in multi-pass mode.
NOTES	<b>both</b> is applicable to all processing modes. <b>multi</b> is applicable to all modes except GNSS-only differential and LC differential.
REQUIRED?	No. The default is <b>both</b> .

COMMAND	-procglo [on/off]
EXAMPLE	-procglo off
DESCRIPTION	Specifies whether or not to use GLONASS data during processing.
INPUT	<b>on</b> to include GLONASS data during processing. <b>off</b> to ignore GLONASS data during processing.
NOTES	Applicable to PPP users only if remote data and precise files contain GLONASS measurements. Applicable to differential users only if remote and base station data files contain GLONASS measurements.
REQUIRED?	No. By default, the utility will include GLONASS data (if available) during processing.

COMMAND	-procprofile [input]
EXAMPLE	-procprofile "SPAN Airborne (AG58)"
DESCRIPTION	Specifies the profile from which to load the processing settings.
INPUT	The name of the processing profile.
NOTES	Processing profiles are loaded first and may have their settings overridden by other commands available here (i.e. -procglo).
REQUIRED?	No, but strongly recommended. If not used, the utility will attempt to detect the best profile based on the pre-processing checks performed during decoding.

<b>COMMAND</b>	-procprecise [input1] [input2] ... [inputn]
<b>EXAMPLE</b>	-procprecise "C:\My Data\COD17254.clk" "C:\My Data\COD17254.sp3"
<b>DESCRIPTION</b>	Specifies the precise clock and orbit files to use during processing.
<b>INPUT</b>	Full file paths and names of the SP3 and CLK files.
<b>NOTES</b>	This command is mostly intended for PPP but is available to all projects. This command can read multiple input files for projects spanning more than one day.
<b>REQUIRED?</b>	No. If performing PPP processing and this command is not used, the utility will download the required precise files.

<b>COMMAND</b>	-procstatic [input]
<b>EXAMPLE</b>	-procstatic fixed
<b>DESCRIPTION</b>	Specifies the mode of processing to use for static data.
<b>INPUT</b>	<b>float</b> for float static processing. <b>fixed</b> for fixed static processing.
<b>NOTES</b>	Only applicable for static data. See -remstatic for more information.
<b>REQUIRED?</b>	No. Default is to perform float static processing.

<b>COMMAND</b>	-procmsg [on/off]
<b>EXAMPLE</b>	-procmsg on
<b>DESCRIPTION</b>	Specifies whether or not to write all messages to disk.
<b>INPUT</b>	<b>on</b> to have all messages written to a file on disk (in addition to the console). <b>off</b> to have all messages written only to the console.
<b>NOTES</b>	The output file name will use this convention: "<project name>_ProcMsg.log" Processing messages will always be written to the console.
<b>REQUIRED?</b>	No. By default, the messages will only be written to the console.

<b>COMMAND</b>	-procmovbase [on/off]
<b>EXAMPLE</b>	-procmovbase on
<b>DESCRIPTION</b>	Specifies whether or not to perform moving baseline processing
<b>INPUT</b>	<b>on</b> to enable moving baseline processing <b>off</b> to disable moving baseline processing

<b>NOTES</b>	Only applicable when processing between two moving antennas
<b>REQUIRED?</b>	No. By default, moving baseline processing is disabled.

<b>COMMAND</b>	-procmovmode [on/off/compute/check]
<b>EXAMPLE</b>	-procmovmode check
<b>DESCRIPTION</b>	Specifies options related to the azimuth computation between moving antennas
<b>INPUT</b>	<b>on</b> to perform azimuth determination and use distance constraint in ARTK <b>compute</b> to perform azimuth determination without using a distance constraint <b>check</b> to perform azimuth determine and only use distance constraint to re-engage ARTK if computed distance is outside tolerance
<b>NOTES</b>	<b>on</b> and <b>check</b> are intended for applications where distance between antennas is fixed. <b>on</b> and <b>check</b> must be used in conjunction with <code>-procmovant</code> and <code>-procmovantsd</code> .
<b>REQUIRED?</b>	No. By default, azimuth determination is set to off.

<b>COMMAND</b>	-procmovant [input]
<b>EXAMPLE</b>	-procmovant 2.113
<b>DESCRIPTION</b>	Specifies the fixed distance between the two moving antennas
<b>INPUT</b>	Slope distance between the two antennas (meters)
<b>NOTES</b>	This option is only applicable if the two antennas are mounted on the same body
<b>REQUIRED?</b>	Only required if <code>-procmovmode</code> is set to <b>on</b> or <b>check</b>

<b>COMMAND</b>	-procmovantsd [input]
<b>EXAMPLE</b>	-procmovantsd 0.04
<b>DESCRIPTION</b>	Specifies the estimated accuracy of the fixed distance between the two moving antennas
<b>INPUT</b>	Estimated error of the provided distance between the two antennas (meters)
<b>NOTES</b>	This option is only applicable if the two antennas are mounted on the same body
<b>REQUIRED?</b>	Only required if <code>-procmovmode</code> is set to <b>on</b> or <b>check</b>

**Table 5: List of Commands Supported for Each Processing Mode**

	-procmode	
	DGPS	PPP
basefile#	X	
basetype#	X	
basecoord#	X	
baseant#	X	
baseht#	X	
remfile	X	X
remtype	X	X
remant	X	X
remht	X	X
remstatic	X	X
proccfg	X	X
procddata	X	1
procdir		X
procdatum	X	X
procstatic	X	X
procprecise	X	X
procprofile	X	X
proglo	X	X
procmmsg	X	X
procmovbase	X	
procmovmode	X	
procmovant	X	
procmovantsd	X	
expprofile	X	X
expfile	X	X
expsrc	X	X
exputmzone	X	X

**Notes:**

1. PPP processing requires dual frequency carrier phase data.

---

## A.5 Export Commands

The following commands relate to the export of the final solution and are applicable to all projects.

COMMAND	-expprofile [input]
EXAMPLE	-expprofile Geographic
DESCRIPTION	Specifies the profile to be used when writing the formatted solution to disk.
INPUT	Name of the Export Wizard profile to be used.
NOTES	You can use one of the software's built-in profiles or customize one through the interface.
REQUIRED?	No. If not used, no output file will be generated.

COMMAND	-expfile [input]
EXAMPLE	-expfile "C:\My Data\final_solution.txt"
DESCRIPTION	Specifies the name given to the output file.
INPUT	Full file path and name of the output file you wish to be created during the export process.
NOTES	Only applicable if the -expprofile command is used. If the file already exists, it will be over-written.
REQUIRED?	No. If the -expprofile command is used but the output file name is not specified, the utility will use the project name (see -proccfg).

COMMAND	-expsrc [input]
EXAMPLE	-expsrc epochs
DESCRIPTION	Specifies the source to be used when generating the output file.
INPUT	<b>epochs</b> to output the trajectory at a fixed time interval. <b>features</b> to output data only for the loaded camera events/features. <b>static</b> to output data only for the static sessions.
NOTES	Only applicable if the -expprofile command is used. In order to use the <b>features</b> option, there must be valid features/events loaded. The <b>static</b> option will not output solutions for any kinematic epochs.
REQUIRED?	No. If the -expprofile command is used but the output source is not specified, the utility will output in <b>epochs</b> mode.

<b>COMMAND</b>	-exputmzone [input]
<b>EXAMPLE</b>	-exputmzone 11
<b>DESCRIPTION</b>	Specifies the UTM zone number to be applied during export.
<b>INPUT</b>	<b>0</b> to have the software automatically determine the zone number. <b>1...60</b> to force the UTM zone number to a specific value
<b>NOTES</b>	Only applicable if the -expprofile command is used. Only applicable if the export profile contains UTM grid output variables.
<b>REQUIRED?</b>	No. If not specified, the software will use whichever UTM zone number was most recently used with the export profile.

## A.6 General Notes

- The program returns **0** upon successful completion or **1** if an error is encountered. Note that a return value of **0** is not a guarantee of accuracy - only that the program did not encounter any serious errors. It is left to you to ensure that the final solution meets your requirements.
- If the input value for a command is a string containing spaces (i.e. file path or file name), it must be wrapped in quotation marks.
- Waypoint software contains many processing options, most of which are not available via the command line. If you wish to customize the processing options, it is suggested that you create your own processing profile and pass it in using the -procprofile command. Processing profiles can be created within GrafNav under *Settings | Manage Profiles*.
- When downloading base station data, the utility will first search the Favorites for coordinates. If none are found, it will compute them using PPP. User-provided base station data will be processed with PPP if no coordinates are passed via the -basecoord command.
- You cannot load an existing project file (\*.CFG) for processing.
- This utility supports the input of up to 8 base stations. However, for differential users who do not pass in their own base station data, only one base station will be downloaded. If you require more, it is recommended that you download the desired data first using the *Download Service Data* utility and then pass it in using the appropriate command.
- The commands themselves are not case-sensitive, but some inputs are (i.e. antenna profile names).
- All messages written to the console are preceded by a designator to indicate the nature of the message. See *Table 6, List of Message Types* for more information.

**Table 6: List of Message Types**

MESSAGE DESIGNATOR	DESCRIPTION
_MSG_	General message; for informational purposes only
_WARNING_	Non-critical message; should be reviewed and addressed
_ERROR_	Critical message; only output if the utility cannot continue

---

**Table 7: List of Output Variables**

Variable	Description
Absolute ECEF-XYZ	XYZ coordinates in the Earth Centered Earth Fixed Frame which is a Cartesian frame centered at the ellipsoid origin.
Ambiguity Drift	Drift on ambiguities over time; low ambiguities indicate stable solution.
Antenna Height	Height of the pole or tripod above the station marker.
Azimuth (1 $\diamond$ 2)	Angle between true north and the baseline made from between FROM and TO stations.
Azimuth (2 $\diamond$ 1)	Angle between true north and the baseline made from between TO and FROM stations.
Body Frame Acceleration - XYZ	Acceleration components in the vehicle body frame.
Body Frame Velocity - XYZ	Velocity components in the vehicle body frame.
Azimuth StdDev	Estimated error of the computed azimuth.
British-East, North	East and North coordinates in the British State Plane projection.
C/A RMS	Root mean square of C/A code signal.
Checksum (8-bit)	The absolute value calculated by using XOR, ADD, or NMEA methodology on the 8 data bits of each character in the sentence; decimal and hexadecimal formats may be selected (user will be prompted for these options after the profile is created).
Combined Scale Factor	Scale factor used by surveyors. It applies the map scale factor combined with the ellipsoidal height correction, which can be used to scale distances on the ellipsoid to the earth's surface.
Combined Standard Deviation	Combines east, north and up position standard deviations into one value. Same value is written by Write Coordinates.
Computed Azimuth	Azimuth from base antenna to remote antenna in moving baseline projects.
Convergence	Meridian convergence for the current location in the current map projection.
Corrected GPS Time	GPS time corrected for receiver clock bias.
Course Over Ground	Direction of travel indicated by velocity vector.
Date	Date of the epoch or feature.
Description	Description of the station or feature from the STA file.
Distance Error (Azimuth)	Error in the computed baseline length in moving baseline projects.
Double Difference DOP	Double Difference DOP which is approximately equivalent to PDOP <sup>2</sup> .
East, North, Height Fwd/Rev Separations	Separations between the forward and reverse solution in the east, north and height axes.
East, North, Height Fwd/Rev RMS	Root mean square of the separations between the forward and reverse solution in the east, north and height axes.
East, North, Up Standard Deviations	Estimated east, north up position standard deviations in the local level frame
East, North, Up Velocities	East, North, Up velocity components in the local level frame.
East, North, Up Velocity Standard Deviations	Estimated East, North, Up velocity standard deviations in the local level frame.

**Table 7: List of Output Variables (continued)**

East, North, Up Offset Applied	When a 3-D offset is applied to camera event marks, this field can be used to verify that the proper offset is applied. This offset is oriented to local level that is, true-north.
ECEF Covariance Matrix	Estimated ECEF position covariance matrix; needs extended output in GrafNav.
ECEF Vector XYZ	XYZ components of the vector between base and remote in the ECEF frame.
ECEF Velocity Covariance Matrix	Estimated ECEF velocity covariance matrix; needs extended output in GrafNav.
ECEF XYZ Standard Deviations	Estimated ECEF position standard deviations in the XYZ axes; needs extended output in GrafNav.
ECEF XYZ Velocities	XYZ velocity components in the ECEF frame.
ECEF XYZ Velocity Standard Deviations	Estimated ECEF velocity standard deviations in the XYZ axes; needs extended output in GrafNav.
Ellipsoidal Height	Height above current ellipsoid; based on datum selected during processing.
Ellipsoidal Height Scale Factor	Used to scale distances on the ellipsoid to the earth's surface.
End Time	End time of the static session.
Error Ellipse Orientation	Orientation of the error ellipse (theta).
Error Ellipse Semi-Major	Estimated error along the semi-major axis of the error ellipse (a).
Error Ellipse Semi-Minor	Estimated error along the semi-minor axis of the error ellipse (b).
Extended Ambiguity Status	Indicates if KAR fixed the ambiguities.
Field Separator	User can select what character separates each variable in a record.
Fixed Reliability	Reliability number for fixed static solutions.
Float/Fixed Ambiguity Status	Indicates if KAR fixed the ambiguities. Also available in GrafNet.
Gauss Kruger-East, North	East and North coordinates in the Gauss Kruger projection.
Geoidal Undulation	Height of the ellipsoid above or below the geoid (user will be prompted with options after profile creation).
GLONASS/GPS Time Offset	Time difference between GPS and GLONASS expressed in metres.
GLONASS/GPS Time Offset Stdev.	.Standard deviation of the time difference between GPS and GLONASS expressed in metres
GPS Corrected Time	Exact time of measurement in the GPS time frame.
GPS Course-over-ground (track)	Direction of travel computed from trajectory (velocity).
GPS Time/Date	Time of the epoch or feature; time format may be changed to user's preference.
GPS Week Number	Week number for GPS data starting from January 4, 1980. Depending on the format, this week number may or may not reset after 1023.
Heading Angle	Negative yaw (see IMU angle definition).
Height Difference	Vertical height difference between stations.
Height Error Estimate	Estimated error along the vertical axis (dh).
Horizontal Distance	Horizontal distance on the ellipsoid between stations (geodesic).
Horizontal Standard Deviation	Estimated position standard deviation in the east and north axes of a local level frame.
Irish-East, North	East and North coordinates in the Irish State Plane projection.


**Table 7: List of Output Variables (continued)**

L1 Doppler RMS	Root mean square of L1 Doppler signal; useful for INS integration.
L1 RMS	L1, or Lono-free root mean square.
Lambert-East, North	East and North coordinates in the Lambert Conformal projection.
Latitude	North/South geographic coordinate.
Local Level Covariance Matrix	Estimated local level position covariance matrix; needs extended output in GrafNav.
Local Level Velocity Covariance Matrix	Estimated local level velocity covariance matrix; needs extended output in GrafNav.
Local Level XYZ	Local level left hand side frame where the x axis is pointing east, the y axis is pointing north and the z axis is pointing up. The frame is centered at the master station.
Local Plane XYZ	XYZ axes of a coordinate frame defined by two or more points (see local plane options).
Local Time/Date	GPS time and date with time-zone offset applied.
Longitude	East/West geographic coordinate.
Map Scale Factor	Map projection scale computed for a location.
Master File Name	Name of Master GPB file.
Num Fwd+Rev or Comb Baselines	Number of baselines used in the combined solution.
Num GLONASS satellites	Number of GLONASS satellites.
Num GPS satellites	Number of GPS satellites.
Number of Satellites	Total number of GPS and GLONASS satellites.
Orthometric Height	Height above the geoid (mean sea level height).
PDOP, HDOP, VDOP	Position dilution of precision, horizontal position dilution of precision and vertical DOP. May be slightly different than values from other sources due to the differential computation.
Pitch Angle	IMU pitch angle (see IMU angle definition).
Project Name	Name of current project.
P2 RMS	Root mean square of P2 code signal.
Quality Number	Quality factor from GrafNav; 1 (best) to 6 (worst).
Relative Azimuth	Azimuth between current and previous feature or epoch.
Relative Height Difference	Relative height difference between current and previous epochs or features.
Relative Horizontal Distance	Uncorrected horizontal distance on the ellipsoid between the current and previous epochs. Multiply by Combined Scale Factor to bring to mapping plane and surface.
Relative Slope Distance	Free-air distance between neighboring epochs or features. Distance between current and previous.
Remarks	Remarks of the station or feature from the STA file.
Remote File Name	Name of Remote GPB file.
Roll Angle	IMU roll angle (see IMU angle definition).
Roll, Pitch, Heading Separation	The difference between the combined solutions in terms of Roll, Pitch, and Heading.
Roll, Pitch, Heading StdDev	Estimated attitude accuracy.

**Table 7: List of Output Variables (continued)**

Scale Factor	Horizontal distance ratio between the globe and the map distance for the current point in the current map projection.
Selectable Grid	Allows user to enter a north and east value for a user defined grid. Grids can be modified and added using the Grid Manager (see Tools Menu).
Sequence Number	Allows the user to number epochs in the data with a user defined start and end sequence number, as well as, an incremental value.
Slope Distance	Free air distance between stations.
Solution Type	Type of solution used. In GrafNav, possible solution types include SF-Carrier, DF-Carrier, IonoFree, Rellono, CaOnly, SingPoint. In GrafNet, FixedSoln, FloatSoln.
Standard Dev. (NO PPM)	Trace of the covariance matrix expressed as a standard deviation; no distance dependent errors included.
Start Time	Start time of the static session.
State Plane-East, North	East and North coordinates in the US State Plane projection.
Static/Kinematic Status	Indicates if an epoch is static or kinematic.
Station Name	Name describing the station, feature or camera mark.
Surface Distance	Horizontal distance between the two stations on the surface (corrected geodesic).
Sun Angle	Angle of the sun above the horizon.
Time Length	Time length of the static session.
TM-East, North	East and North coordinates in the Transverse Mercator projection.
Total Slope Distance	Spatial distance between two points.
Total Horizontal Distance	The shortest path between two points on the surface of a sphere (for example, Great circle).
Transformed Grid	Allows for scaling, rotating and translating of a selectable grid.
User Text String	String of text defined by user.
UTC Corrected Time	Same as UTC Time, but a correction for the receiver clock bias is applied. This is the most precise time. Only applicable for epochs.
UTC Date	Date in UTC time.
UTC Time	Time which is available in various format. This is the epochs or feature time offset from GPS seconds by the GPS-UTC time offset. This time is uncorrected for the receiver clock bias.
UTM-East, North	East and North coordinates in the Universal Transverse Mercator projection.
VSF Ellipsoidal Height	Ellipsoidal height corrected by the map scale factor.
VSF Orthometric Height	Orthometric height corrected by the map scale factor. Used in photogrammetry applications to create an elevation that is more compatible with measured ground coordinates.
XYZ Accelerometer Bias	This is the apparent output in acceleration when there is no input acceleration present. It is computed by the GNSS/INS Kalman filter and the effects may be sinusoidal or random.
XYZ Gyro Drift	This is the apparent change in angular rate over a period of time. It is computed by the GNSS/INS Kalman filter and the effects are usually random.

Figure 1: Antenna Measurements

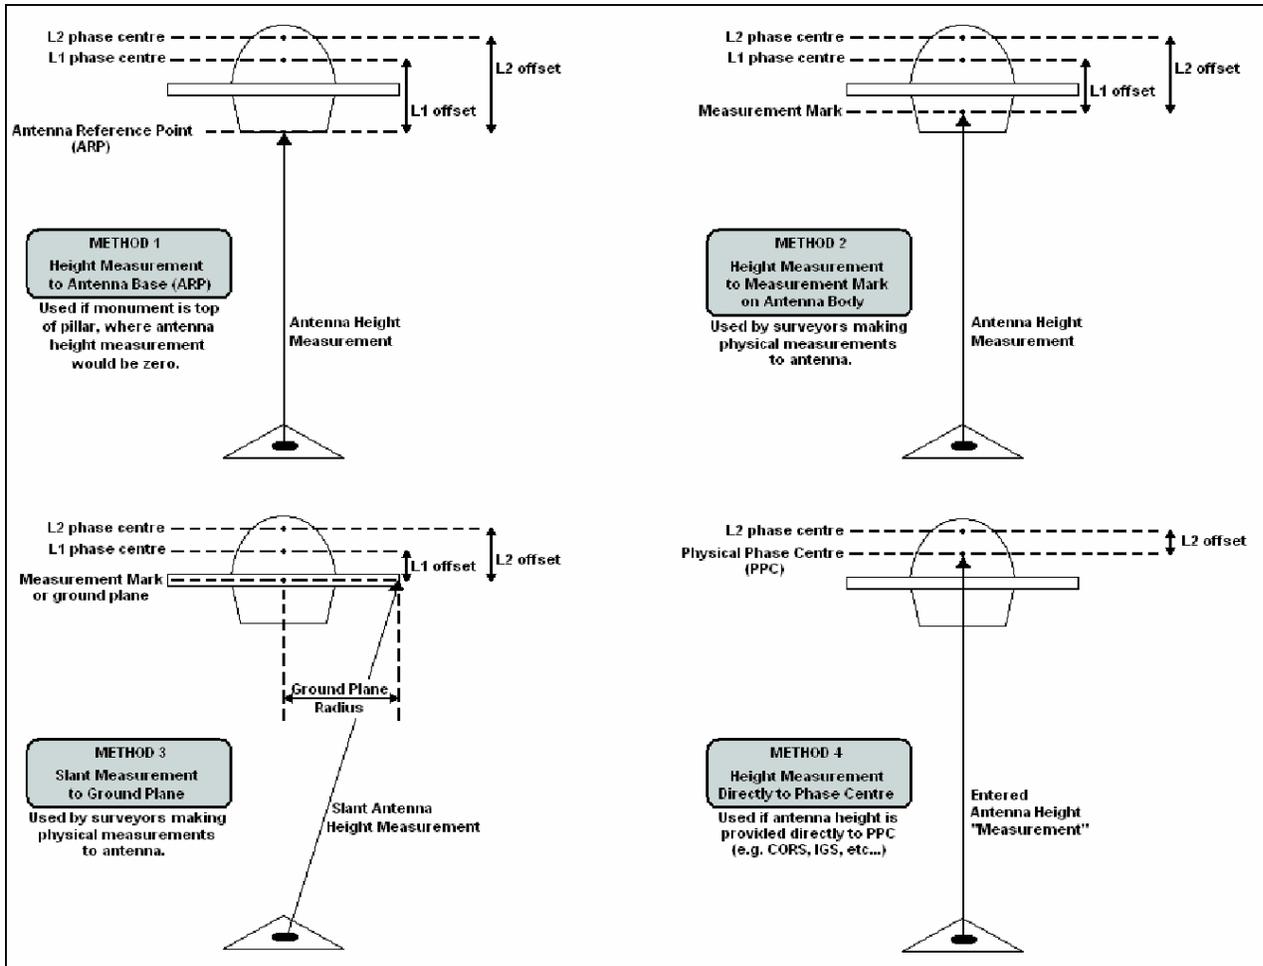



## Baseline

Connection between two stations with one or more sessions. Normally, a session and a baseline can be considered the same. However, in some cases there may be more than one session per baseline. This is called a duplicate session baseline and it is plotted yellow on the screen.

## Check Point

A station with known coordinates, but these coordinates are only used as a check against GrafNet's computed coordinates.

## Control Point

See **Station** or **GCP**.

## Ground Control Point (GCP)

A reference station with known latitude, longitude and height coordinates. The user may also assign horizontal and vertical standard deviations for these values. There can be horizontal, vertical or 3-D points, and there must always be at least one 3-D point or else one horizontal and one vertical point per project.

## Observation

A raw measurement file collected from a receiver set up over a stationary point. GrafNet only accepts GPB files and, thus, other formats must be converted first. See *Table 2, Supported Data Formats for Post-Processing* on page 19 for supported formats. GrafNet also requires single frequency carrier phase data as a minimum, and accepts dual frequency if available. Users wishing to perform code-only processing should use GrafNav.

## Session

Concurrent period of time between two observation files at two different stations. One of the two stations will be the remote and the other will be the master. The arrow on the screen will be pointing from the master to the remote. The direction is determined by GrafNet in order to form loop closures as well as to minimize the number of legs from a control point. Each session will be processed individually and combined in either a network adjustment or traverse solution. A session can have different statuses and colors depending on whether certain tests passed or failed.

## Station

A point where the GPS receiver was setup over and there might be multiple observation files for a single station. However, one set of position values will be produced for each station as a final product of GrafNet. There are several types of stations.

## Tie Point

Such a point may also be called a *loop tie closure* and is formed when two or more sessions point to it. Thus, there is a redundant determination at this point.

## Traverse Station

This is a point with no tie or control information. It might have two stations connected to it, but one is pointing to it and the other is pointing from it.



## A

- Add to Favourites
  - add object solution, 42
  - using computed coordinates, 123

## ARTK

- description, 17
- engage at time, 68
- engage options, 51
- Output files, 135
- See ambiguity resolution, 17
- summary file
  - See Static Summary, 38

## Ashtech

- importing PHOTO.DAT file, 30

## Azimuth

- between epochs in GrafNav, 85
- between features in GrafNav, 40
- between stations in GrafNet, 124
- outputting in Export Wizard, 181

## B

### Bad Data

- fixing bad baselines in GrafNet, 104

### Base Stations

- resampling, 37

### Baselines definition, 187

### Binary Value File description, 136

### Broadcast Ephemeris, 27

## C

### C/A Code

- DGPS processing, 47
- measurements standard deviation, 53

### Camera Marks

- editing, 40
- loading into project, 30
- supported formats, 30

### Carrier Phase

- measurements standard deviation, 53
- processing L1 and/or L2, 47

### CFG File description, 127

### Check Point

- adding to GrafNet, 107, 123
- definition, 187

### Combining Solutions

- settings, 63

### Concatenating GPB Files, 142

### Control Point

- adding to GrafNet, 107, 123
- definition, 187
- using multiple control points, 116

### Converting

- GPB to ASCII, 138
- GPB to RINEX, 34
- raw data to GPB, 143

### Coordinate Output

- Export Wizard, 74

### Coordinate Transformation Tool

- multiple points, 89

### Coordinates

- entering in GrafNav, 58
- entering in GrafNet, 107

### Correction files, 94

## D

### Data Interval

- for static processing in GrafNet, 110

### Data Type descriptions, 47

### Datum, 46

### DGPS processing, 47

### Doppler

- measurements standard deviation, 53

### Download Service Data, 92

### Downloaded

- manufacturer files, 98

### Downloading

- clock files, 28
- data services, 93
- precise ephemerides, 28
- service data, 22

### Drawing Exchange Format

- exporting in GrafNet, 121

### Dual Frequency

- differential processing, 47

## E

### Elevation Mask, 47

### Ephemeris

- broadcast, 27
- precise, 28

### EPP File

- description, 27
- format, 129

### Events

- hold to ground, 65
- loading camera event marks, 30

### Export Google Earth file, 63

### Export preferences, 65

### Export Wizard

- creating a profile, 74
- creating an output file, 76
- list of output variables, 75

**F**

- Favourites
  - list of, 98
- Favourites Manager
  - add master files, 25
  - transform coordinates, 86
- Feature Editor, 40
- Filter Resets
  - controlling, 53
- Fixed Static
  - description, 19
  - processing in GrafNet, 100
  - static sessions, 42
- Float Solution
  - processing in GrafNet, 100
- FML File
  - See Message Logs, 38
- FSL File
  - See Message Logs, 38
- FSS File
  - See Static Summary, 38

**G**

- Geoids
  - obtaining WPG files, 12
- GLONASS
  - almanac, 94
  - process, 45
  - processing options, 29
- GNSS
  - forward and reverse solutions, 38
  - load solution, 29
  - process, 45
  - processing, 38
  - summary files, 38
  - trajectory, 38
- Google Earth Export, 78
- GPB File
  - concatenating, splicing and resampling, 142
  - converting raw data to GPB, 143
  - editing, 139
  - exporting to ASCII, 138
  - format, 127
  - GPBViewer, 137
- GPBView, 137
- GPS almanac, 94
- Grids, settings, 60

**H**

- How to fix bad baselines
  - In GrafNet, 104
- HTML
  - build report, 78
  - save, 67

**I**

- Installing the Software, 11
- Interpolating data
  - See resampling, 37
- IONEX Files
  - adding to project, 28
  - description, 28
  - downloading, 94
  - for L1 single point processing, 29
- Ionospheric Corrections
  - using IONEX file for L1, 28

**K**

- Kinematic Mode
  - switching data between modes, 35, 139

**L**

- Leica
  - importing EV0, TDU files, 30
- Loading
  - camera marks, 30
  - existing solutions, 29–30
- Locktime Cut-Off, 47
- Loop Ties, 114

**M**

- Map Window
  - GrafNav quality numbers, 81
  - interactive tools, 85
  - settings in GrafNet, 120
- Master Stations
  - adding to GrafNav, 25
  - coordinates, 58
  - resampling, 37
- Measurements
  - outlier detection and rejection, 53
- Measurements Standard Deviations, 53
- Message Logs
  - format and description, 130
  - viewing, 38
- Move to Static
  - moving the station features, 41

**N**

- Network Adjustment
  - definition, 101
  - detailed description, 115
  - variance factor, 117
- NovAtel
  - importing MRK file, 30

**O**

- Object Menu, 42

Orthometric Height  
obtaining WPG files, 12

## P

### Plots

computing statistics, 67  
GNSS data, 66

### PPP

load solution, 29  
message log, 38  
processing, 46  
trajectory, 38

### Precise Ephemeris

description, 28  
for differential processing, 28  
for single point processing, 29

### Precise Point Positioning

processing, 38

### Preferences

Display, Solution, Export, Update, 62

### Problematic Data

controlling filter resets, 53  
failed baselines in GrafNet, 104

### Processing

with dual processors, 63

### Processing Interval

for static processing in GrafNet, 110

### Pseudorange

See C/A Code, 53

## Q

### Quality Number

description, 81

### Quick Start

GrafNav, 24

## R

### Receivers

supported GNSS receivers and formats, 146

### Remote File

antenna information, 58

### Resampling

base stations, 37  
resampling GPB files, 142

revision, manual, 2

### RINEX

converting GPB to RINEX, 34  
converting RINEX to GPB, 156  
downloading RINEX data, 92

### RML File

See Message Logs, 38

### RSS File

See Static Summary, 38

## S

### Satellite Clock Files

adding to project, 28  
description, 28

### Seismic Data

using Move to Static, 41

### Single Frequency

processing using L1 only, 47

### Software installation, 11

### Solution

ARTK, 17  
fixed static, 19, 100  
float, 100  
iono-free, 100

### SP3 File

See Precise Ephemeris, 28

### Splicing GPB Files, 142

### STA File

editing, 40  
viewing, 40

### Static Mode

switching data between modes, 35, 139

### Static Processing

in GrafNet, 109

### Static Sessions

editing, 42  
ignoring trivial sessions in GrafNet, 113

### Static Summary

format and description, 132  
viewing, 38

### Station File

See STA File, 40

## T

### Time Range

processing range in GrafNet, 110

### Trajectory File

format and description, 135

### Traverse Solution

definition, 101  
detailed description, 118  
viewing, 118

### Trivial Baselines, 113

## V

### Variance Factor, 117

## W

### Waypoint Geoid Files

obtaining WPG files, 12

